

Maintenance

1. Maintenance and Care

- 1. Start failure: Check the battery level. Charge the battery if it is exhausted.
- 2. Unable to clean garbage:
 - a. The dustbin is full. Remove the dustbin and clean it up before restarting the robot.
 - b. Check the brush. If it is severely worn, replace it with a new brush assembly.

1.1 Maintenance Components

Components	Inspection Interval	Maintenance Method
Drive wheels, and auxiliary wheels	Weekly	Wipe the surface with a clean cloth.
Vision sensors and Lidar	Weekly	Use a soft, dry cloth or lens cleanser for cleaning
Dustbin	Half a month	Clean up any garbage left inside the dustbin. If necessary, wash it with clean water, and then dry it before putting it back.
Air Filter	Half a month	Repeatedly pull the dust removal handle on the side of the robot body

2. MT1 Routine Maintenance