




Dishwasher

MODELS:

JDAF3924RX0 (Panel Ready)


DOOR AND PANEL PARTS

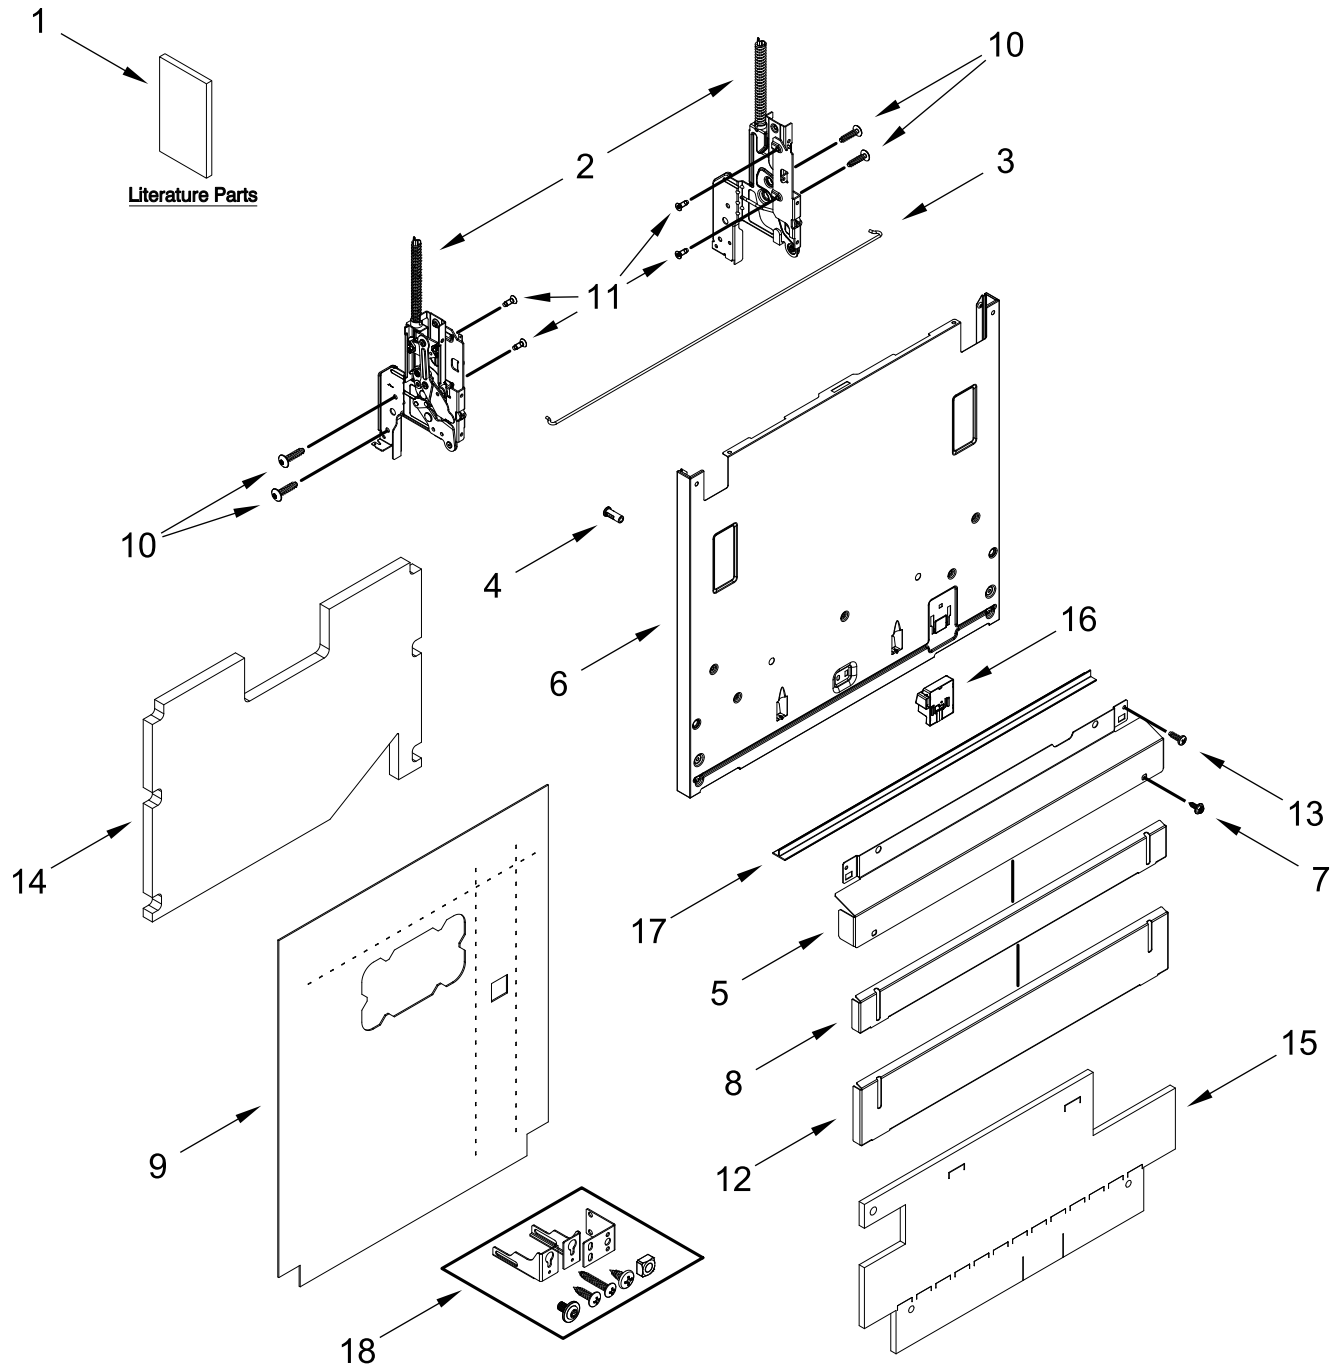

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11524403	Panel, Outer Door (Includes 4)	13	W10942053	Screw
	W11589935	Owners Manual				14	W11564608	Insulation, Door
	W11645480	Energy Guide	7	302868	Screw (Black)	15	W11564610	Insulation, Bottom
	W11589945	Tech Sheet	8	W11625159	Panel, 2" Adjustable (Black)	16	W11540965	Display, Floor
2		Arm, Hinge				17	W11125570	Gasket, Bottom Door
	W11631592	Left Hand	9	W11564603	Insulation, Inner Door	18	W11726119	Toe Kick Install Hardware
	W11631591	Right Hand	10	W10942031	Screw			
3	W11126789	Cross Brace, Door	11	W10941985	Screw			
4	W10885778	Bushing, Door	12	W11625156	Panel, 4" Adjustable (Black)			
5	W11625157	Panel, Main Access (Black)						


CONTROL PANEL AND INNER DOOR PARTS

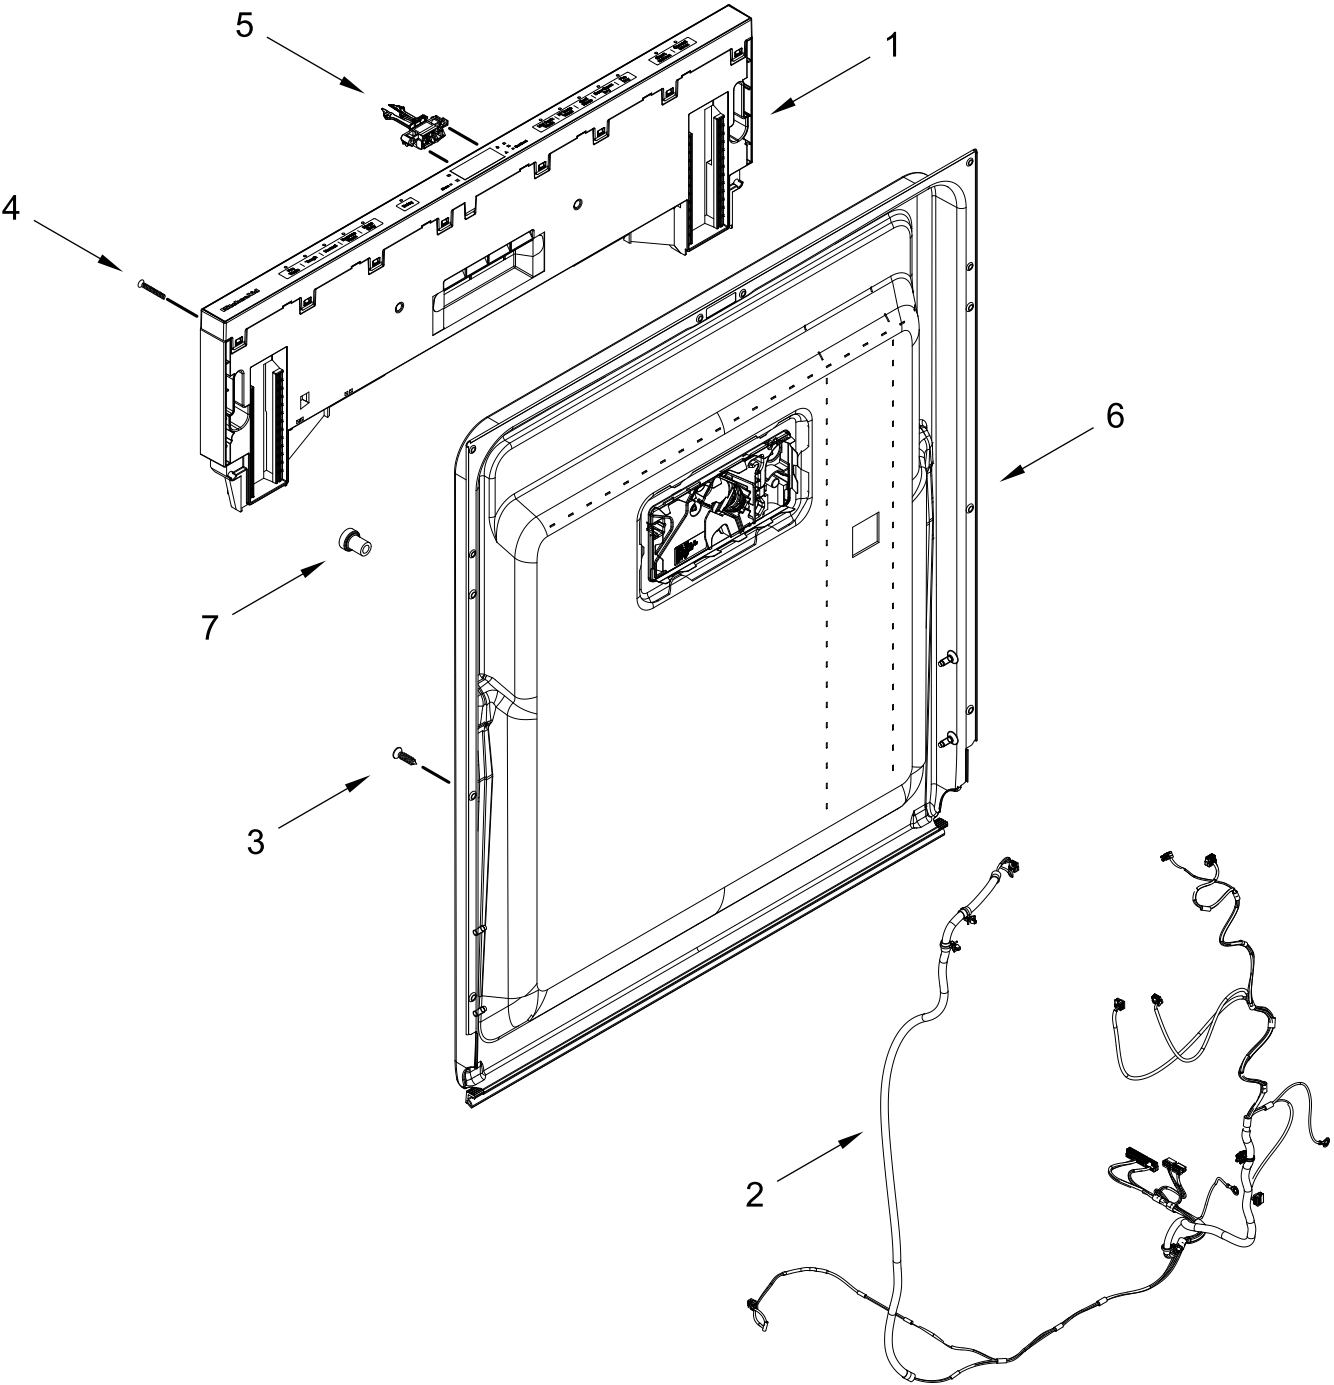

CONTROL PANEL AND INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	3	W10941960	Screw	6	W11715716	Inner Door Assembly (Includes Soap Dispenser)
	W11524092	Black	4	W11381263	Screw			
2	W11608932	Wiring Harness, Inner Door	5	W11091934	Latch Assembly (Includes Switch)	7	W10944891	Bushing, Shouldered


TUB AND FRAME PARTS

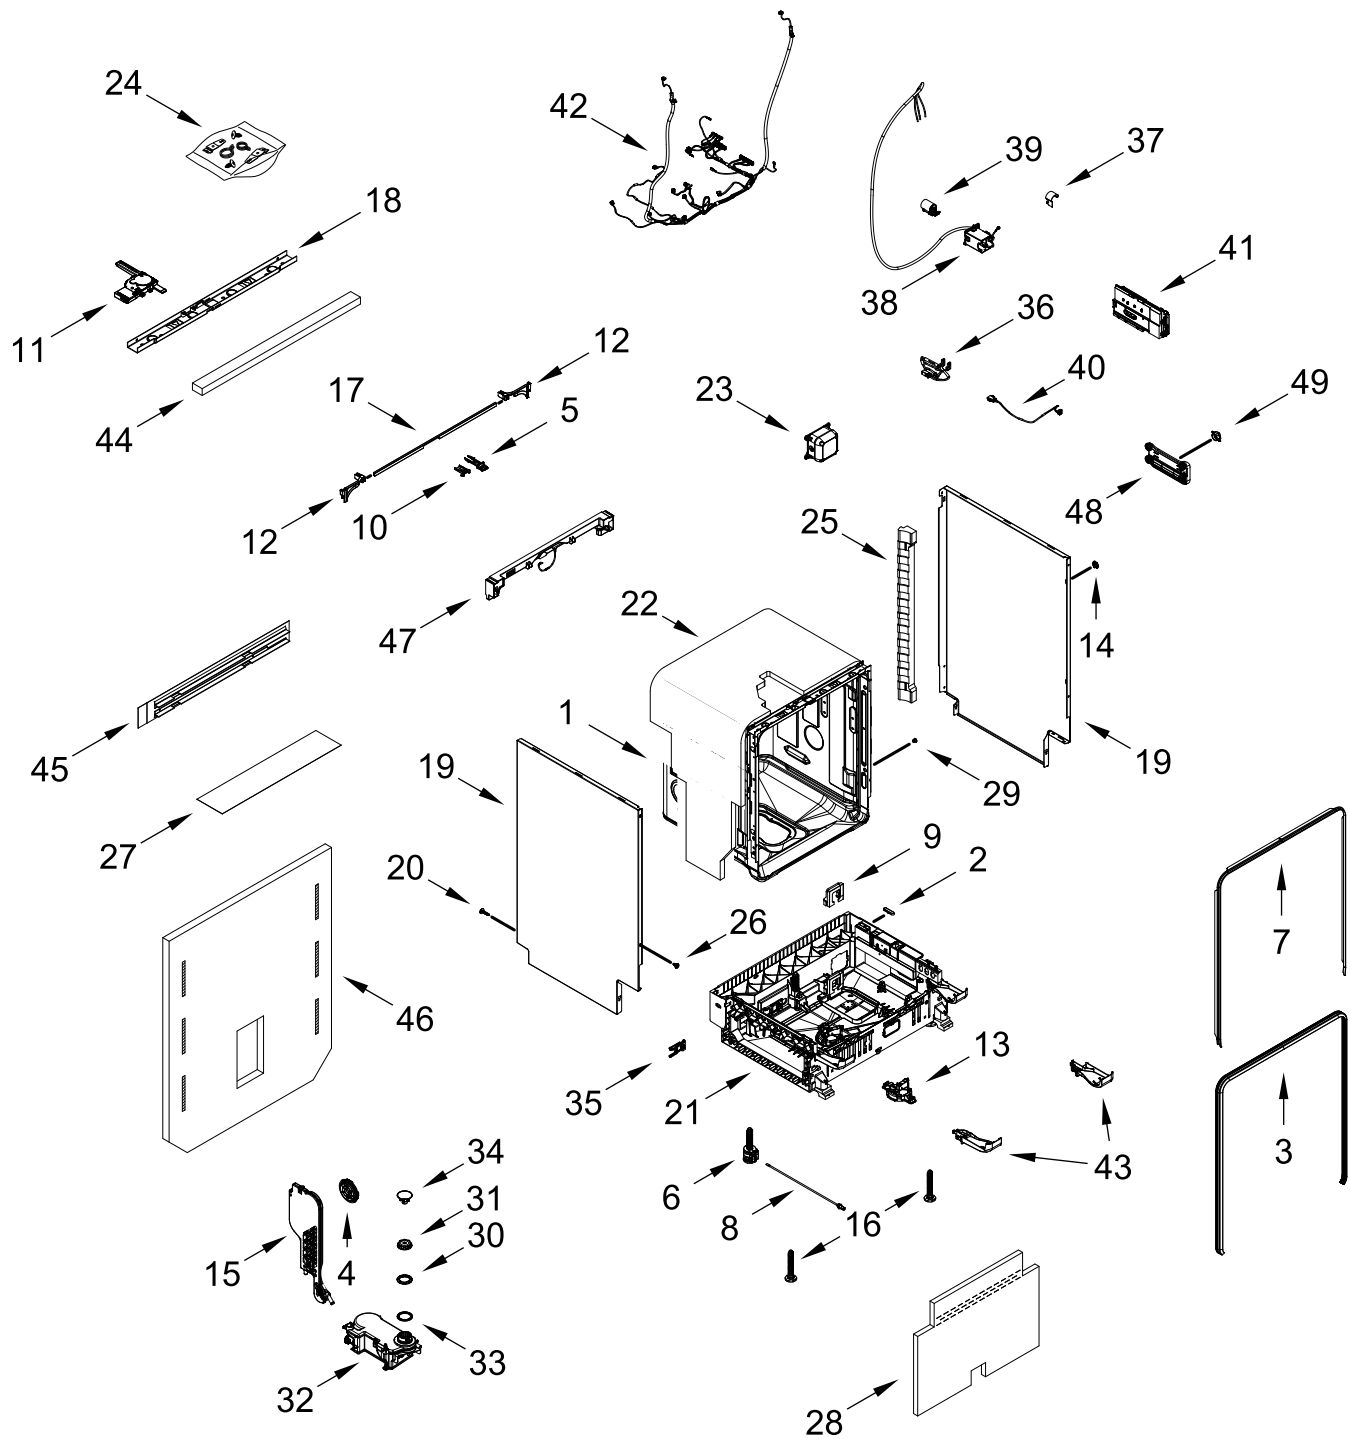

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Tub (Not Serviced)	19	W11355600	Side Panel (Left)	38	W11578108	Power Cord Assembly
2	W11671752	Pad, Tub Support		W11355598	Side Panel (Right)	39	W11418782	Filter, RFI
3	W11658880	Gasket, Tub	20	W10986499	Screw	40	W11646878	Jumper Harness, Service Port
4	W11236521	Nut, Air Break	21	W11690567	Assembly, Base	41	W11696410	Control, Electronic
5	W11314779	Strike, Latch	22	W11564606	Shield, Tub Sound	42	W11609315	Wiring Harness, Main
6	W11316238	Assembly, Leveling Leg (Rear)	23	W11643567	Assembly, Junction Box	43	W11684708	Channel, Overflow (Left)
7	W11554391	Retainer, Tub Gasket	24	W11696042	Miscellaneous Parts Bag		W11684709	Channel, Overflow (Right)
8	W11325471	Rod, Foot Adjustment (Rear)	25	W11525808	Spacer, Side Panel	44	W11676843	Foam, Crossbar
9	W11668893	Holder, Damper	26	W11350847	Screw	45	W11673775	Kit, Side Cover Installation
10	W11317043	Cover, Door Opening	27	W11676404	Strip, Anti-Condensation	46	W11600452	Insulation, Back
11	W11590760	Assembly, Door Opening	28	W11626034	Insulation, Floor	47	W11664579	Crossbar, Upper Rear
12	W11316692	Cover, Tub Corner (Left)	29	W11656505	Button, Tub	48	W11315143	Tub Mount, Third Level Rack (Left)
	W11316688	Cover, Tub Corner (Right)	30	W11227921	Nut, Softner		W11315144	Tub Mount, Third Level Rack (Right)
13	W11602936	Float Switch	31	W11227934	Cap, Salt	49	W11630670	Nut, Tub
14	W11321022	Plug, Tub	32	W11546882	Softener, Water			
15	W11568183	Air Break	33	W11224085	Seal, Softener			
16	W11325130	Leg, Leveling (Front)	34	W11509486	Funnel, Salt			
17	W11317036	Cover, Top	35	W11686061	Plate, In/Out Hoses			
18	W11306174	Crossbar, Front Frame	36	W11545951	Jumper, RFI to Control			
			37	W10943118	Spring, Grounding			


PUMP, WASHARM AND MOTOR PARTS

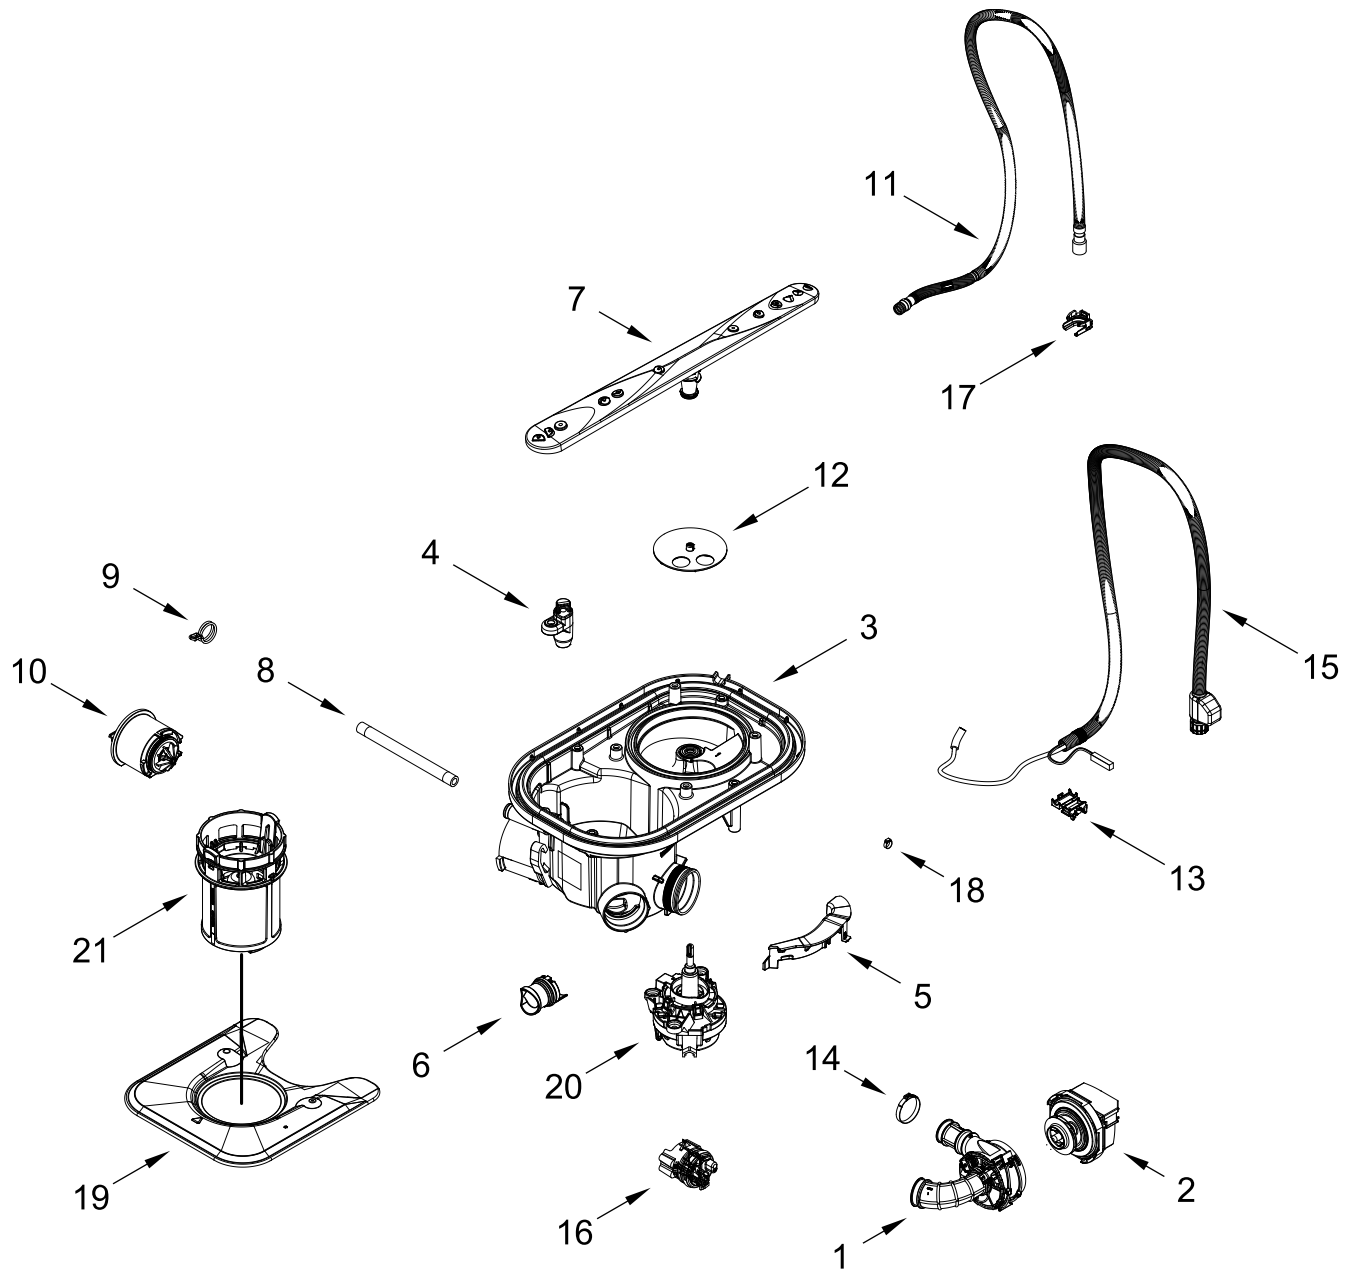

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11630727	Heater, Pump	9	W10096851	Clamp, Hose	17	W11626817	Clip, Hose
2	W11630725	Motor, Pump	10	W11631981	Motor, Drain	18	W11015323	Clamp, Hose
3	W11560668	Sump (includes Seal)	11	W11586395	Hose, Drain	19	W11445183	Grate
4	W11559823	Drain Vent Assembly	12	W11175586	Disc, Diverter	20	W11543924	Diverter Valve Motor
5	W11560657	Diffuser, Inlet	13	W10942827	Housing, Connector	21	W11559846	Filter
6	W11560834	Check Valve, Drain	14	W11122851	Clamp, Hose			
7	W11528063	Wash Arm Assembly	15	W11551555	Hose, Inlet			
8	W11008962	Hose, Pump Inlet	16	W11126174	Indicator, Optical Wash			


UPPER WASH AND RINSE PARTS

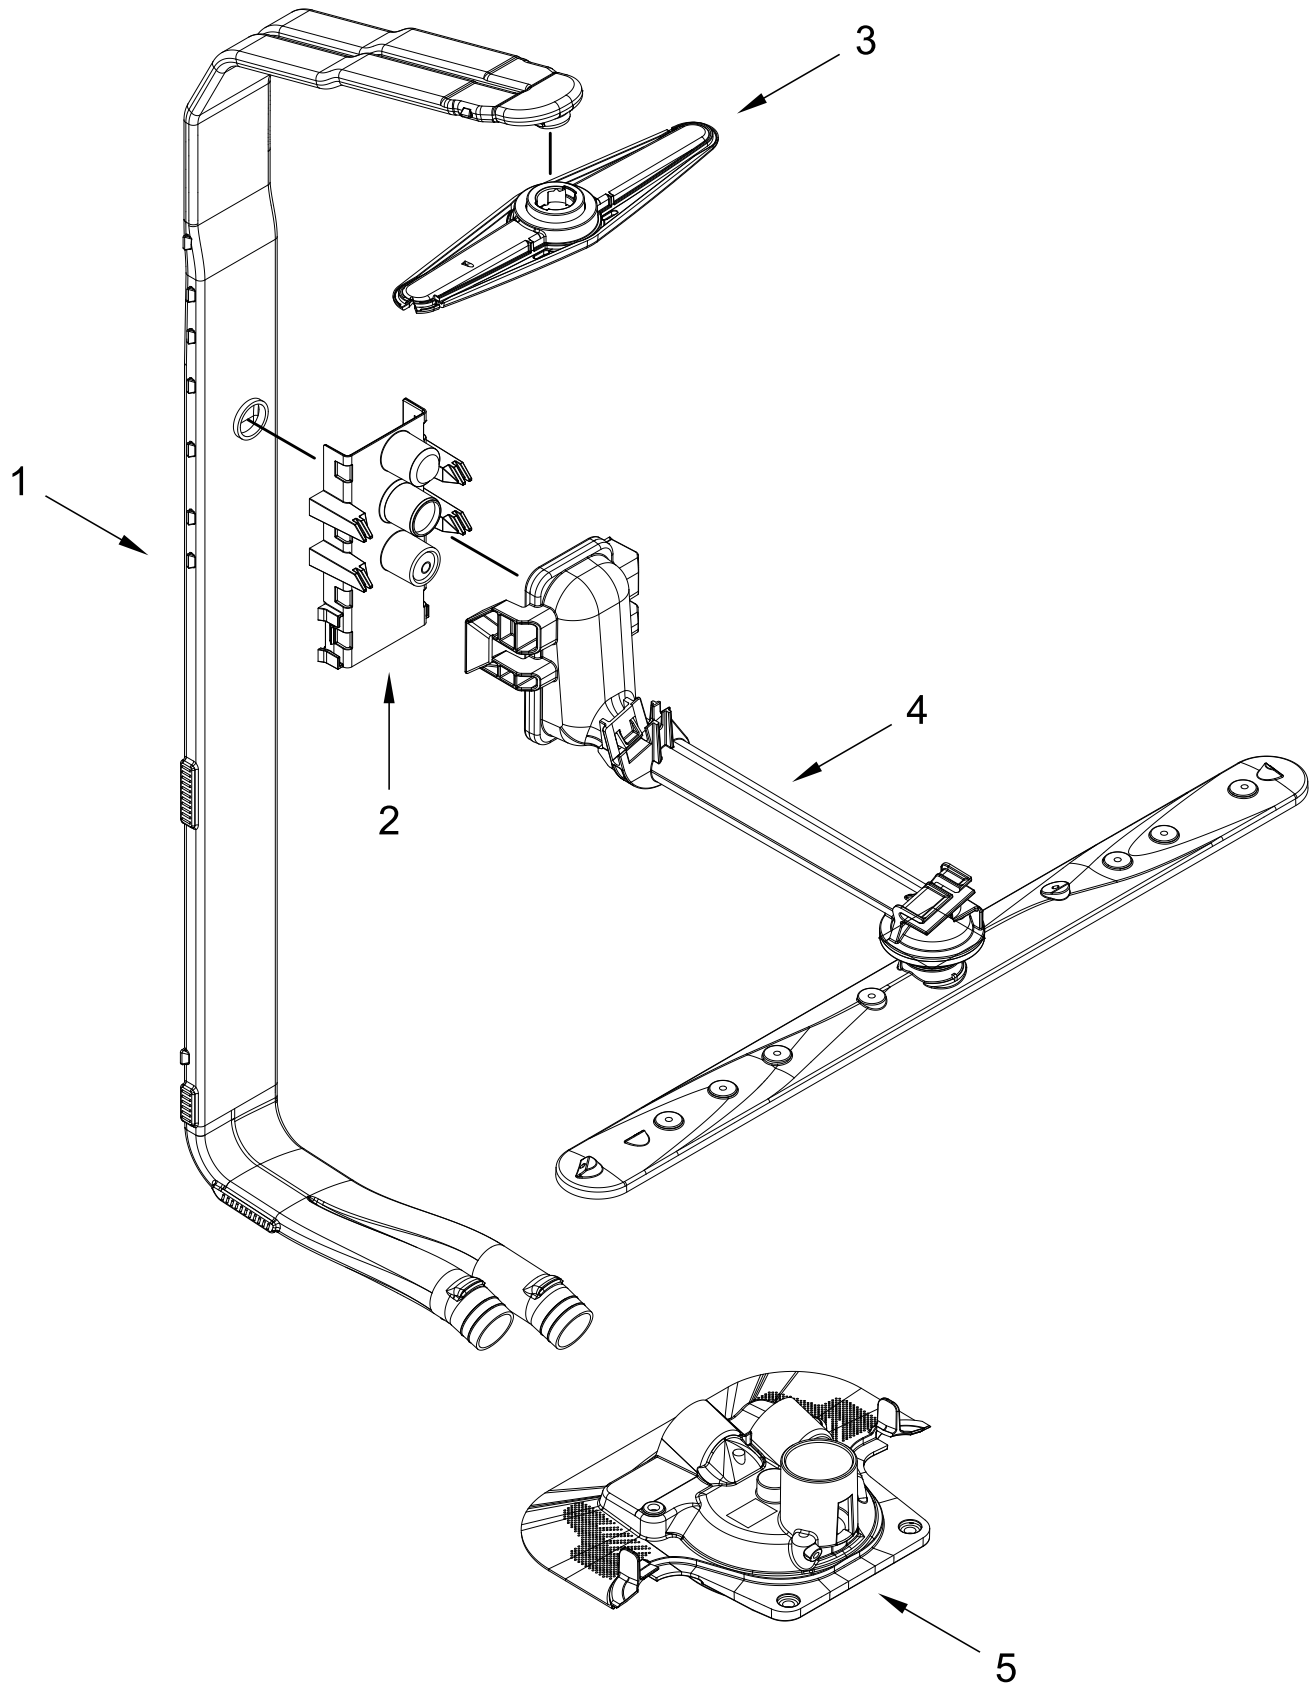

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11668593	Feed Tube Assembly	3	W11522201	Sprayarm, Third Level	4	W11680190	Upper Sprayarm Assembly
2	W11522213	Retainer, Docking (2nd Level)				5	W11602500	Cover, Diverter


UPPER RACK AND TRACK PARTS

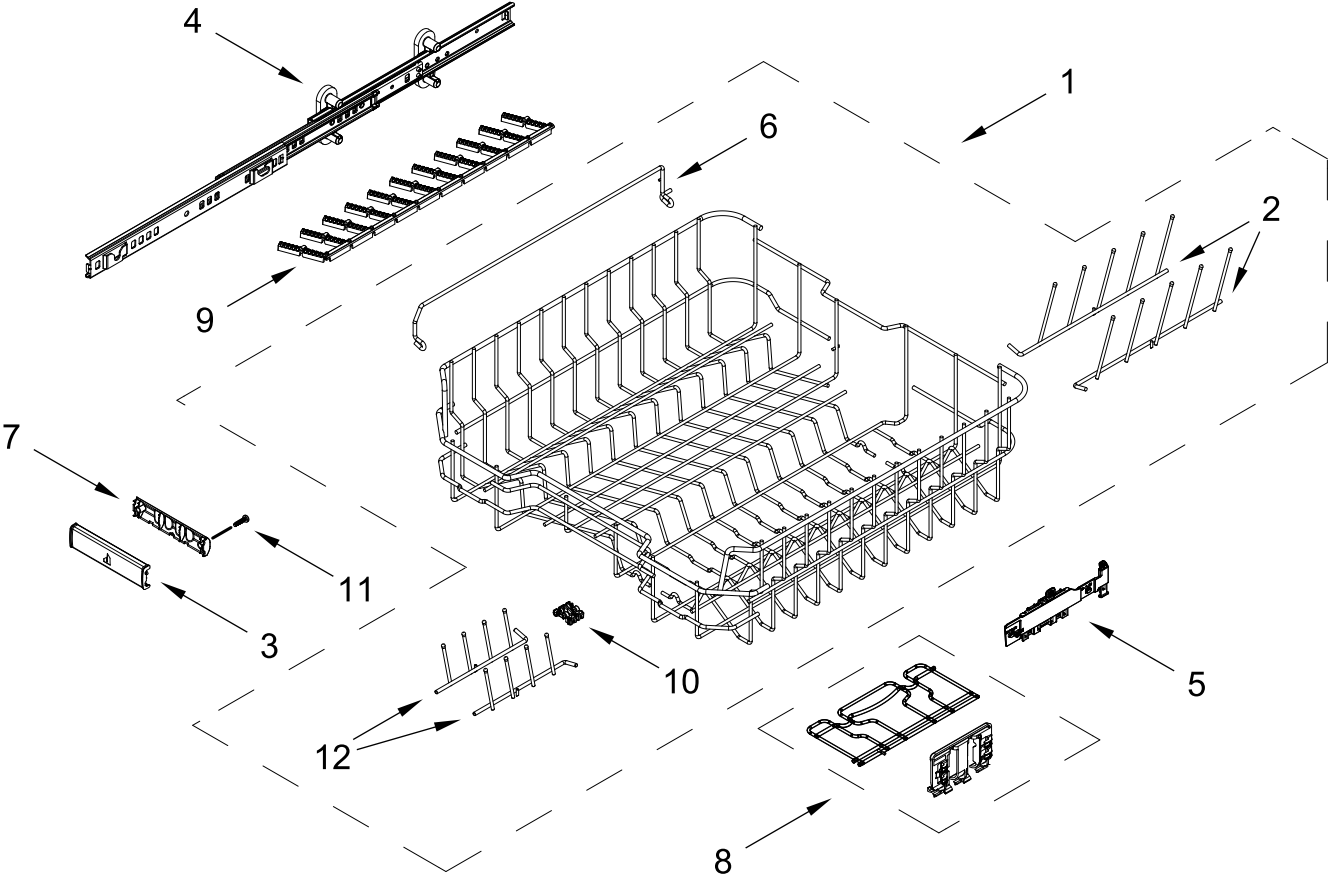

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11534669	Dishrack, Upper	5	W11548662	Adjustment Assembly (Left)	10	W11315981	Clip, Tine Row
2	W11534673	Tine Row, Back (Left)				11	W11337336	Screw
	W11534678	Tine Row, Back (Right)		W11548661	Adjustment Assembly (Right)	12	W11521627	Tine Row, Front (Left)
3	W11590244	Handle, Front	6	W11521643	Support, Tine Row		W11521631	Tine Row, Front (Right)
4	W11549966	Assembly, Track & Mount (Left)	7	W11590236	Handle, Rear			
	W11549967	Assembly, Track & Mount (Right)	8	W11618606	Assembly, Cupshelf			
			9	W11538488	Tine Row, Fold Down			


LOWER RACK PARTS

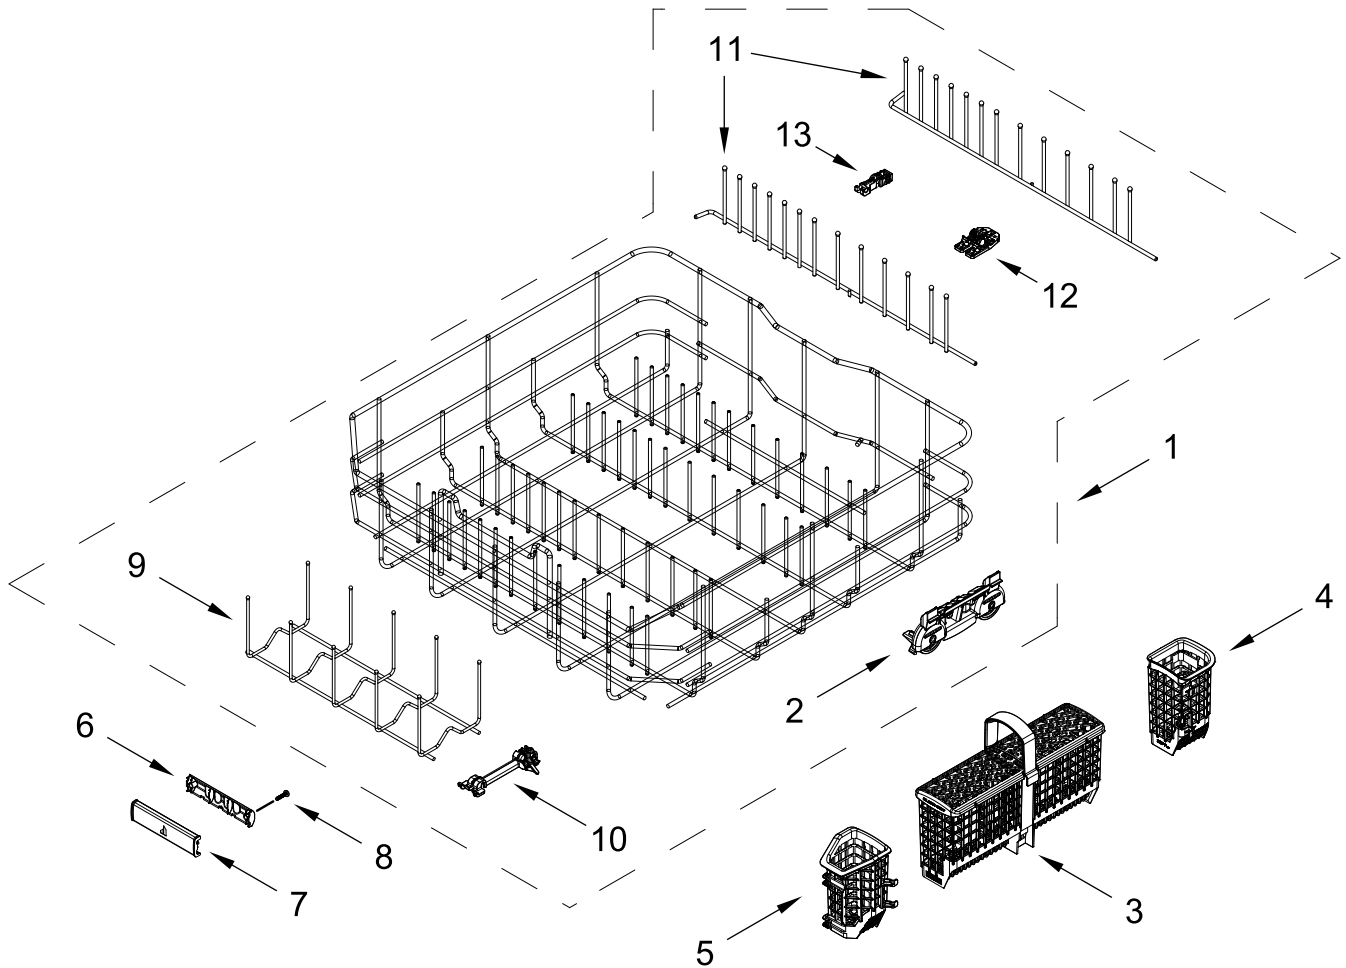

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11544445	Dishrack, Lower	6	W11590236	Handle, Rear	11	W11544443	Tine, Folddown (Rear)
2	W11543650	Wheel & Transport Assembly	7	W11590243	Handle, Front		W11523467	Tine, Folddown (Front)
3	W11634640	Silverware Basket Assembly	8	W11337336	Screw	12	W11545635	Clip, Positioning
4	W11634637	Utensil Basket (Rear)	9	W11523499	Sliding Tine, Bowl	13	W11545636	Clip, Retainer
5	W11634635	Utensil Basket (Front)	10	W11523448	Clip, Sliding Tine			

THIRD LEVEL RACK AND TRACK PARTS

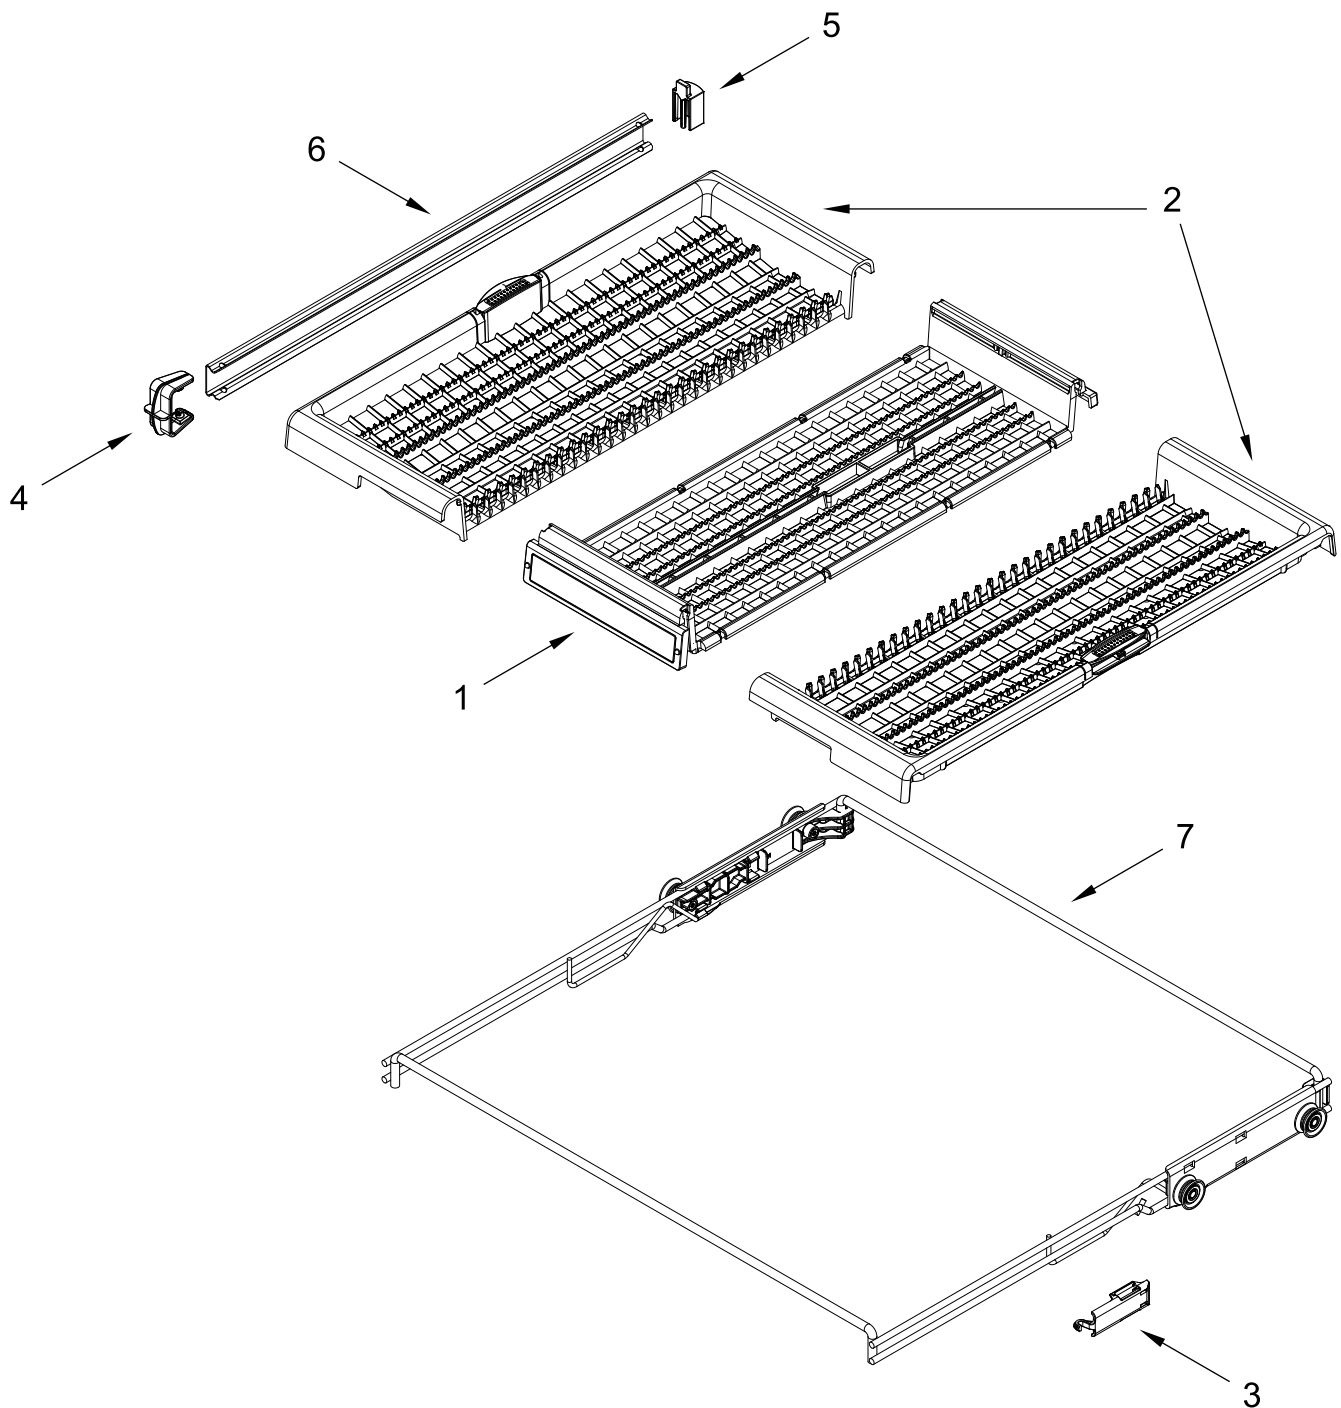

THIRD LEVEL RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11574248	Rack, Third Level (Center)	3	W11333878	Side Clip	6	W10884045	Track, Dishrack
			4	W11315114	Track Stop, Front	7	W11567824	Assembly, Rail Guide
2	W11563260	Rack, Third Level (Left & Right)	5	W11315116	Track Stop, Rear			