




RISE 30" DUAL-FUEL PROFESSIONAL RANGE

MODELS:

JDRP430HL01 (Stainless)


BURNER BOX PARTS

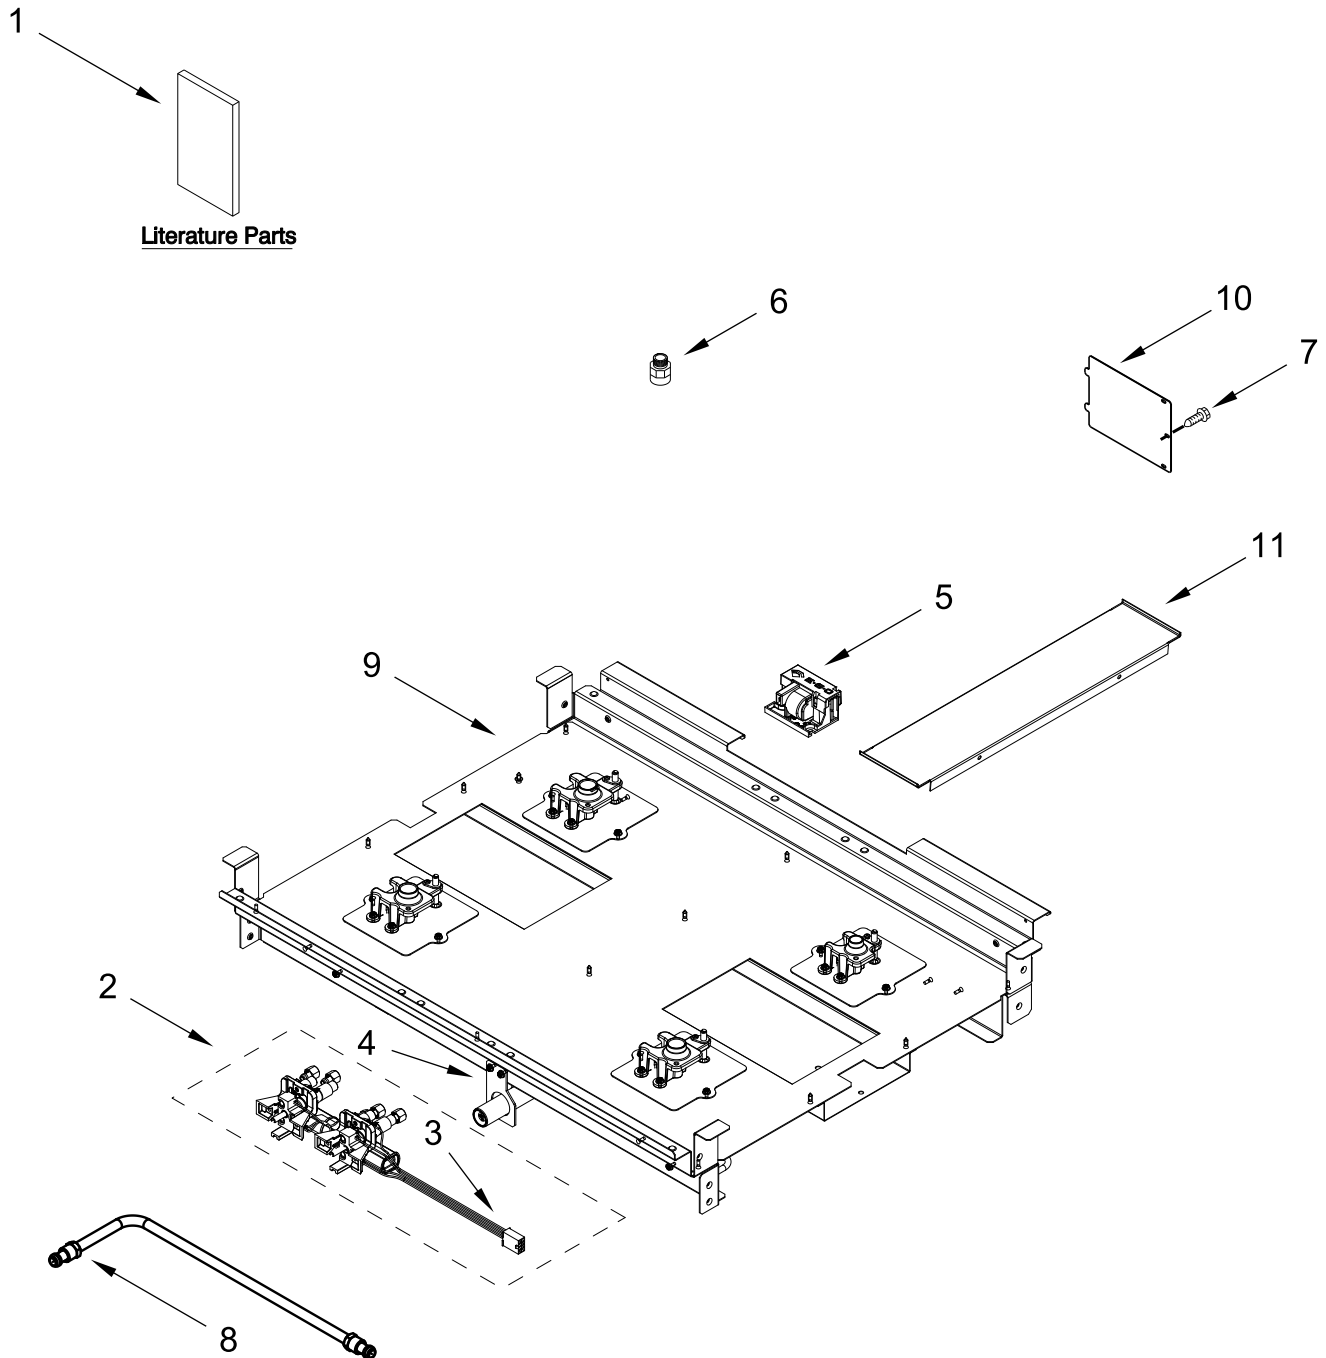

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10893051	Assembly, Valve Manifold	10	W10115843	Cover, Ignition
	W11114330	Guide, Use and Care			(Left Front, Left Rear)	11	W11121361	Filler, Cooktop
	W11177312	Guide, Quick Start		W10893058	Assembly, Valve Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11114333	Instructions, Installation			(Right Front, Right Rear)		W11200317	Harness, Main (30")
	W11184746	Guide, Internet Connectivity					W11200328	Harness, Cooktop
	W11266585	Diagram, Wiring (Cooktop)	3	W11106300	Switch, Harness		W10780278	Harness, Door Lock
	W11202363	Diagram, Wiring (Oven)	4	W11121194	Bracket, Manifold		W11200325	Harness, Communication
	W11202265	Sheet, Tech	5	W11121317	Module, Spark		W11242785	Harness, WIFI
			6	4453116	Adapter, Male		W11212216	Cord, Power
			7	7101P426-60	Screw		9759877	Retainer, Strain Relief
			8	W10892073	Tube, Manifold Supply (Left)		4450800	Screw, Grounding
				W10892076	Tube, Manifold Supply (Right)		W10253333	Bracket, Anti-Tip
			9		Box, Burner (Not Serviced)		7101P485-60	Screw, Anti-Tip Kit
							W11238041	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

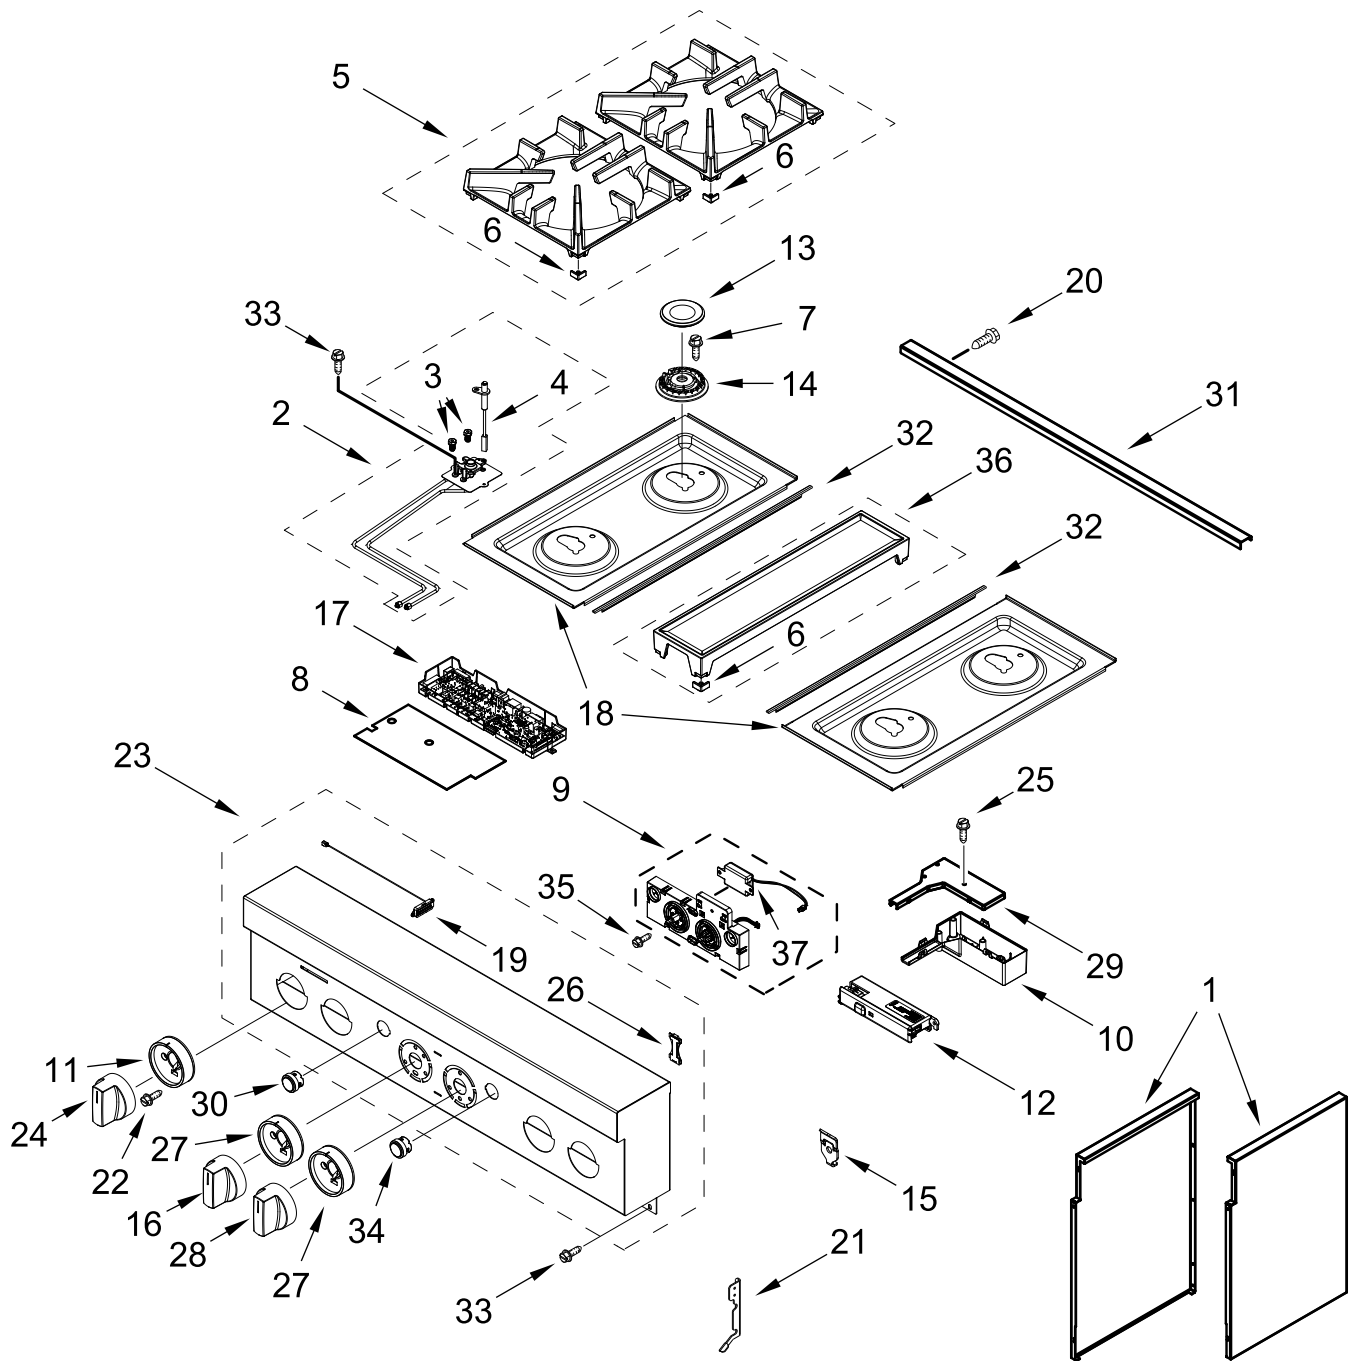

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	7	W11323260	Screw	25	7101P624-60	Screw
	W11106880	Panel, Cabinet Side (Right)	8	W11281269	Barrier, Appliance Manager	26	W10896369	Assembly, Light Pipe
2	W10892793	Assembly, Orifice Holder (Left Front)	9	W11436325	Interface, User	27		Bezel, Oven
	W10892494	Assembly, Orifice Holder (Left Rear)	10	W11205795	Cover, WIFI Outer		W10914998	Stainless
	W10892475	Assembly, Orifice Holder (Right Front)	11	W11090283	Bezel, Cooktop	28		Knob, Oven Temperature
	W10892730	Assembly, Orifice Holder (Right Rear)	12	W11110768	Assembly, WIFI Module		W10891871	Stainless
3	W10892422	Orifice, Main (17.4K) (Left Front)	13		Cap, Burner	29	W11205794	Cover, WIFI Inner
	W10892418	Orifice, Main (15.4K) (Left Rear, Right Front)		W11121391	Black (Set of 4)	30	W11090651	Button Assembly, Oven Light
	W10892440	Orifice, Main (7.2K) (Right Rear)	14	W10891987	Spreader, Flame (High)	31	W11156414	Trim, Island
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)			(Left Front, Left Rear, Right Front)	32		Trim, T-Strip
	W10892429	Orifice, Simmer (2.0K) (Right Rear)		W10892022	Spreader, Flame (Low)		W10271524	Black
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	15	W11036559	Spring Clip, Range	33	7101P426-60	Screw
	W11238756	Igniter (Right Rear)	16		Knob, Oven Mode	34	W11090650	Button Assembly, Oven Start
5		Assembly, Grate		W10891872	Stainless	35	3400814	Screw
	W11291176	Black (Set of 2)	17	W11100264	Manager, Appliance (Powermax)	36	W11291175	Grate Filler Kit
6	W11042504	Bumper, Grate	18		Panel, Cooktop	37	W10568405	Assembly, Speaker
				W10803515	Black (Left)			
				W10804371	Black (Right)			
			19	W11130078	Antenna, WIFI			
			20	7101P338-60	Screw			
			21	W10130760	Bracket, Moving Console (Left)			
				W10130759	Bracket, Moving Console (Right)			
			22	W11328357	Screw			
			23	W11253776	Panel, Console			
			24		Knob, Burner			
				W10882958	Stainless			


CHASSIS PARTS

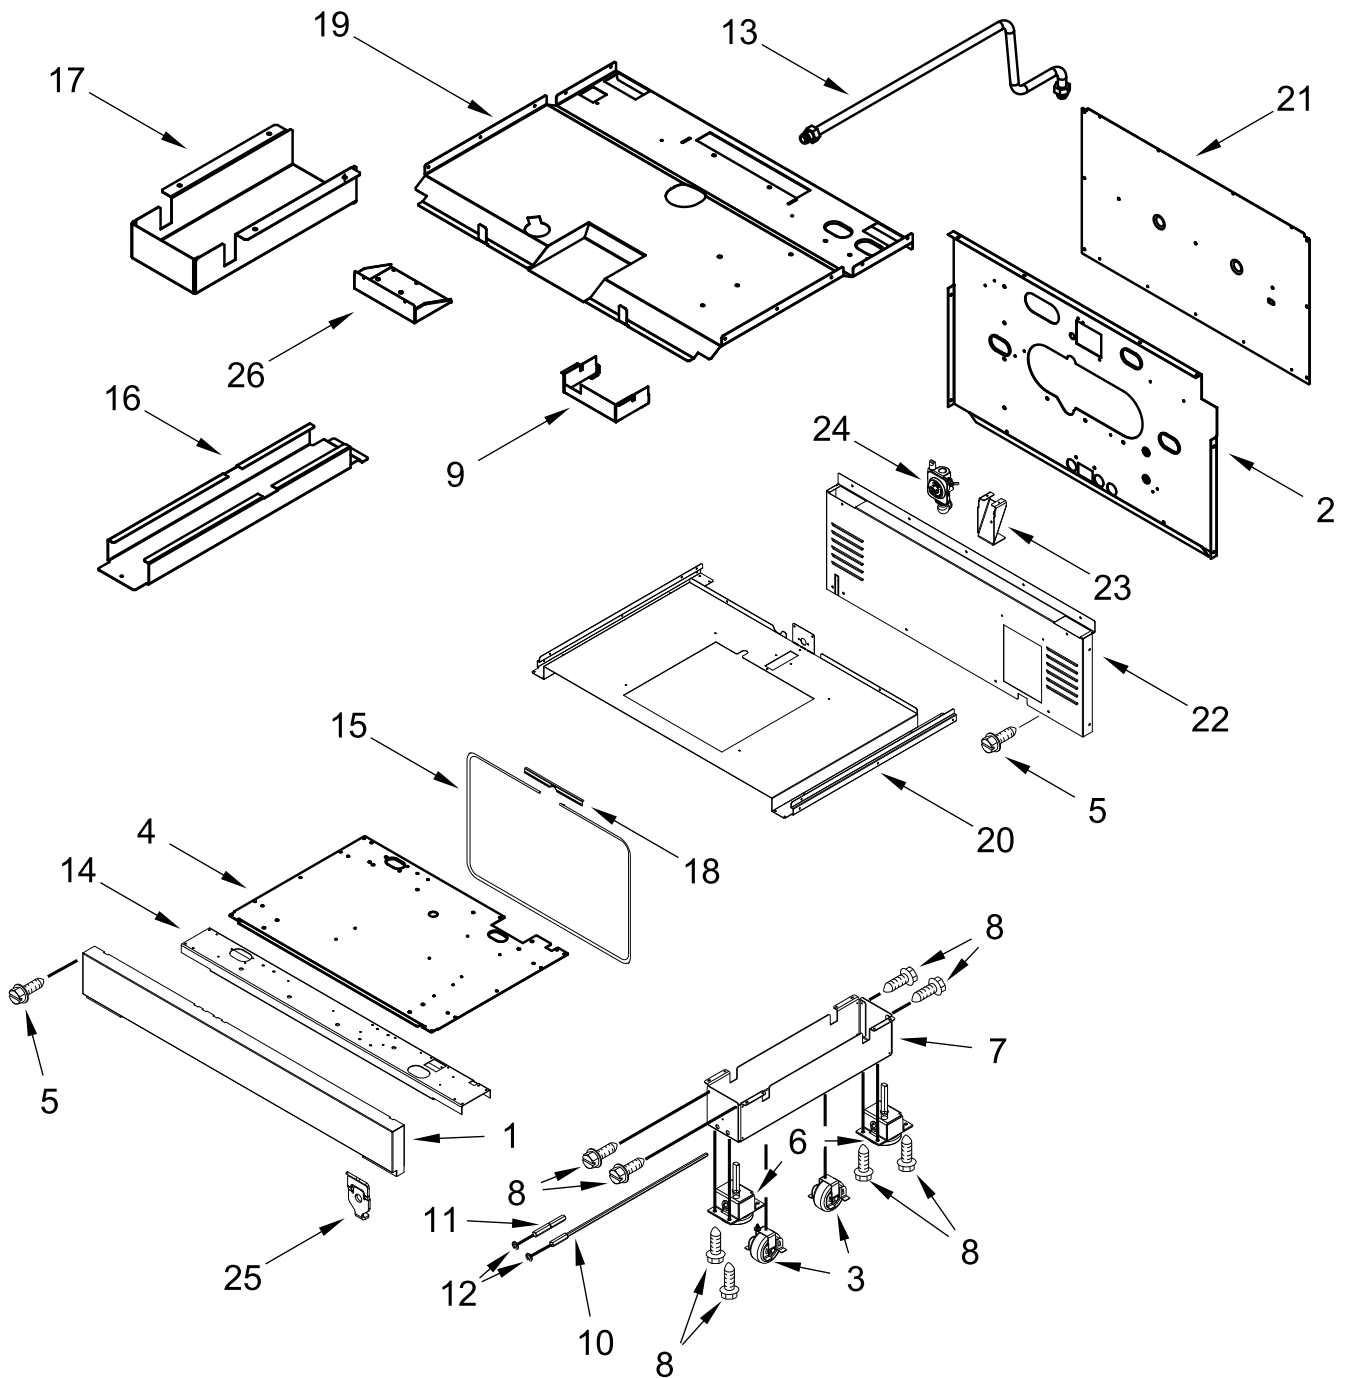

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883795	Kickplate	11	W10115793	Shaft, Short	20	W11040802	Chassis, Bottom
2	W11324989	Back, Chassis	12	489504	E-Ring	21	W11103334	Panel, Back Top
3	W10138054	Assembly, Roller	13	W11106963	Tube, Pressure Regulator	22	W11034134	Panel, Back Bottom
4	W11109583	Duct, Bottom (30")	14	W11087491	Support, Channel	23	W11096823	Bracket, Pressure Regulator
5	7101P426-60	Screw	15	W11115328	Gasket, Oven (30")	24	W10449140	Regulator, Pressure
6	9760860	Leveler	16	W11050145	Duct-Chassis, Rear	25	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	17	W11368831	Channel, Wire	26	W11106341	Drawer, Appliance Manager
8	4449743	Screw	18	W11362015	Retainer, Gasket (9" Long)			
9	W11369237	Cabinet, Appliance Manager	19	W11324986	Top, Chassis			
10	W10115869	Shaft, Long						


OVEN PARTS

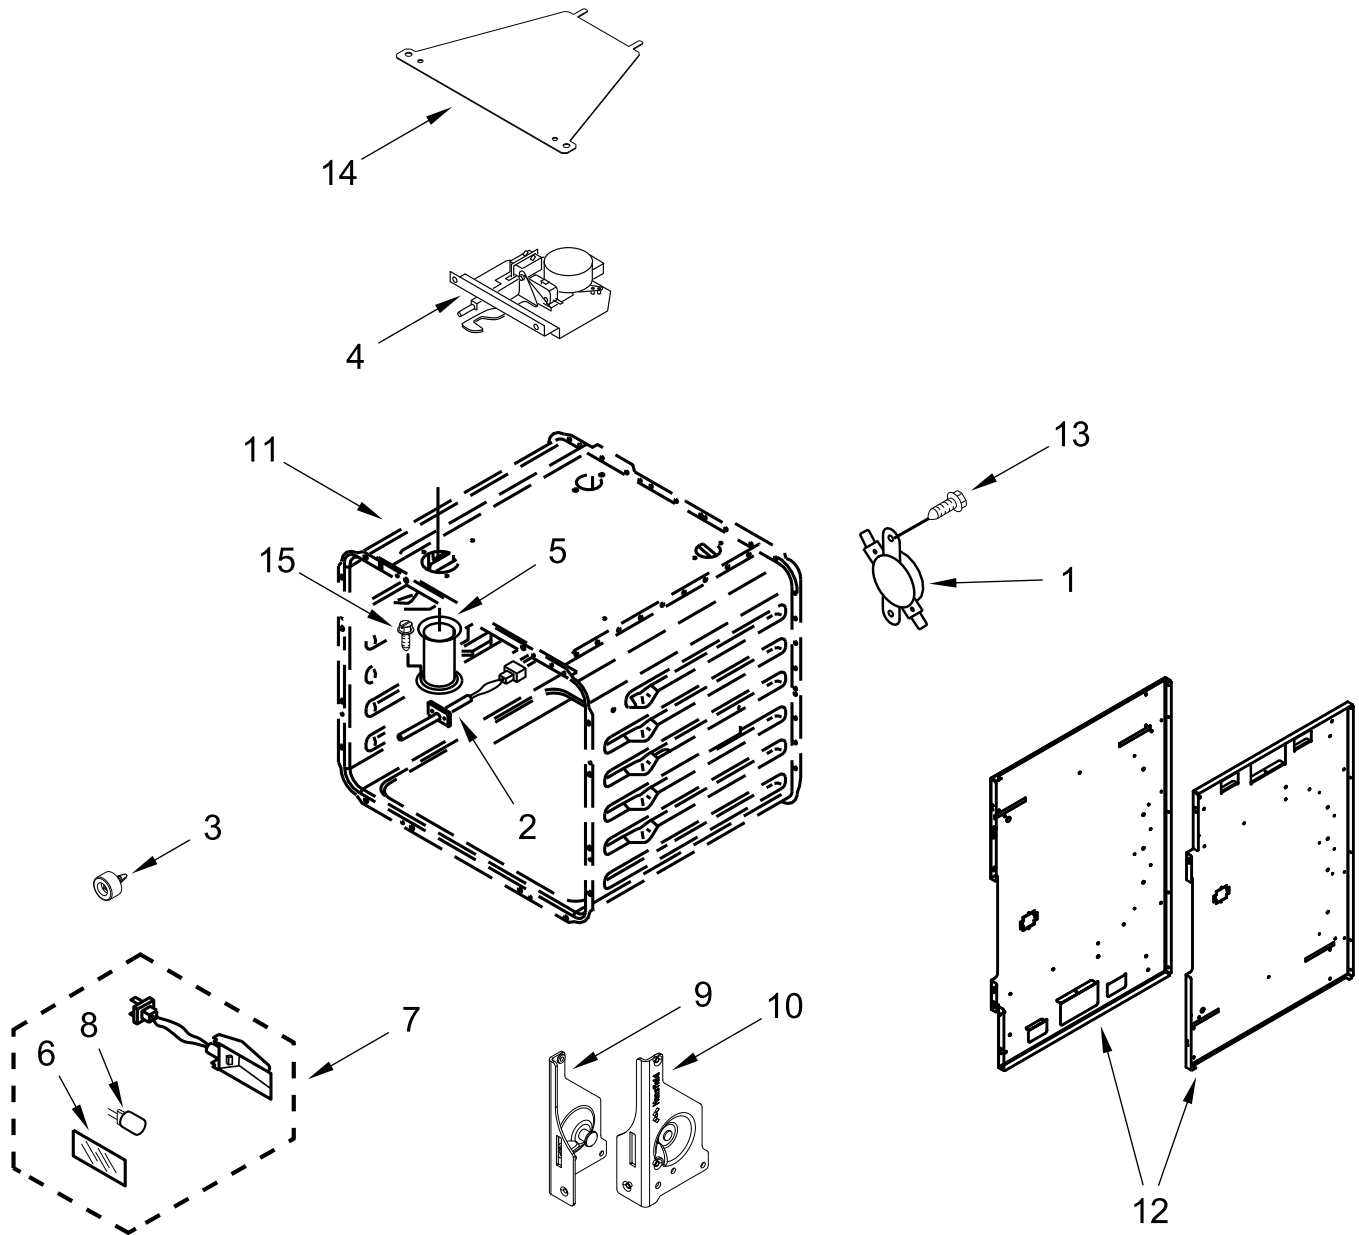

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap, 30"
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282816	Insulation, Back, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W10169756	Lens, Light	13	7101P426-60	Screw			
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


VENTING PARTS

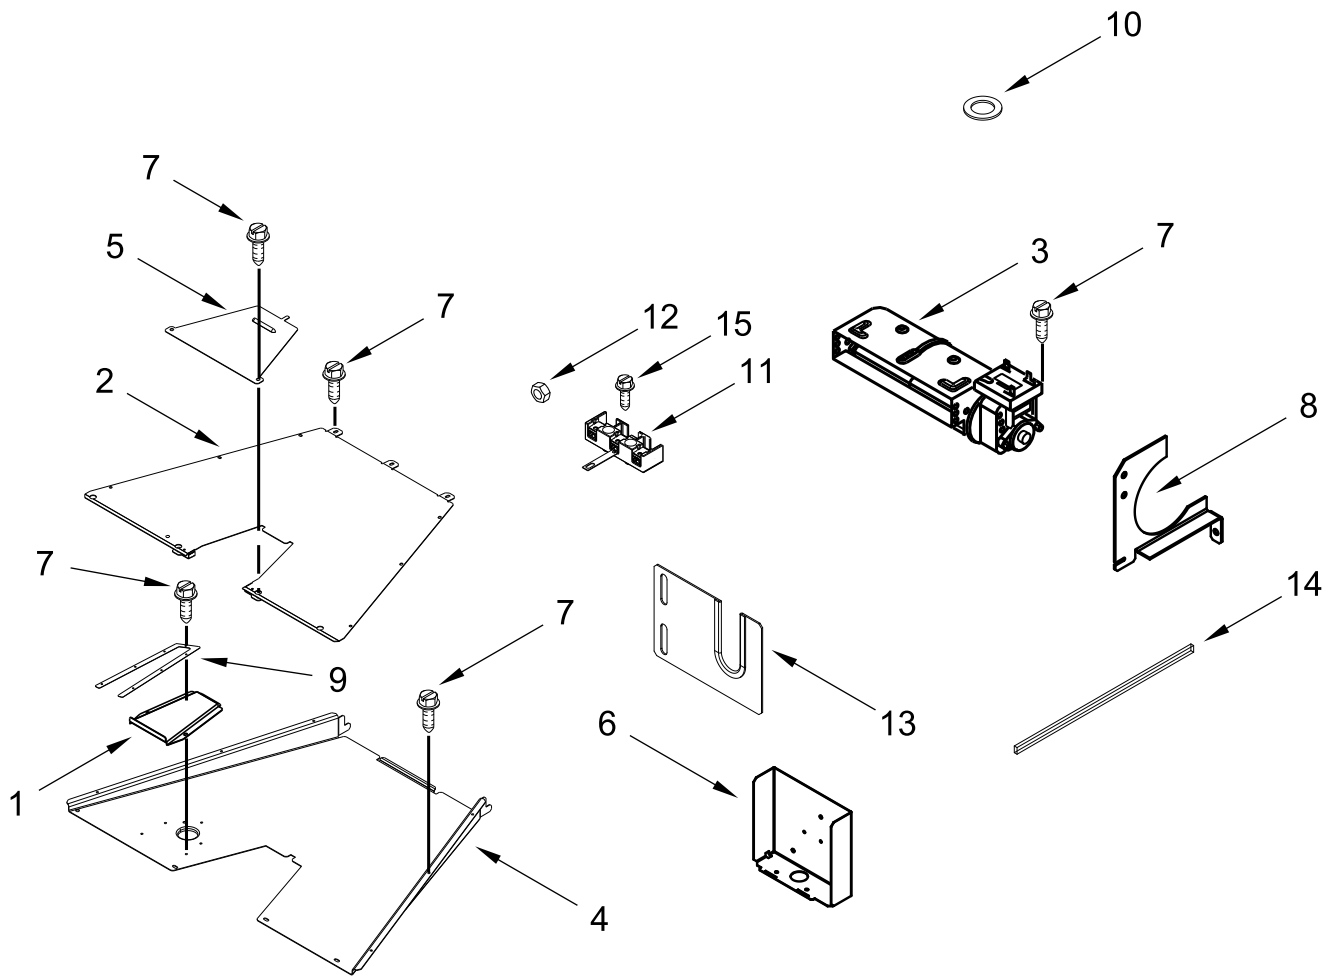

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W11353392	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	15	3196560	Screw
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	9761958	Block, Terminal			
			12	112432	Nut, Hex			


OVEN DOOR PARTS

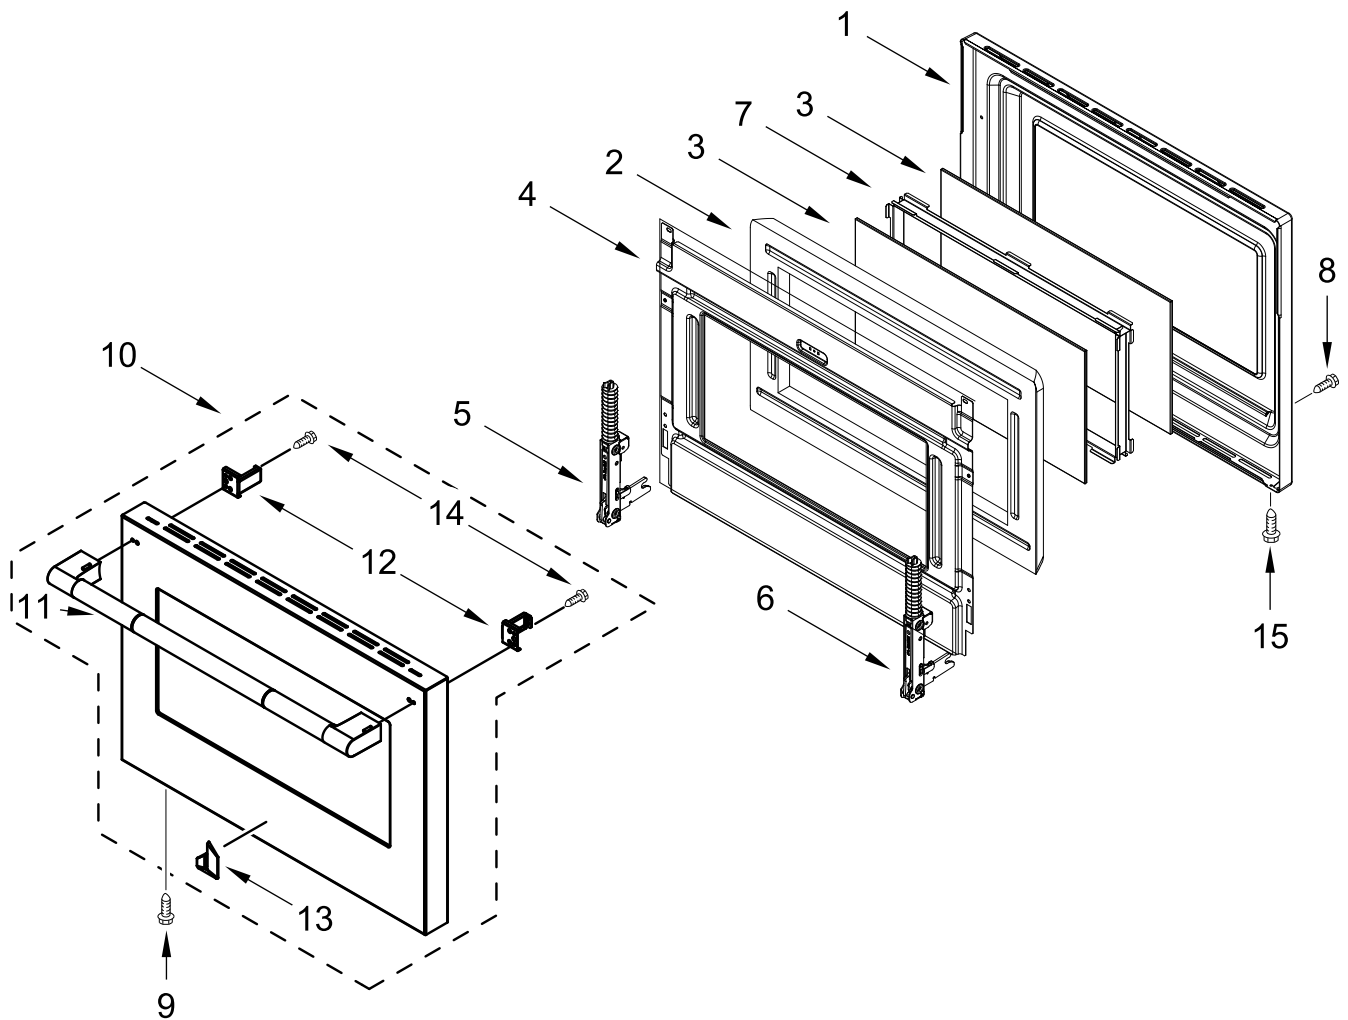

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W10799308	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			

INTERNAL OVEN PARTS

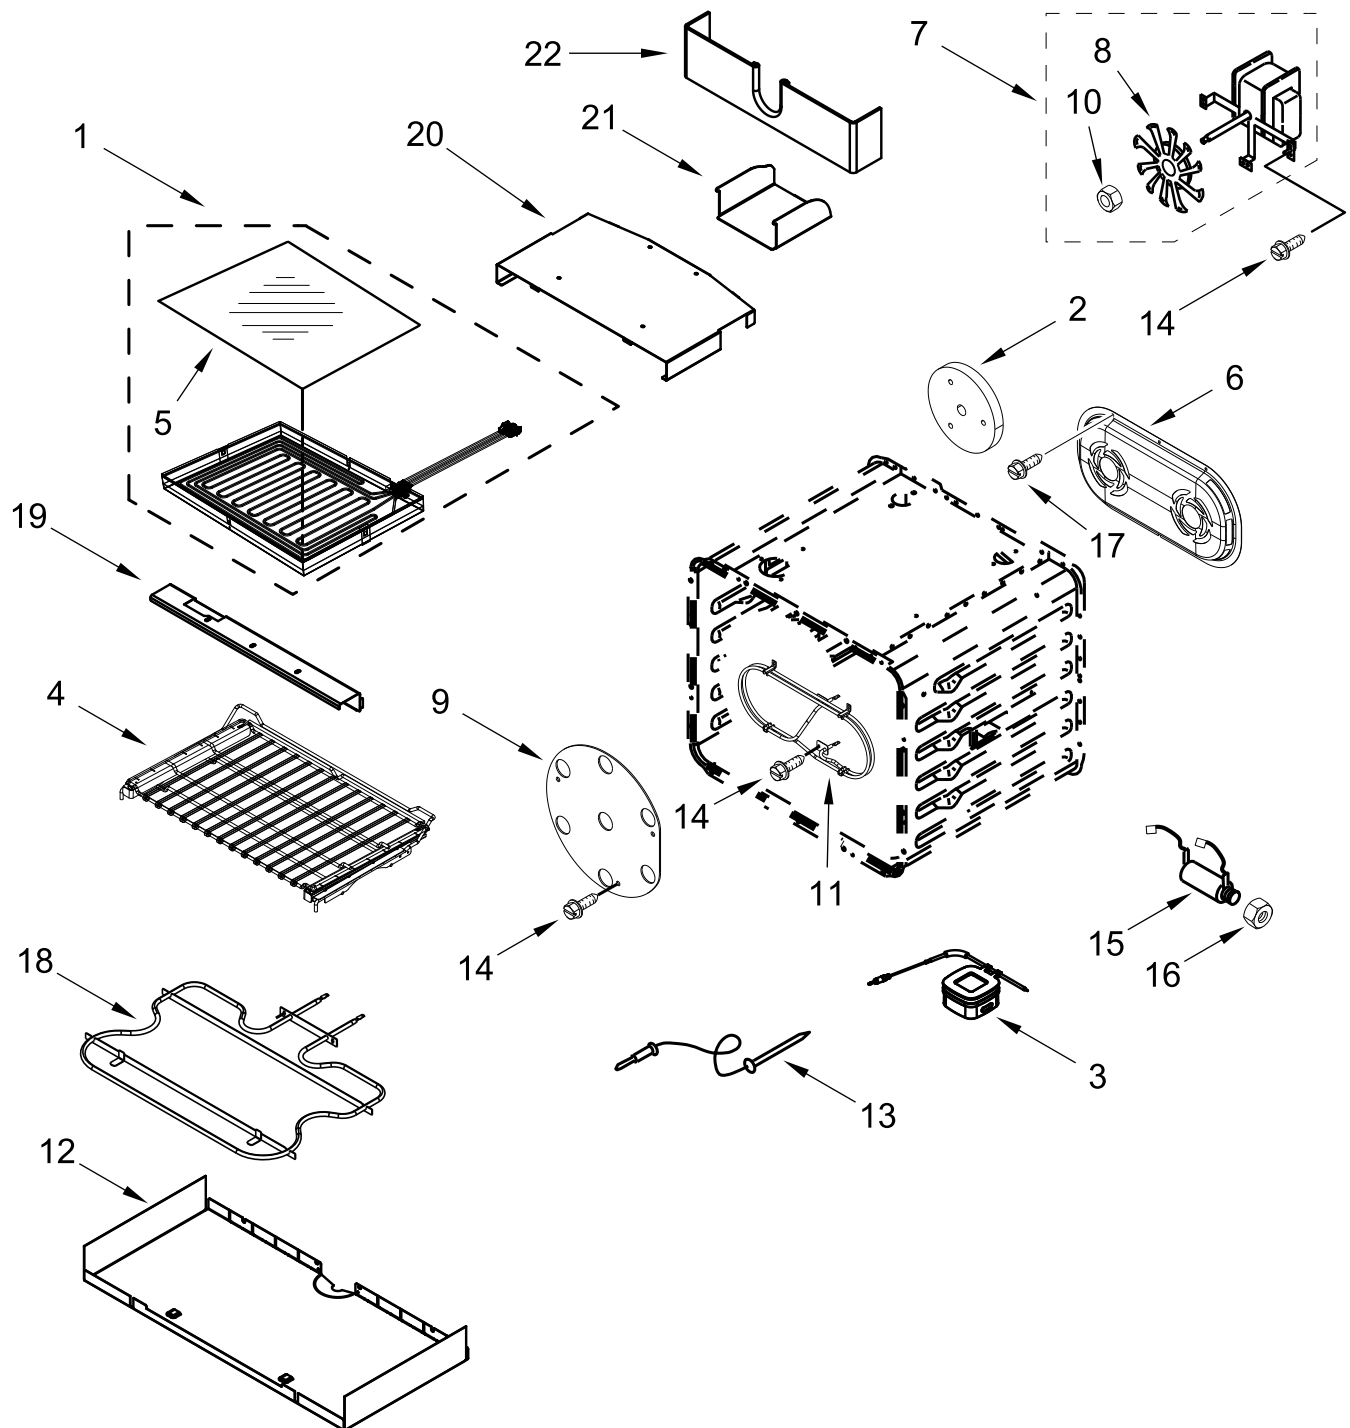

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	8	W11108376	Blade, Fan	16	W11033111	Nut, Locking
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	17	W10739592	Screw
3	W11186918	Probe, Wireless Meat	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
4	W11111342	Rack, Oven (Sliding)	11	W10116434	Element, Convection	19	W11112336	Bracket, Broil Front
5	W11193191	Glass, Broil Element	12	W11109421	Tray, Hidden Bake	20	W11158843	Bracket, Broil Top
6	W11232487	Baffle, Convection	13	9755542	Probe, Temperature	21	W11111391	Cover, Broil Terminal
7	W11121400	Fan, Convection	14	4449154	Screw	22	W11170823	Cover Plate, Terminal Hole
			15	9755543	Jack, Meat Probe			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill