




RISE 36" DUAL-FUEL PROFESSIONAL RANGE

MODELS:

JDRP436HL01 (Stainless)


BURNER BOX PARTS

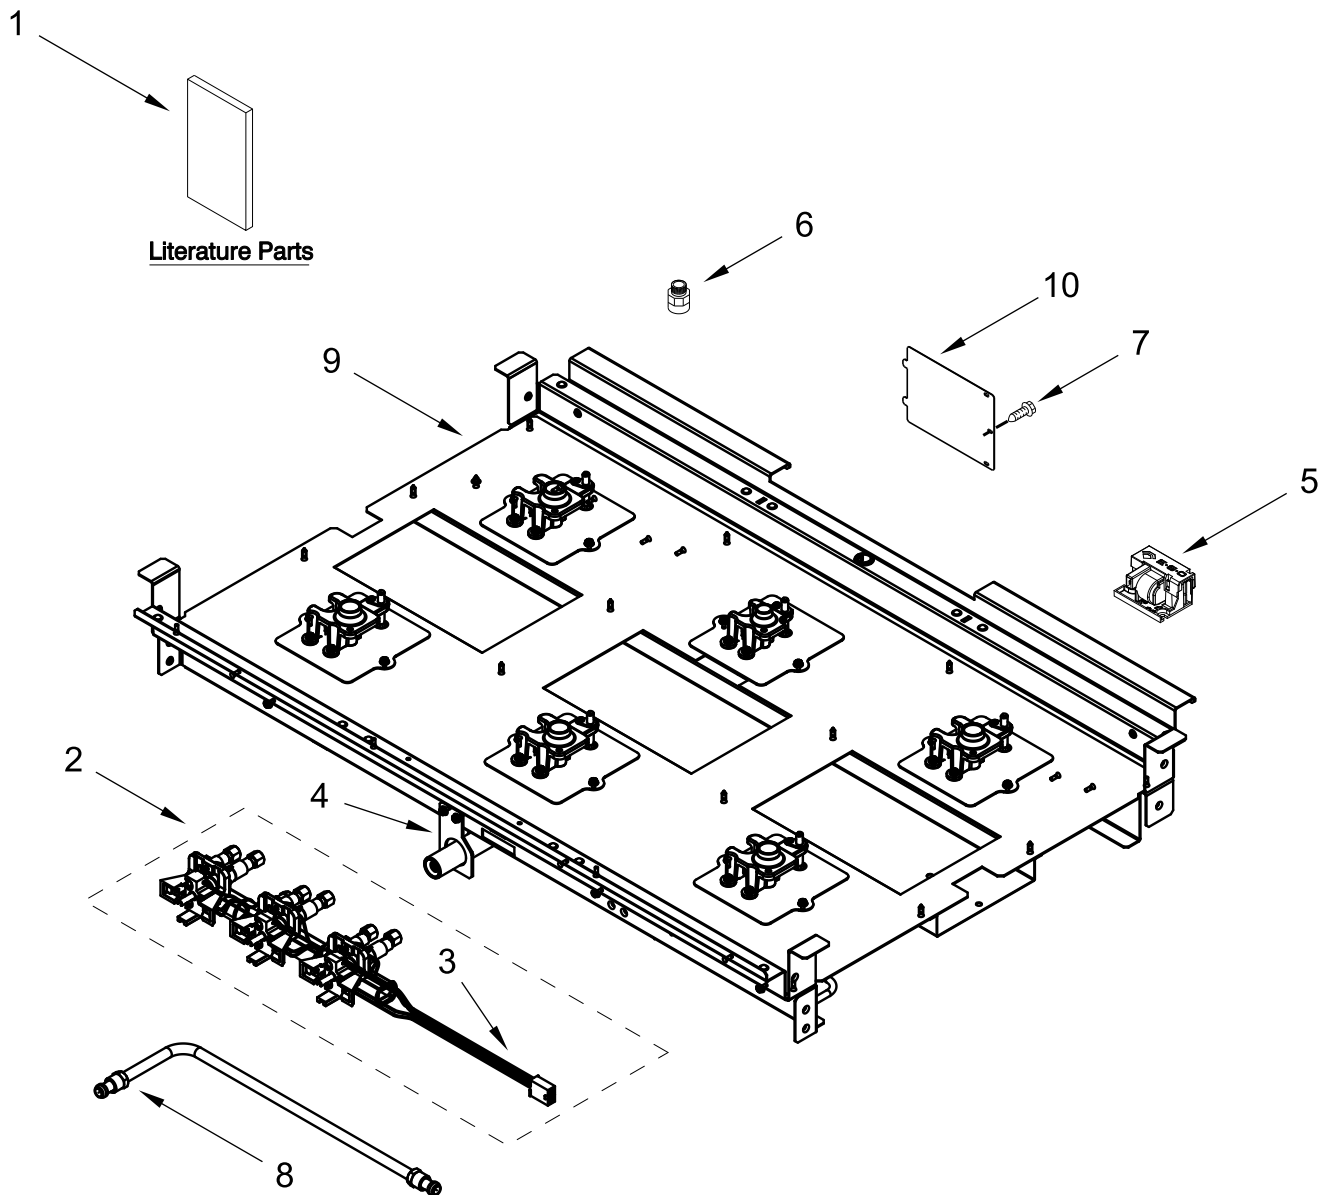

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10893052	Assembly, Valve Manifold	10	W10115843	Cover, Ignition
	W11114330	Guide, Use and Care			(Left Front, Left Rear, Center Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start		W10893059	Assembly, Valve Manifold		W11200320	Harness, Main (36")
	W11114333	Instructions, Installation			(Center Front, Right Front, Right Rear)		W11200332	Harness, Cooktop
	W11184746	Guide, Internet Connectivity					W10780278	Harness, Door Lock
	W11266585	Diagram, Wiring (Cooktop)	3	W11106302	Switch, Harness		W11200325	Harness, Communication
	W11202363	Diagram, Wiring (Oven)	4	W11121194	Bracket, Manifold		W11242785	Harness, WIFI
	W11202265	Sheet, Tech	5	W11121317	Module, Spark		W11212216	Cord, Power
			6	4453116	Adapter, Male		9759877	Retainer, Strain Relief
			7	7101P426-60	Screw		4450800	Screw, Grounding
			8	W10892370	Tube, Manifold Supply (Left)		W10253333	Bracket, Anti-Tip
				W10892417	Tube, Manifold Supply (Right)		7101P485-60	Screw, Anti-Tip Kit
			9		Box, Burner (Not Serviced)		W11238041	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

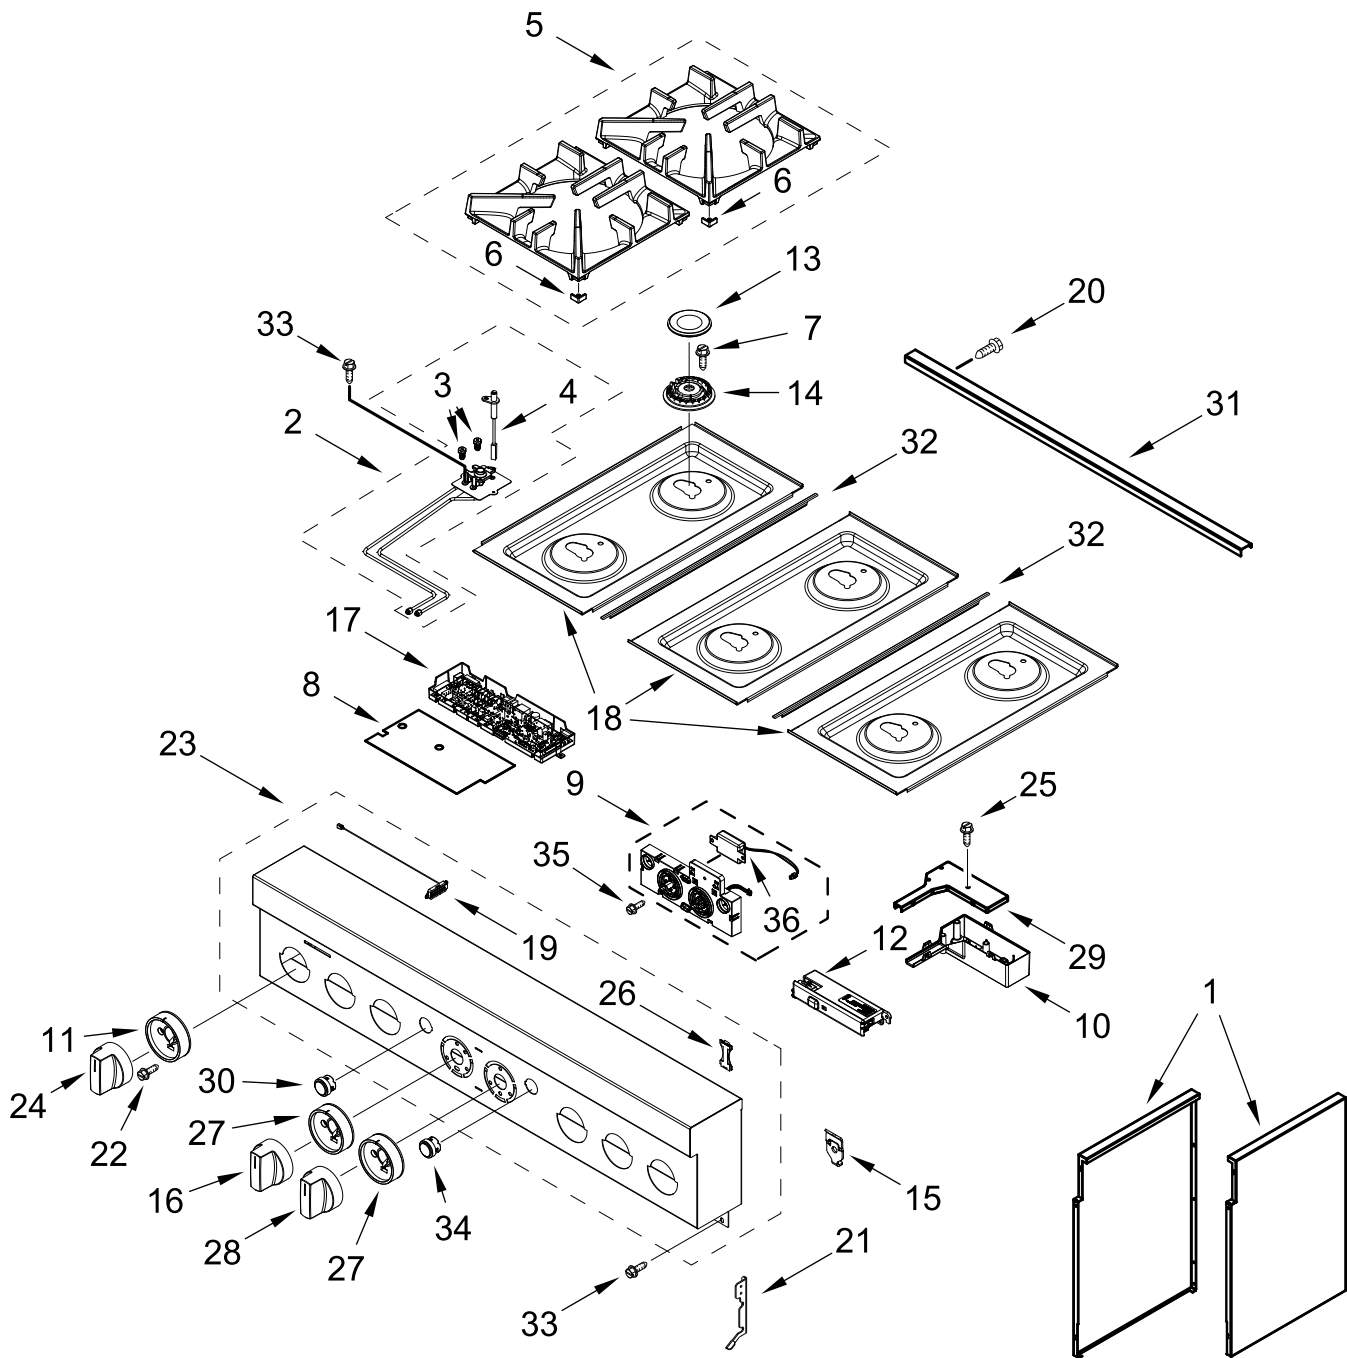

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	4	W11238757	Igniter (Left Front, Left Rear, Right Front, Right Rear)	18		Panel, Cooktop
	W11106880	Panel, Cabinet Side (Right)					W10803515	Black
2	W10892793	Assembly, Orifice Holder (Left Front)		W11238758	Igniter (Center Front)		W10803519	Black
	W10892494	Assembly, Orifice Holder (Left Rear)		W11238756	Igniter (Center Rear)		W10804373	Black
	W10892501	Assembly, Orifice Holder (Center Front)	5		Assembly, Grate	19	W11130078	Antenna, WIFI
	W10892810	Assembly, Orifice Holder (Center Rear)		W11291176	Black (Set of 2)	20	7101P338-60	Screw
	W10892731	Assembly, Orifice Holder (Right Front)	6	W11042504	Bumper, Grate	21	W10130760	Bracket, Moving Console (Left)
	W10892482	Assembly, Orifice Holder (Right Rear)	7	W11323260	Screw		W10130759	Bracket, Moving Console (Right)
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	8	W11281269	Barrier, Appliance Manager	22	W11328357	Screw
	W10892418	Orifice, Main (15.4K) (Left Rear, Center Front, Right Rear)	9	W11436324	Interface, User	23	W11253775	Panel, Console
	W10892440	Orifice, Main (7.2K) (Center Rear)	10	W11205795	Cover, WIFI Outer	24		Knob, Burner (For 6 Cooktop Burners)
	W10892435	Orifice, Simmer (2.6K) (All Except Center Rear)	11	W11090283	Bezel, Cooktop (For 6 Cooktop Burners)		W10882958	Stainless
	W10892429	Orifice, Simmer (2.0K) (Center Rear)	12	W11110768	Assembly, WIFI Module	25	7101P624-60	Screw
			13		Cap, Burner	26	W10896369	Assembly, Light Pipe
				W11121392	Black (Set of 6)	27		Bezel, Oven (For 2 Oven Knobs)
			14	W10891987	Spreader, Flame (High) (All Except Center Rear)		W10914998	Stainless
				W10892022	Spreader, Flame (Low) (Center Rear)	28		Knob, Oven Temperature
			15	W11036559	Spring Clip, Range		W10891871	Stainless
			16		Knob, Oven Mode	29	W11205794	Cover, WIFI Inner
				W10891872	Stainless	30	W11090651	Button Assembly, Oven Light
			17	W11100267	Manager, Appliance (Powermax)	31	W11156416	Trim, Island
						32		Trim, T-Strip
							W10271524	Black
						33	7101P426-60	Screw
						34	W11090650	Button Assembly, Oven Start
						35	3400814	Screw
						36	W10568405	Assembly, Speaker


CHASSIS PARTS

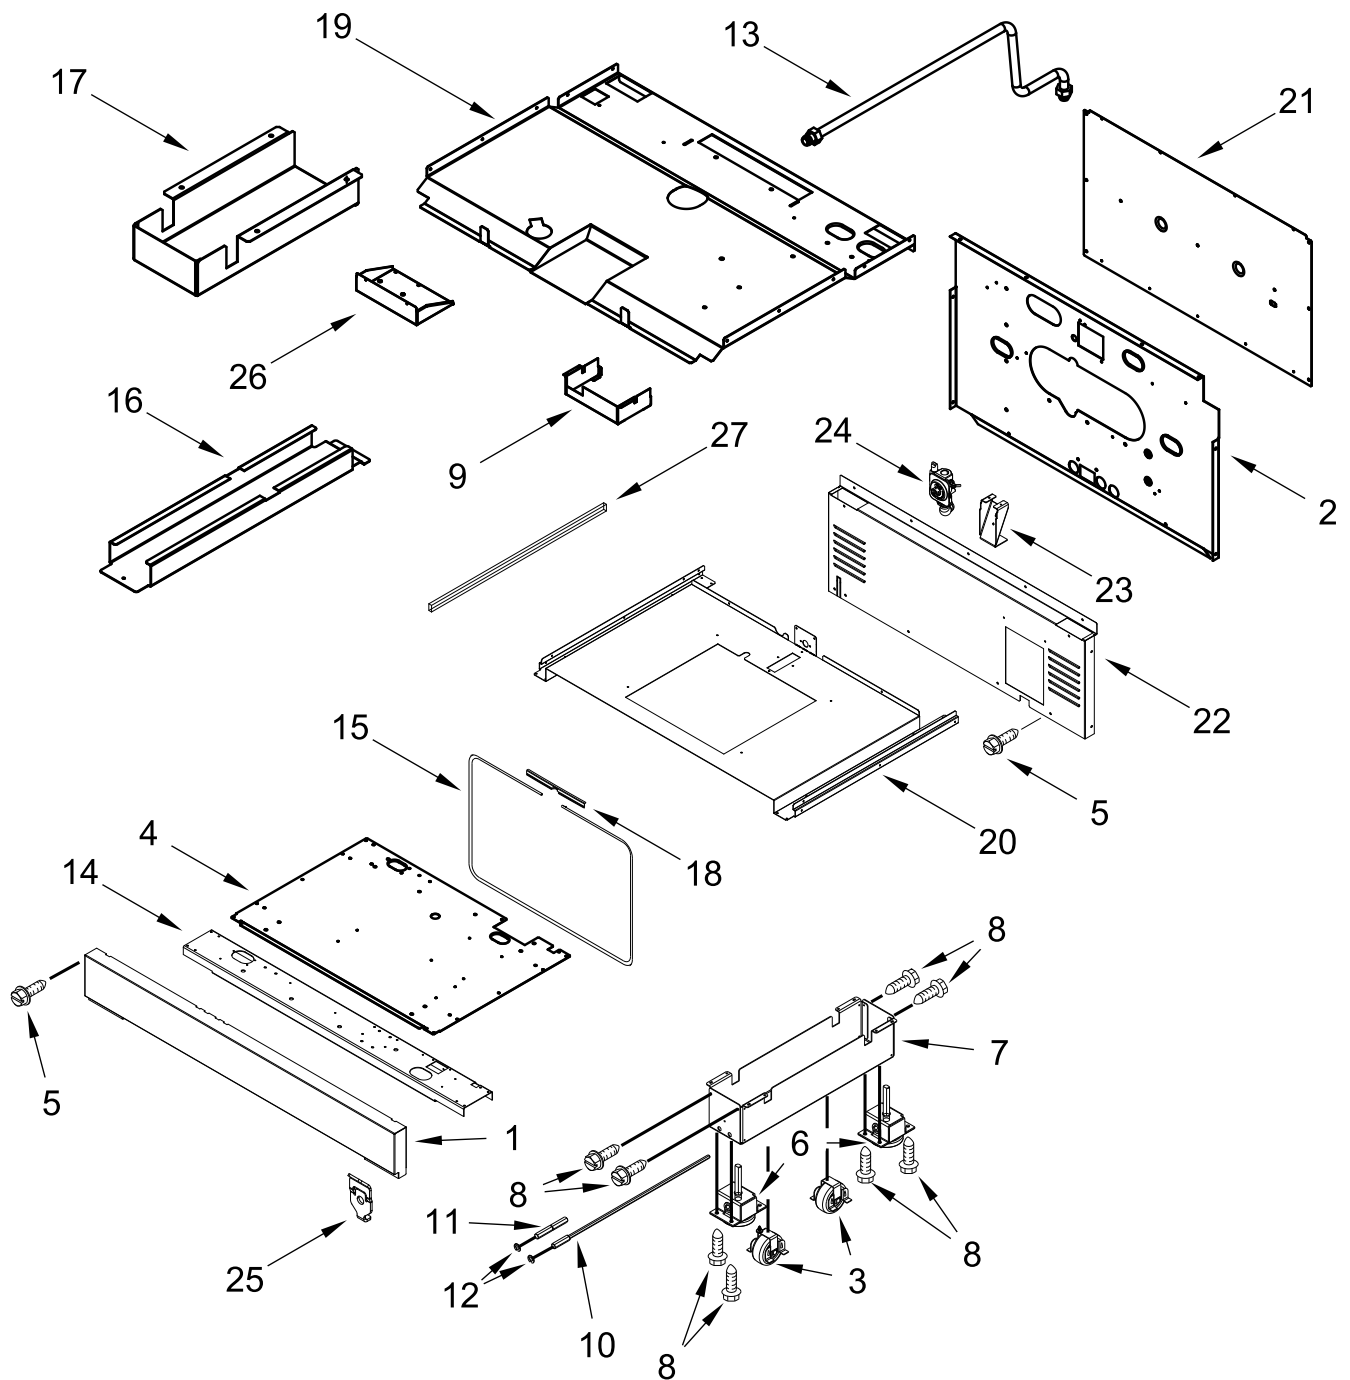

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	11	W10115793	Shaft, Short	20	W11040801	Chassis, Bottom
2	W11324988	Back, Chassis	12	489504	E-Ring	21	W11103333	Panel, Back Top
3	W10138054	Assembly, Roller	13	W11106963	Tube, Pressure Regulator	22	W11034133	Panel, Back Bottom
4	W11095572	Duct, Bottom (36")	14	W11087493	Support, Channel	23	W11096823	Bracket, Pressure Regulator
5	7101P426-60	Screw	15	W11115330	Gasket, Oven (36")	24	W10449140	Regulator, Pressure
6	9760860	Leveler	16	W11050145	Duct-Chassis, Rear	25	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	17	W11368831	Channel, Wire	26	W11106341	Drawer, Appliance Manager
8	4449743	Screw	18	W11362015	Retainer, Gasket (9" Long)	27	W10919715	Gasket
9	W11369237	Cabinet, Appliance Manager						
10	W10115869	Shaft, Long	19	W11324985	Top, Chassis			


OVEN PARTS

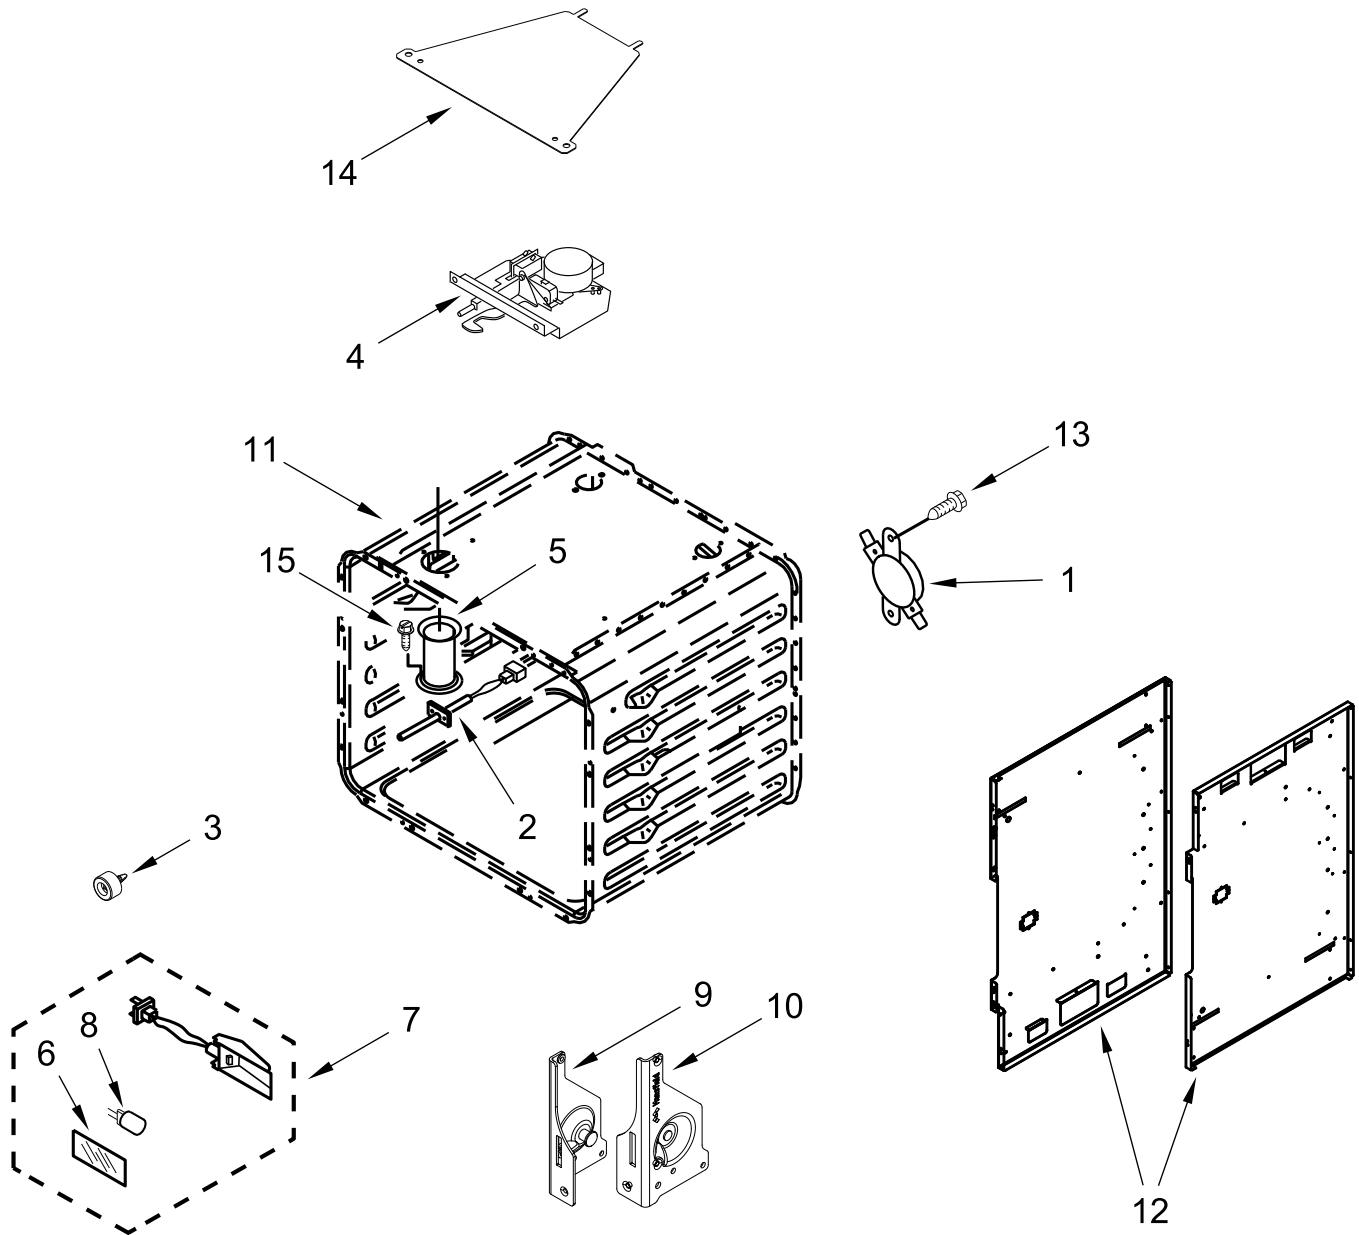

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282811	Insulation, Wrap
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282815	Insulation, Back
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W10169756	Lens, Light	13	7101P426-60	Screw			
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


VENTING PARTS

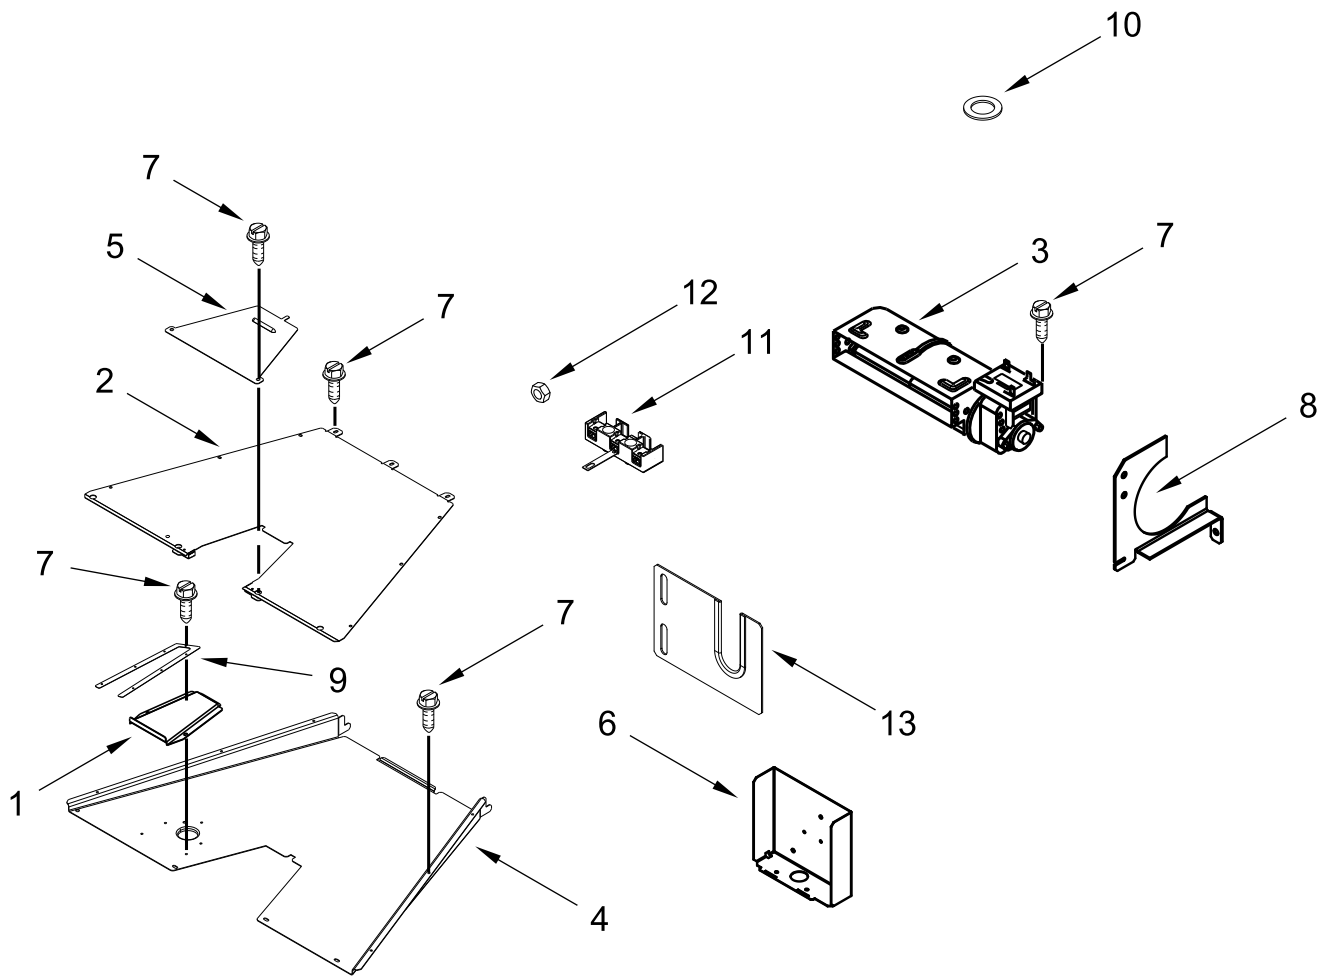

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
2	W11105223	Vent, Cooling Top (30")	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	112432	Nut, Hex
4	W11105222	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
			9	W10270397	Seal, Vent Slope (30")			


OVEN DOOR PARTS

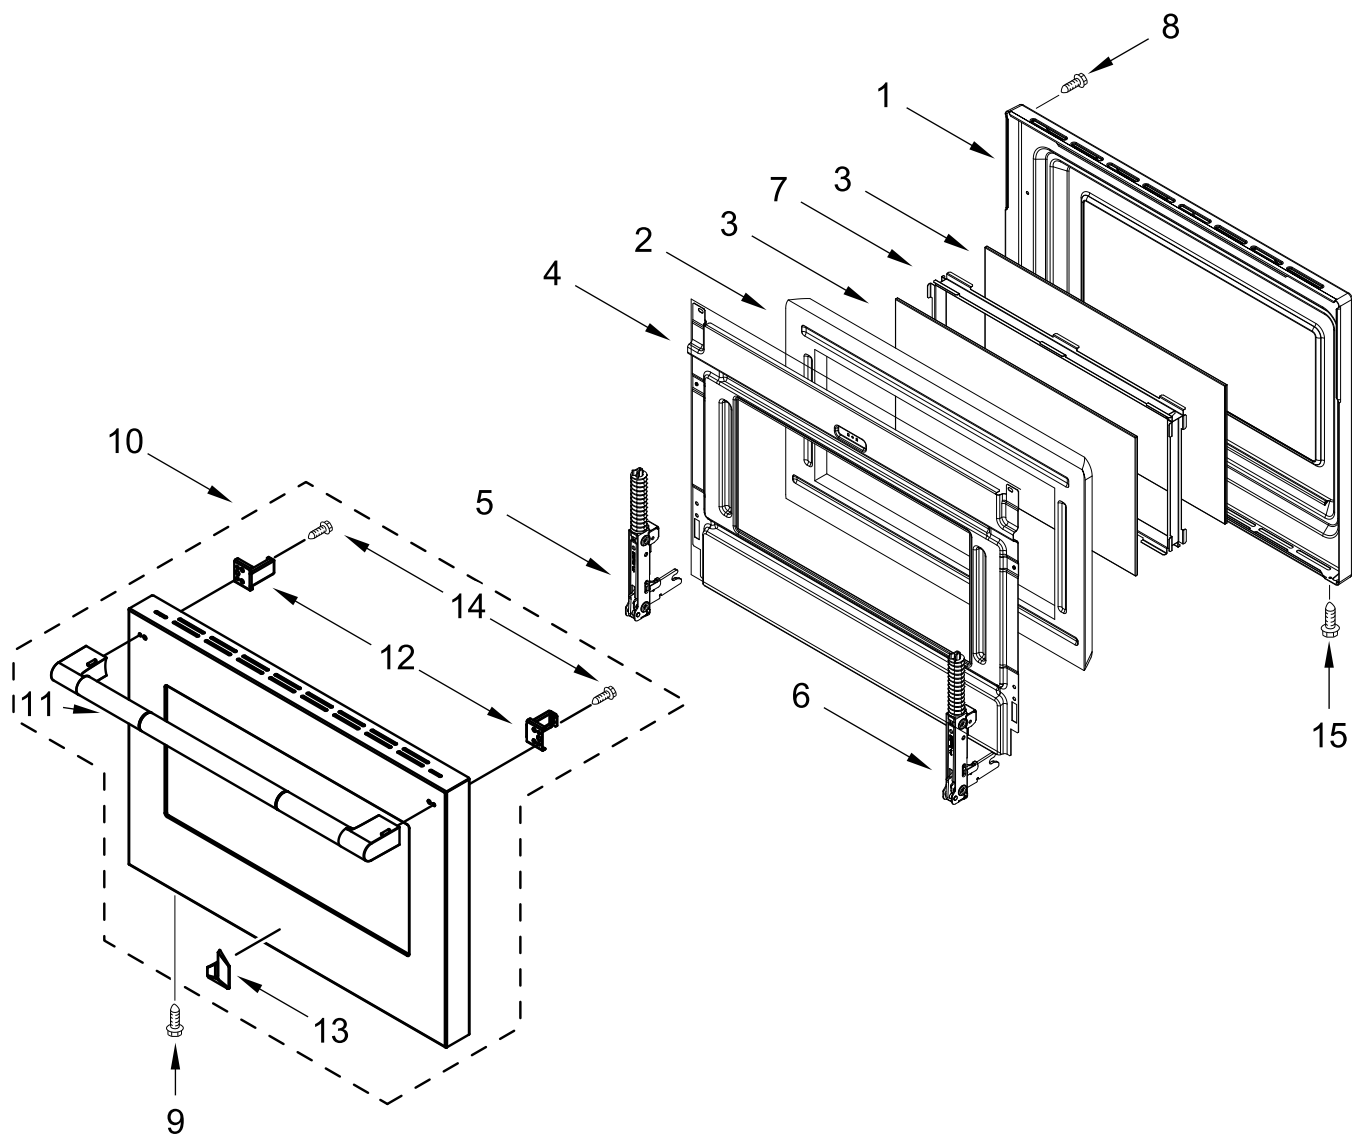

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10898280	Screw	13		Badge
2	W10884823	Insulation, Door	9	W10162096	Screw		W11238656	Stainless
3	W11036791	Glass, Inner	10	W10799310	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
4	W11194820	Retainer, Glass				15	W10607120	Screw
5	W11096978	Hinge, Door (Left)	11	W11102828	Handle, Door			
6	W11096977	Hinge, Door (Right)	12	W11197830	Bracket, Handle			
7	W11194814	Frame, Glass						

INTERNAL OVEN PARTS

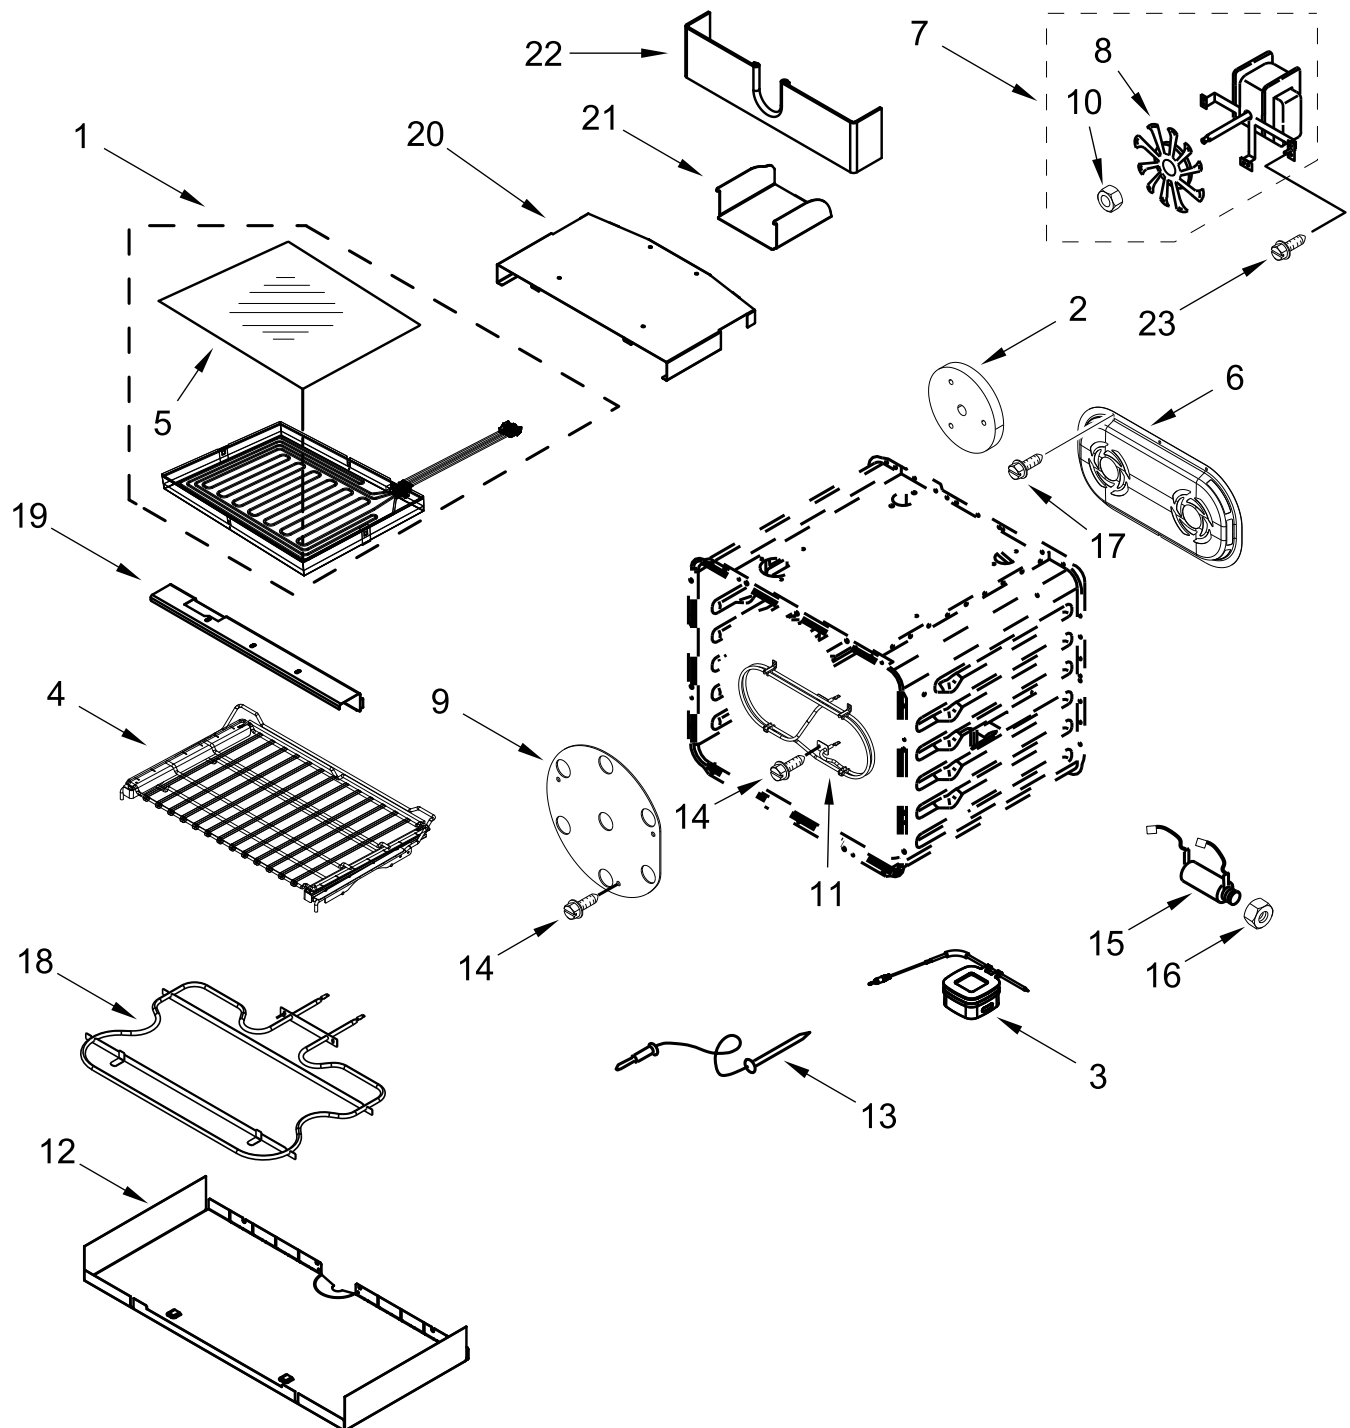

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	9	W10261523	Plate, Fan	18	W10115992	Element, Hidden Bake
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	19	W11112336	Bracket, Broil Front
3	W11186918	Probe, Wireless Meat	11	W10116434	Element, Convection	20	W11158843	Bracket, Broil Top
4	W11111356	Rack, Oven (Sliding)	12	W11106922	Tray, Hidden Bake	21	W11111392	Cover, Broil Terminal
5	W11193191	Glass, Broil Element	13	9755542	Probe, Temperature	22	W11170823	Cover Plate, Terminal Hole
6	W11232487	Baffle, Convection	14	4449154	Screw	23	W10720084	Screw
7	W11121400	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W11108376	Blade, Fan	16	W11033111	Nut, Locking			
			17	W10739592	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill