




NOIR 36" DUAL-FUEL PROFESSIONAL RANGE

MODELS:

JDRP436HM01 (Stainless)


BURNER BOX PARTS

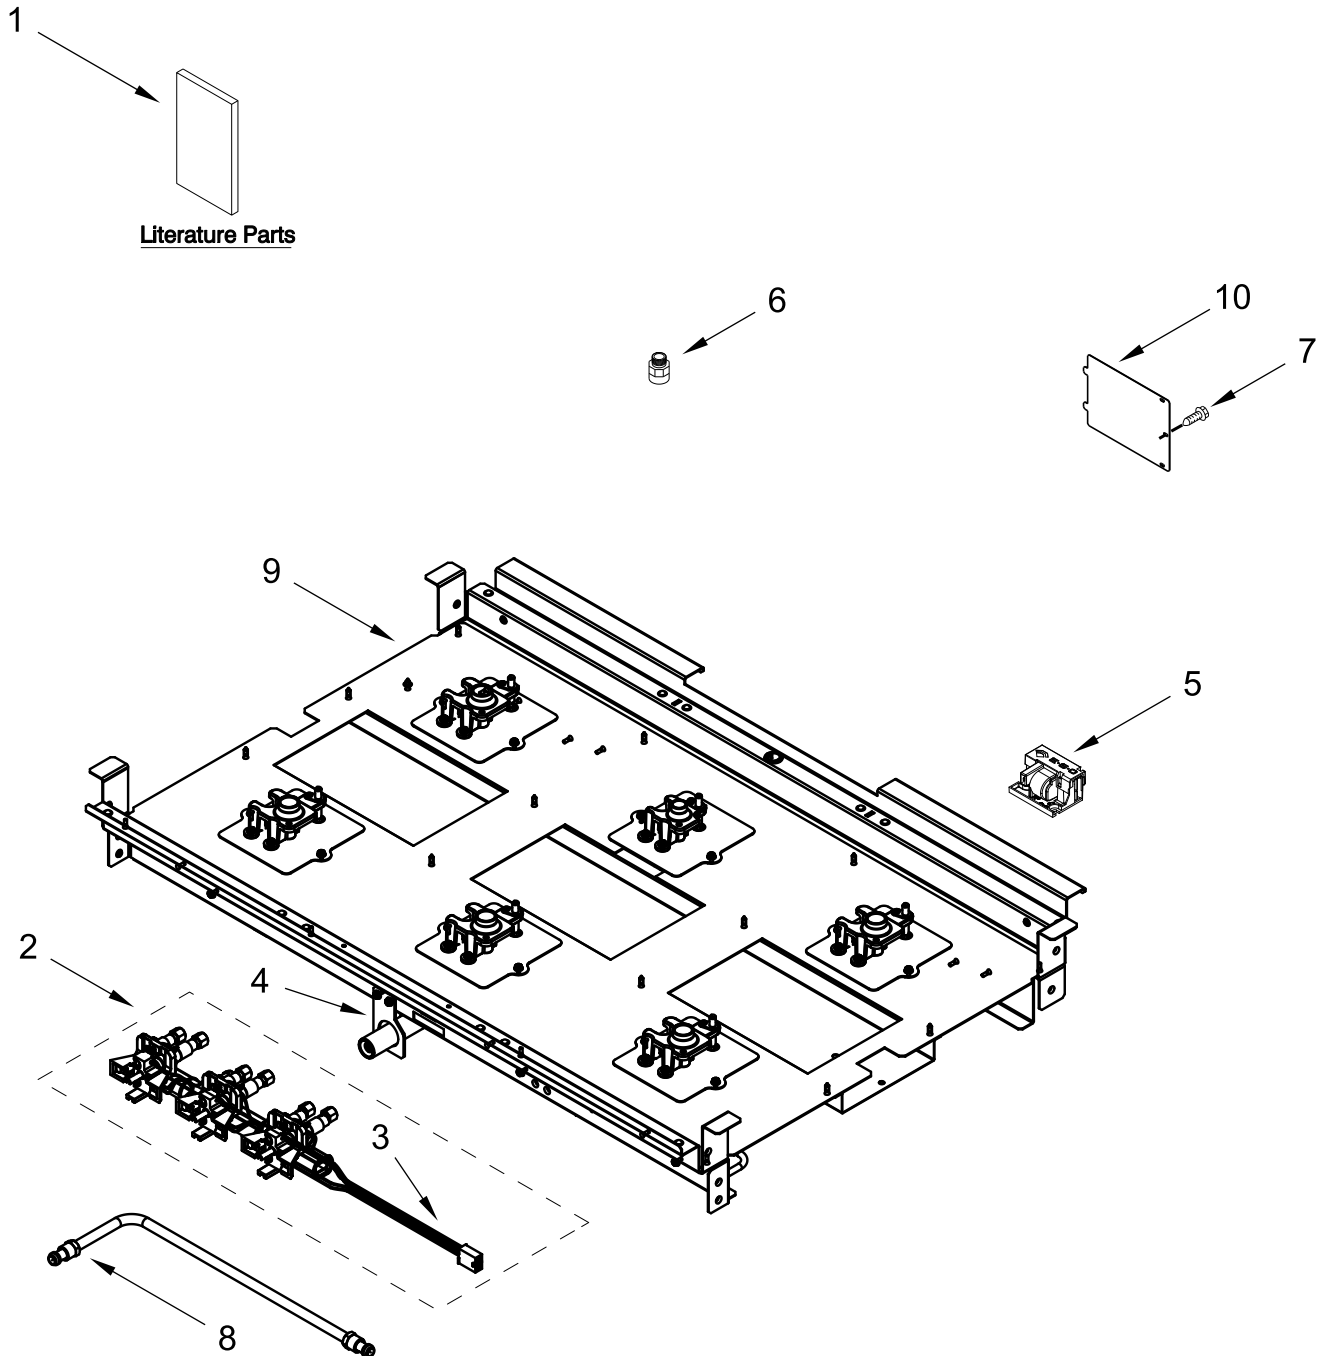

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10893052	Assembly, Valve Manifold	10	W10115843	Cover, Ignition
	W11114330	Guide, Use and Care			(Left Front, Left Rear, Center Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11114333	Instructions, Installation		W10893059	Assembly, Valve Manifold		W11200320	Harness, Main (36")
	W11177312	Guide, Quick Start			(Center Front, Right Front, Right Rear)		W11200332	Harness, Cooktop
	W11184746	Guide, Internet Connectivity					W10780278	Harness, Door Lock
	W11266585	Diagram, Wiring (Cooktop)	3	W11106302	Switch, Harness		W11200325	Harness, Communication
	W11202363	Diagram, Wiring (Oven)	4	W11121194	Bracket, Manifold		W11242785	Harness, WIFI
	W11202265	Sheet, Tech	5	W11121317	Module, Spark		W11212216	Cord, Power
			6	4453116	Adapter, Male		3196560	Screw
			7	7101P426-60	Screw			(For Power Cord)
			8	W10892370	Tube, Manifold Supply		9759877	Retainer, Strain Relief
					(Left)		4450800	Screw, Grounding
				W10892417	Tube, Manifold Supply		W10253333	Bracket, Anti-Tip
					(Right)		7101P485-60	Screw, Anti-Tip Kit
			9		Box, Burner (Not Serviced)		W11238041	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

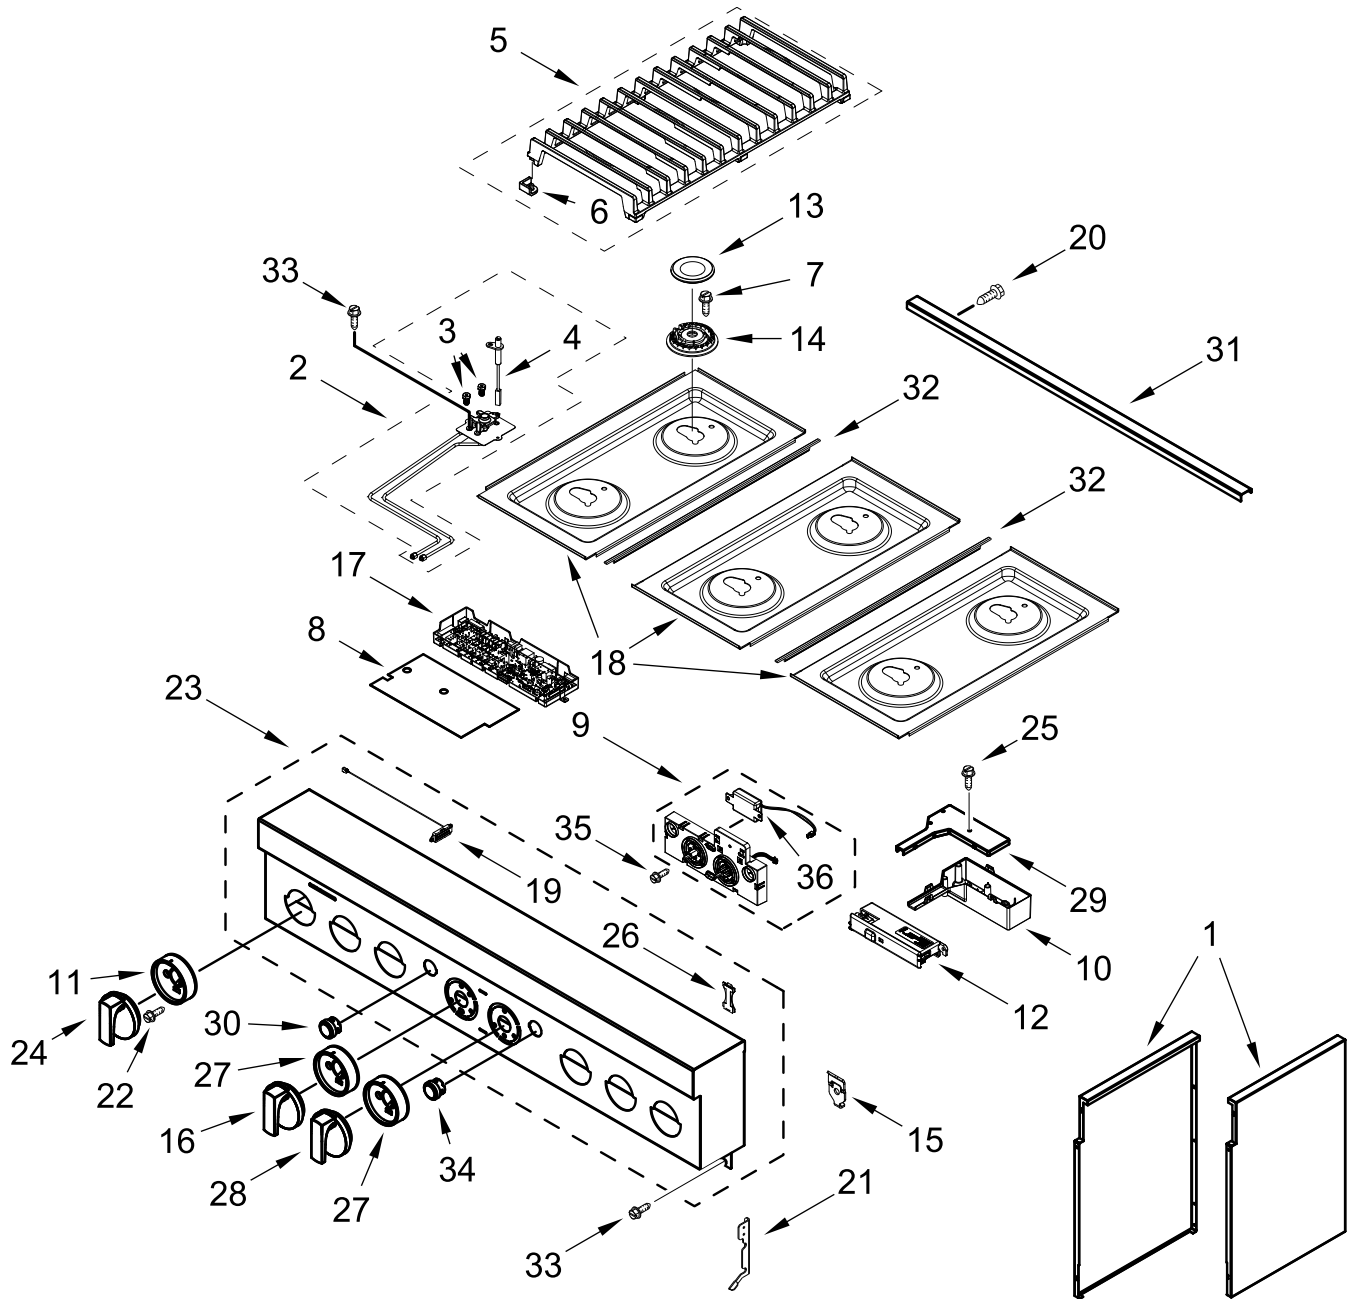

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	4	W11238757	Igniter (Left Front, Left Rear, Right Front, Right Rear)	18		Panel, Cooktop
	W11106880	Panel, Cabinet Side (Right)		W11238758	Igniter (Center Front)		W11038237	Black (Left)
2	W10892793	Assembly, Orifice Holder (Left Front)		W11238756	Igniter (Center Rear)		W11038241	Black (Center)
	W10892494	Assembly, Orifice Holder (Left Rear)	5		Assembly, Grate		W11038254	Black (Right)
	W10892501	Assembly, Orifice Holder (Center Front)		W11172289	Black (Left)	19	W11130078	Antenna, WIFI
	W10892810	Assembly, Orifice Holder (Center Rear)		W11172654	Black (Center)	20	7101P338-60	Screw
	W10892731	Assembly, Orifice Holder (Right Front)		W11172625	Black (Right)	21	W10130760	Bracket, Moving Console (Left)
	W10892482	Assembly, Orifice Holder (Right Rear)	6	W11042504	Bumper, Grate		W10130759	Bracket, Moving Console (Right)
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	7	W11323260	Screw	22	W11328357	Screw
	W10892418	Orifice, Main (15.4K) (Left Rear, Center Front, Right Rear)	8	W11281269	Barrier, Appliance Manager	23	W11253775	Panel, Console
	W10892440	Orifice, Main (7.2K) (Center Rear)	9	W11436324	Interface, User	24		Knob, Burner (For 6 Cooktop Burners)
	W10892435	Orifice, Simmer (2.6K) (All Except Center Rear)	10	W11205795	Cover, WIFI Outer		W10887596	Stainless
	W10892429	Orifice, Simmer (2.0K) (Center Rear)	11	W11090284	Bezel, Cooktop (For 6 Cooktop Burners)	25	7101P624-60	Screw
			12	W11110768	Assembly, WIFI Module	26	W10896369	Assembly, Light Pipe
			13		Cap, Burner	27		Bezel, Oven (For 2 Oven Knobs)
				W11121392	Black (Set of 6)		W11042375	Stainless Knob, Oven Temperature
			14	W10891987	Spreader, Flame (High) (All Except Center Rear)	28	W10891868	Stainless
				W10892022	Spreader, Flame (Low) (Center Rear)	29	W11205794	Cover, WIFI Inner
			15	W11036559	Spring Clip, Range	30	W11090651	Button Assembly, Oven Light
			16		Knob, Oven Mode	31	W11156416	Trim, Island
				W10891869	Stainless	32		Trim, T-Strip
			17	W11100267	Manager, Appliance (Powermax)		W10271524	Black
						33	7101P426-60	Screw
						34	W11090650	Button Assembly, Oven Start
						35	3400814	Screw
						36	W10568405	Assembly, Speaker


CHASSIS PARTS

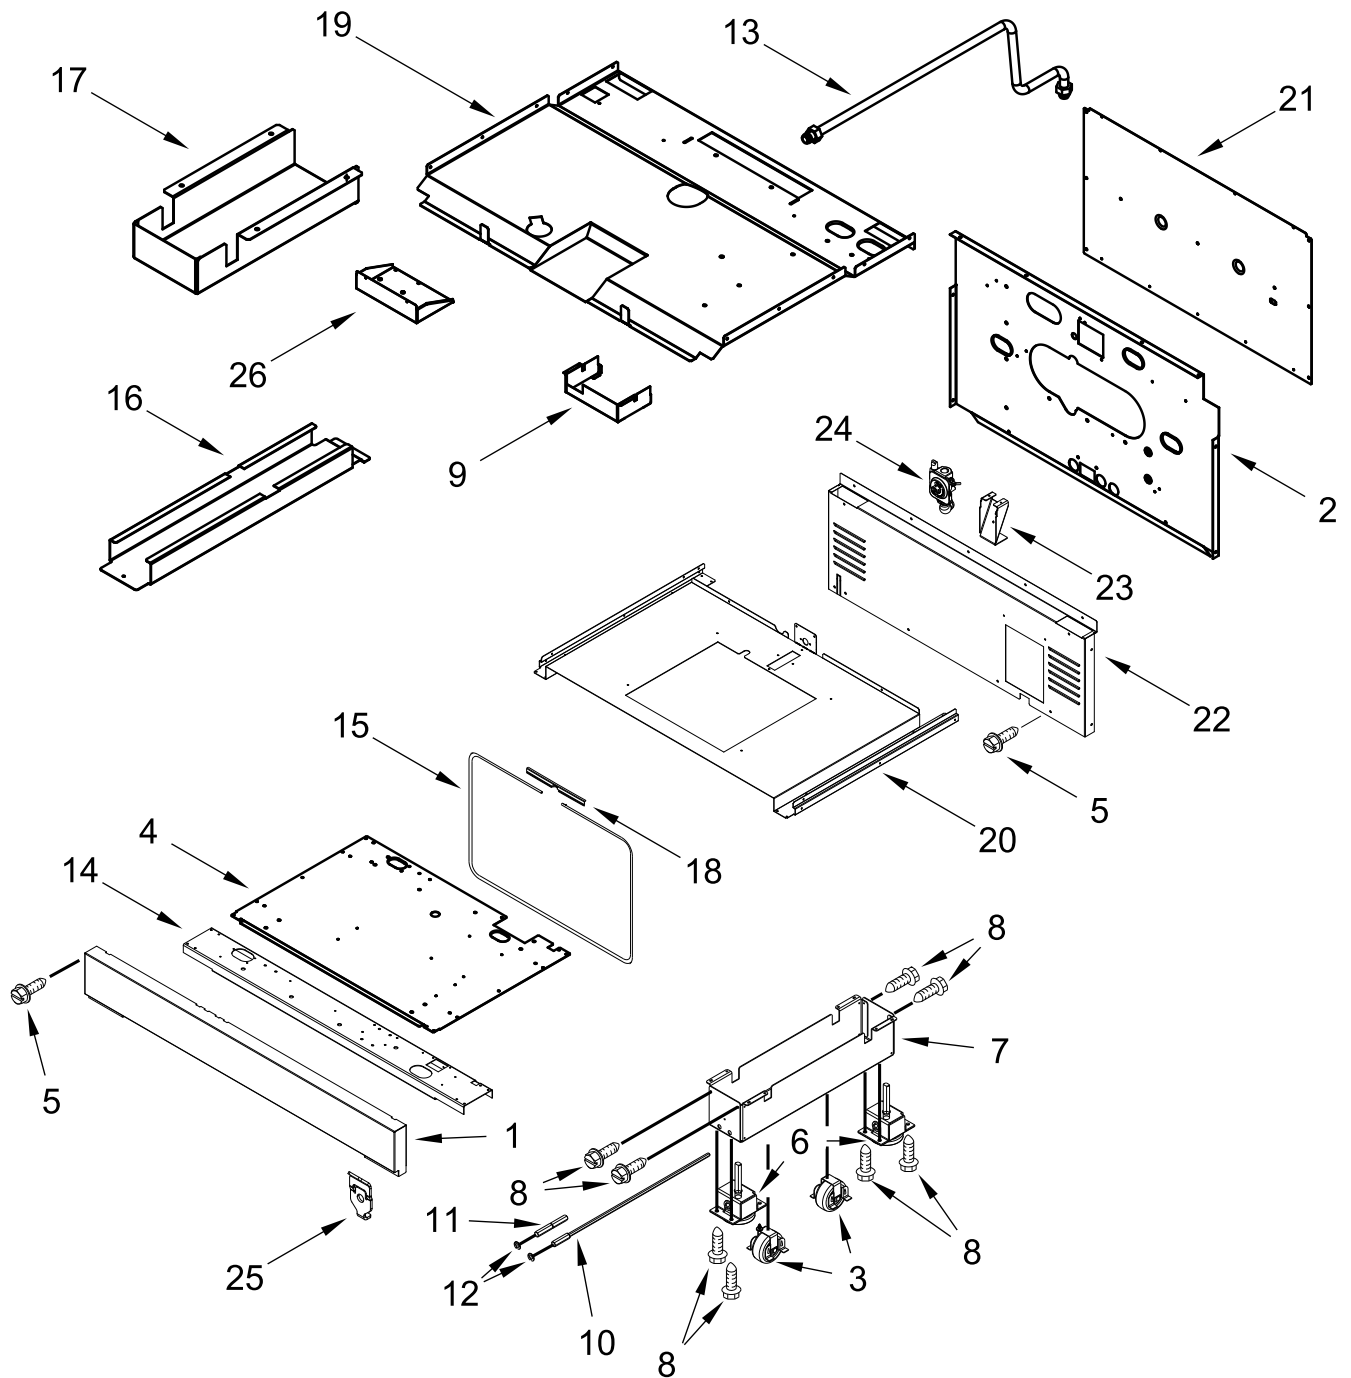

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	11	W10115793	Shaft, Short	20	W11040801	Chassis, Bottom
2	W11324988	Back, Chassis	12	489504	E-Ring	21	W11103333	Panel, Back Top
3	W10138054	Assembly, Roller	13	W11106963	Tube, Pressure Regulator	22	W11034133	Panel, Back Bottom
4	W11095572	Duct, Bottom (36")	14	W11087493	Support, Channel	23	W11096823	Bracket, Pressure Regulator
5	7101P426-60	Screw	15	W11115330	Gasket, Oven (36")	24	W10449140	Regulator, Pressure
6	9760860	Leveler	16	W11050145	Duct-Chassis, Rear	25	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	17	W11368831	Channel, Wire	26	W11106341	Drawer, Appliance Manager
8	4449743	Screw	18	W11362015	Retainer, Gasket (9" Long)			
9	W11369237	Cabinet, Appliance Manager	19	W11324985	Top, Chassis			
10	W10115869	Shaft, Long						


OVEN PARTS

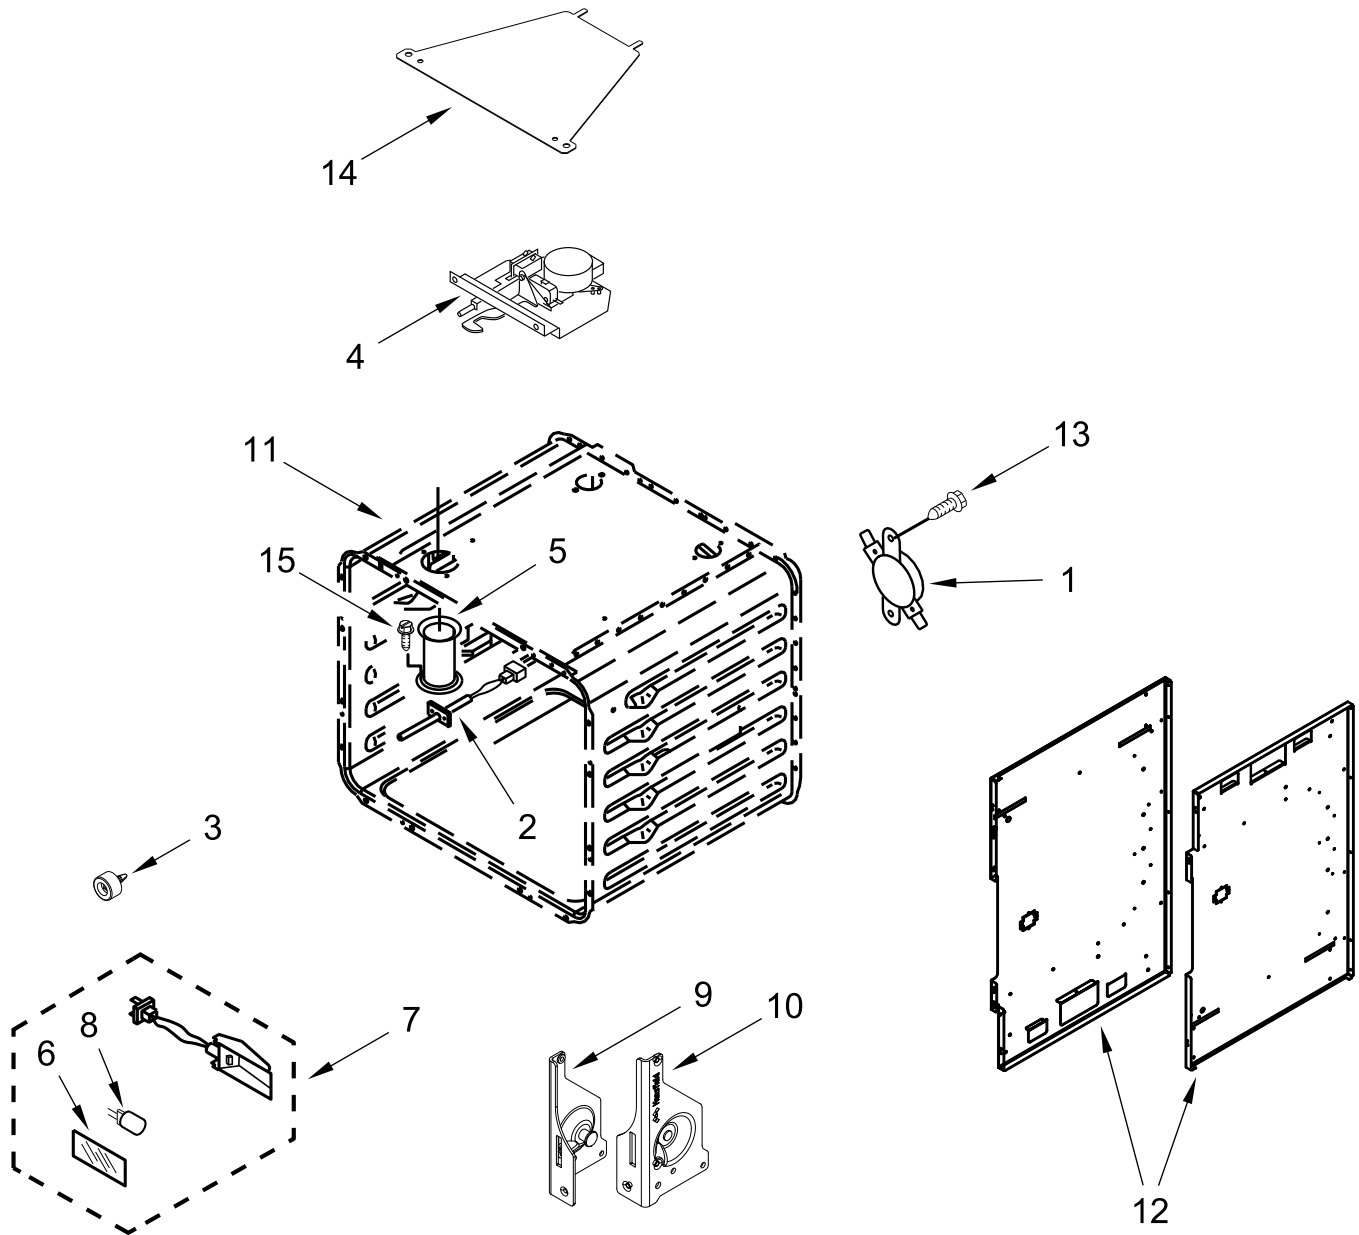

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282811	Insulation, Wrap
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282815	Insulation, Back
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W10169756	Lens, Light	13	7101P426-60	Screw			
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


VENTING PARTS

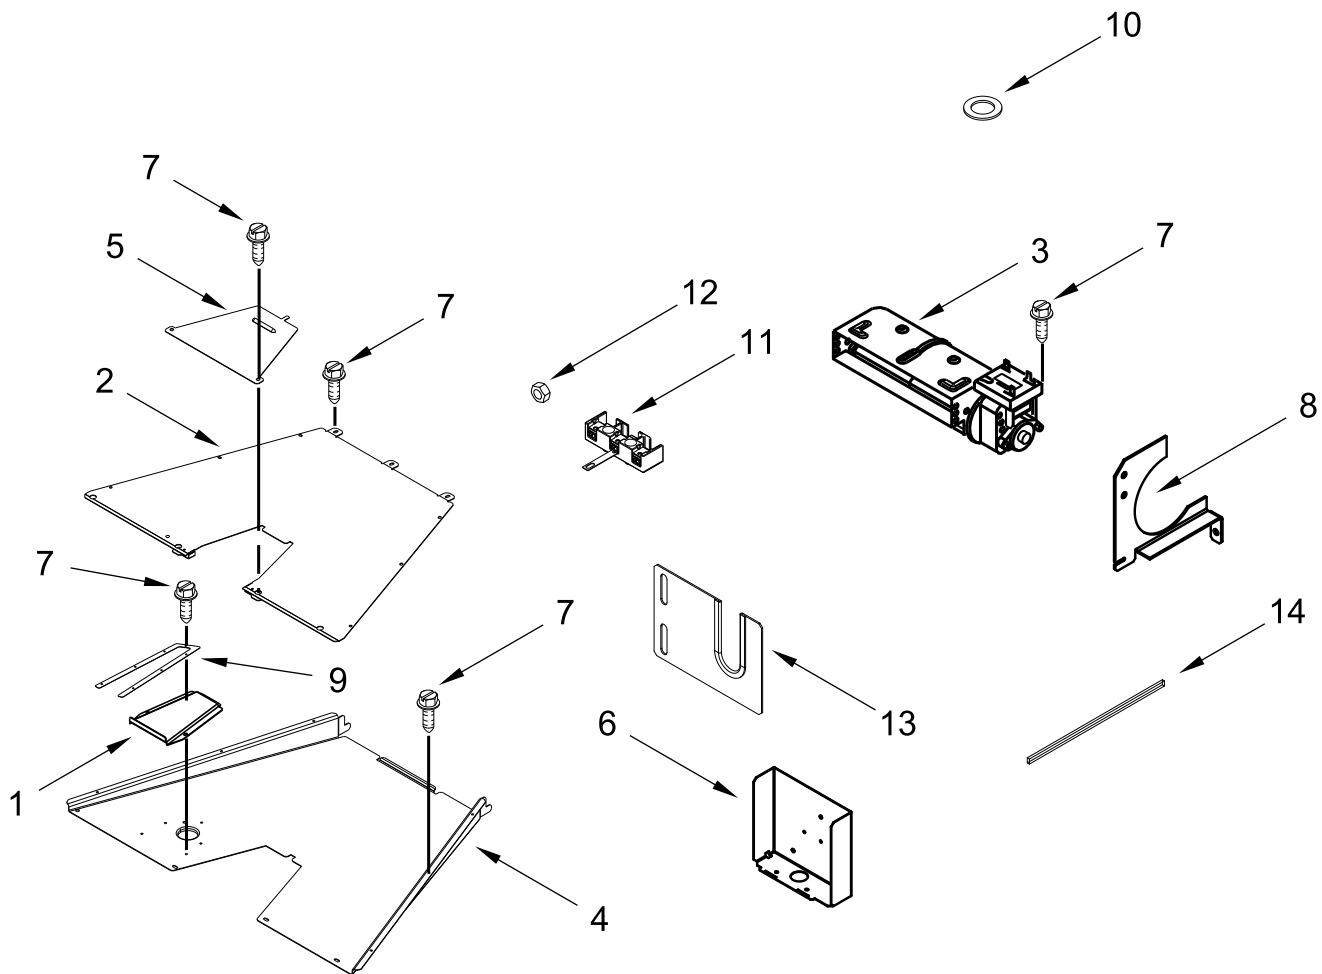

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W11353392	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	9761958	Block, Terminal			
			12	112432	Nut, Hex			


OVEN DOOR PARTS

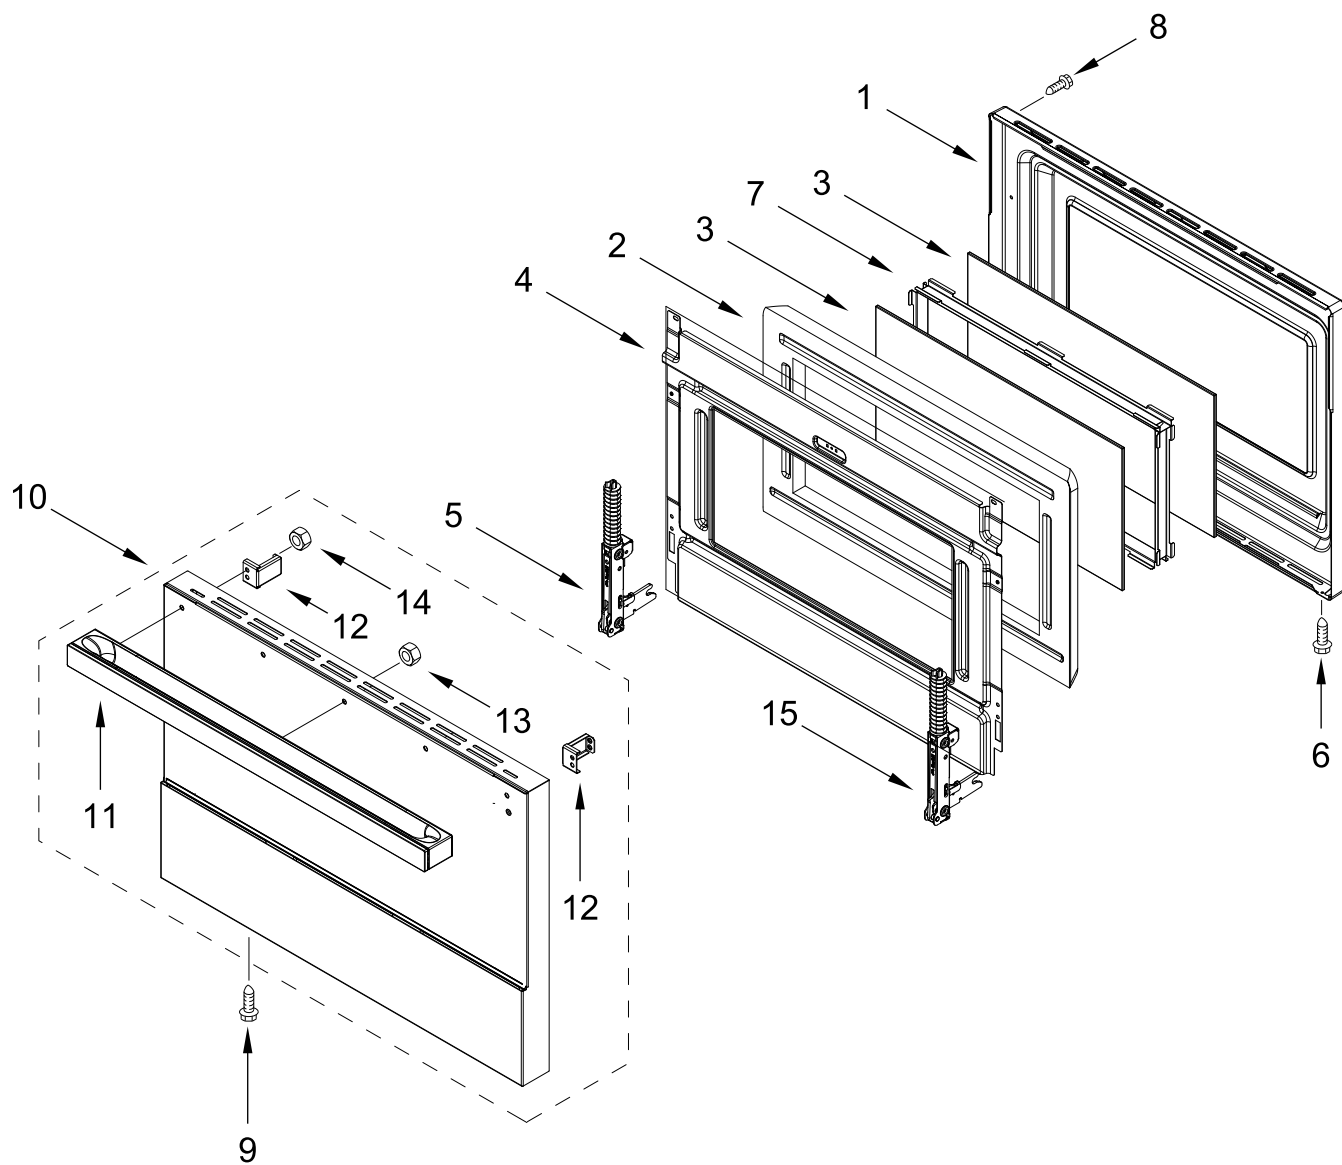

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	7	W11194814	Frame, Glass	12	W11194816	Bracket, Handle
2	W10884823	Insulation, Door	8	W10898280	Screw	13	W11198435	Nut
3	W11036791	Glass, Inner	9	W10162096	Screw	14	999299	Nut
4	W11194820	Retainer, Glass	10	W10870229	Assembly, Outer Door Glass (Includes Handle)	15	W11096983	Hinge, Door (Right)
5	W11096984	Hinge, Door (Left)						
6	W10607120	Screw	11	W11125545	Handle, Door			

INTERNAL OVEN PARTS

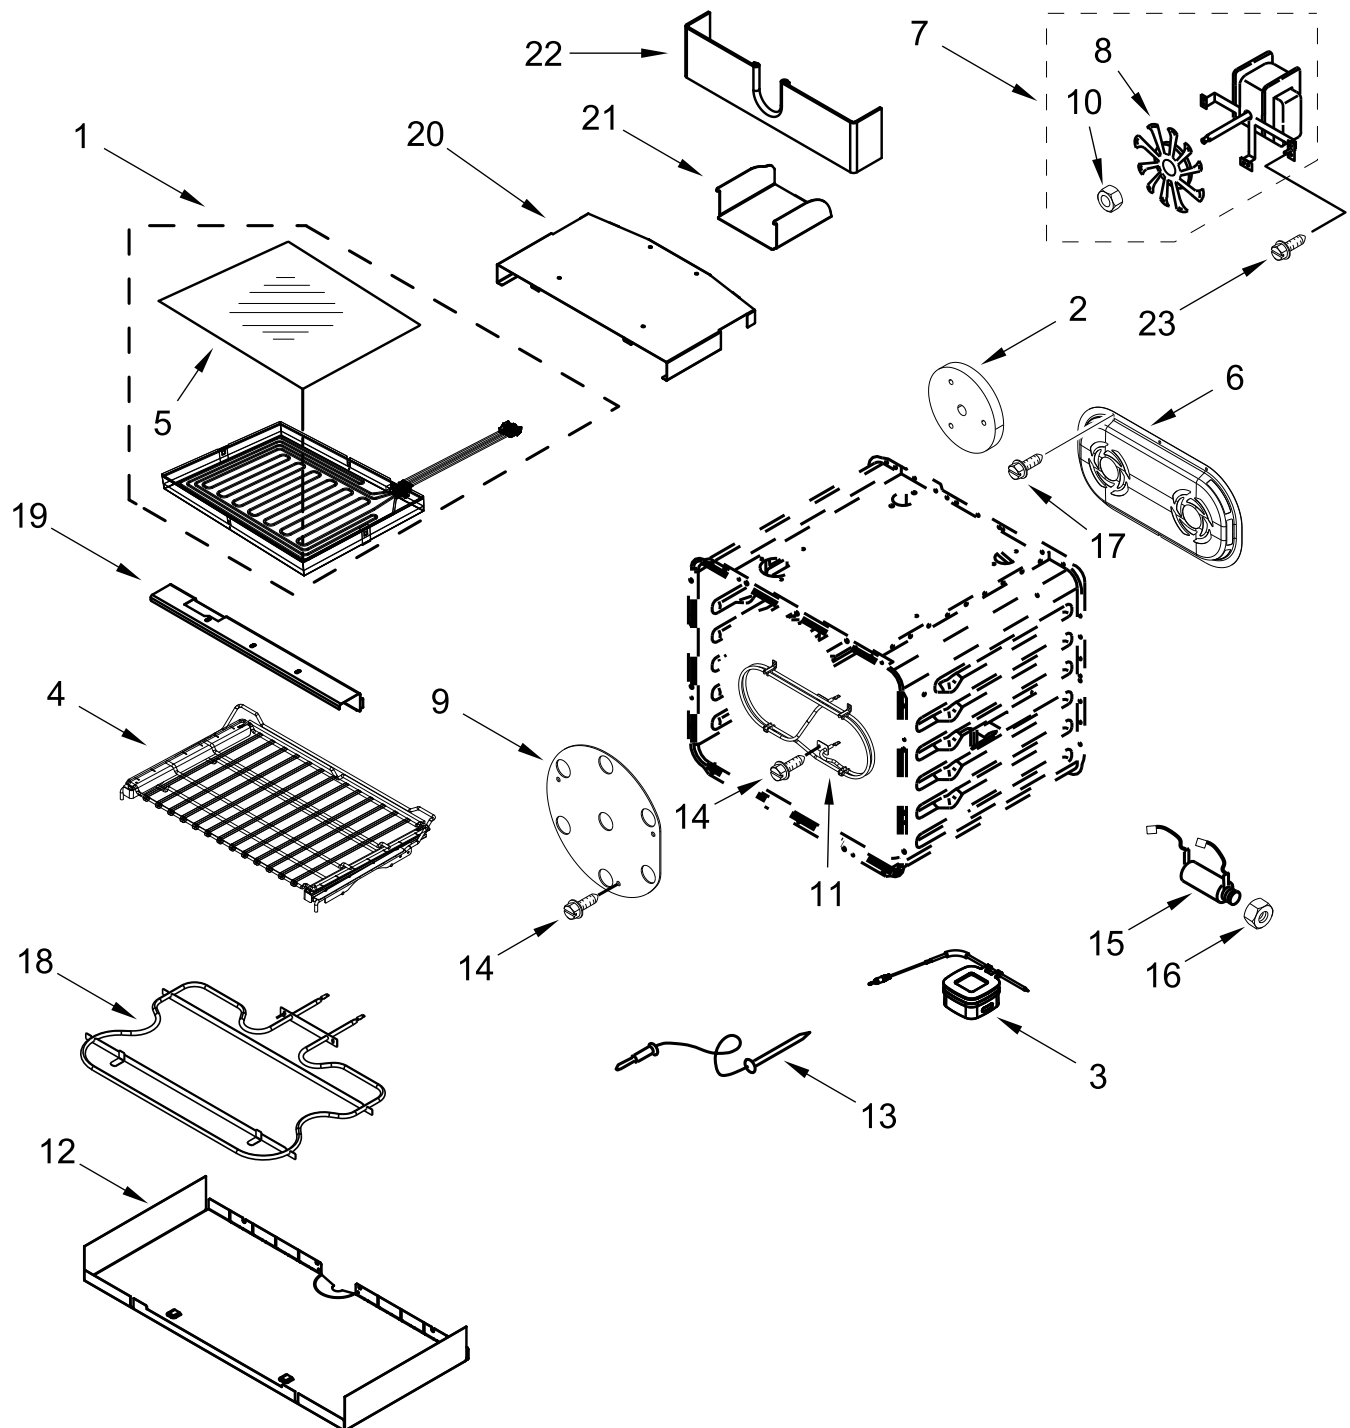

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	9	W10261523	Plate, Fan	18	W10115992	Element, Hidden Bake
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	19	W11112336	Bracket, Broil Front
3	W11186918	Probe, Wireless Meat	11	W10116434	Element, Convection	20	W11158843	Bracket, Broil Top
4	W11111356	Rack, Oven (Sliding)	12	W11106922	Tray, Hidden Bake	21	W11111392	Cover, Broil Terminal
5	W11193191	Glass, Broil Element	13	9755542	Probe, Temperature	22	W11170823	Cover Plate, Terminal Hole
6	W11232487	Baffle, Convection	14	4449154	Screw	23	W10720084	Screw
7	W11121400	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W11108376	Blade, Fan	16	W11033111	Nut, Locking			
			17	W10739592	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill