




RISE 48" DUAL-FUEL PROFESSIONAL RANGE
Includes Griddle and Gas Grill

MODELS:

JDRP748HL01 (Stainless)


BURNER BOX, GRIDDLE, AND GRILL PARTS

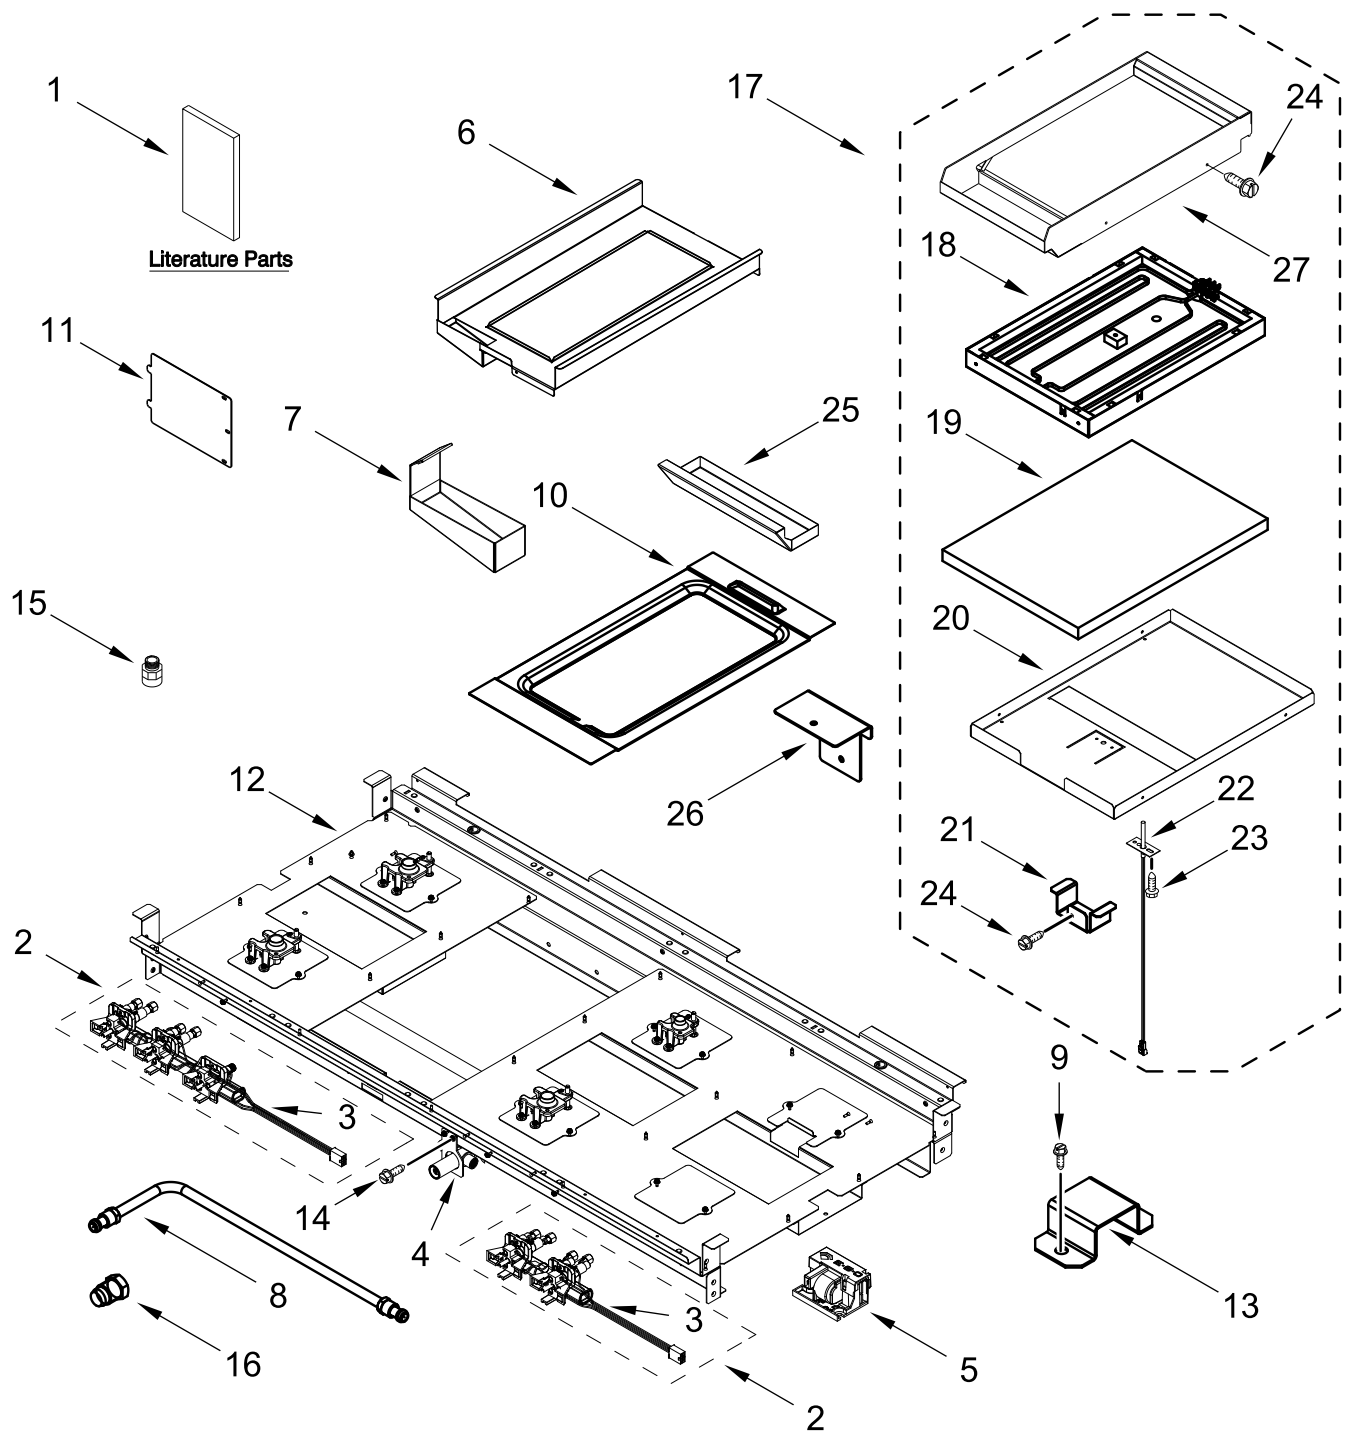

BURNER BOX, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121194	Bracket, Manifold	22	W10891584	Sensor, Griddle
	W11114330	Guide, Use and Care	5	W11121317	Module, Spark	23	3196160	Screw
	W11114333	Instructions, Installation	6	W11120957	Capture, Grill Grease	24	W10162096	Screw
	W11177312	Guide, Quick Start	7	W11174414	Tray, Grill Drip	25	W10276497	Tray, Griddle Drip
	W11184746	Guide, Internet Connectivity	8	W10892796	Tube, Manifold Supply	26	W11285353	Bracket, Grill Grease Capture
	W11266584	Diagram, Wiring (Cooktop)			(Left)	27	W10891567	Module, Griddle
	W11202370	Diagram, Wiring (Oven)		W10892789	Tube, Manifold Supply			FOLLOWING PARTS NOT ILLUSTRATED
	W11202265	Sheet, Tech	9	7101P434-60	Screw		W11200315	Harness, Main (30")
2	W10893054	Assembly, Valve Manifold	10	W11120965	Deflector, Grill Heat		W11200311	Harness, Main (18")
		(Left Front, Left Rear, And Grill)	11	W10115843	Cover, Ignition		W10903727	Harness, Griddle
	W10893058	Assembly, Valve Manifold	12		Box, Burner (Not Serviced)		W11200333	Harness, Cooktop
		(Right Center Front And Right Center Rear)	13	W11174418	Bracket, Grill Orifice Holder		W10780278	Harness, Door Lock
			14	7101P426-60	Screw		W11200318	Harness, Communication
			15	4453116	Adapter, Male		W11242785	Harness, WIFI
			16	W10892063	Plug, Supply Outlet		W11212216	Cord, Power
			17	W10891745	Assembly, Griddle Module		9759877	Retainer, Strain Relief
3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	18	W10891698	Element, Griddle		4450800	Screw, Grounding
	W11106300	Switch, Harness (Right Center Front And Right Center Rear)	19	W11121383	Insulation, Griddle		W10253333	Bracket, Anti-Tip
			20	W11330430	Tray, Griddle Insulation		7101P485-60	Screw, Anti-Tip Kit
			21	W11121384	Bracket, Griddle-RTD		W11238041	Kit, LP Conversion


COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

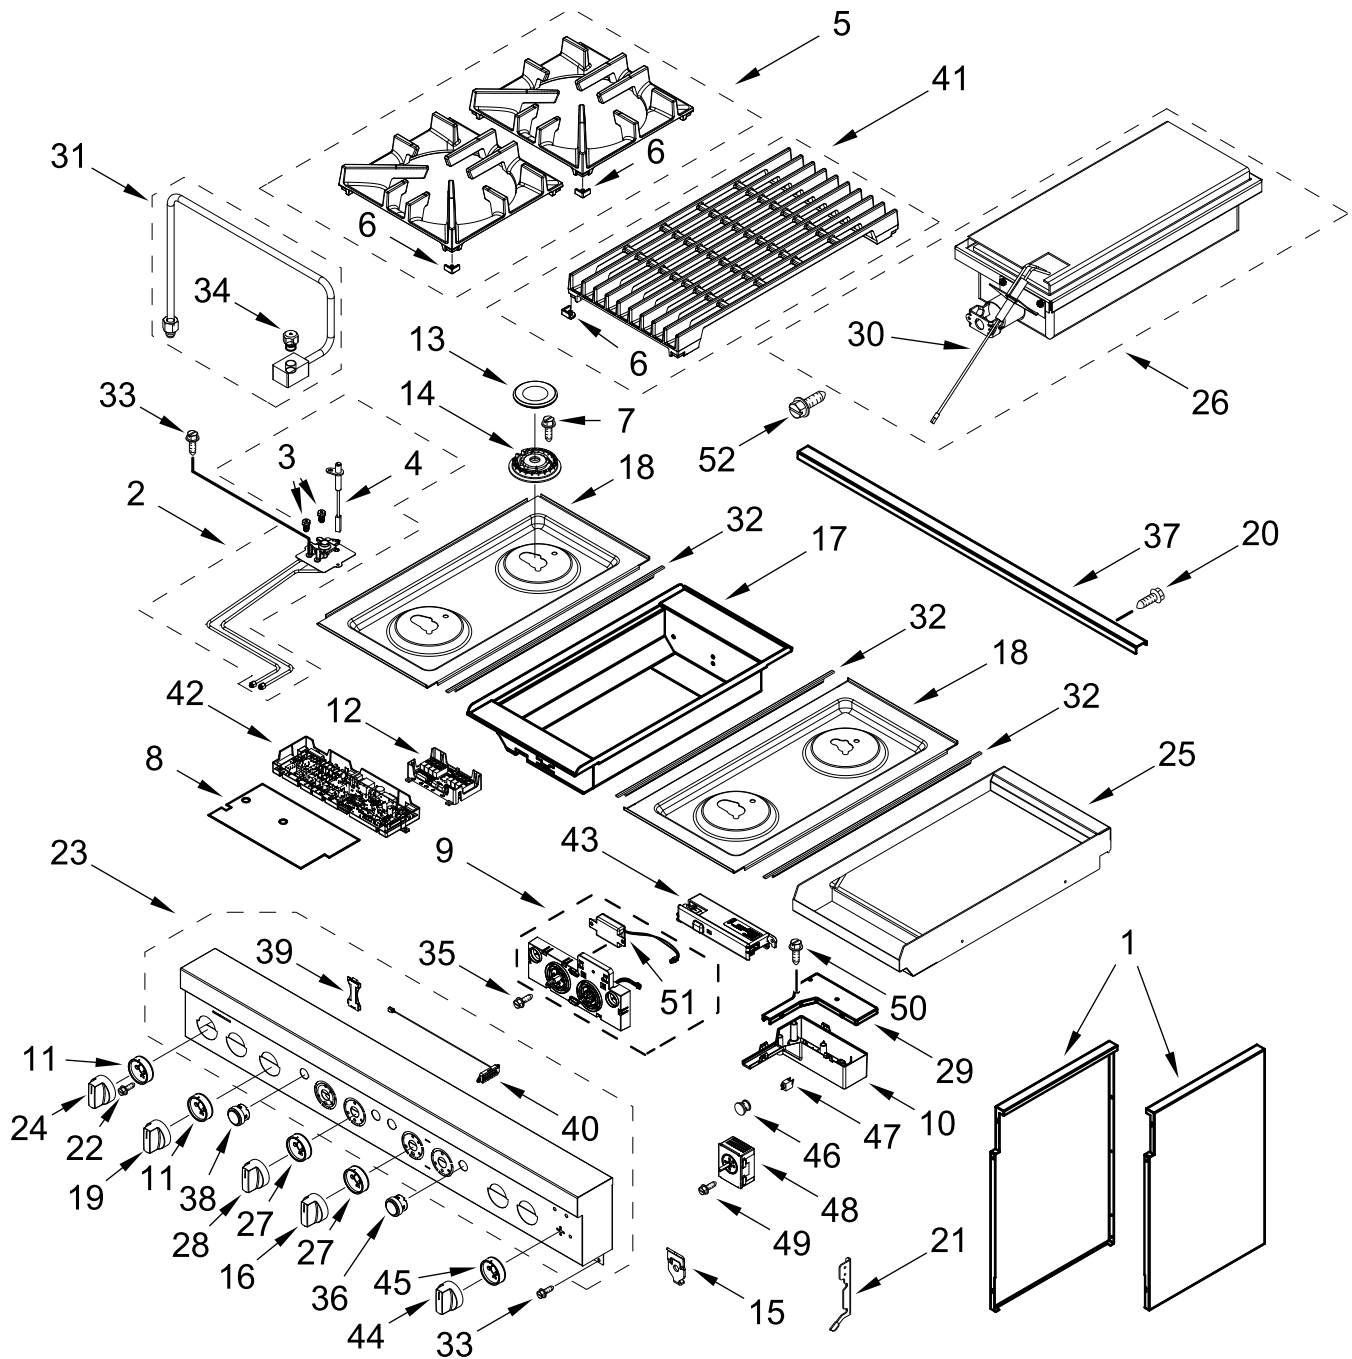

COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	11	W11090283	Bezel, Cooktop (For 4 Cooktop Burners and Grill)	27		Bezel, Oven (For 4 Oven Knobs)
	W11111428	Panel, Cabinet Side (Right)	12	W10890116	Manager, Appliance (Expansion)	28	W10914998	Stainless Knob, Oven Temperature
2	W10892807	Assembly, Orifice Holder (Left Front)	13		Cap, Burner		W10891871	Stainless
	W10892495	Assembly, Orifice Holder (Left Rear)	14	W11121391	Black (Set of 4)	29	W11205794	Cover, WIFI Inner
	W10892505	Assembly, Orifice Holder (Right Center Front)		W10891987	Spreader, Flame (High) (All But Right Center Rear)	30	W11174598	Electrode, Grill
	W10892721	Assembly, Orifice Holder (Right Center Rear)		W10892022	Spreader, Flame (Low) (Right Center Rear)	31	W11419278	Grill Orifice Holder Assembly (Left Center)
3	W10892422	Orifice, Main (17.4K) (Left Front And Right Center Front)	15	W11036559	Spring Clip, Range	32	W10291193	Trim, L-Strip
	W10892418	Orifice, Main (15.4K) (Left Rear)	16		Knob, Oven Mode	33	7101P426-60	Screw
	W10892440	Orifice, Main (7.2K) (Right Center Rear)		W10891872	Stainless	34	W11419282	Orifice, Grill (18K) (Left Center)
	W10892435	Orifice, Simmer (2.6K) (All But Right Center Rear)	17	W11174429	Assembly, Grill Box	35	3400814	Screw
	W10892429	Orifice, Simmer (2.0K) (Right Center Rear)	18		Panel, Cooktop	36	W11090650	Button Assembly, Oven Start
4	W11238757	Igniter (All But Right Center Rear)		W10803515	Black (Left)	37	W11156418	Trim, Island
	W11238756	Igniter (Right Center Rear)		W10803519	Black (Right Center)	38	W11090651	Button Assembly, Oven Light
5		Assembly, Grate	19		Knob, Grill	39	W10896369	Assembly, Light Pipe
	W11291176	Black (Set of 2)		W10894925	Stainless	40	W11130078	Antenna, WIFI
6	W11042504	Bumper, Grate	20	7101P338-60	Screw	41	W11291177	Grill Grate Assembly
7	W11323260	Screw	21	W10130760	Bracket, Moving Console (Left)	42	W11100270	Manager, Appliance (Powermax)
8	W11281269	Barrier, Appliance Manager		W10130759	Bracket, Moving Console (Right)	43	W11110768	Assembly, WIFI Module
9	W11436323	Interface, User	22	W11328357	Screw	44		Knob, Griddle
10	W11205795	Cover, WIFI Outer	23	W11253770	Panel, Console		W10884943	Stainless
			24		Knob, Burner (For 4 Cooktop Burners)	45	W11104966	Bezel, Griddle
				W10882958	Stainless	46	W10294500	Lens, Indicator Light
			25		Assembly, Griddle Module (Part Number Included on Burner Box Page)	47	W10116114	Light, Indicator Housing
			26	W11120976	Assembly, Grill Burner	48	W11033497	Control, Griddle
						49	7101P309-60	Screw
						50	7101P624-60	Screw
						51	W10568405	Assembly, Speaker
						52	3196537	Screw


48" CHASSIS PARTS

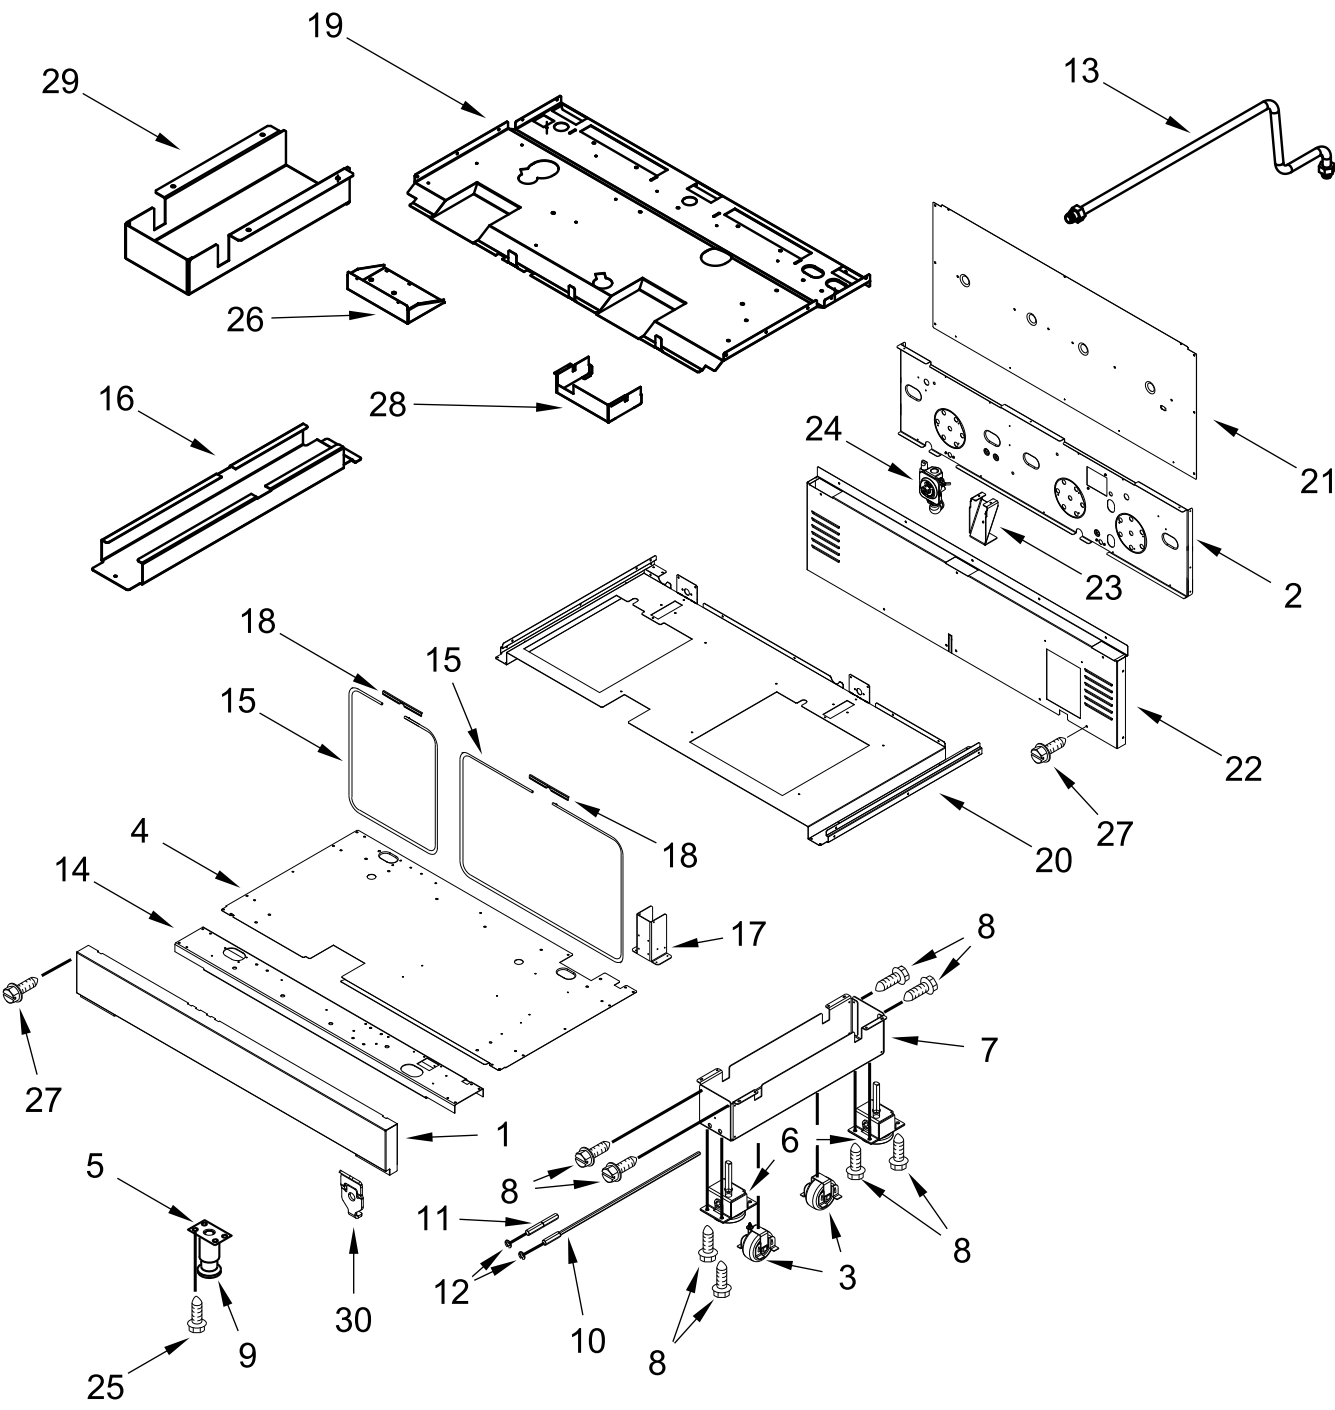

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	13	W11106963	Tube, Pressure Regulator	22	W11034123	Panel, Back Bottom
2	W11324987	Back, Chassis	14	W11369238	Support, Channel	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	15	W11115328	Gasket, Oven (30")	24	W10449140	Regulator, Pressure
4	W11110260	Duct, Bottom (48")		W11115326	Gasket, Oven (18")	25	3400518	Screw
5	9759118	Plate, Mounting	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W10115819	Column, Central	27	7101P426-60	Screw
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9" Long)	28	W11369237	Cabinet, Appliance Manager
8	4449743	Screw	19	W11324984	Top, Chassis	29	W11368831	Channel, Wire
9	9759117	Foot, Dual Fuel	20	W11040800	Chassis, Bottom	30	W11036559	Spring Clip, Range
10	W10115869	Shaft, Long	21	W11103335	Panel, Back Top			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


30" OVEN PARTS

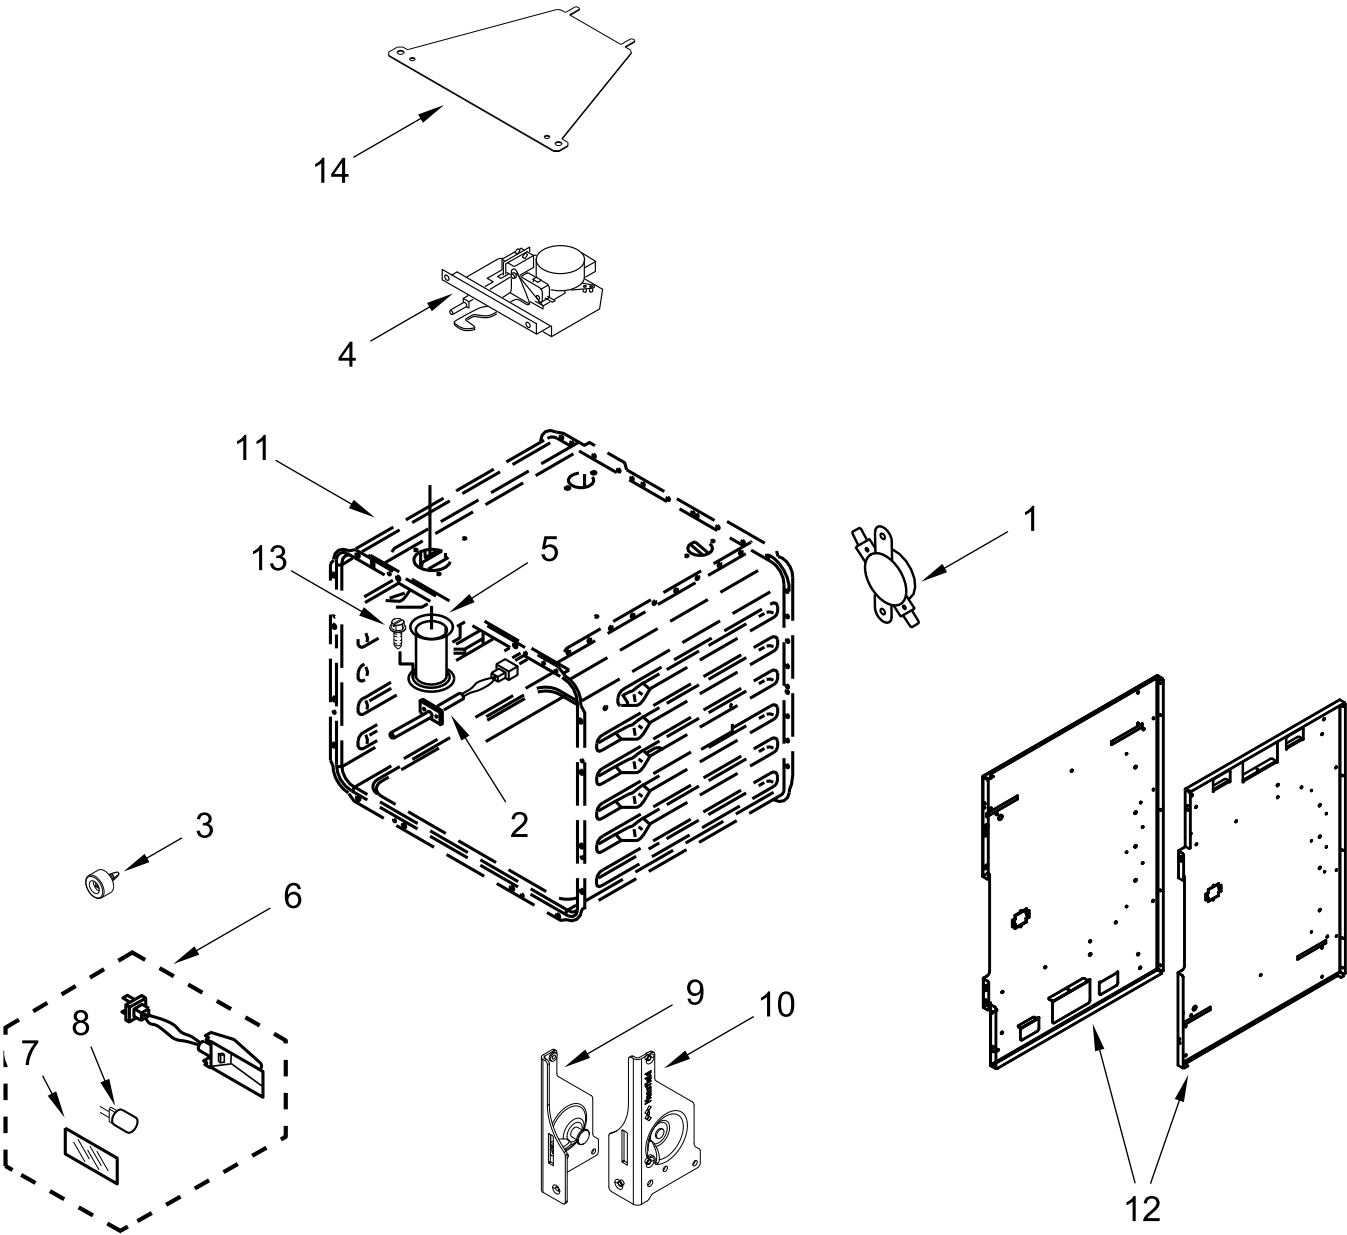

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap, 30"
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282816	Insulation, Back, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W11223932	Assembly, Oven Light	13	3196176	Screw			
7	W10169756	Lens, Light						
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


18" OVEN PARTS

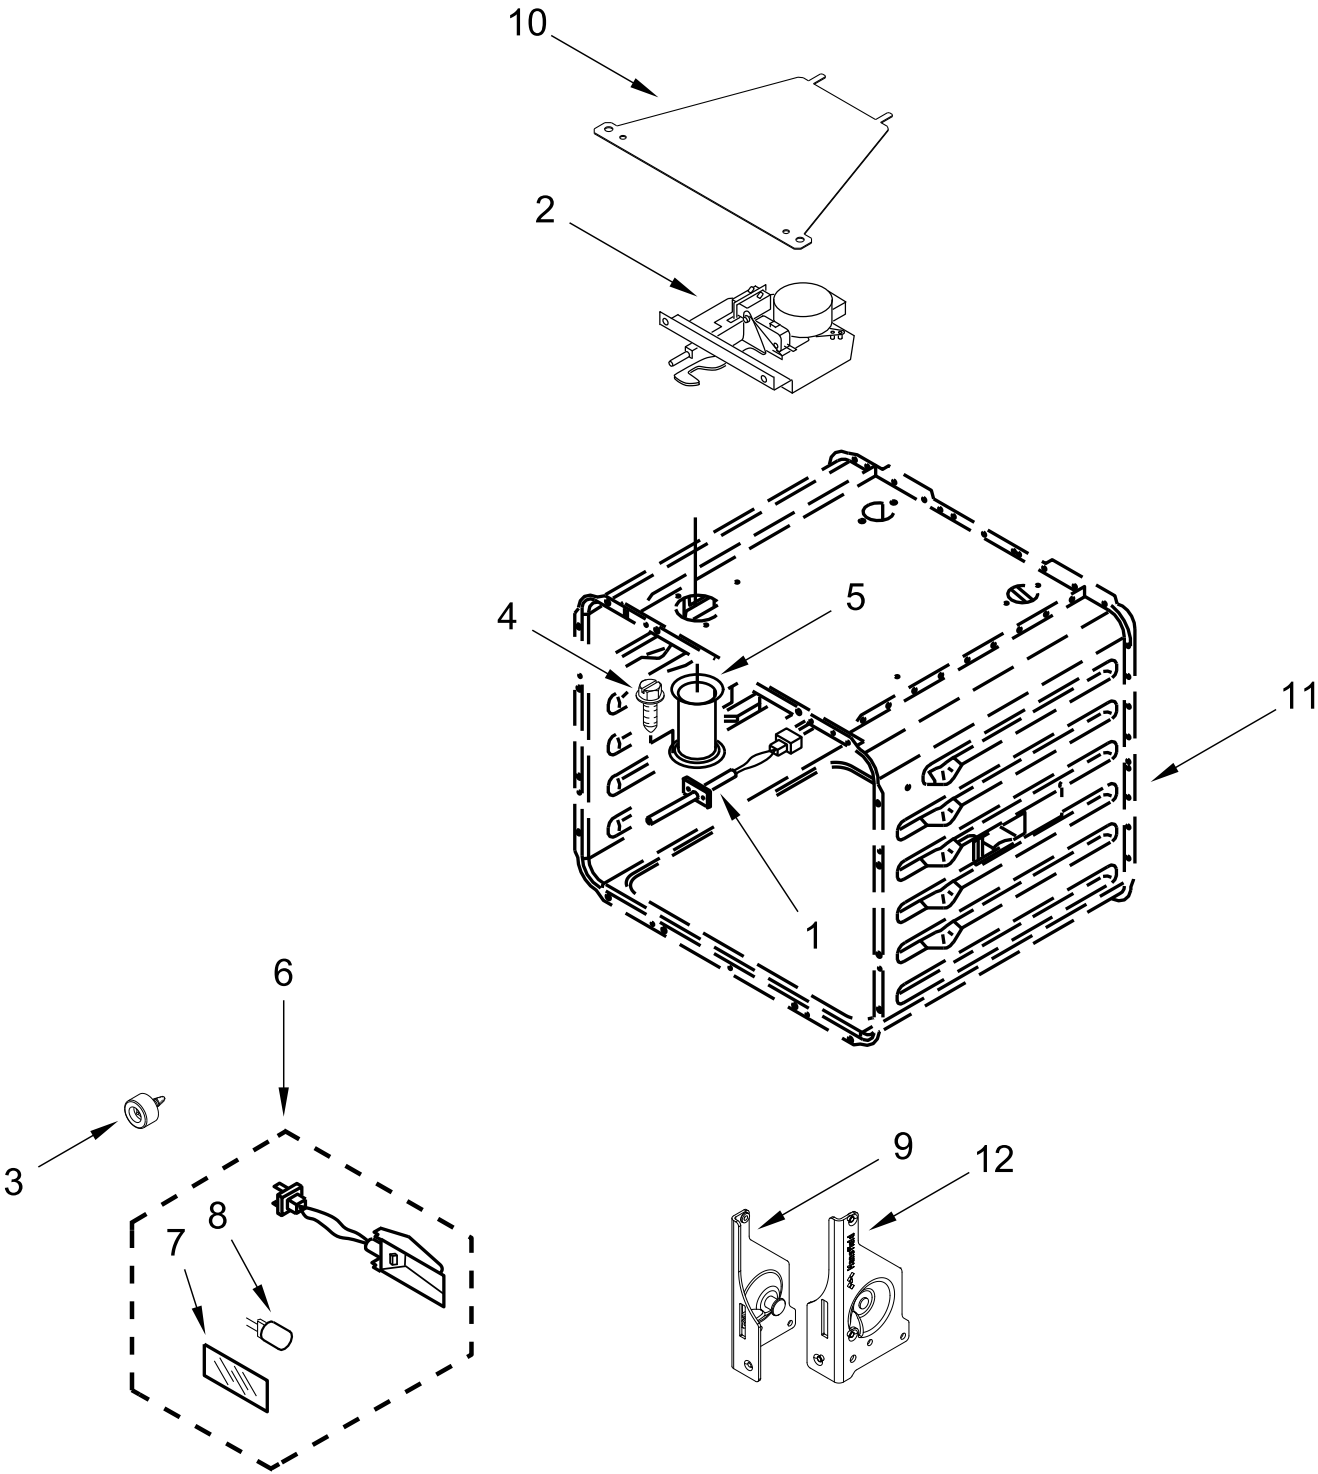

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	12	W11096293	Receiver, Hinge (Right)
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			
3	W10351278	Bumper & Screw	10	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
4	3196176	Screw	11		Liner, Oven (Not Serviced)			
5	W10288078	Tube, Vent					W10282820	Insulation, Wrap, 18"
6	W11223932	Assembly, Oven Light					W10282812	Insulation, Back, 18"
7	W10169756	Lens, Light					3400968	Nut


VENTING PARTS

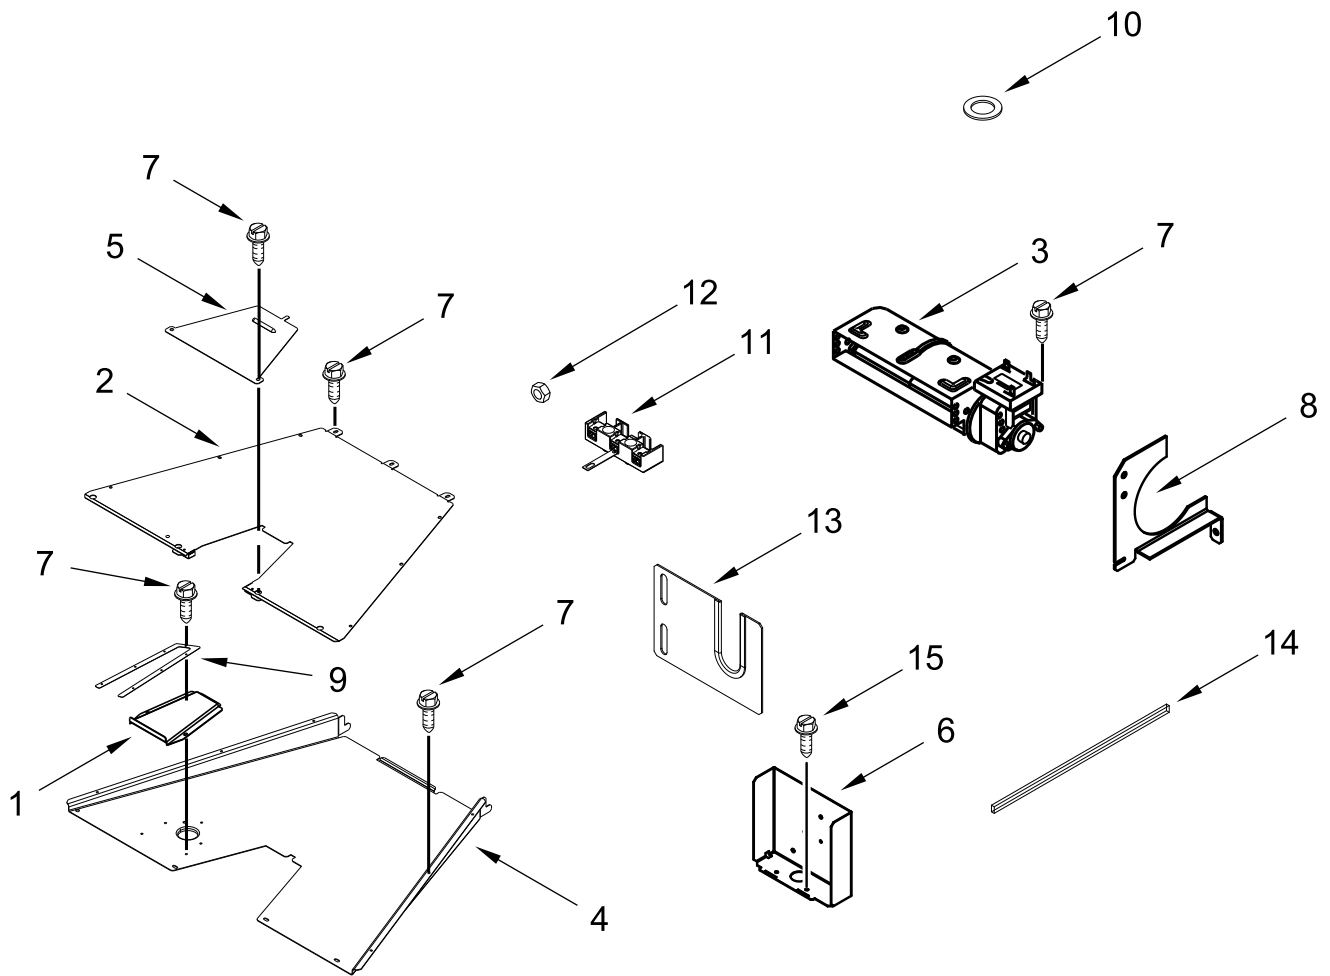

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")
	W10818235	Slope, Exhaust Vent (18")		W11113378	Vent, Cooling Bottom (18")		W10270402	Seal, Vent Slope (18")
2	W11105223	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18")	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	112432	Nut, Hex
			8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
						14	W10919715	Gasket
						15	3196560	Screw


30" OVEN DOOR PARTS

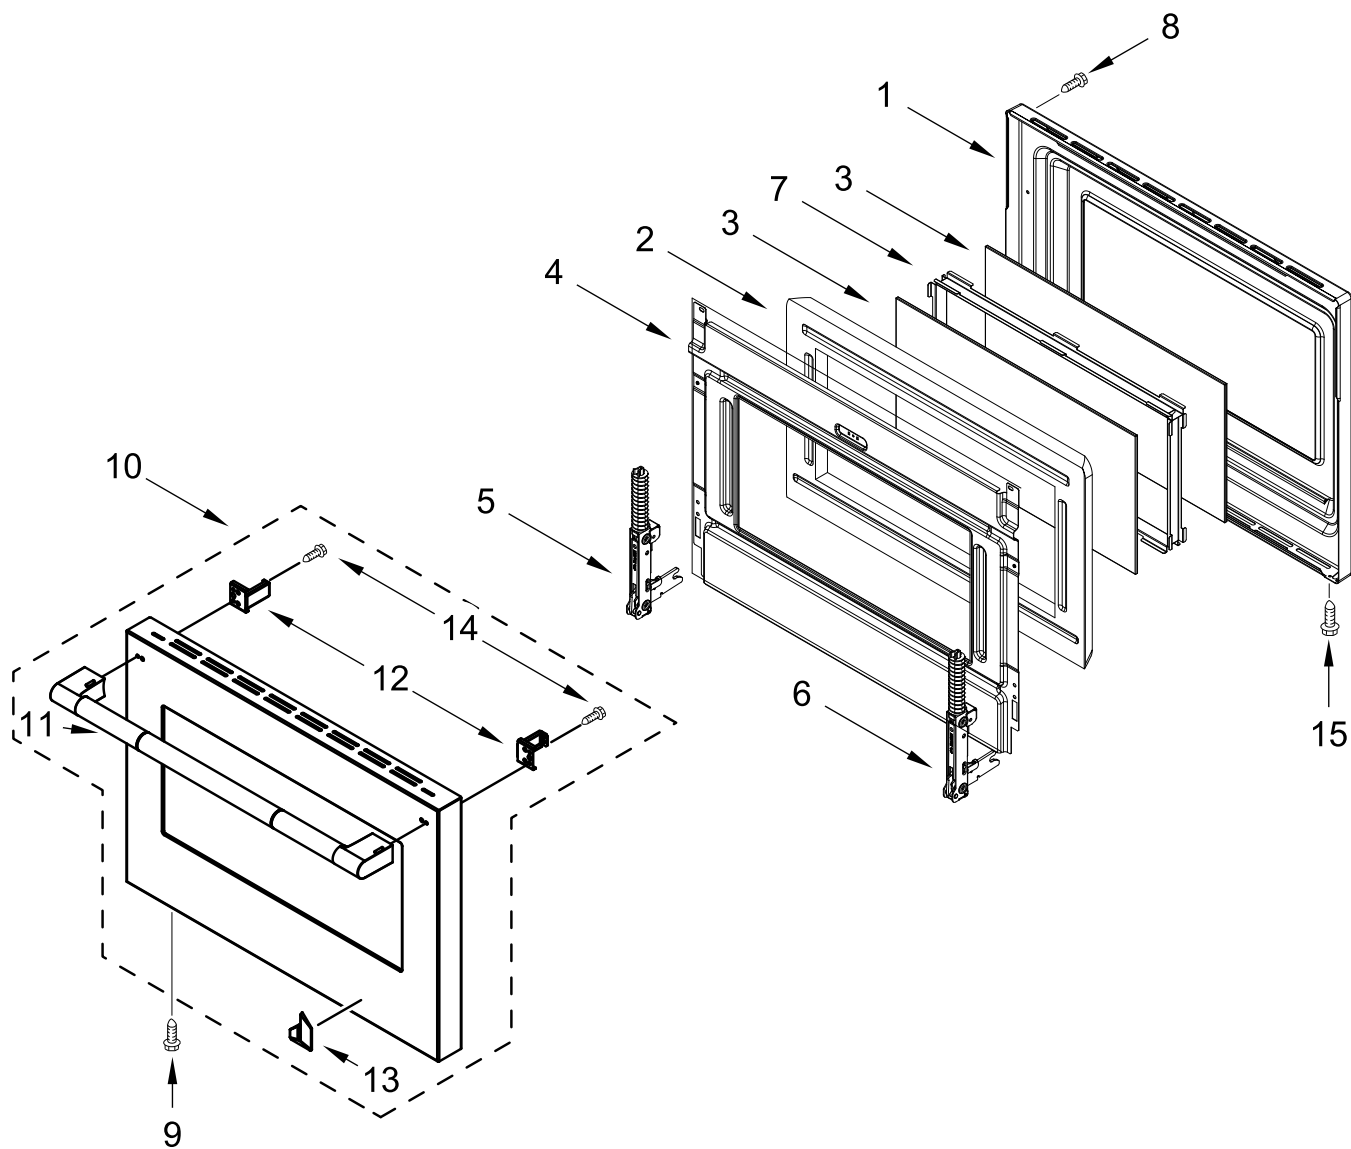

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W11199071	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			


18" OVEN DOOR PARTS

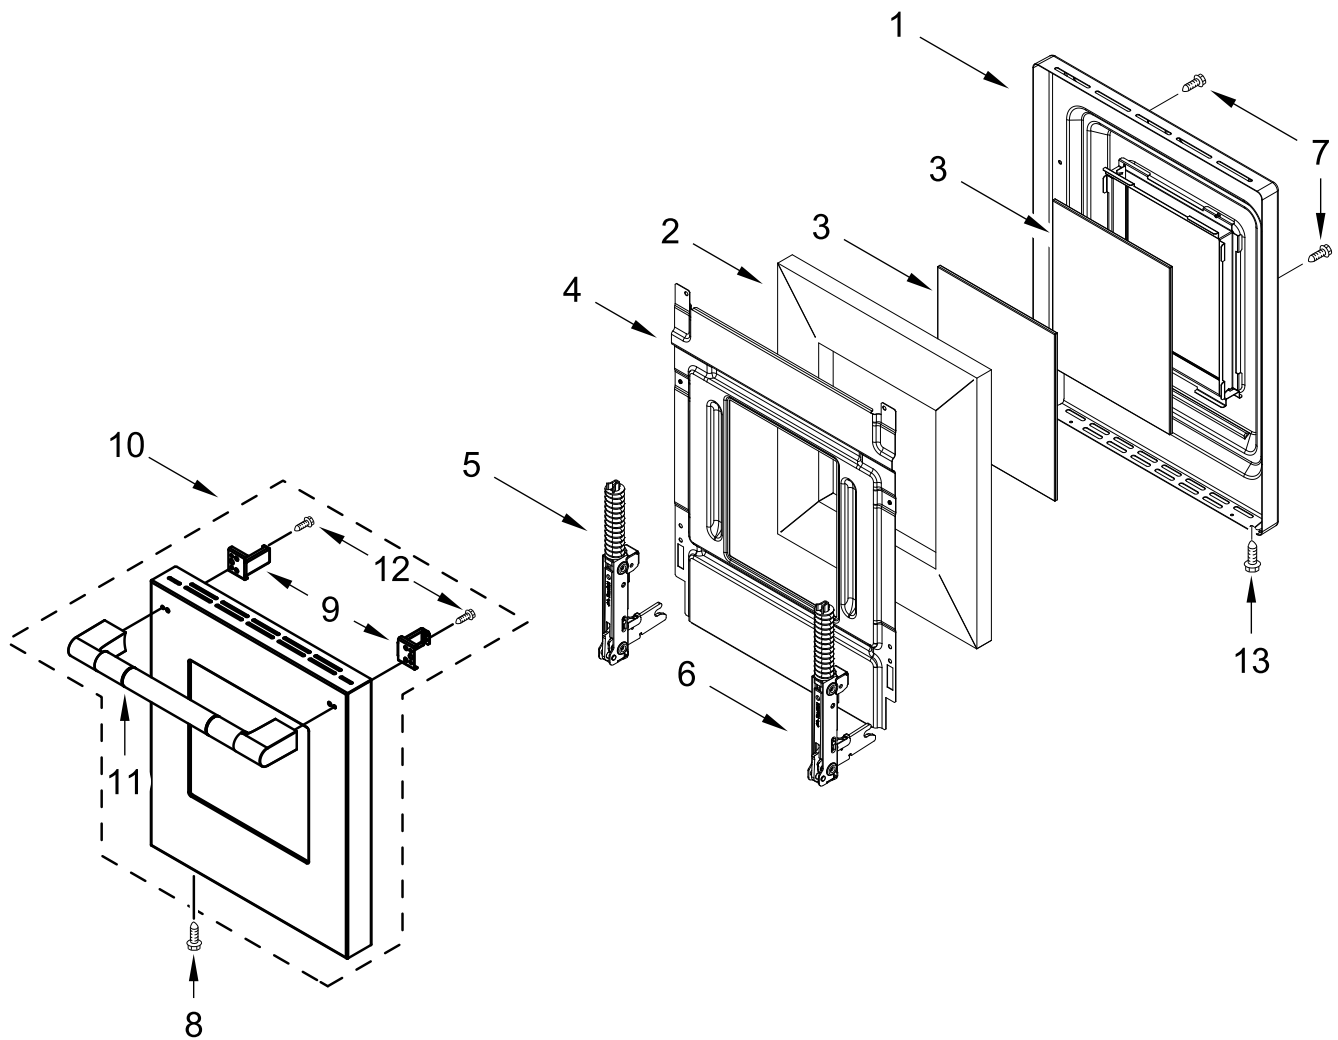

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	11	W11102824	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W10276043	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	13	W10607120	Screw
4	W11194818	Retainer, Glass	10	W10799306	Assembly, Outer Door Glass (Includes Handle)			
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)						


30" INTERNAL OVEN PARTS

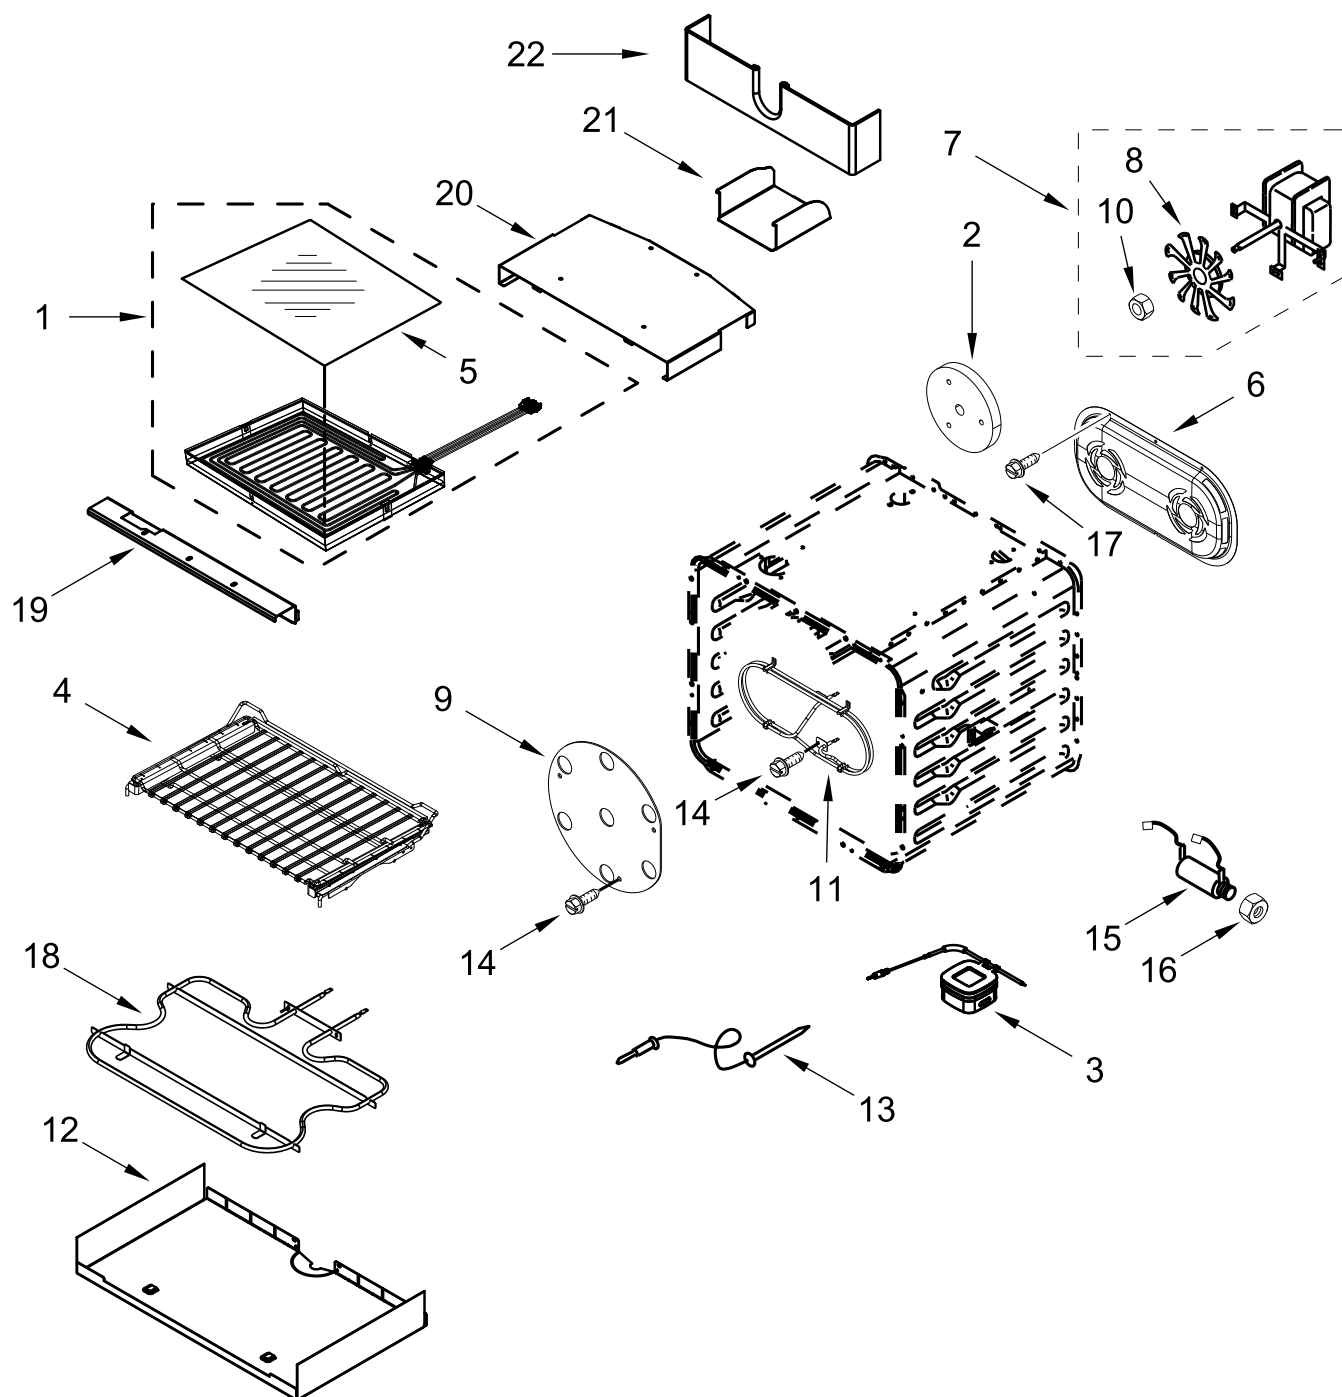

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	8	W11108376	Blade, Fan	16	W11033111	Nut, Locking
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	17	W10739592	Screw
3	W11186918	Probe, Wireless Meat	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
4	W11111342	Rack, Oven (Sliding)	11	W10116434	Element, Convection	19	W11112336	Bracket, Broil Front
5	W11193191	Glass, Broil Element	12	W11109421	Tray, Hidden Bake	20	W11158843	Bracket, Broil Top
6	W11232487	Baffle, Convection	13	9755542	Probe, Temperature	21	W11111391	Cover, Broil Terminal
7	W11121400	Fan, Convection	14	4449154	Screw	22	W11170823	Cover Plate, Terminal Hole
			15	9755543	Jack, Meat Probe			

18" INTERNAL OVEN PARTS

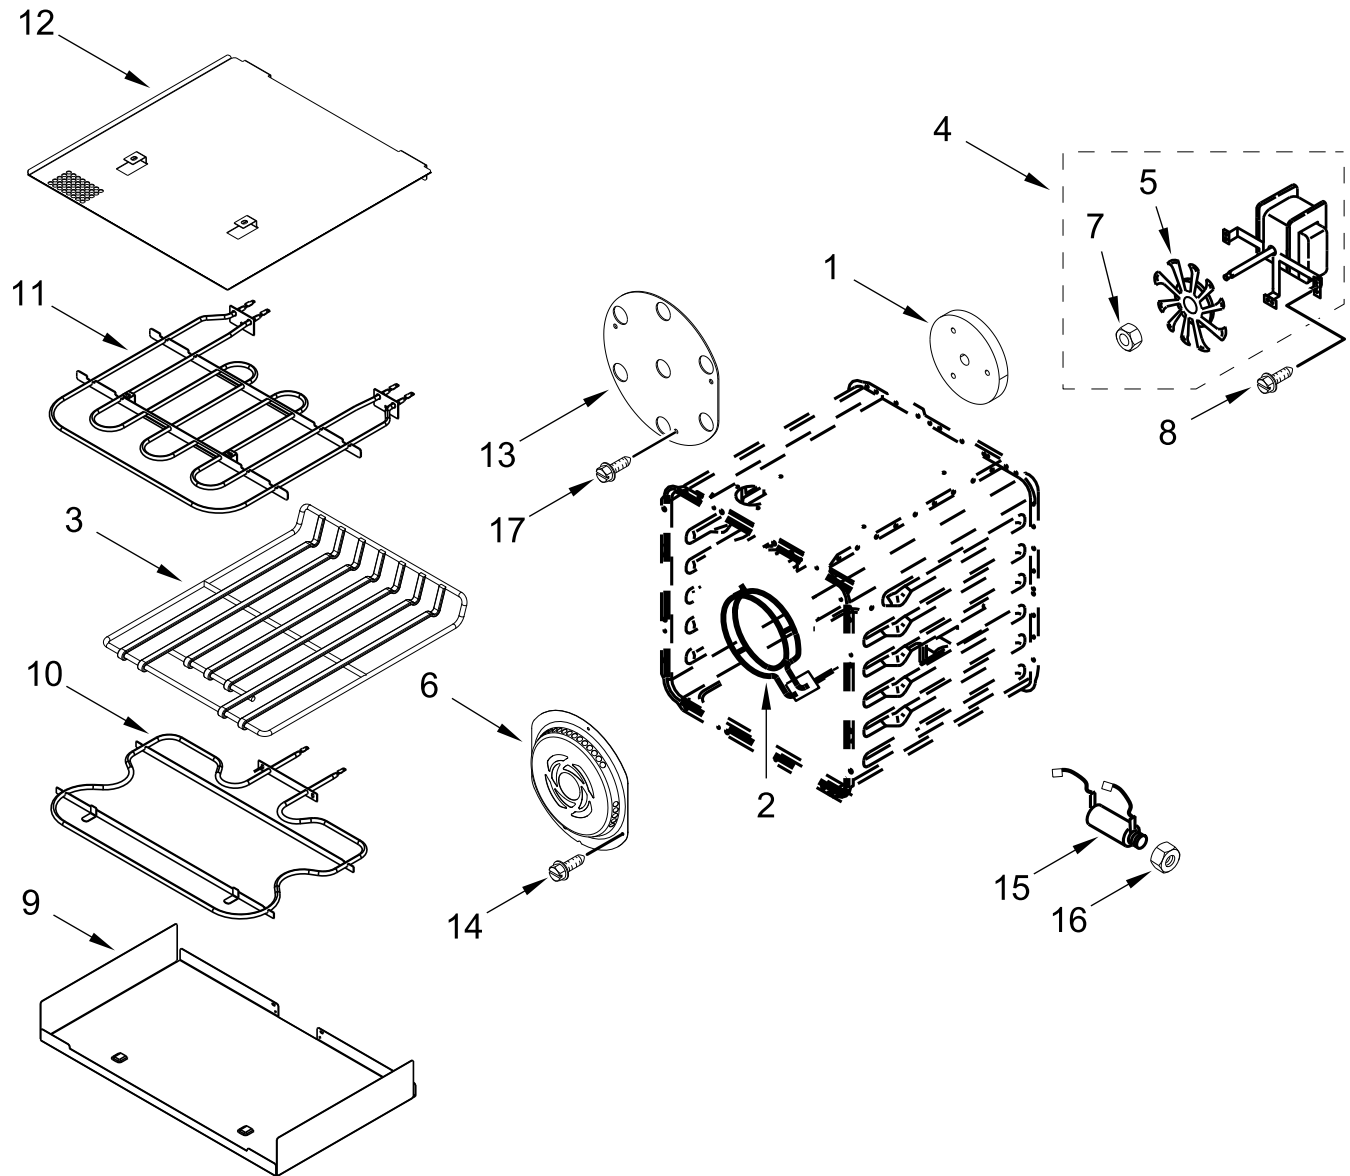

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
2	9762242	Element, Convection Steam	8	4449154	Screw	15	9755543	Jack, Meat Probe
3	W11111351	Rack, Oven (18")	9	W11110223	Tray, Hidden Bake	16	W11033111	Nut, Locking
4	W11121400	Fan, Convection	10	W11045324	Element, Hidden Bake	17	W10720084	Screw
5	W11108376	Blade, Fan	11	W10116010	Element, Broil			
6	W11368180	Cover, Fan	12	W10160855	Shield, Element Broil			
			13	W10261523	Plate, Fan			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill