




NOIR 36" DUAL-FUEL PROFESSIONAL RANGE
Includes Griddle And Steam Assist

MODELS:

JDSP536HM01 (Stainless)


BURNER BOX AND GRIDDLE PARTS

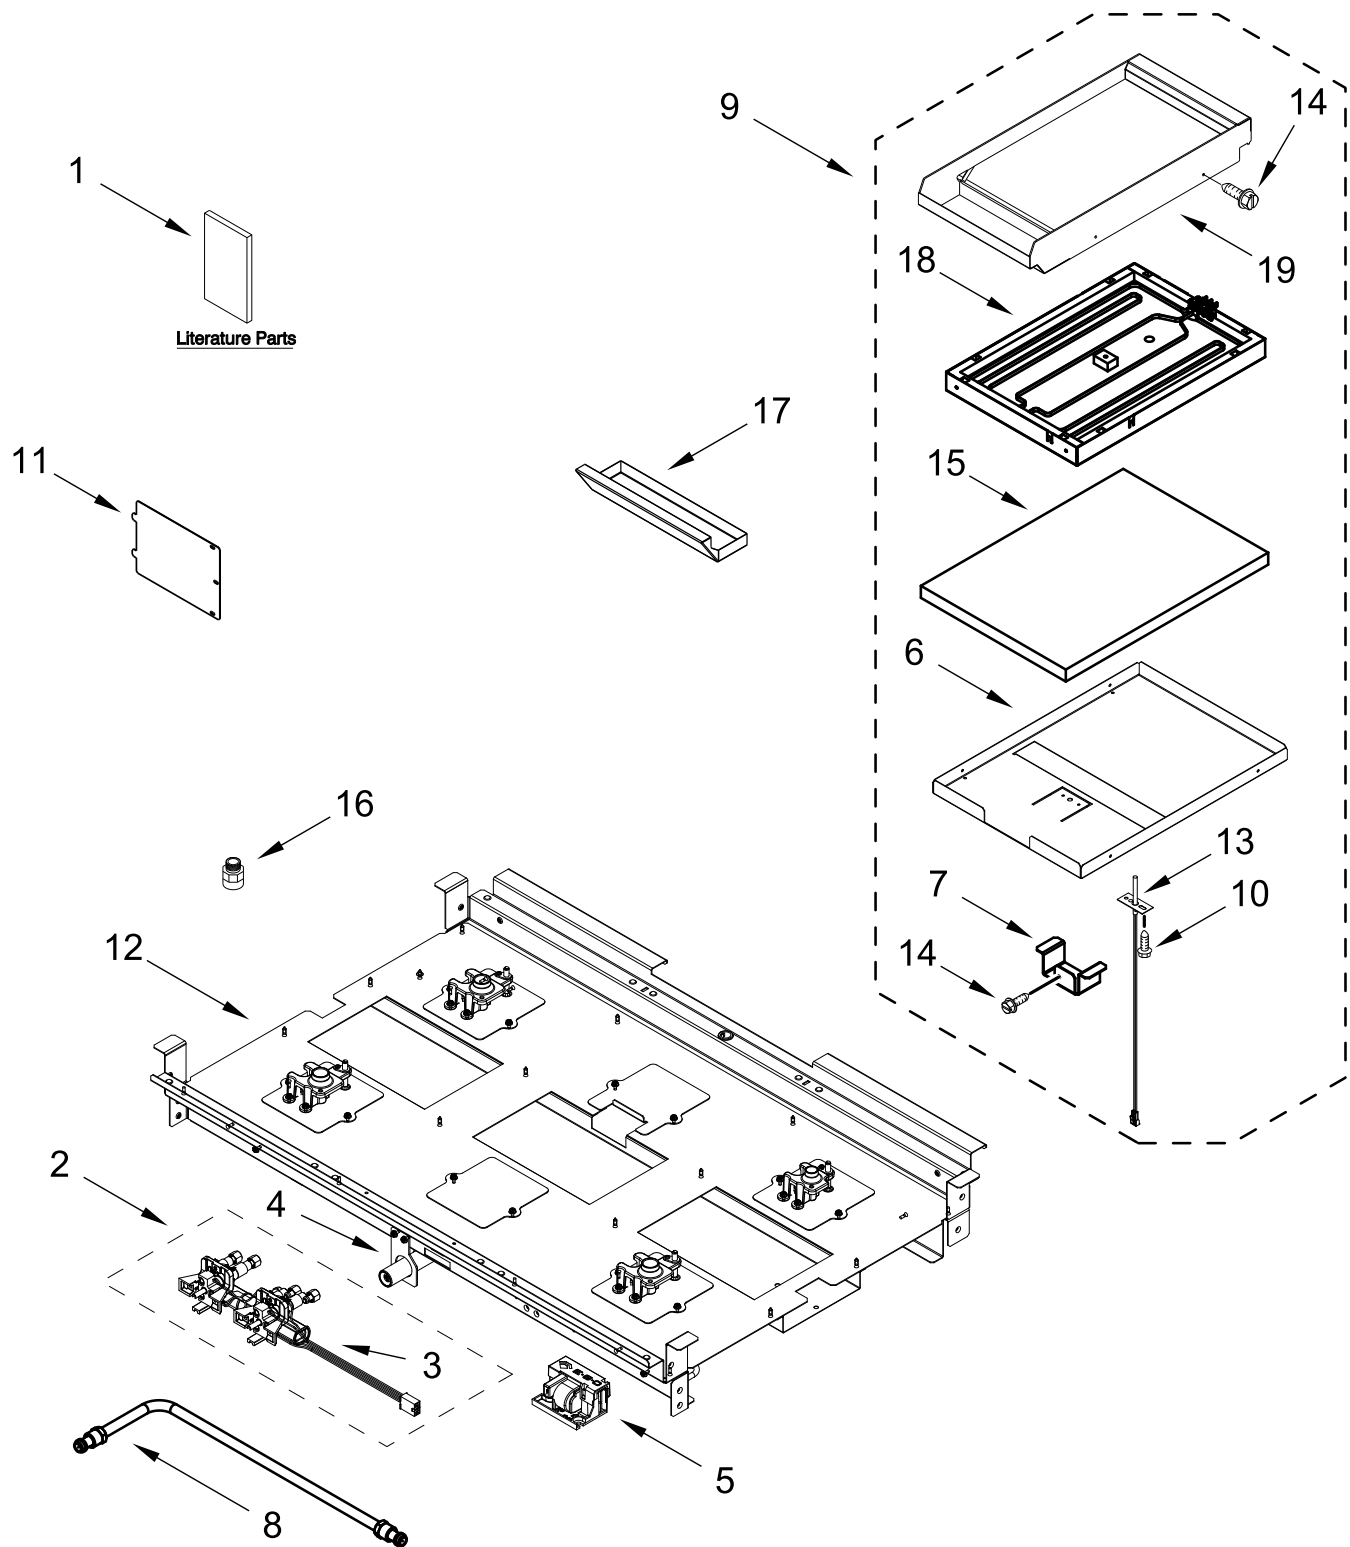

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11330430	Tray, Griddle Insulation	19	W10891567	Module, Griddle
	W11114330	Guide, Use and Care	7	W11121384	Bracket, Griddle-RTD			FOLLOWING PARTS NOT ILLUSTRATED
	W11114333	Instructions, Installation	8	W10892370	Tube, Manifold Supply		W11200319	Harness, Main (36")
	W11177312	Guide, Quick Start			(Left)		W10903727	Harness, Griddle
	W11184746	Guide, Internet Connectivity		W10892443	Tube, Manifold Supply		W11200326	Harness, Cooktop
					(Right)		W10780278	Harness, Door Lock
	W11202365	Diagram, Wiring	9	W10891745	Assembly, Griddle Module		W11200325	Harness, Communication
	W11202265	Sheet, Tech	10	3196160	Screw		W11242785	Harness, WIFI
2	W10893053	Assembly, Valve Manifold	11	W10115843	Cover, Ignition		W11212216	Cord, Power
		(Left Front And Left Rear)	12		Box, Burner (Not Serviced)		9759877	Retainer, Strain Relief
	W10893062	Assembly, Valve Manifold	13	W10891584	Sensor, Griddle		4450800	Screw, Grounding
		(Right Front and Right Rear)	14	W10162096	Screw		W10253333	Bracket, Anti-Tip
			15	W11121383	Insulation, Griddle		7101P485-60	Screw, Anti-Tip Kit
3	W11106300	Switch, Harness	16	4453116	Adapter, Male		W11238041	Kit, LP Conversion
4	W11121194	Bracket, Manifold	17	W10276497	Tray, Griddle Drip		W10590933	Board, Transient Suppressor
5	W11121317	Module, Spark	18	W10891698	Element, Griddle			


COOKTOP, BURNER AND GRATE PARTS

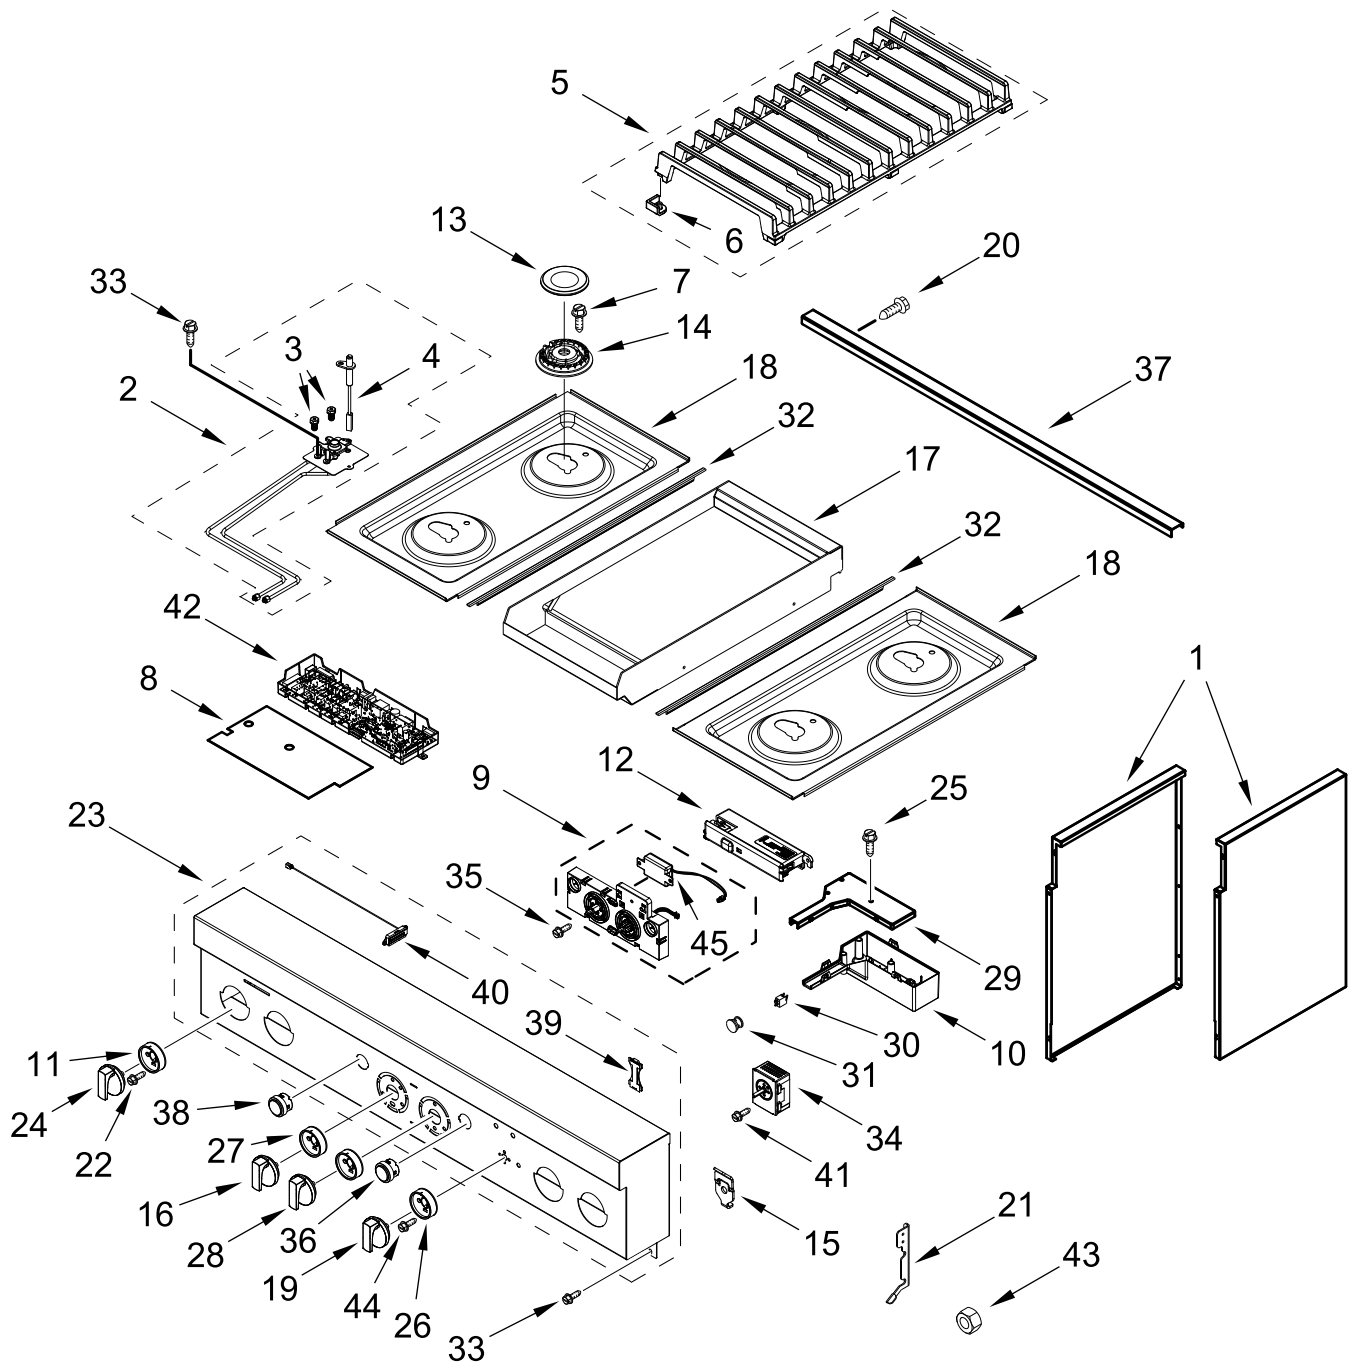

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	9	W11436330	Interface, User	25	7101P624-60	Screw
	W11106880	Panel, Cabinet Side (Right)	10	W11205795	Cover, WIFI Outer	26	W11104967	Bezel, Griddle
2	W10892793	Assembly, Orifice Holder (Left Front)	11	W11090284	Bezel, Cooktop (For 4 Cooktop Burners)	27		Bezel, Oven (For 2 Oven Knobs)
	W10892494	Assembly, Orifice Holder (Left Rear)	12	W11110768	Assembly, WIFI Module	28	W11042375	Stainless Knob, Oven Temperature
	W10892475	Assembly, Orifice Holder (Right Front)	13		Cap, Burner		W10891868	Stainless
	W10892730	Assembly, Orifice Holder (Right Rear)		W11121391	Black (Set of 4)	29	W11205794	Cover, WIFI Inner
3	W10892422	Orifice, Main (17.4K) (Left Front)	14	W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)	30	W10116114	Light, Indicator Housing
	W10892418	Orifice, Main (15.4K) (Left Rear, Right Front)		W10892022	Spreader, Flame (Low) (Right Rear)	31	W10294500	Lens, Indicator Light
	W10892440	Orifice, Main (7.2K) (Right Rear)	15	W11036559	Spring Clip, Range	32	W10291193	Trim, L-Strip
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	16		Knob, Oven Steam Mode	33	7101P426-60	Screw
	W10892429	Orifice, Simmer (2.0K) (Right Rear)		W11343043	Stainless	34	W11033497	Control, Griddle
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	17	W10891745	Assembly, Griddle Module (Assembly Breakdown Shown on Burner Box Page)	35	3400814	Screw
	W11238756	Igniter (Right Rear)	18		Panel, Cooktop	36	W11090650	Button Assembly, Oven Start
5		Assembly, Grate		W11038237	Black (Left)	37	W11156416	Trim, Island
	W11172289	Black (Left)		W11038253	Black (Right)	38	W11090651	Button Assembly, Oven Light
	W11172625	Black (Right)	19		Knob, Griddle	39	W10896369	Assembly, Light Pipe
6	W11042504	Bumper, Grate	20	W10891923	Stainless	40	W11130078	Antenna, WIFI
7	W11323260	Screw	21	7101P338-60	Screw	41	3196537	Screw
8	W11281269	Barrier, Appliance Manager		W10130760	Bracket, Moving Console (Left)	42	W11100269	Manager, Appliance (Powermax)
				W10130759	Bracket, Moving Console (Right)	43	112432	Nut, Hex
			22	W11328357	Screw	44	W10674068	Screw
			23	W11253774	Panel, Cooktop	45	W10568405	Assembly, Speaker
			24		Knob, Burner (For 4 Cooktop Burners)			
				W10887596	Stainless			


CHASSIS PARTS

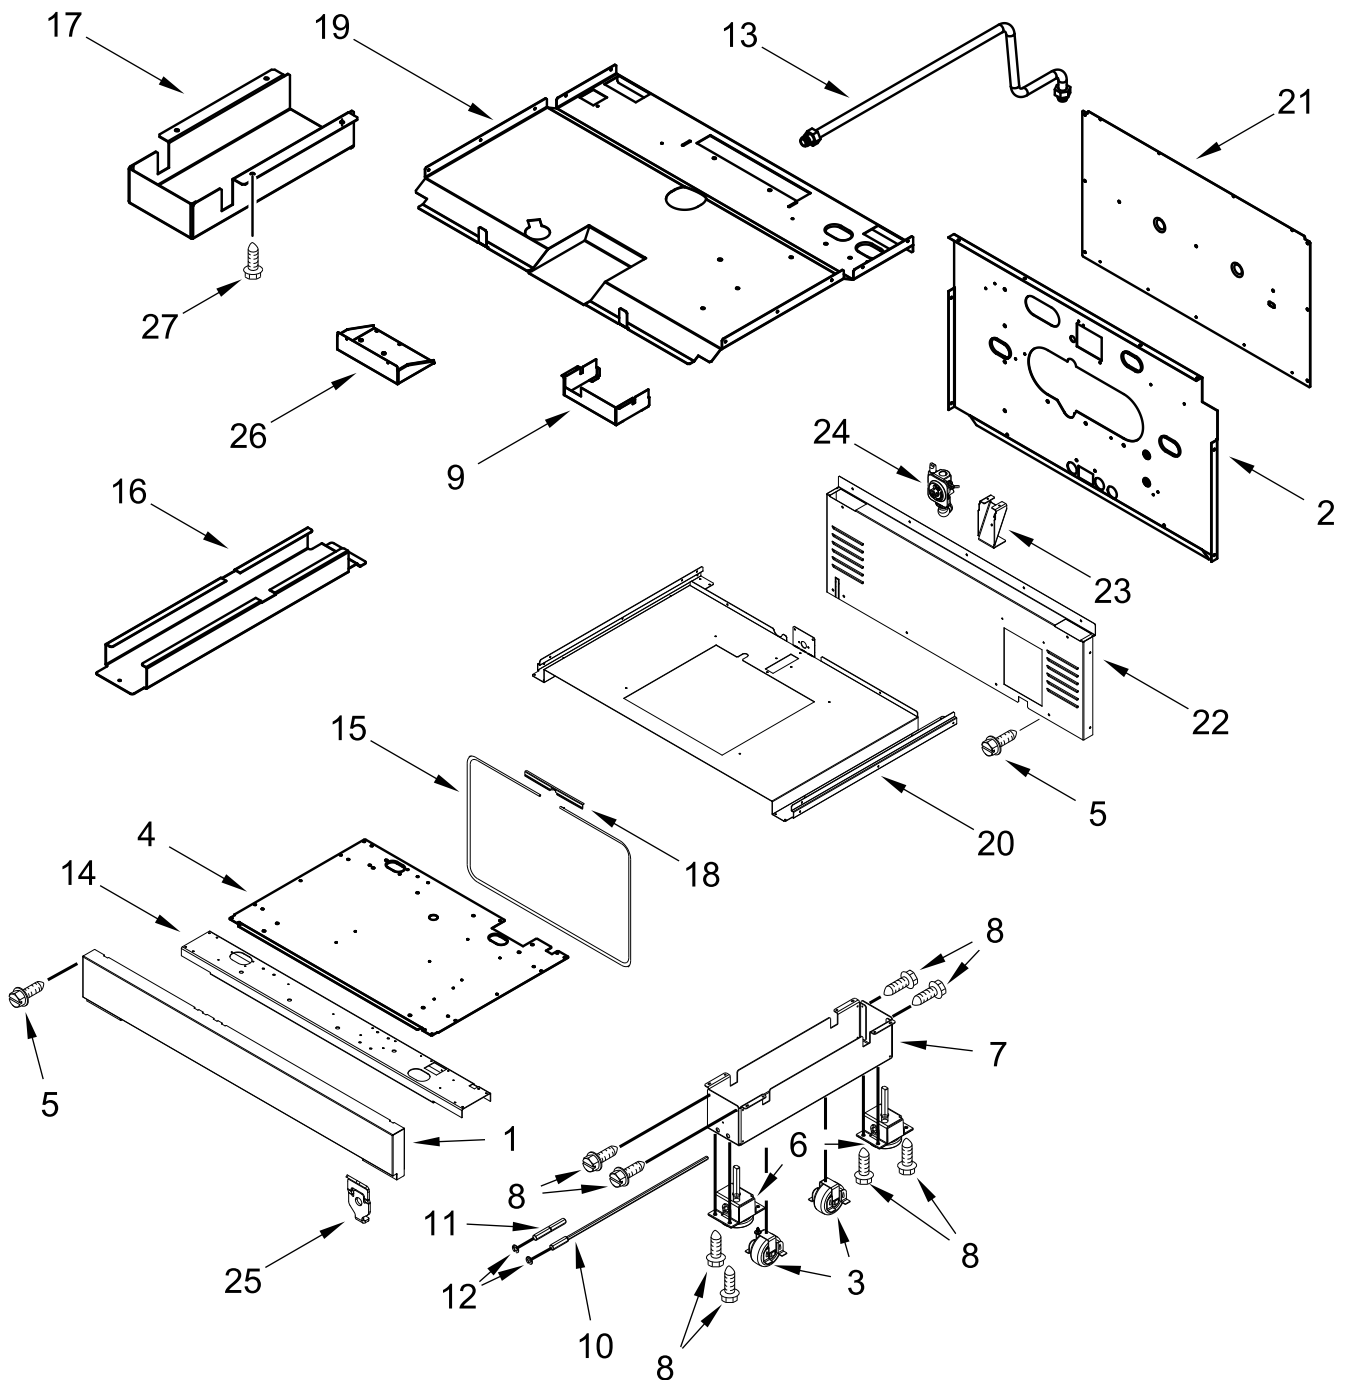

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	11	W10115793	Shaft, Short	20	W11040801	Chassis, Bottom
2	W11324988	Back, Chassis	12	489504	E-Ring	21	W11103333	Panel, Back Top
3	W10138054	Assembly, Roller	13	W11106963	Tube, Pressure Regulator	22	W11034133	Panel, Back Bottom
4	W11095572	Duct, Bottom (36")	14	W11087493	Support, Channel	23	W11096823	Bracket, Pressure Regulator
5	7101P426-60	Screw	15	W11115330	Gasket, Oven (36")	24	W10449140	Regulator, Pressure
6	9760860	Leveler	16	W11050145	Duct-Chassis, Rear	25	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	17	W11368831	Channel, Wire	26	W11106341	Drawer, Appliance Manager
8	4449743	Screw	18	W11362015	Retainer, Gasket (9" Long)	27	3196560	Screw
9	W11369237	Cabinet, Appliance Manager	19	W11324985	Top, Chassis			
10	W10115869	Shaft, Long						


OVEN PARTS

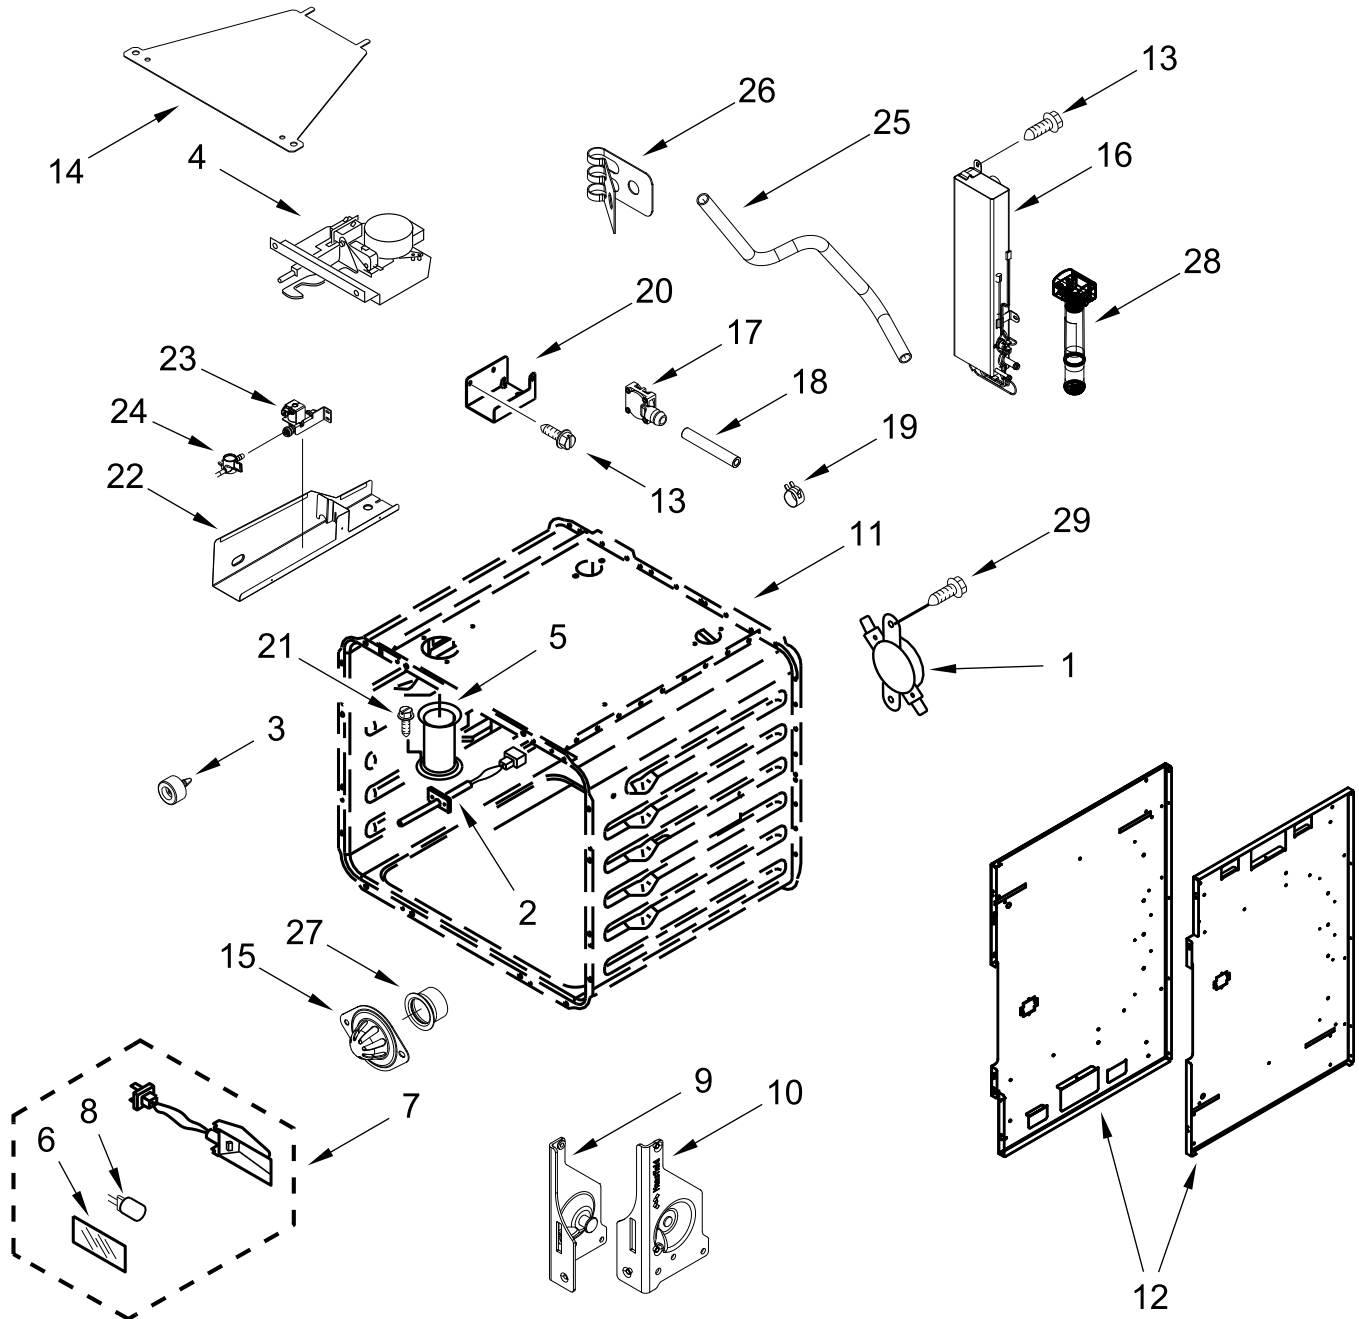

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	15	W11177696	Cover, Boiler Orifice	27	W11092978	Orifice, Boiler Slip Fit
2	W10622170	Probe, Sensor	16	W10864671	Assembly, Boiler	28	W10049700	Filter
3	W10351278	Bumper & Screw	17	W10194453	Switch, Pressure	29	3400015	Screw, Grounding
4	W10830016	Latch, Motorized	18	W10076930	Hose, Silicone (Translucent)			FOLLOWING PARTS NOT ILLUSTRATED
5	W11290663	Tube, Vent		W10116067	Hose, Silicone (Red)		W10282811	Insulation, Wrap
6	W10169756	Lens, Light					W10282815	Insulation, Back
7	W11223932	Assembly, Oven Light	19	9761147	Clamp, Crimp (Black)		3400968	Nut
8	W10169757	Bulb, Light		9761146	Clamp, Crimp (Red)			
9	W11096294	Receiver, Hinge (Left)	20	W10331561	Bracket, Steam Mount			
10	W11096293	Receiver, Hinge (Right)	21	3196176	Screw			
11		Liner, Oven (Not Serviced)	22	W10160877	Enclosure, Steam Valve			
12	W11102297	Chassis, Side (Left)	23	W10111418	Valve, Solenoid			
	W11102296	Chassis, Side (Right)	24	W10076760	Sensor, Conductivity Slip Fit			
13	7101P426-60	Screw	25	W11334756	Tube, Copper			
14	W10160858	Cover, Latch	26	2208136	Clip, Water Tube			


VENTING PARTS

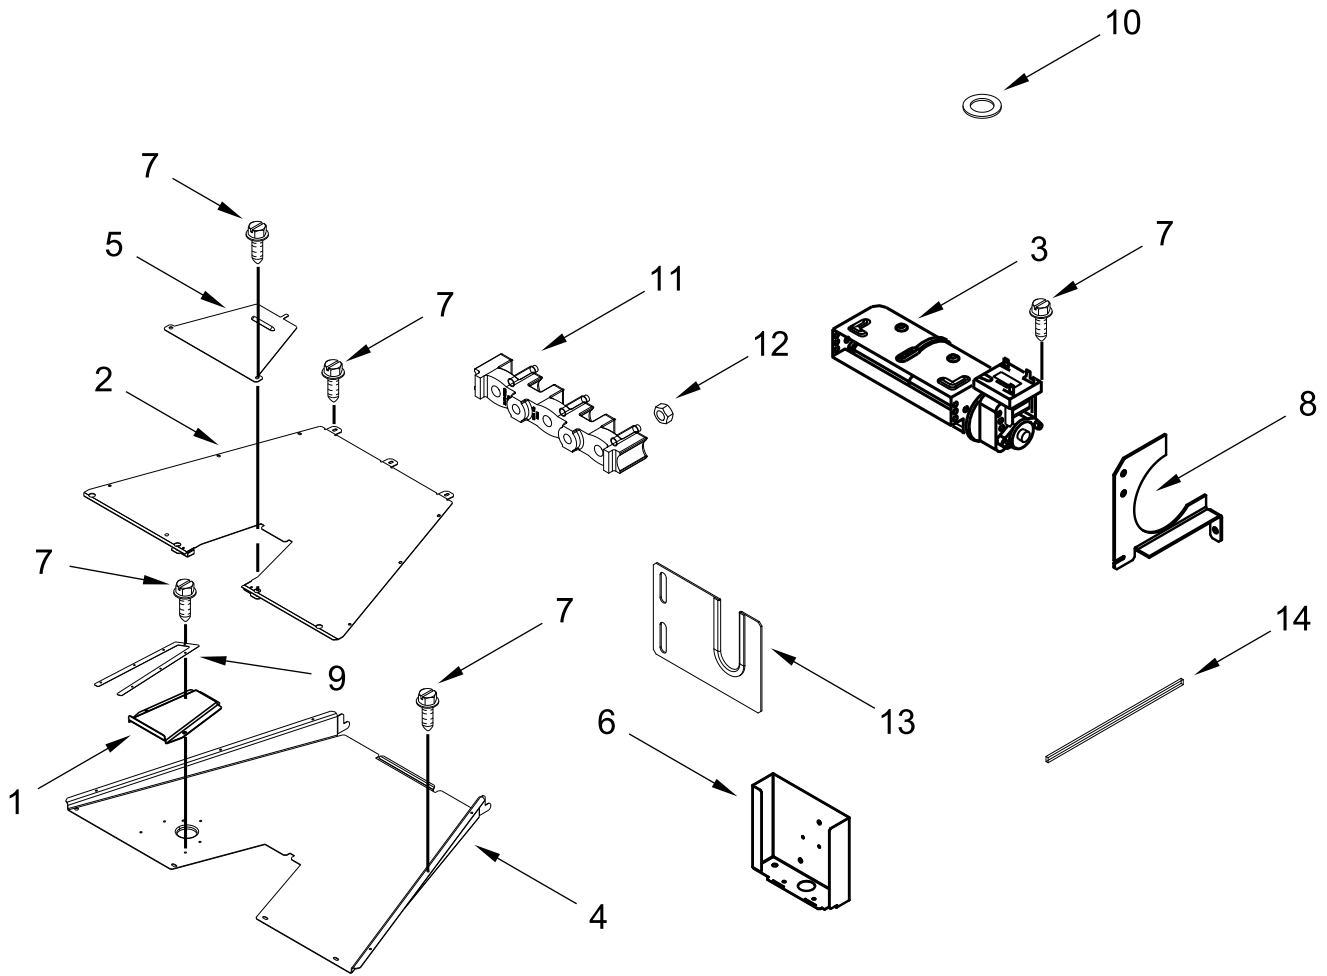

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W11353392	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	W11030753	Block, Terminal			
			12	3400029	Nut			


OVEN DOOR PARTS

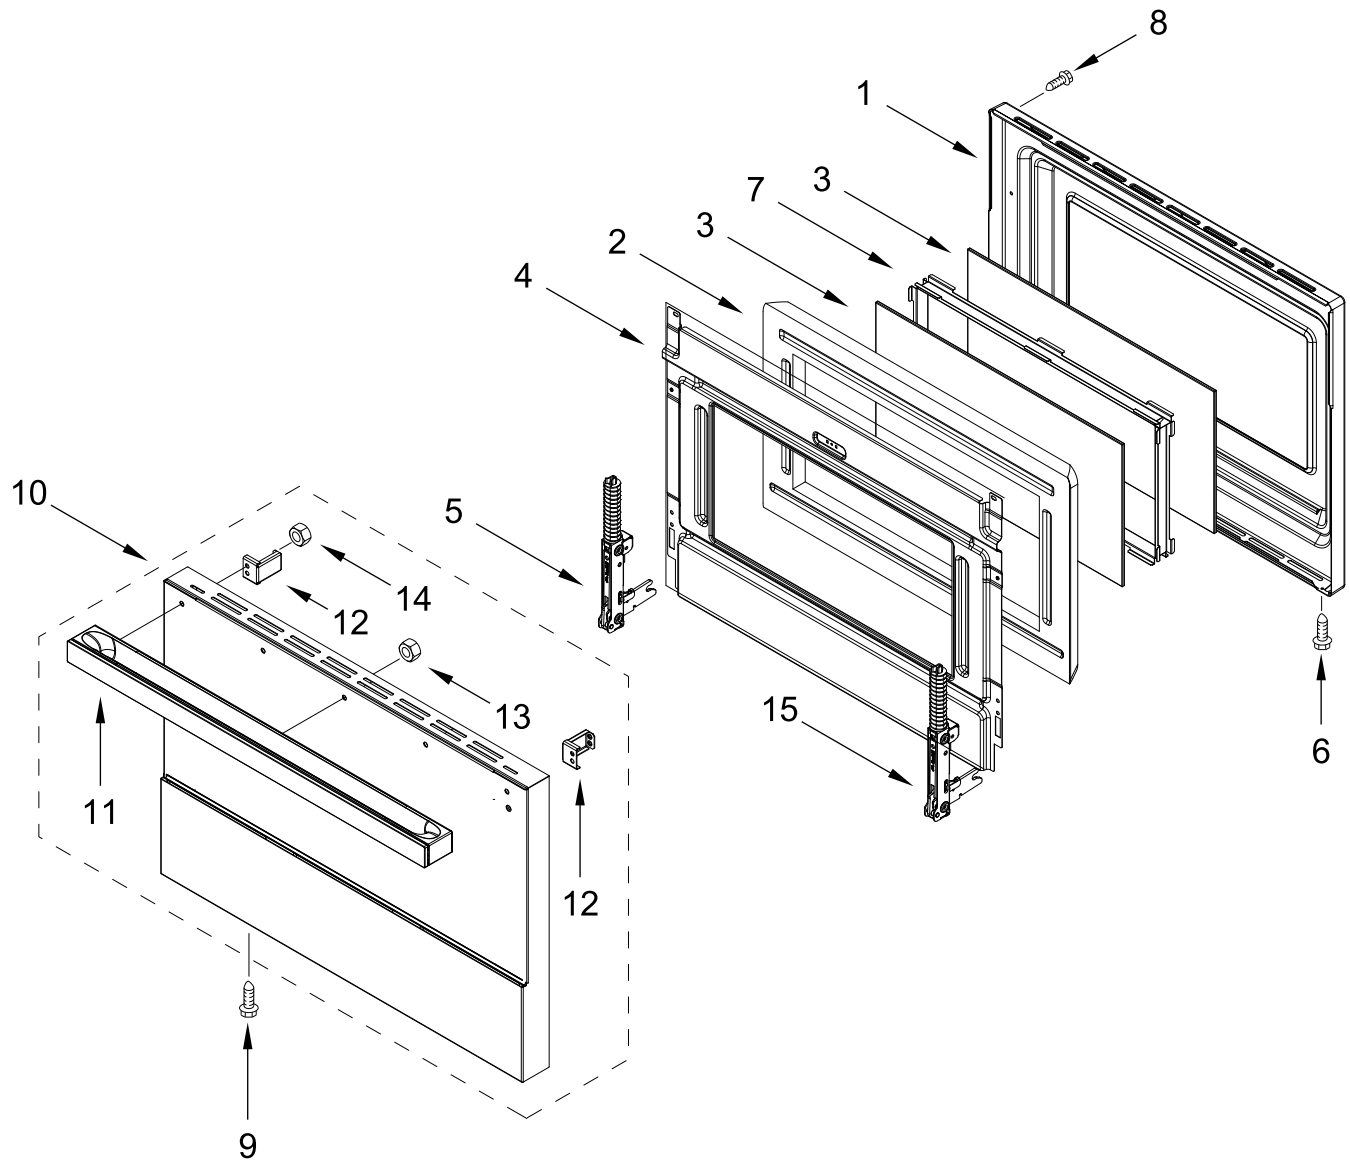

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	7	W11194814	Frame, Glass	12	W11194816	Bracket, Handle
2	W10884823	Insulation, Door	8	W10898280	Screw	13	W11198435	Nut
3	W11036791	Glass, Inner	9	W10162096	Screw	14	999299	Nut
4	W11194820	Retainer, Glass	10	W10870229	Assembly, Outer Door Glass (Includes Handle)	15	W11096983	Hinge, Door (Right)
5	W11096984	Hinge, Door (Left)						
6	W10607120	Screw	11	W11125545	Handle, Door			

INTERNAL OVEN PARTS

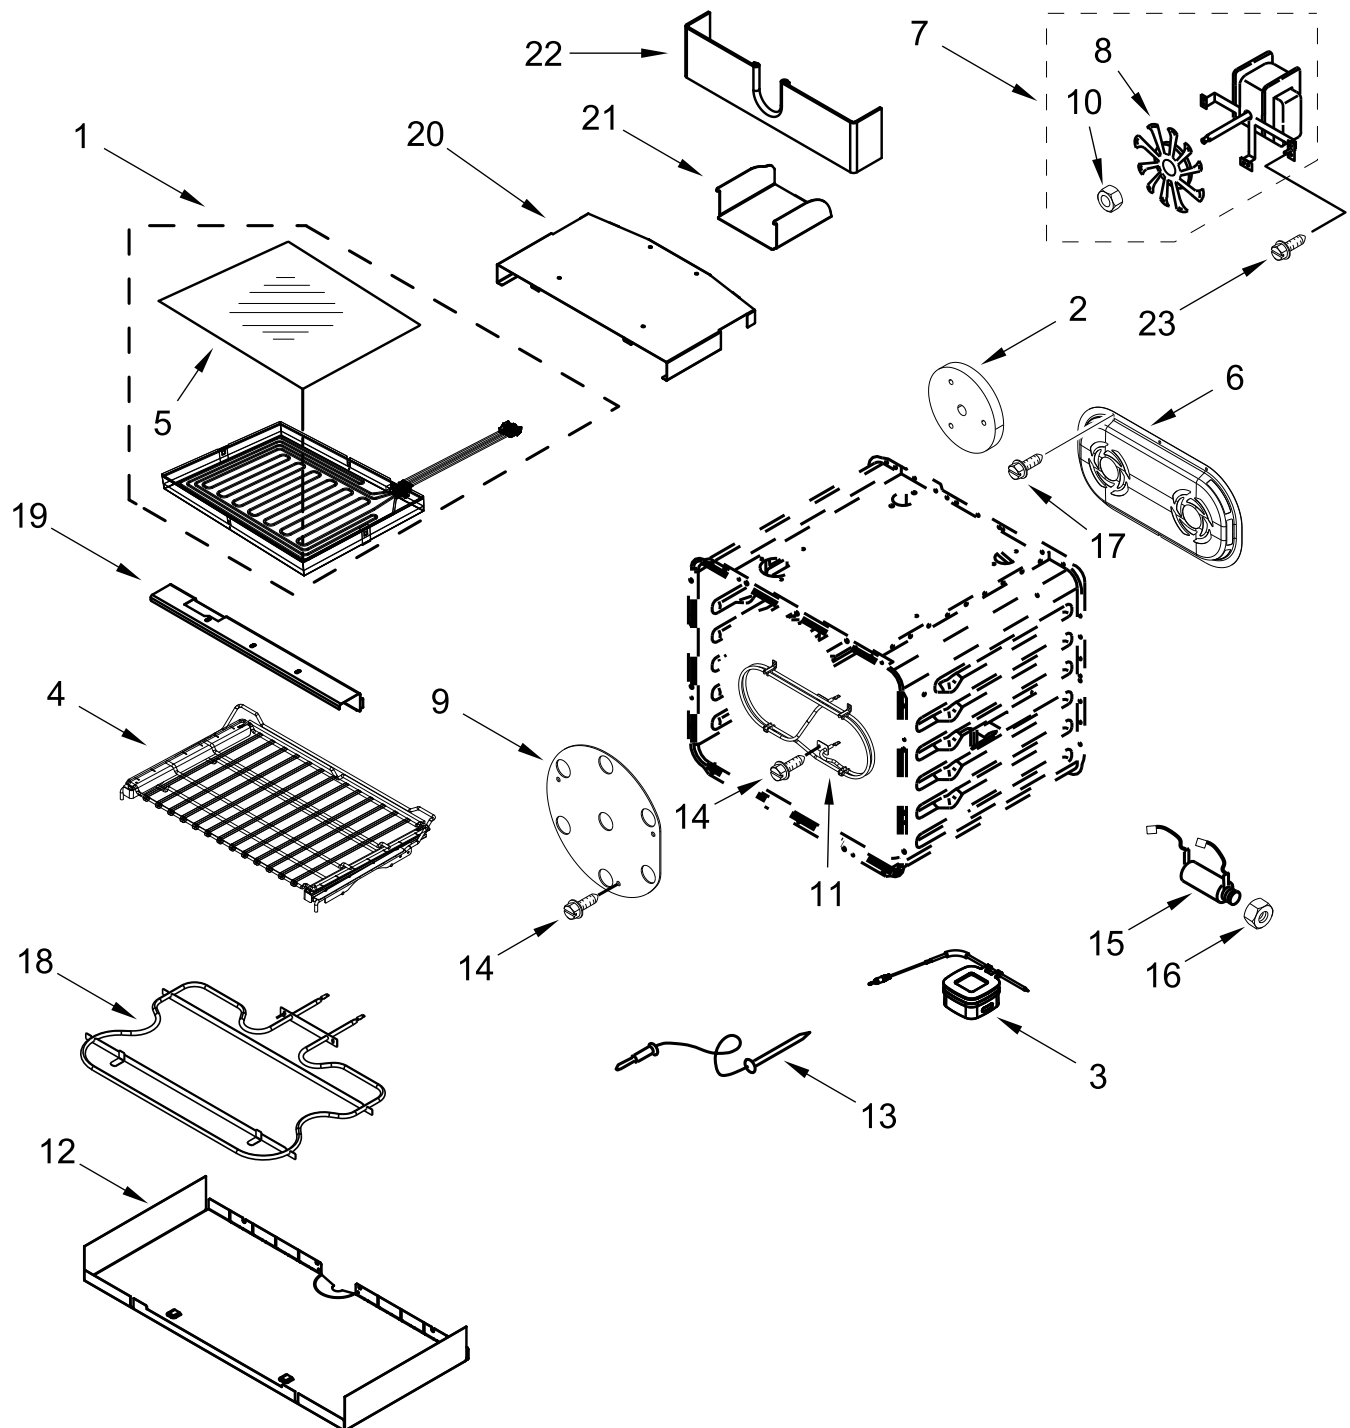

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	9	W10261523	Plate, Fan	18	W10115992	Element, Hidden Bake
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	19	W11112336	Bracket, Broil Front
3	W11186918	Probe, Wireless Meat	11	W10116434	Element, Convection	20	W11158843	Bracket, Broil Top
4	W11111356	Rack, Oven (Sliding)	12	W11106922	Tray, Hidden Bake	21	W11111392	Cover, Broil Terminal
5	W11193191	Glass, Broil Element	13	9755542	Probe, Temperature	22	W11170823	Cover Plate, Terminal Hole
6	W11232487	Baffle, Convection	14	4449154	Screw	23	W10720084	Screw
7	W11121400	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W11108376	Blade, Fan	16	W11033111	Nut, Locking			
			17	W10739592	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill