




48" RISE DUAL-FUEL PROFESSIONAL-STYLE RANGE
Includes Griddle and Steam Assist

MODELS:

JDSP548HL01 (Stainless)


BURNER BOX AND GRIDDLE PARTS

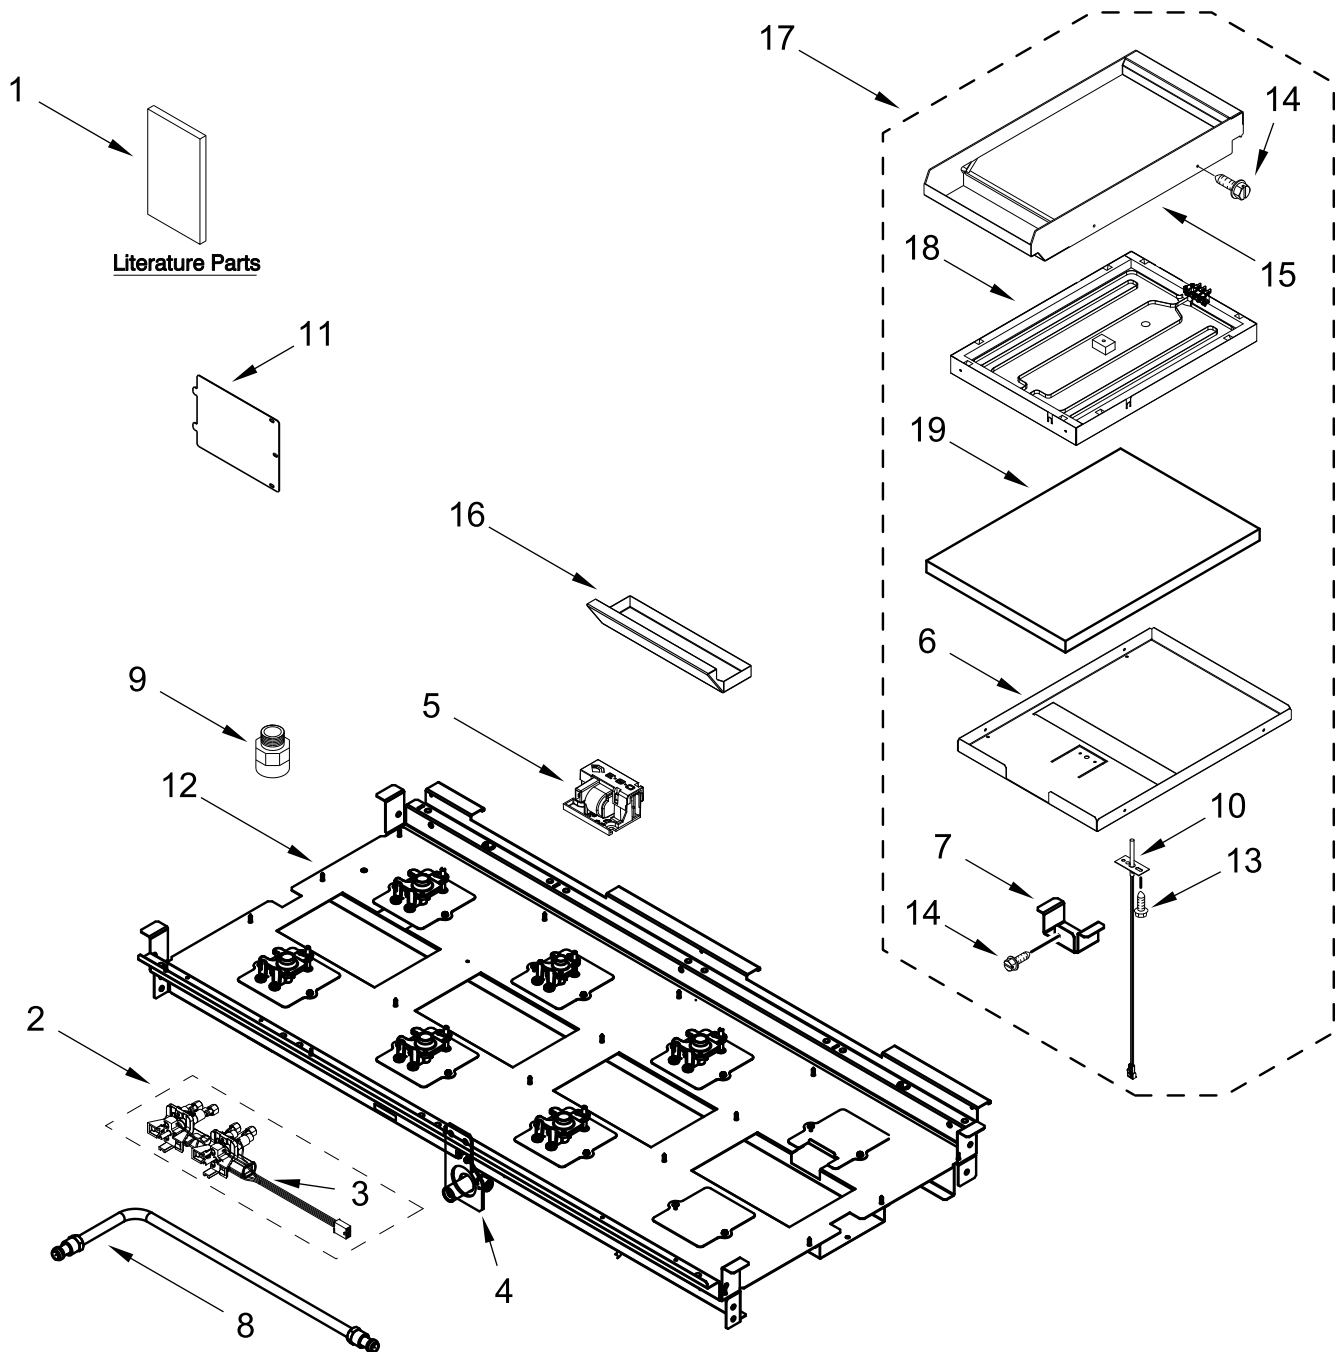

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121194	Bracket, Manifold	18	W10891698	Element, Griddle
	W11114330	Guide, Use and Care	5	W11121317	Module, Spark	19	W11121383	Insulation, Griddle
	W11114333	Instructions, Installation	6	W11330430	Tray, Griddle Insulation			FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start	7	W11121384	Bracket, Griddle-RTD		W11200316	Harness, Main (30")
	W11184746	Guide, Internet Connectivity	8	W10892784	Tube, Manifold Supply (Left)		W11200313	Harness, Main (18")
	W11202366	Diagram, Wiring		W10892775	Tube, Manifold Supply (Left Center)		W10903727	Harness, Griddle
	W11202265	Sheet, Tech					W11200329	Harness, Cooktop
2	W11183722	Assembly, Valve Manifold (Left Front and Left Rear)		W10892789	Tube, Manifold Supply (Right Center)		W10780278	Harness, Door Lock
	W10893058	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	9	4453116	Adapter, Male		W11200318	Harness, Communication
			10	W10891584	Sensor, Griddle		W11242785	Harness, WIFI
			11	W10115843	Cover, Ignition		W11212216	Cord, Power
			12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
	W10893051	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	13	3196160	Screw		W10253333	Bracket, Anti-Tip
			14	W10162096	Screw		7101P485-60	Screw, Anti-Tip Kit
			15	W10891567	Module, Griddle		W11238041	Kit, LP Conversion
			16	W10276497	Tray, Griddle Drip		112432	Nut, Hex
3	W11106300	Switch, Harness	17	W10891745	Assembly, Griddle Module		W10590933	Board, Transient Suppressor


COOKTOP, BURNER, AND GRIDDLE PARTS

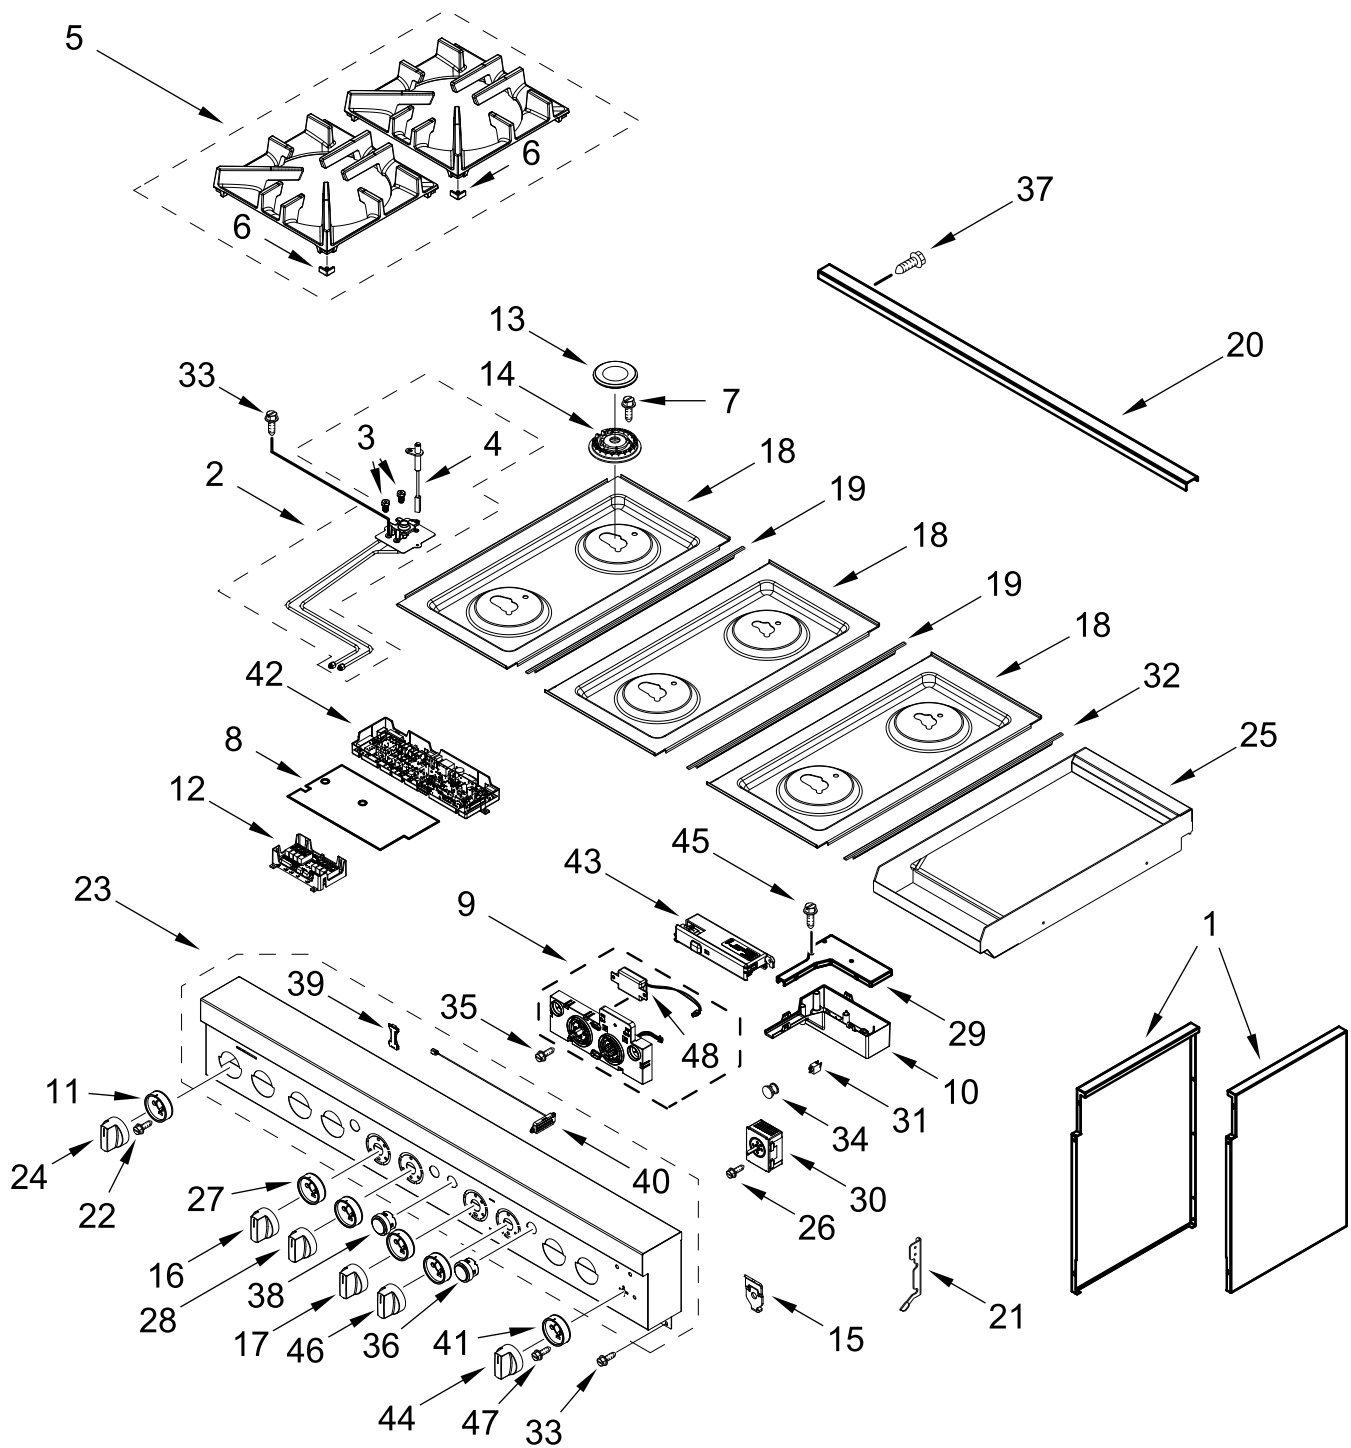

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	5	W11291176	Assembly, Grate Black (Set of 2)	24		Knob, Burner (For 6 Cooktop Burners)
	W11111428	Panel, Cabinet Side (Right)	6	W11042504	Bumper, Grate		W10882958	Stainless
2	W10892807	Assembly, Orifice Holder (Left Front)	7	W11323260	Screw	25		Assembly, Griddle Module (Part Number Included on Burner Box Page)
	W10892495	Assembly, Orifice Holder (Left Rear)	8	W11281269	Barrier, Appliance Manager	26	3196537	Screw
	W11114338	Assembly, Orifice Holder (Left Center Front)	9	W11436329	User Interface	27		Bezel, Oven (For 4 Oven Knobs)
	W10892810	Assembly, Orifice Holder (Left Center Rear)	10	W11205795	Cover, WIFI Outer		W10914998	Stainless Knob, Oven Temperature
	W10892505	Assembly, Orifice Holder (Right Center Front)	11	W11090283	Bezel, Cooktop (For 6 Cooktop Burners)		W10891871	Stainless (For 18" Oven)
	W10892444	Assembly, Orifice Holder (Right Center Rear)	12	W10890116	Manager, Appliance (Expansion)	28	W11205794	Cover, WIFI Inner
3	W10892422	Orifice, Main (17.4K) (Left Front And Right Center Front)	13	W11121392	Cap, Burner Black (Set of 6)	29	W11033497	Control, Griddle
	W10892418	Orifice, Main (15.4K) (Left Rear, Left Center Front, Right Center Rear)	14	W10891987	Spreader, Flame (High) (All But Left Center Rear)	30	W10116114	Light, Indicator Housing
	W10892440	Orifice, Main (7.2K) (Left Center Rear)		W10892022	Spreader, Flame (Low) (Left Center Rear)	31	W10291193	Trim, L-Strip
	W10892435	Orifice, Simmer (2.6K) (All But Left Center Rear)	15	W11036559	Spring Clip, Range	32	7101P426-60	Screw
	W10892429	Orifice, Simmer (2.0K) (Left Center Rear)	16	W10891872	Knob, Oven Mode Stainless (For 18" Oven)	33	W10294500	Lens, Indicator Light
4	W11238757	Igniter (Left Front, Left Rear, Right Center Front)	17	W10891873	Knob, Oven Mode Steam Stainless (For 30" Oven)	34	3400814	Screw
	W11238758	Igniter (Left Center Front, Right Center Rear)	18	W10891873	Panel, Cooktop Black (Left) (Left Center) (Right Center)	35	W11090650	Button Assembly, Oven Start
	W11238756	Igniter (Left Center Rear)		W10803515	Black (Left)	36	7101P338-60	Screw
				W10803519	Black (Left Center)	37	W11090651	Button Assembly, Oven Light
				W10804364	Black (Right Center)	38	W10896369	Assembly, Light Pipe
			19	W10271524	Trim, T-Strip Black	39	W11130078	Antenna, WIFI
			20	W11156418	Trim, Island	40	W11104966	Bezel, Griddle
			21	W10130760	Bracket, Moving Console (Left)	41	W11100271	Manager, Appliance (Powermax)
				W10130759	Bracket, Moving Console (Right)	42	W11110768	Assembly, WIFI Module
			22	W11328357	Screw	43		Knob, Griddle
			23	W11253772	Panel, Control	44	W10884943	Stainless
						45	7101P624-60	Screw
						46		Knob, Oven Temperature
							W10891871	Stainless (For 30" Oven)
						47	7101P309-60	Screw
						48	W10568405	Assembly, Speaker


48" CHASSIS PARTS

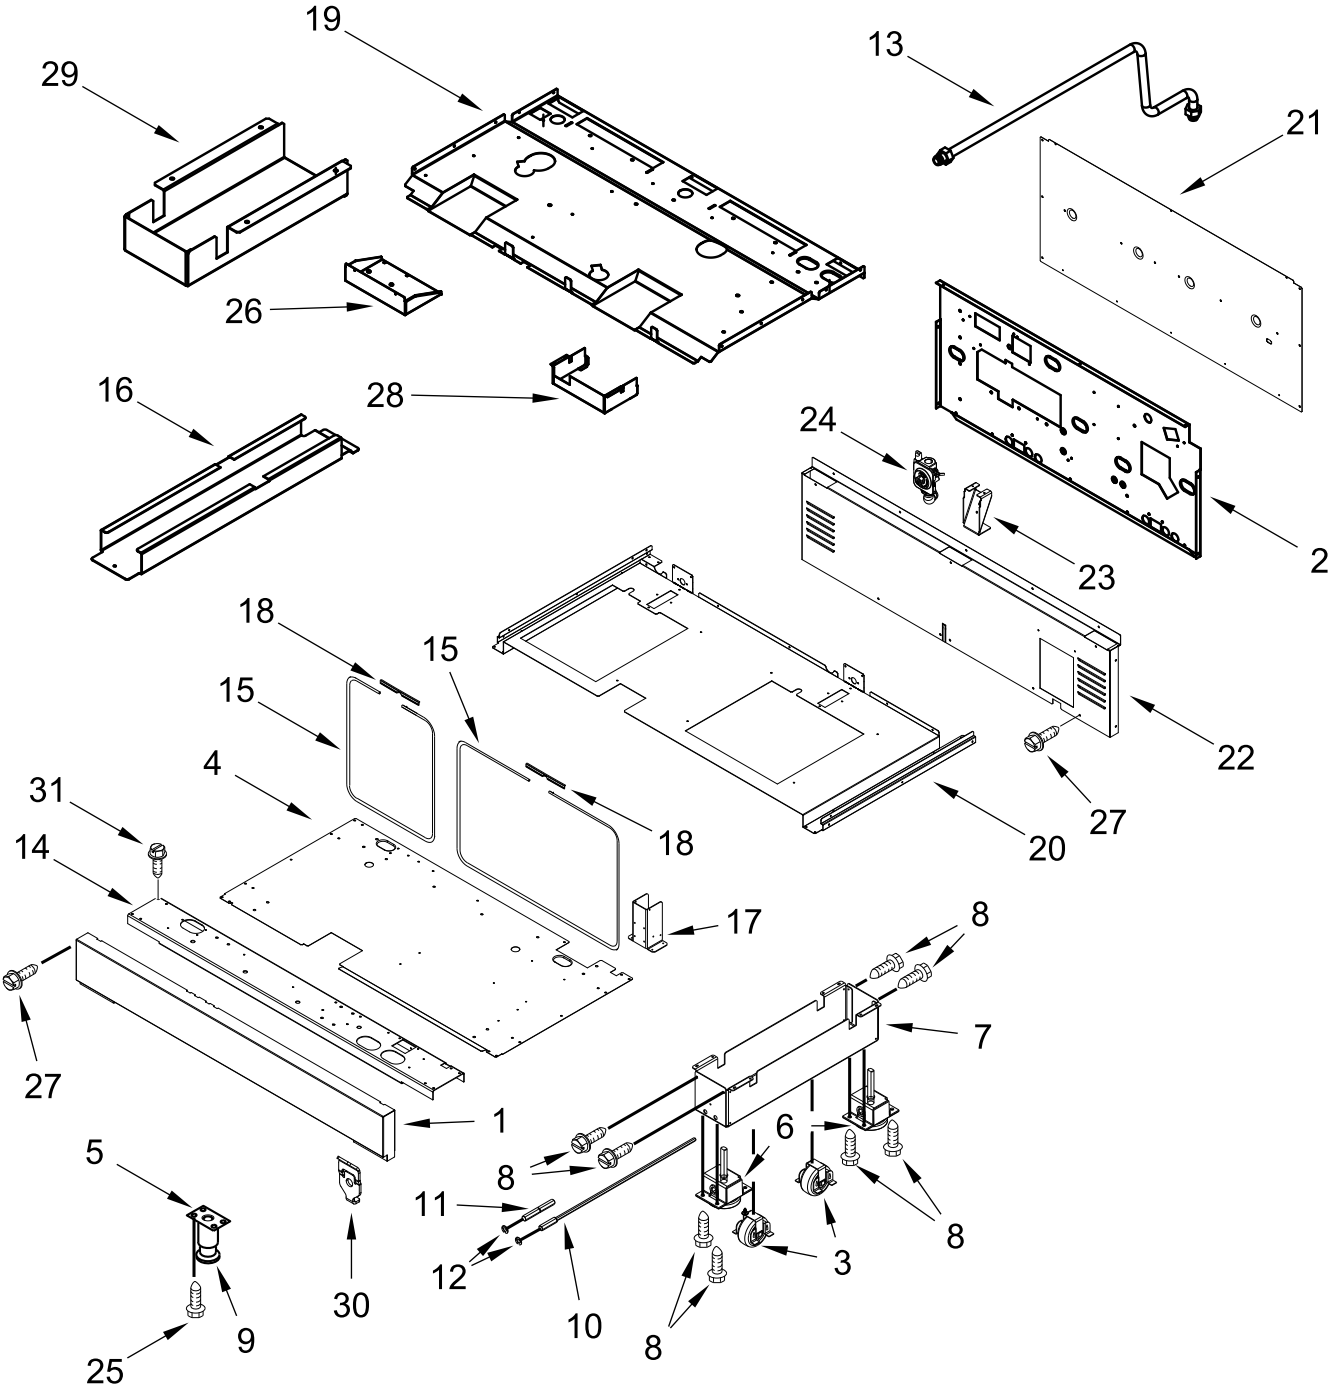

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	14	W11369238	Support, Channel	24	W10449140	Regulator, Pressure
2	W11324987	Back, Chassis	15	W11115328	Gasket, Oven (30")	25	3400518	Screw
3	W10138054	Assembly, Roller		W11115326	Gasket, Oven (18")	26	W11106341	Drawer, Appliance Manager
4	W11110260	Duct, Bottom (48")	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
5	9759118	Plate, Mounting	17	W10115819	Column, Central	28	W11369237	Cabinet, Appliance Manager
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9" Long)	29	W11368831	Channel, Wire
7	W10908710	Base, Leveling Leg	19	W11324984	Top, Chassis	30	W11036559	Spring Clip, Range
8	4449743	Screw	20	W11040800	Chassis, Bottom	31	3196560	Screw
9	9759117	Foot, Dual Fuel	21	W11103335	Panel, Back Top			
10	W10115869	Shaft, Long	22	W11034123	Panel, Back Bottom			
11	W10115793	Shaft, Short	23	W11096823	Bracket, Pressure Regulator			
12	489504	E-Ring						
13	W11106963	Tube, Pressure Regulator						


30" OVEN PARTS

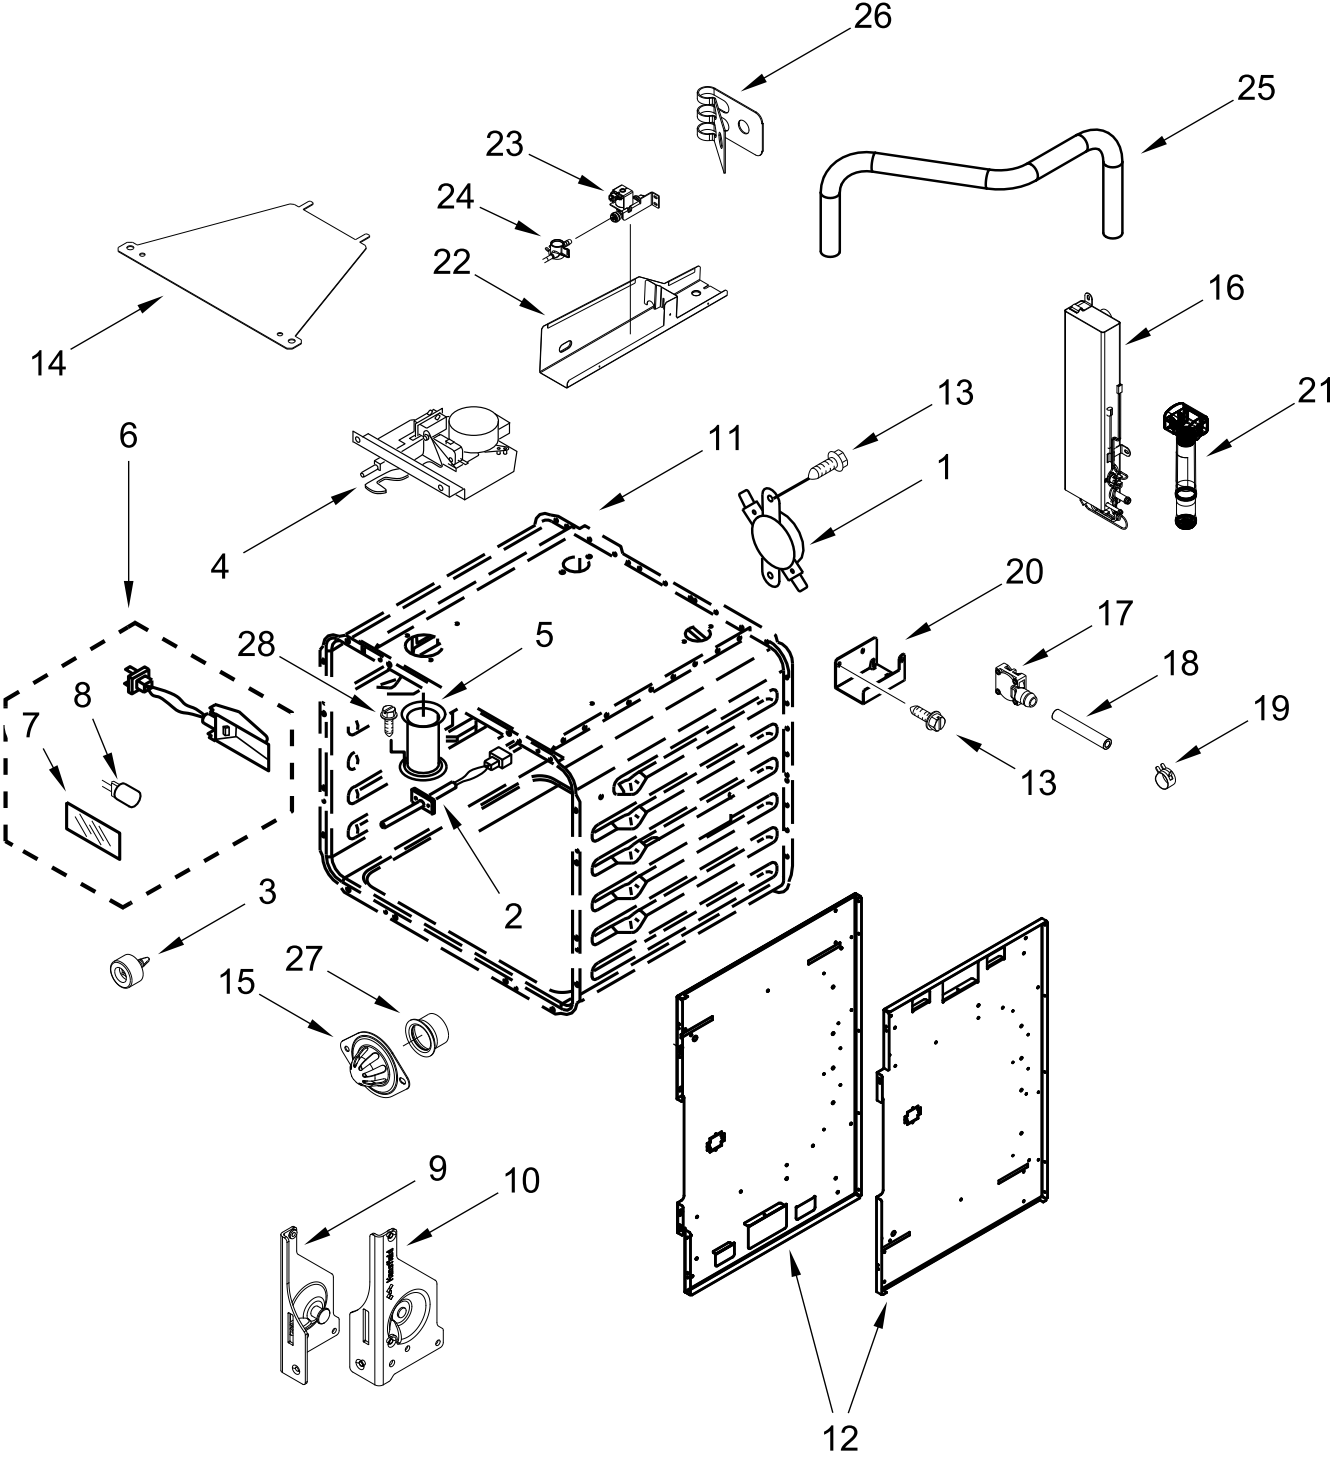

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	13	7101P426-60	Screw	23	W10111418	Valve, Solenoid
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch	24	W10076760	Sensor, Conductivity Slip Fit
3	W10351278	Bumper & Screw	15	W11177696	Cover, Boiler Orifice	25	W11334757	Tube, Copper Steam
4	W10830016	Latch, Motorized	16	W10864671	Assembly, Boiler	26	2208136	Clip, Water Tube
5	W11290663	Tube, Vent	17	W10194453	Switch, Pressure	27	W11092978	Orifice, Boiler Slip Fit
6	W11223932	Assembly, Oven Light	18	W10076930	Hose, Silicone (Translucent)	28	3196176	Screw
7	W10169756	Lens, Light		W10116067	Hose, Silicone (Red)			FOLLOWING PARTS NOT ILLUSTRATED
8	W10169757	Bulb, Light	19	9761147	Clamp, Crimp (Black)		W10282810	Insulation, Wrap, 30"
9	W11096294	Receiver, Hinge (Left)		9761146	Clamp, Crimp (Red)		W10282816	Insulation, Back, 30"
10	W11096293	Receiver, Hinge (Right)	20	W10331561	Bracket, Steam Mount		3400968	Nut
11		Liner, Oven (Not Serviced)	21	W10049700	Filter			
12	W11102297	Chassis, Side (Left)	22	W10160877	Enclosure, Steam Valve			
	W11102296	Chassis, Side (Right)						


18" OVEN PARTS

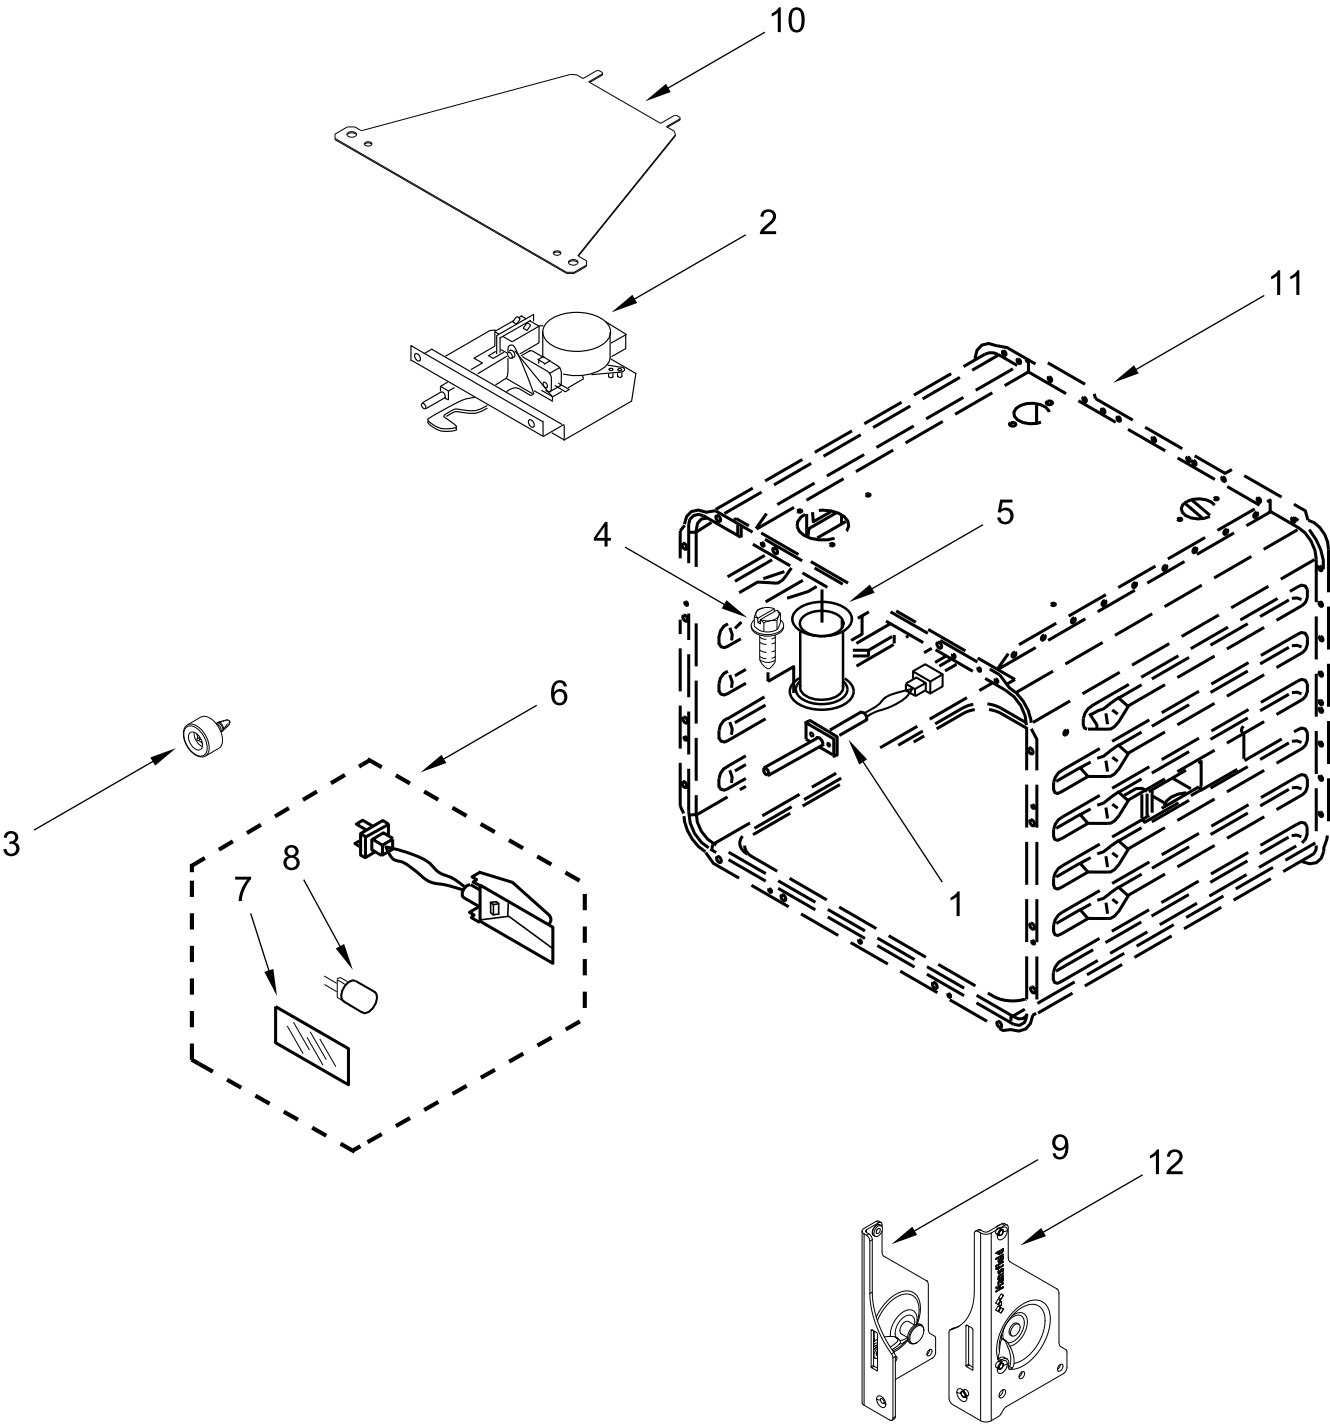

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	12	W11096293	Receiver, Hinge (Right)
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	10	W10160858	Cover, Latch			
4	3196176	Screw	11		Liner, Oven (Not Serviced)			
5	W10288078	Tube, Vent					W10282820	Insulation, Wrap, 18"
6	W11223932	Assembly, Oven Light					W10282812	Insulation, Back, 18"
7	W10169756	Lens, Light					3400968	Nut


VENTING PARTS

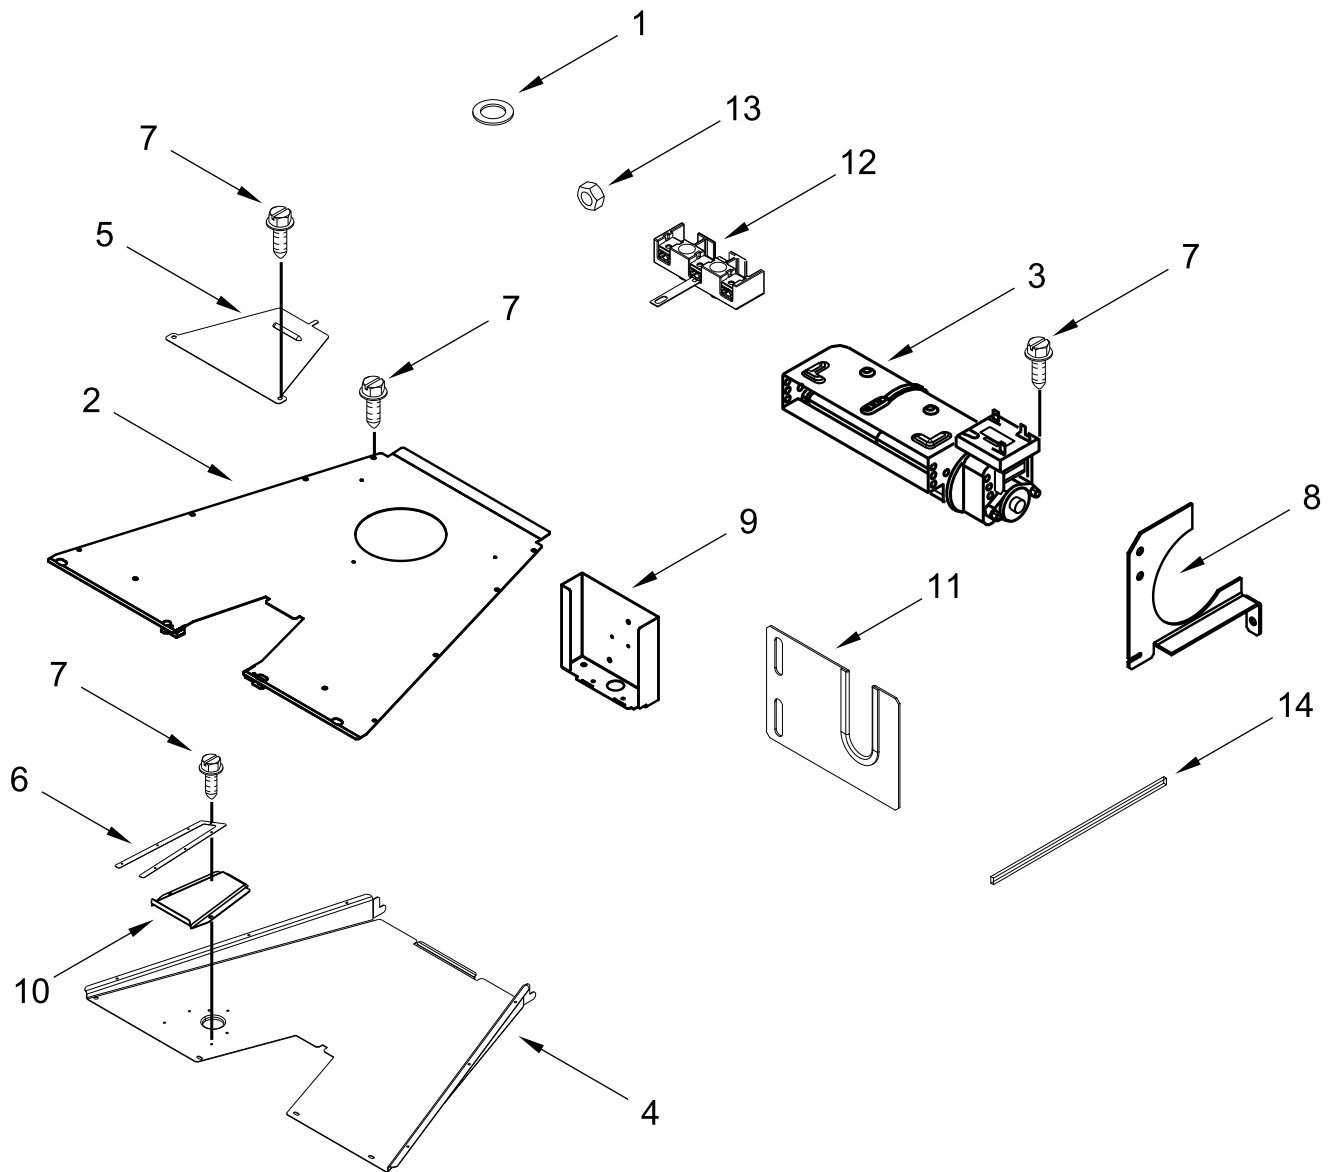

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10270396	Seal, Chimney	6	W10270397	Seal, Vent Slope (30")	12	W11030753	Block, Terminal
2	W11105223	Vent, Cooling Top (30")		W10270402	Seal, Vent Slope (18")	13	3400029	Nut
	W11113380	Vent, Cooling Top (18")	7	7101P426-60	Screw	14	W10919715	Gasket
			8	W11047754	Bracket, Blower Mount			
3	W11200129	Blower	9	W11353392	Box, Terminal			
4	W11105222	Vent, Cooling Bottom (30")	10	W10818234	Slope, Exhaust Vent (30")			
	W11113378	Vent, Cooling Bottom (18")		W10818235	Slope, Exhaust Vent (18")			
5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel			


30" OVEN DOOR PARTS

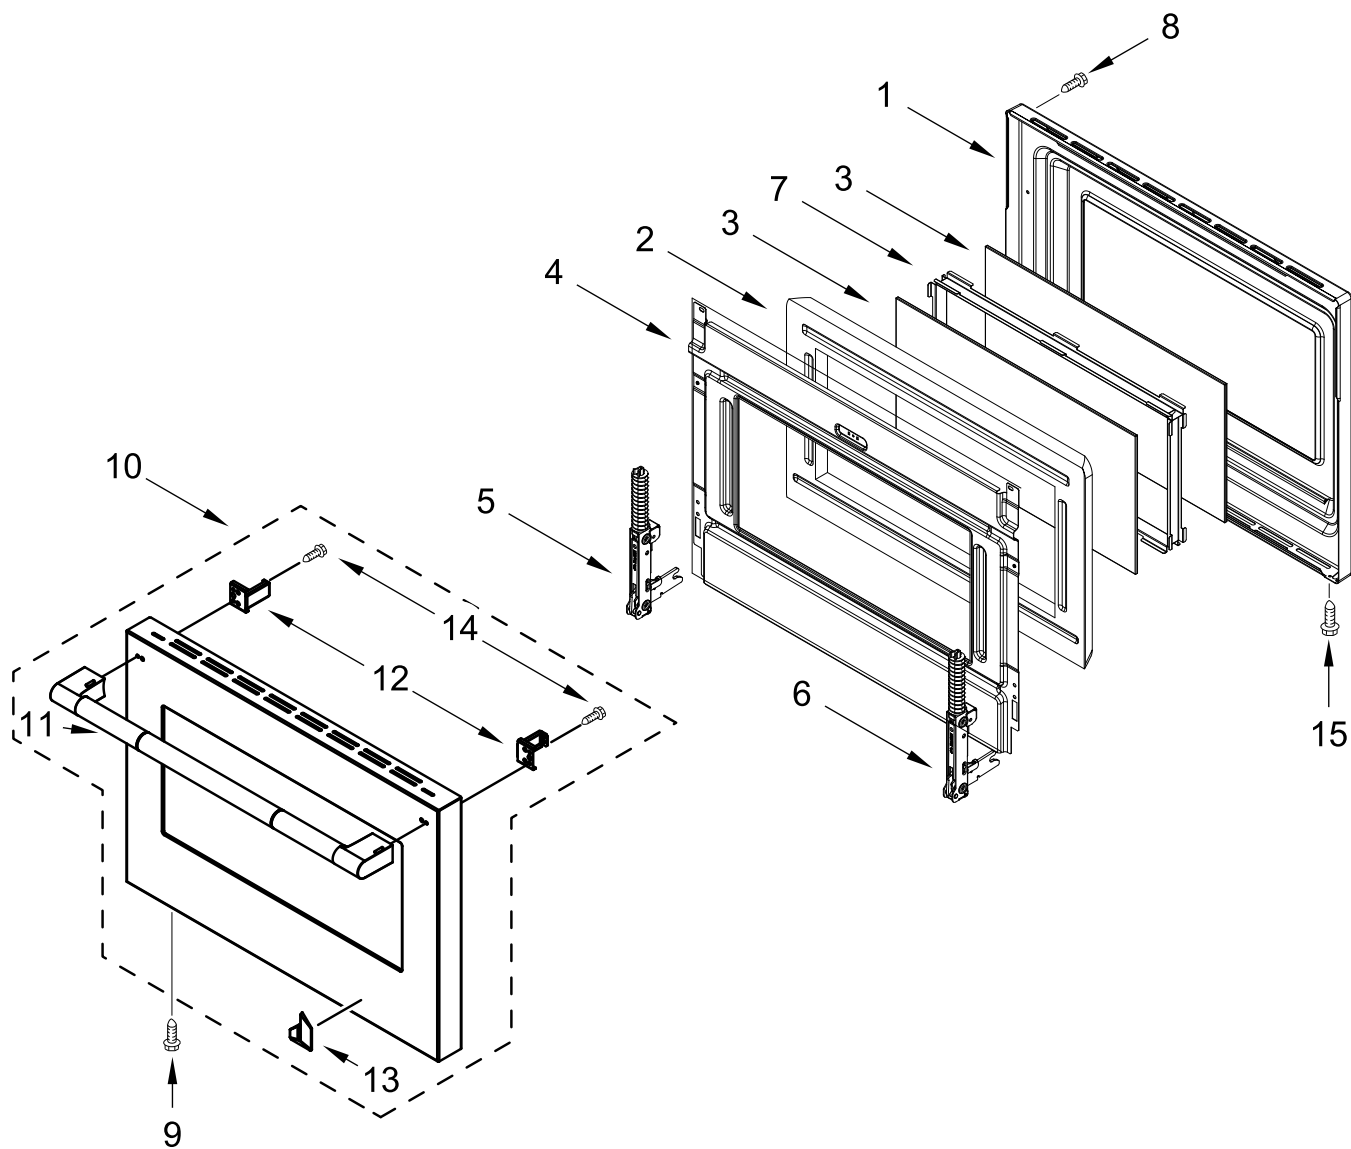

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W11199071	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			


18" OVEN DOOR PARTS

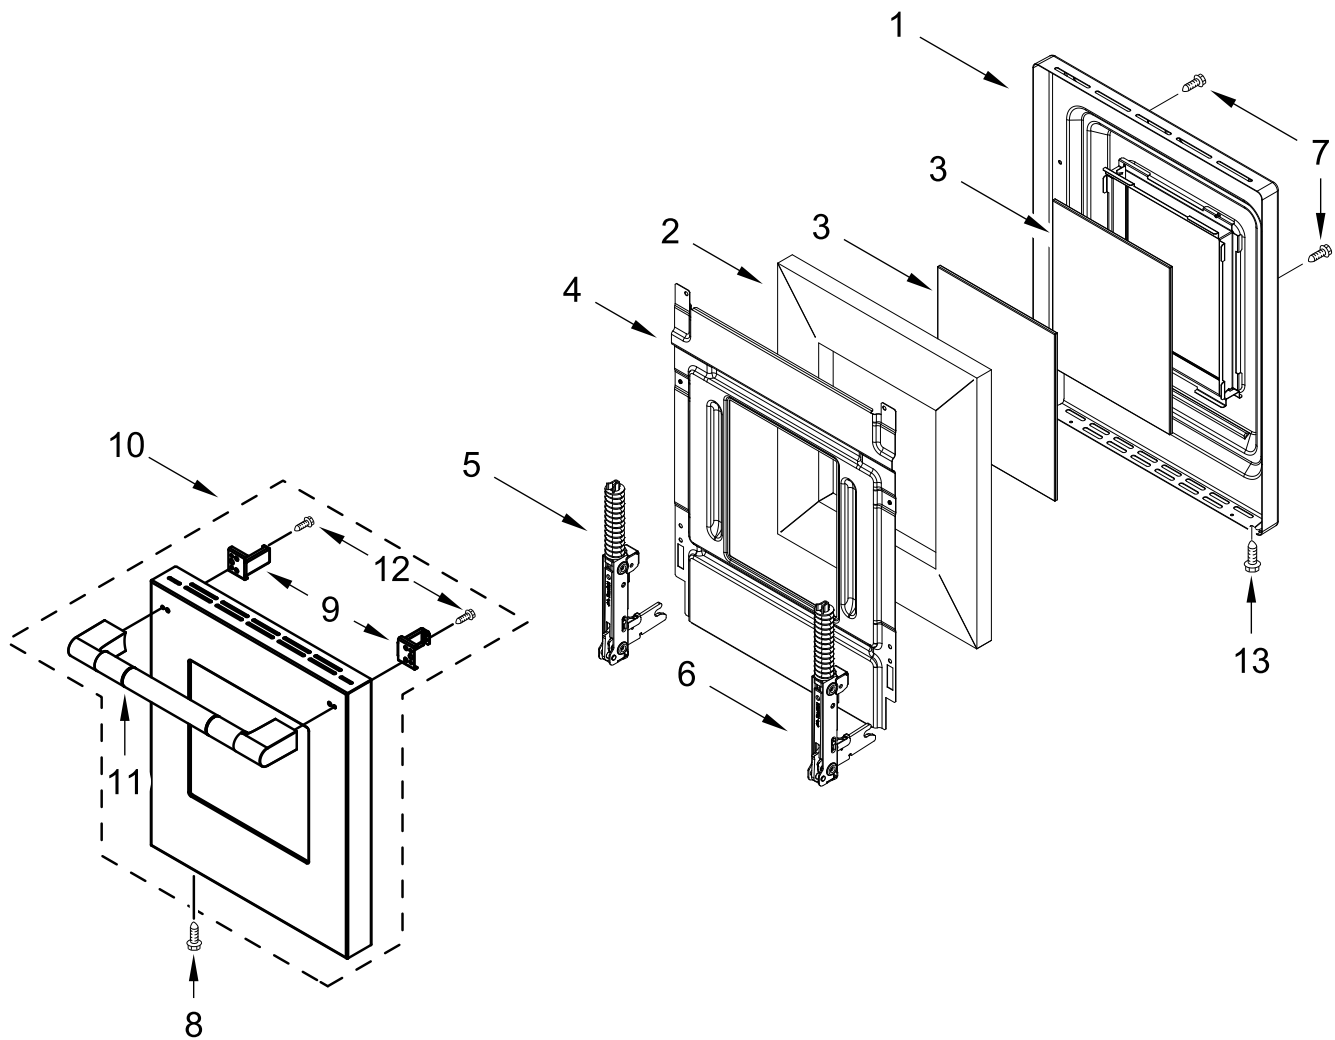

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	11	W11102824	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W10276043	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	13	W10607120	Screw
4	W11194818	Retainer, Glass	10	W10799306	Assembly, Outer Door Glass (Includes Handle)			
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)						


30" INTERNAL OVEN PARTS

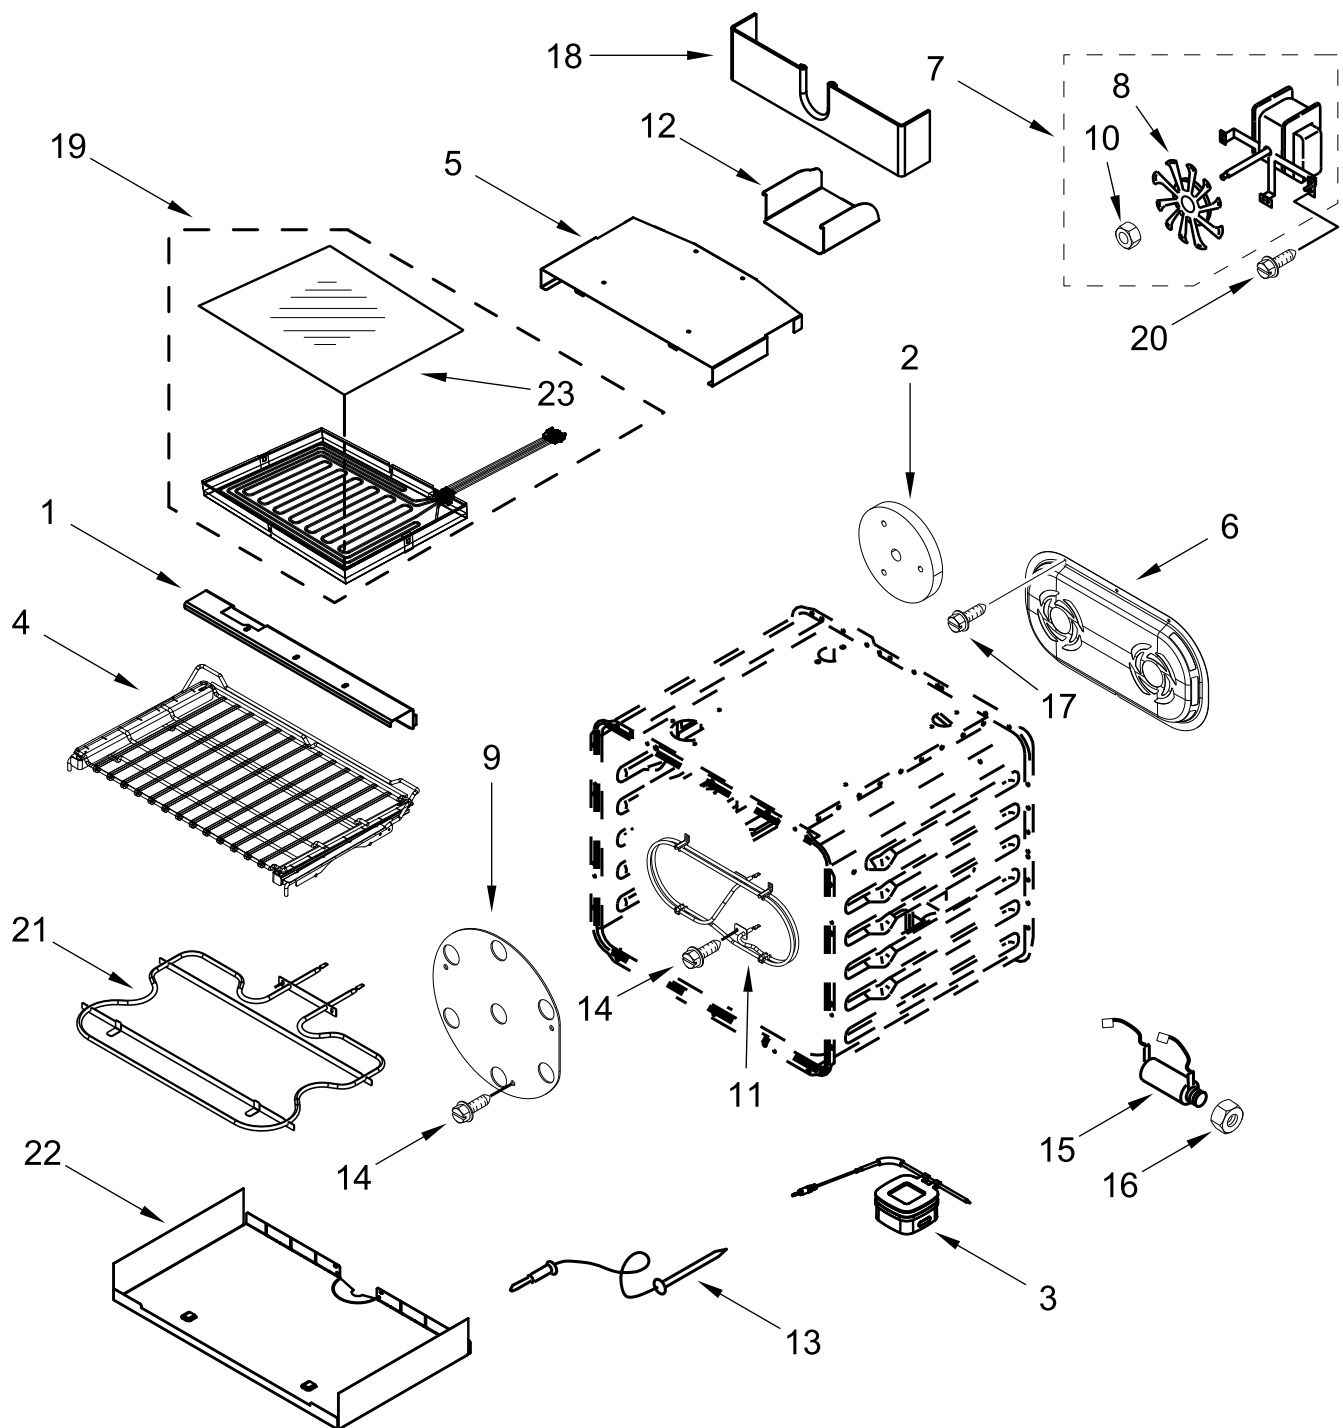

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11112336	Bracket, Broil Front	8	W11108376	Blade, Fan	17	W10739592	Screw
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	18	W11170823	Cover Plate, Terminal Hole
3	W11186918	Probe, Wireless Meat	10	W10631504	Nut, Acorn (LH)	19	W11210530	Element, Broil
4	W11111342	Rack, Oven (Sliding)	11	W10116434	Element, Convection	20	W10720084	Screw
5	W11158843	Bracket, Broil Top	12	W11111391	Cover, Broil Terminal	21	W10115995	Element, Hidden Bake
6	W11232487	Baffle, Convection	13	9755542	Probe, Temperature	22	W11109421	Tray, Hidden Bake
7	W11121400	Fan, Convection	14	4449154	Screw	23	W11193191	Glass, Broil Element
			15	9755543	Jack, Meat Probe			
			16	W11033111	Nut, Locking			

18" INTERNAL OVEN PARTS

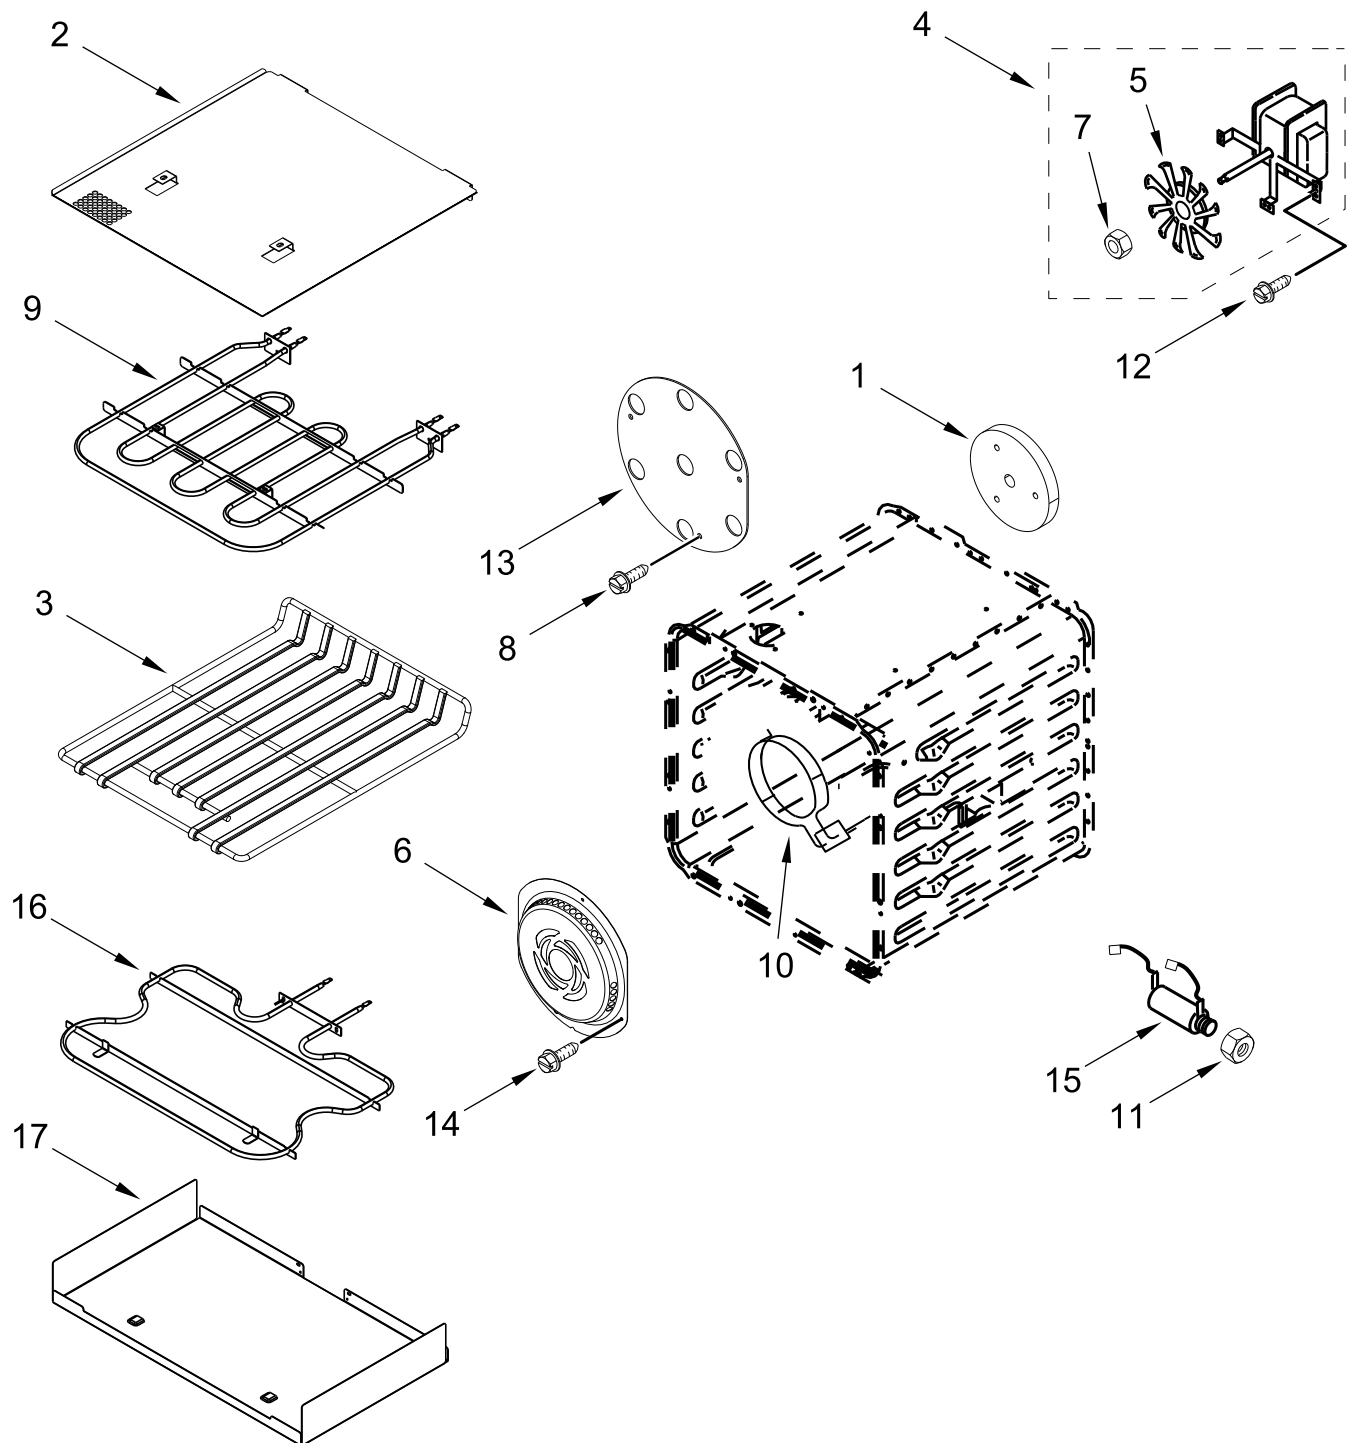

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	13	W10261523	Plate, Fan
2	W10160855	Shield, Element Broil	8	4449154	Screw	14	W10739592	Screw
3	W11111351	Rack, Oven (18")	9	W10116010	Element, Broil	15	9755543	Jack, Meat Probe
4	W11121400	Fan, Convection	10	9762242	Element, Convection Steam	16	W11045324	Element, Hidden Bake
5	W11108376	Blade, Fan	11	W11033111	Nut, Locking	17	W11110223	Tray, Hidden Bake
6	W11368180	Cover, Fan	12	W10720084	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill