




30" ELECTRIC BUILT-IN COOKTOP

MODELS:

JEC3430HB00 (Black)

JEC3430HS00 (Stainless)

COOKTOP PARTS

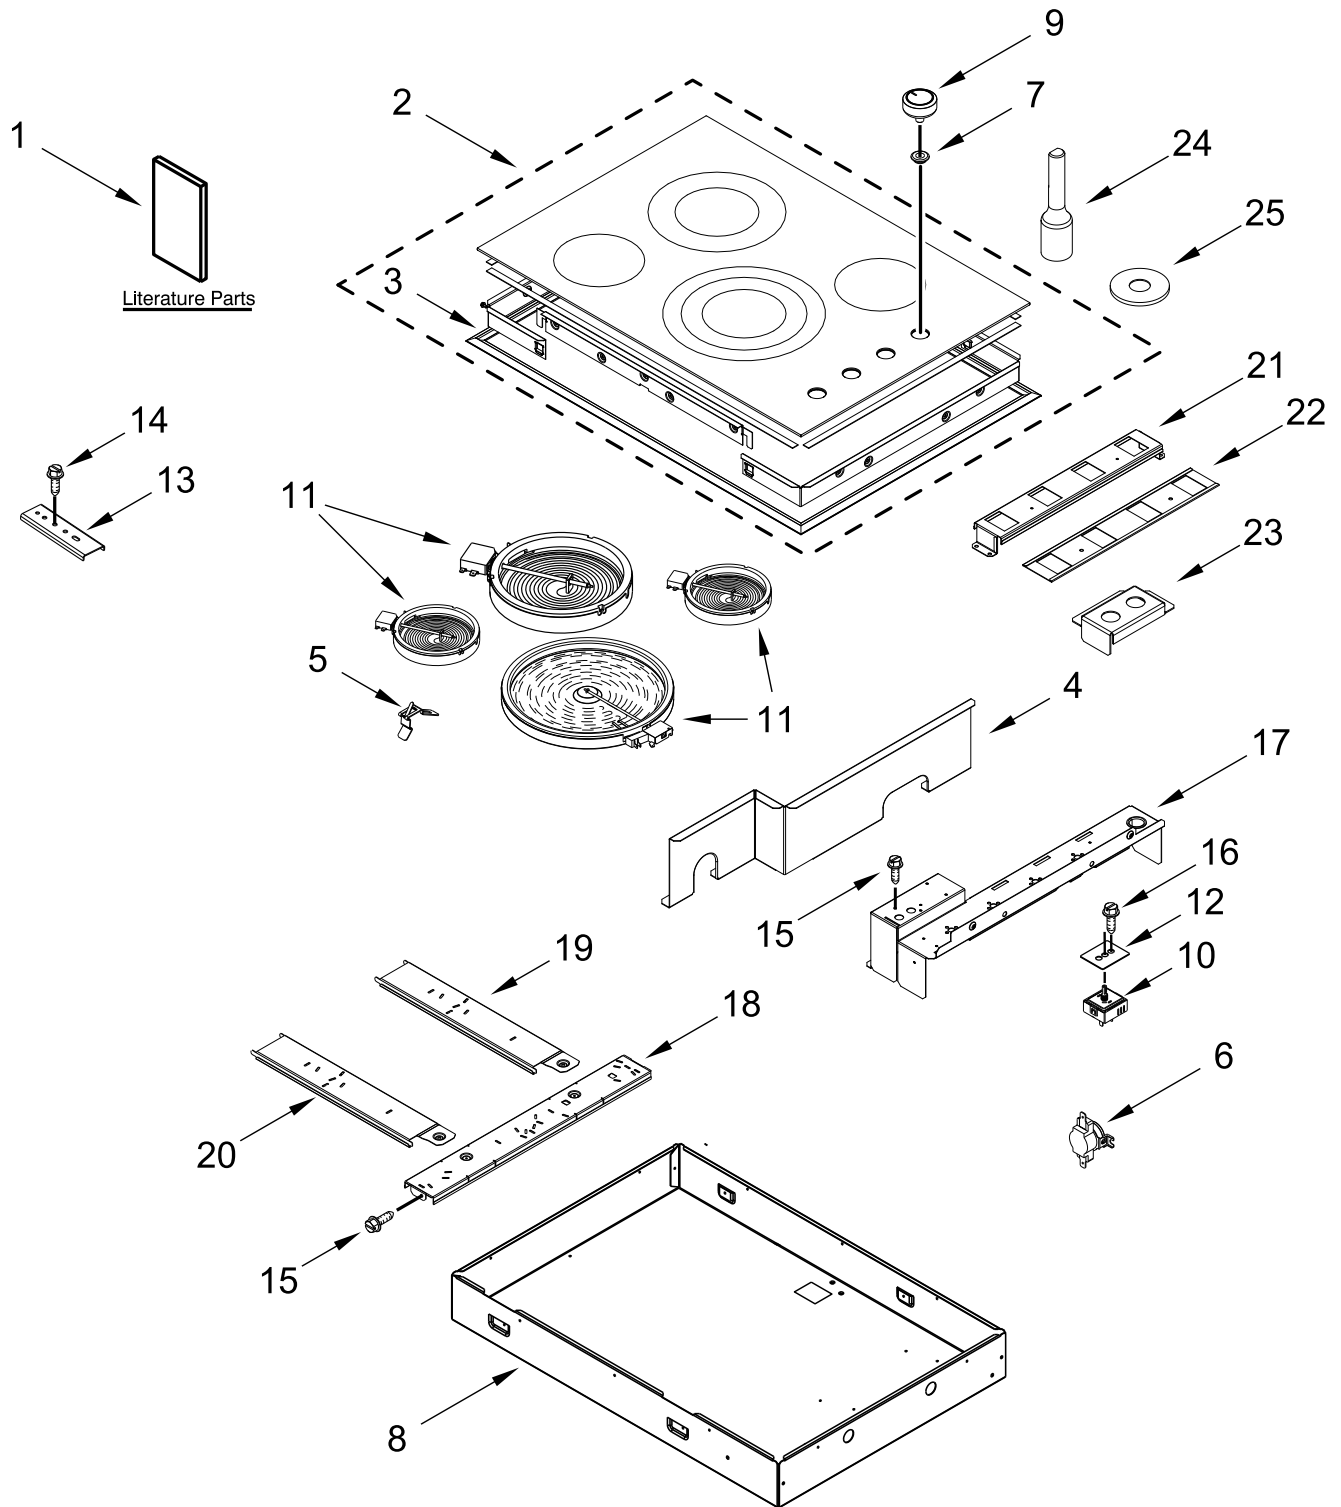

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W10437094	Switch, Infinite (Left Front)	17	W11240393	Plate, Switch
	W11236401	Instruction, Installation		W10437092	Switch, Infinite (Left Rear)	18	W11175479	Rail, Vertical
	W10351318	Instructions, Undercounter Install		W10437097	Switch, Infinite (Right Front)	19	W11175474	Rail, Horizontal Rear
	W11161577	Guide, Use & Care		W10578768	Switch, Infinite (Right Rear)	20	W11175476	Rail, Horizontal Front
	W11238369	Diagram, Wiring		W10342780	Element (1300W) (Left Front)	21	W11240501	Bracket, Cooktop Lights
2		Cooktop	11	W10275048	Element (3000/1400W) (Left Rear)	22	W11240502	Bracket, Cooktop Lights Top
	W11120999	Black		W10187839	Element (3000W) (Right Front)	23	W11242040	Block, Cooktop Lights
	W11121000	Stainless		8273994	Element (1200W) (Right Rear)	24	W11131177	Shaft, Extensor
3		Trim, Stainless (Not Serviced)				25	W11130622	Lens, Lighted
4	W11158444	Shield, Switch						FOLLOWING PARTS NOT ILLUSTRATED
5	W10225448	Spring, Element				W11110550		Harness, Main
6	W10464566	Switch, TOD High Limit				W11129322		Harness Switch, Lighted
7		Grommet	12	3183956	Seal, Switch Cover		3192439	Seal, Limiter
	W10559484	Black	13	4455917	Bracket, Cooktop Mounting		8286642	Tape, Foam
	W10559483	Stainless	14	3400093	Screw	W11160643		Insulation, Cooktop Knob
8		Box, Burner (Not Serviced)	15	7101P426-60	Screw			
9		Knob, Control	16	7101P309-60	Screw			
	W11130601	Black						
	W11130605	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	W10355016	Cleaner, Stainless Steel