




RISE 30" GAS RANGETOP

MODELS:

JGCP430HL00 (Stainless)


BURNER BOX PARTS

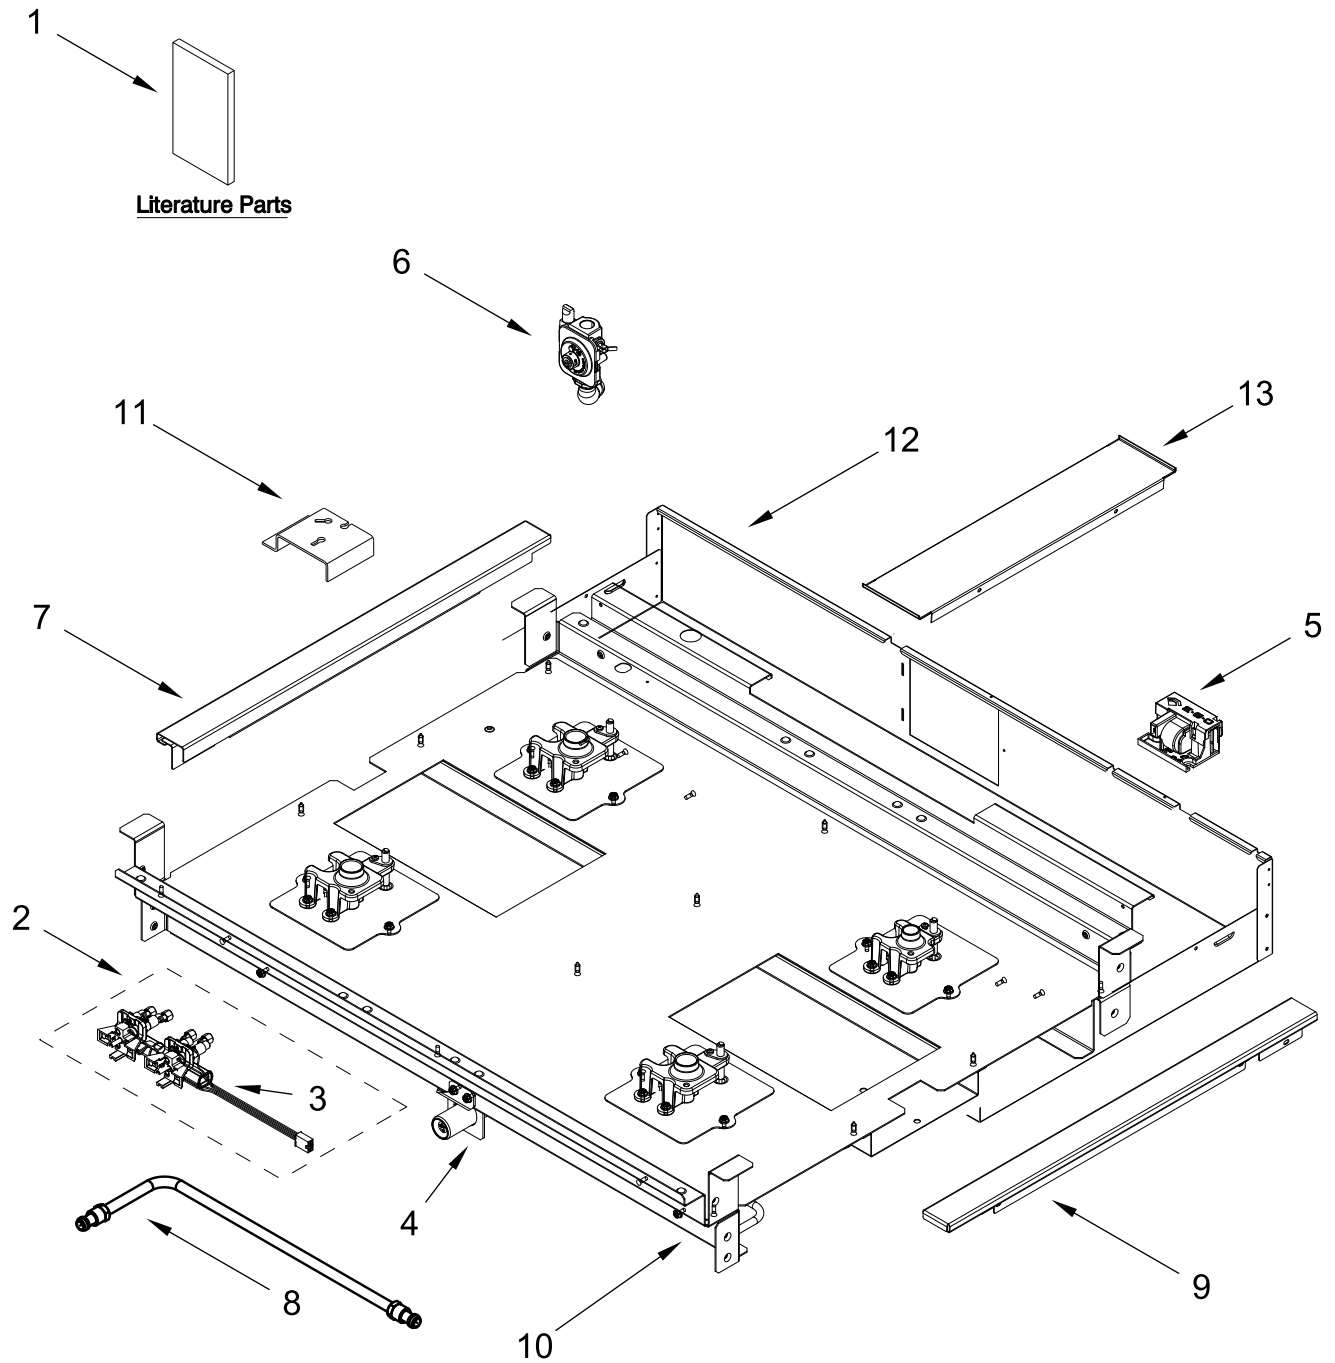

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121199	Bracket, Manifold	13	W11121361	Filler, Cooktop
	W11114328	Guide, Use and Care	5	W11121317	Module, Spark			FOLLOWING PARTS NOT ILLUSTRATED
	W11110989	Instructions, Installation	6	W10449140	Regulator, Pressure		W11200328	Harness, Cooktop
	W11266585	Diagram, Wiring (Cooktop)	7	W11047750	Main Trim, Left		W11038934	Harness, Jumper
	W11266565	Sheet, Tech	8	W10892070	Tube, Manifold Supply (Left)		W10624584	Cord, Power
2	W10893053	Assembly, Valve Manifold		W10892072	Tube, Manifold Supply (Right)		4450800	Screw, Grounding
		(Left Front and Left Rear)	9	W11047752	Main Trim, Right		W11238041	Kit, LP Conversion
	W10893062	Assembly, Valve Manifold	10		Assembly, Burner Box (Not Serviced)			
		(Right Front and Right Rear)	11	8285790	Bracket, Mounting Orifice			
3	W11106300	Switch, Harness	12		Box, Burner (Not Serviced)			

COOKTOP AND BURNER PARTS

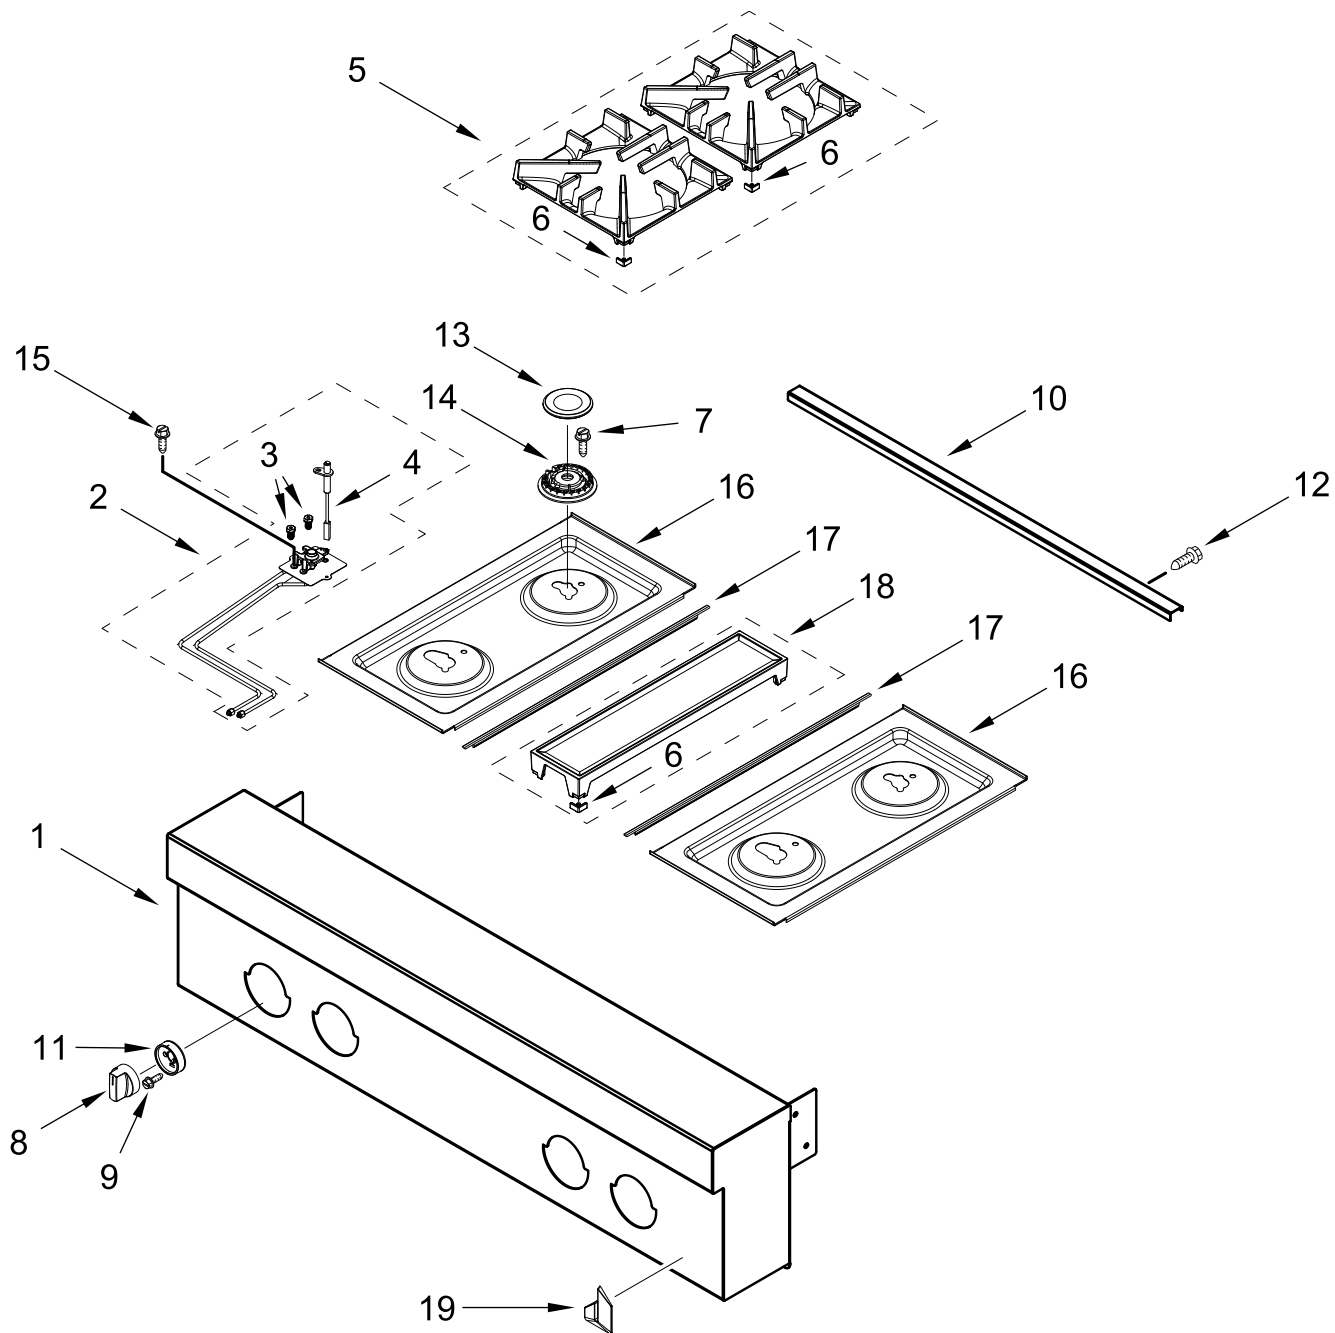

COOKTOP AND BURNER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11253783	Panel, Console	4	W11238758	Igniter (Left Front, Left Rear, Right Front)	16		Panel, Cooktop
2	W10892771	Assembly, Orifice Holder (Left Front and Right Front)		W11238756	Igniter (Right Rear)		W10803515	Black (Left)
	W10892486	Assembly, Orifice Holder (Left Rear)	5		Assembly, Grate		W10804371	Black (Right)
	W10892772	Assembly, Orifice Holder (Right Rear)		W11179862	Black (Set of 2)	17		Trim, T-Strip
3	W10892422	Orifice, Main (17.4K) (Left Front, Left Rear, Right Front)	6	W11042504	Bumper, Grate	18	W11179866	Kit, Grate Filler
	W10892440	Orifice, Main (7.2K) (Right Rear)	7	W11196257	Screw	19		Badge
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	8		Knob, Burner		W11238658	Stainless
	W10892429	Orifice, Simmer (2.0K) (Right Rear)		W10882958	Stainless			
			9	W10919387	Screw			
			10	W11355759	Trim, Island			
			11	W11090283	Bezel, Cooktop			
			12	7101P338-60	Screw			
			13		Cap, Burner			
				W11121391	Black (Set of 4)			
			14	W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)			
				W10892022	Spreader, Flame (Low) (Right Rear)			
			15	7101P426-60	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill