




RISE 36" GAS RANGETOP

MODELS:

JGCP436HL00 (Stainless)


BURNER BOX PARTS

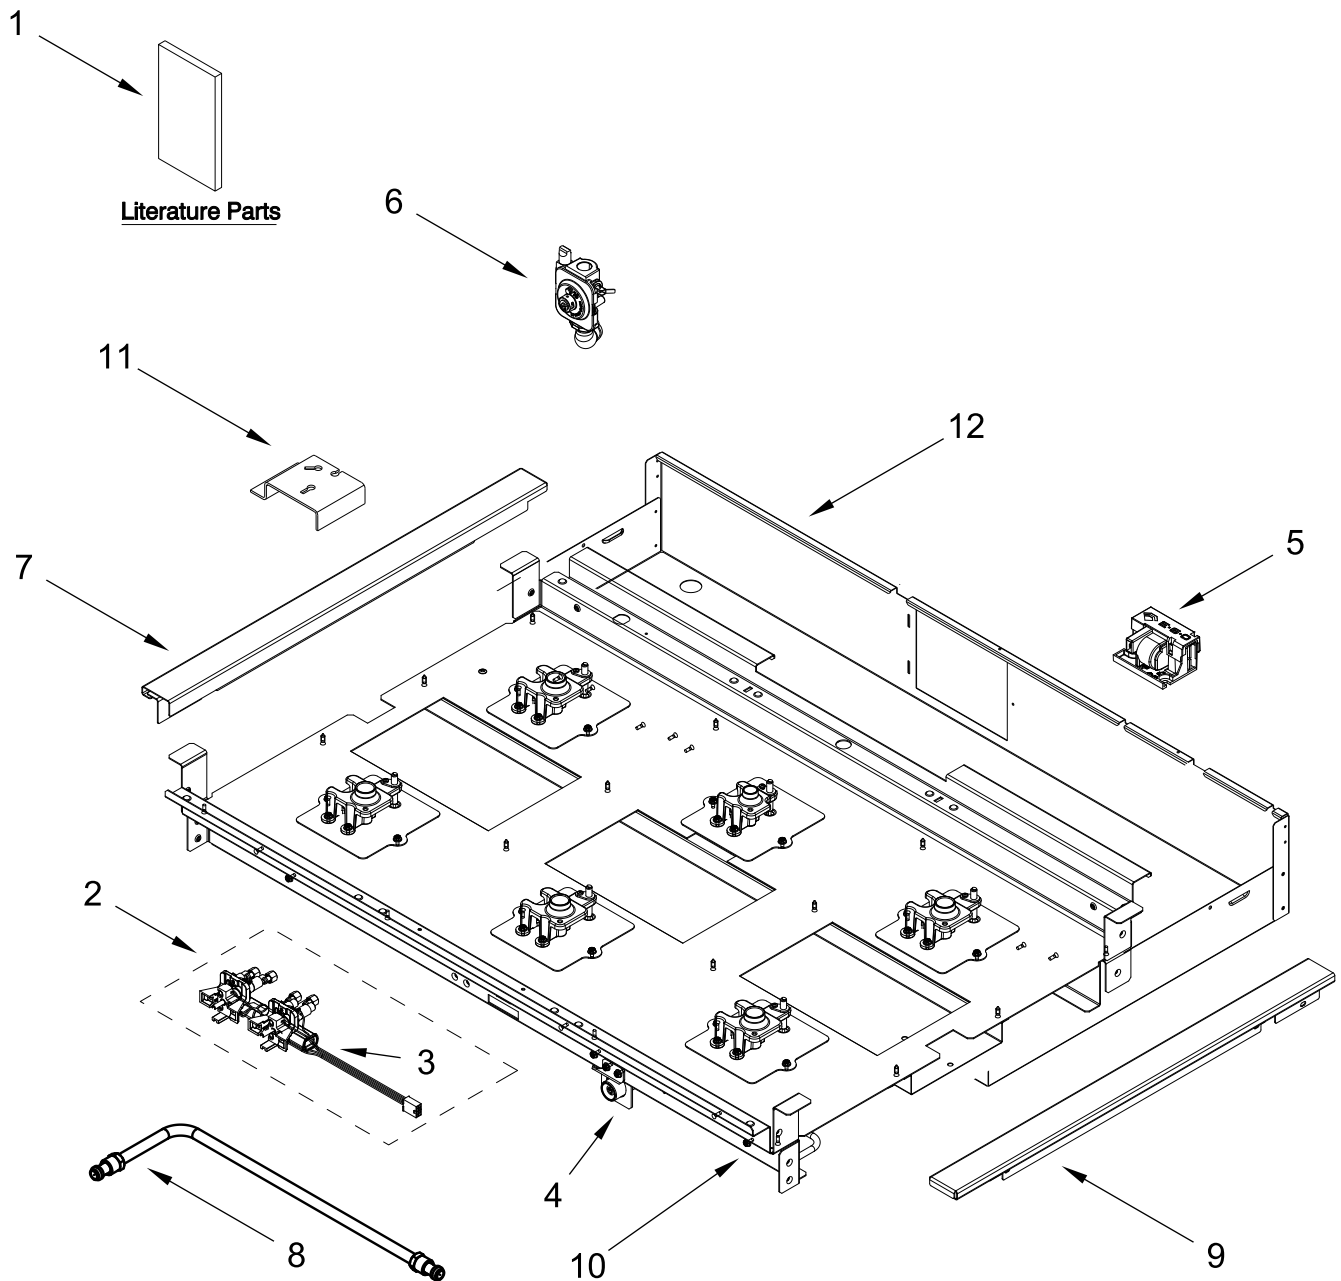

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	12		Box, Burner (Not Serviced)
	W11114328	Guide, Use and Care	6	W10449140	Regulator, Pressure			
	W11110989	Instructions, Installation	7	W11047750	Main Trim, Left			FOLLOWING PARTS NOT ILLUSTRATED
	W11266585	Diagram, Wiring (Cooktop)	8	W10892347	Tube, Manifold Supply (Left)		W11213527	Harness, Cooktop
	W11266565	Sheet, Tech		W10892445	Tube, Manifold Supply (Center)		W11038934	Harness, Jumper
2	W11183724	Assembly, Valve Manifold (Left Front and Left Rear)		W10892450	Tube, Manifold Supply (Right)		W10624584	Cord, Power
	W10893062	Assembly, Valve Manifold (Center Front and Center Rear)	9	W11047752	Main Trim, Right		4450800	Screw, Grounding
	W10893053	Assembly, Valve Manifold (Right Front and Right Rear)	10		Assembly, Burner Box (Not Serviced)		W11238041	Kit, LP Conversion
3	W11106300	Switch, Harness	11	8285790	Bracket, Mounting Orifice			
4	W11121199	Bracket, Manifold						

COOKTOP AND BURNER PARTS

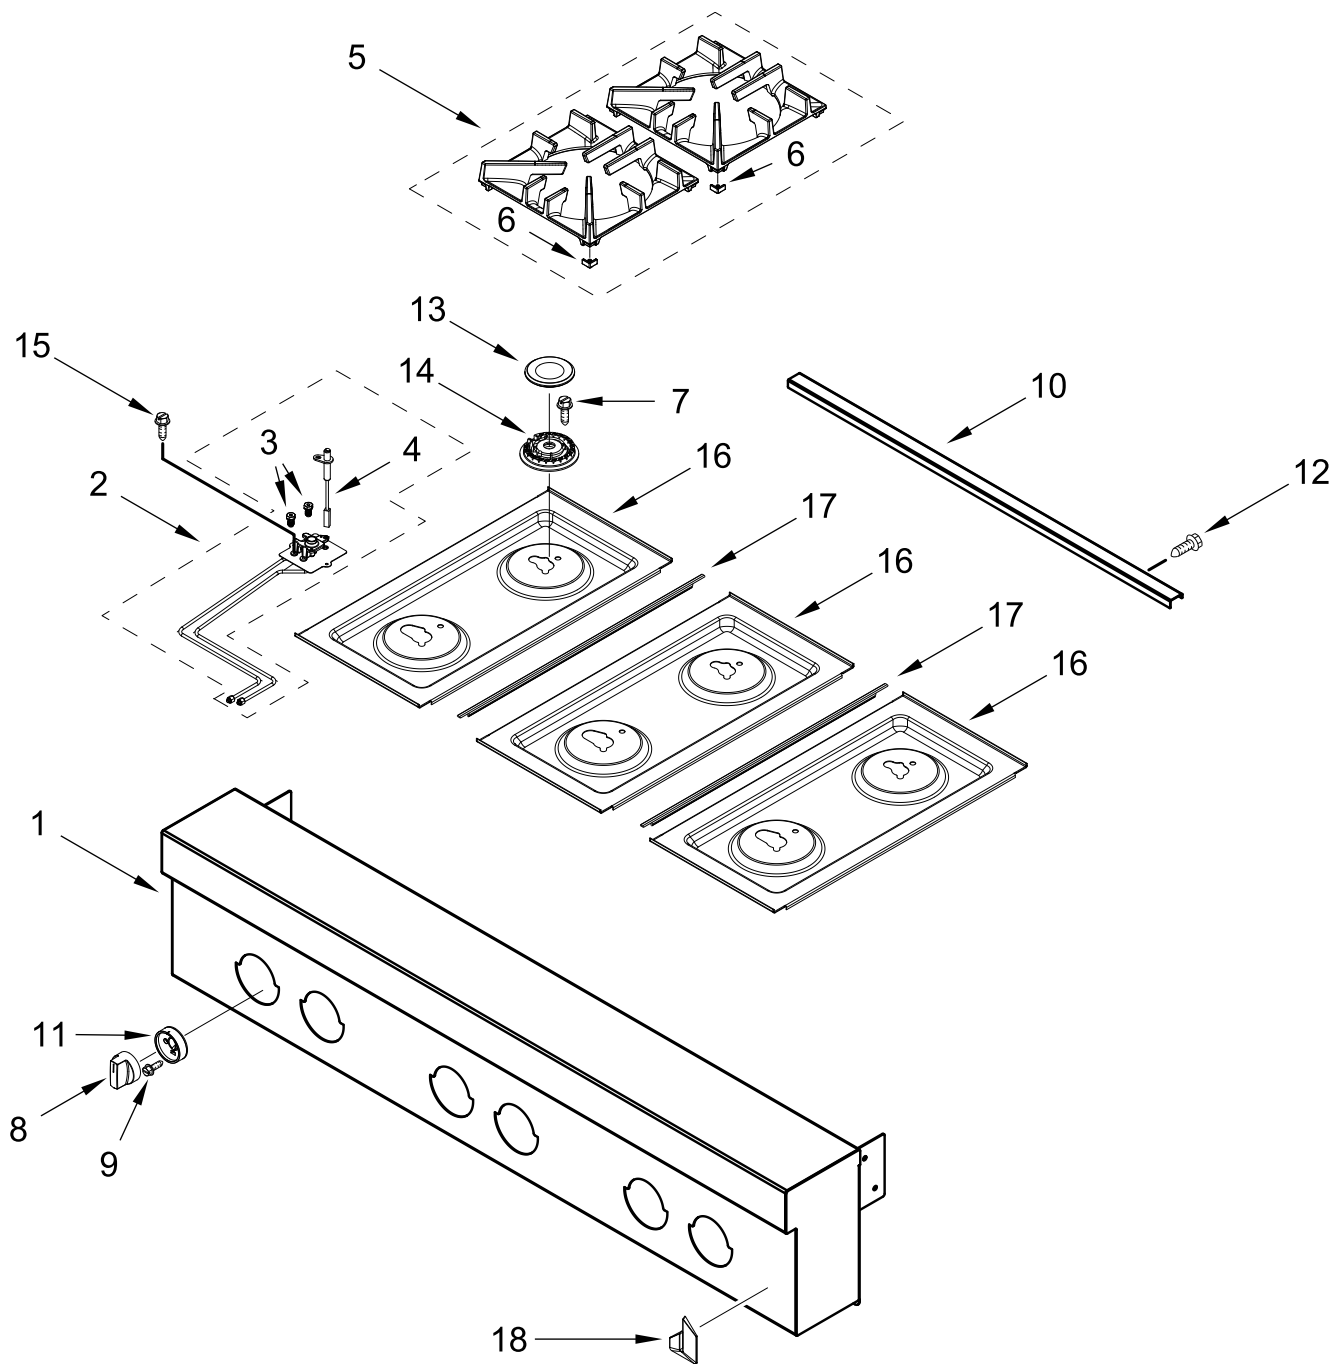

COOKTOP AND BURNER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11253782	Panel, Console	4	W11238758	Igniter (All But Center Rear)	16		Panel, Cooktop
2	W10892771	Assembly, Orifice Holder (Left Front, Center Front, Right Front)		W11238756	Igniter (Center Rear)		W10803515	Black (Left)
	W10892486	Assembly, Orifice Holder (Left Rear and Right Rear)	5		Assembly, Grate		W10803519	Black (Center)
	W10892772	Assembly, Orifice Holder (Center Rear)		W11179862	Black (Set of 2)		W10804373	Black (Right)
3	W10892422	Orifice, Main (17.4K) (All But Center Rear)	6	W11042504	Bumper, Grate	17		Trim, T-Strip
	W10892440	Orifice, Main (7.2K) (Center Rear)	7	W11196257	Screw		W10271524	Black
	W10892435	Orifice, Simmer (2.6K) (All But Center Rear)	8		Knob, Burner	18		Badge
	W10892429	Orifice, Simmer (2.0K) (Center Rear)		W10882958	Stainless		W11238658	Stainless
			9	W10919387	Screw			
			10	W11355760	Trim, Island			
			11	W11090283	Bezel, Cooktop			
			12	7101P338-60	Screw			
			13		Cap, Burner			
				W11121392	Black (Set of 6)			
			14	W10891987	Spreader, Flame (High) (All But Center Rear)			
				W10892022	Spreader, Flame (Low) (Center Rear)			
			15	7101P426-60	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill