

 


NOIR 36" GAS RANGETOP

MODELS:

JGCP436HM00 (Stainless)


BURNER BOX PARTS

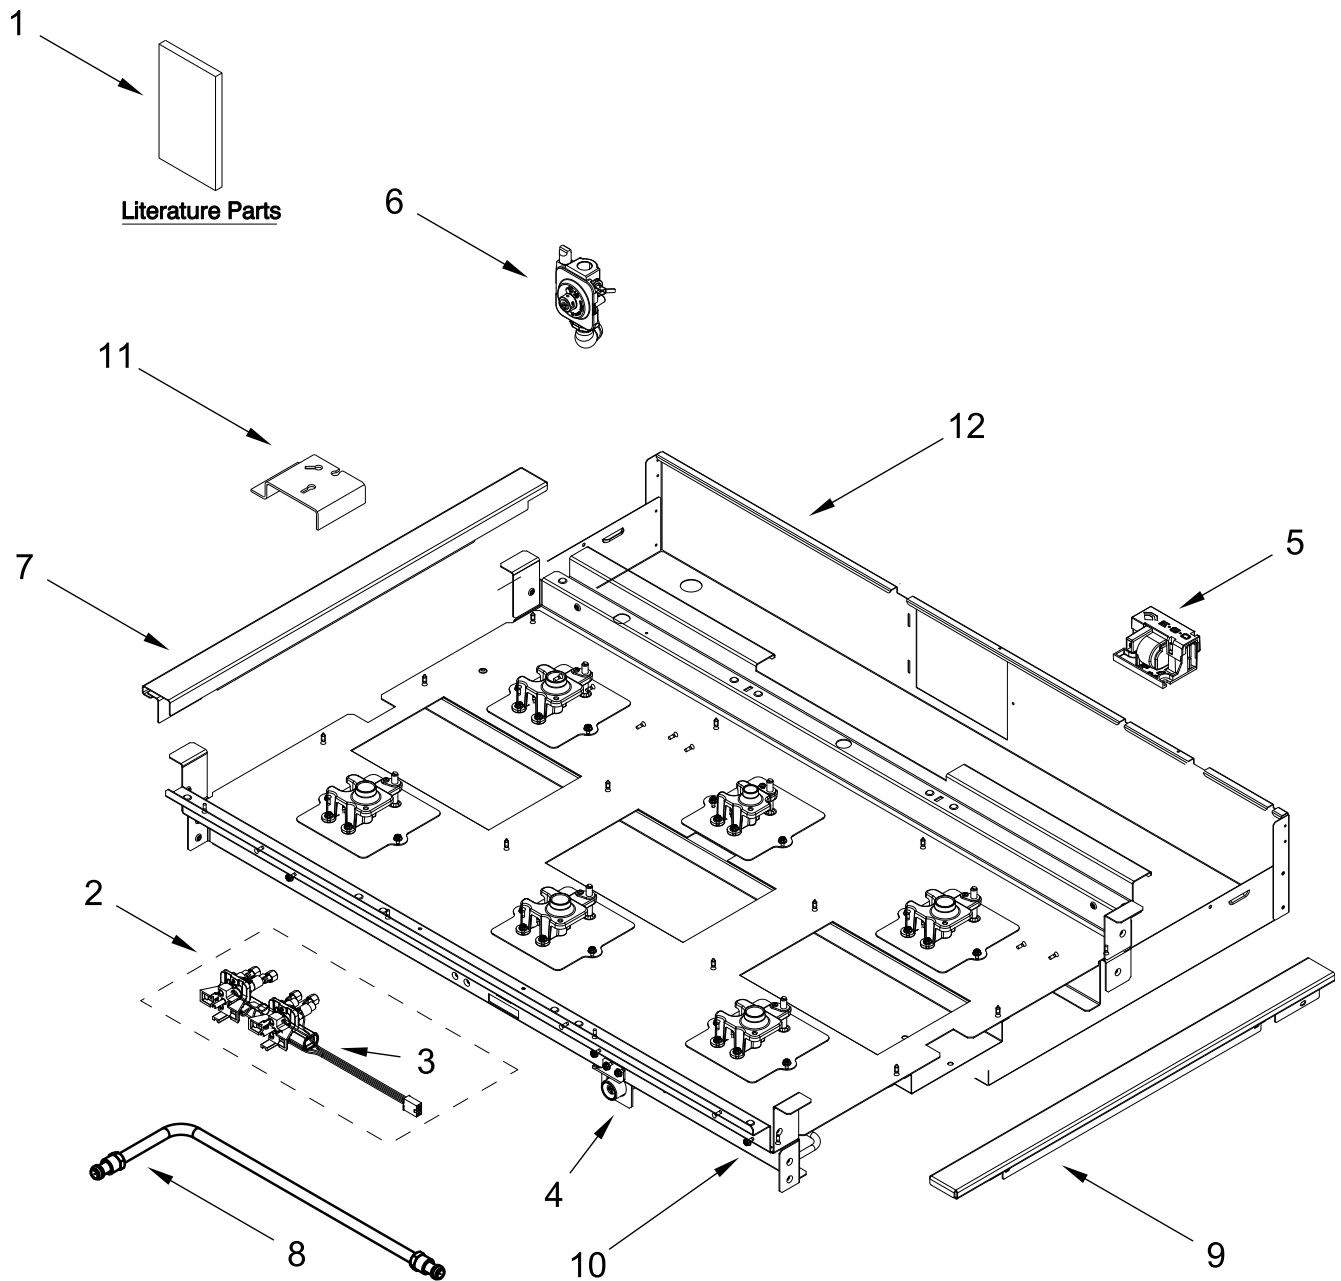

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121199	Bracket, Manifold	12		Box, Burner (Not Serviced)
	W11114328	Guide, Use and Care	5	W11121317	Module, Spark			
	W11110989	Instructions, Installation	6	W10449140	Regulator, Pressure			FOLLOWING PARTS NOT ILLUSTRATED
	W11266585	Diagram, Wiring (Cooktop)	7	W11047750	Main Trim, Left	W11213527		Harness, Cooktop
	W11266565	Sheet, Tech	8	W10892347	Tube, Manifold Supply (Left)	W11038934		Harness, Jumper
2	W11183724	Assembly, Valve Manifold (Left Front and Left Rear)		W10892445	Tube, Manifold Supply (Center)	W10624584		Cord, Power
	W10893062	Assembly, Valve Manifold (Center Front and Center Rear)		W10892450	Tube, Manifold Supply (Right)	W11238041		Kit, LP Conversion
	W10893053	Assembly, Valve Manifold (Right Front and Right Rear)	9	W11047752	Main Trim, Right			
			10		Assembly, Burner Box (Not Serviced)			
3	W11106300	Switch, Harness	11	8285790	Bracket, Mounting Orifice			

 COOKTOP AND BURNER PARTS

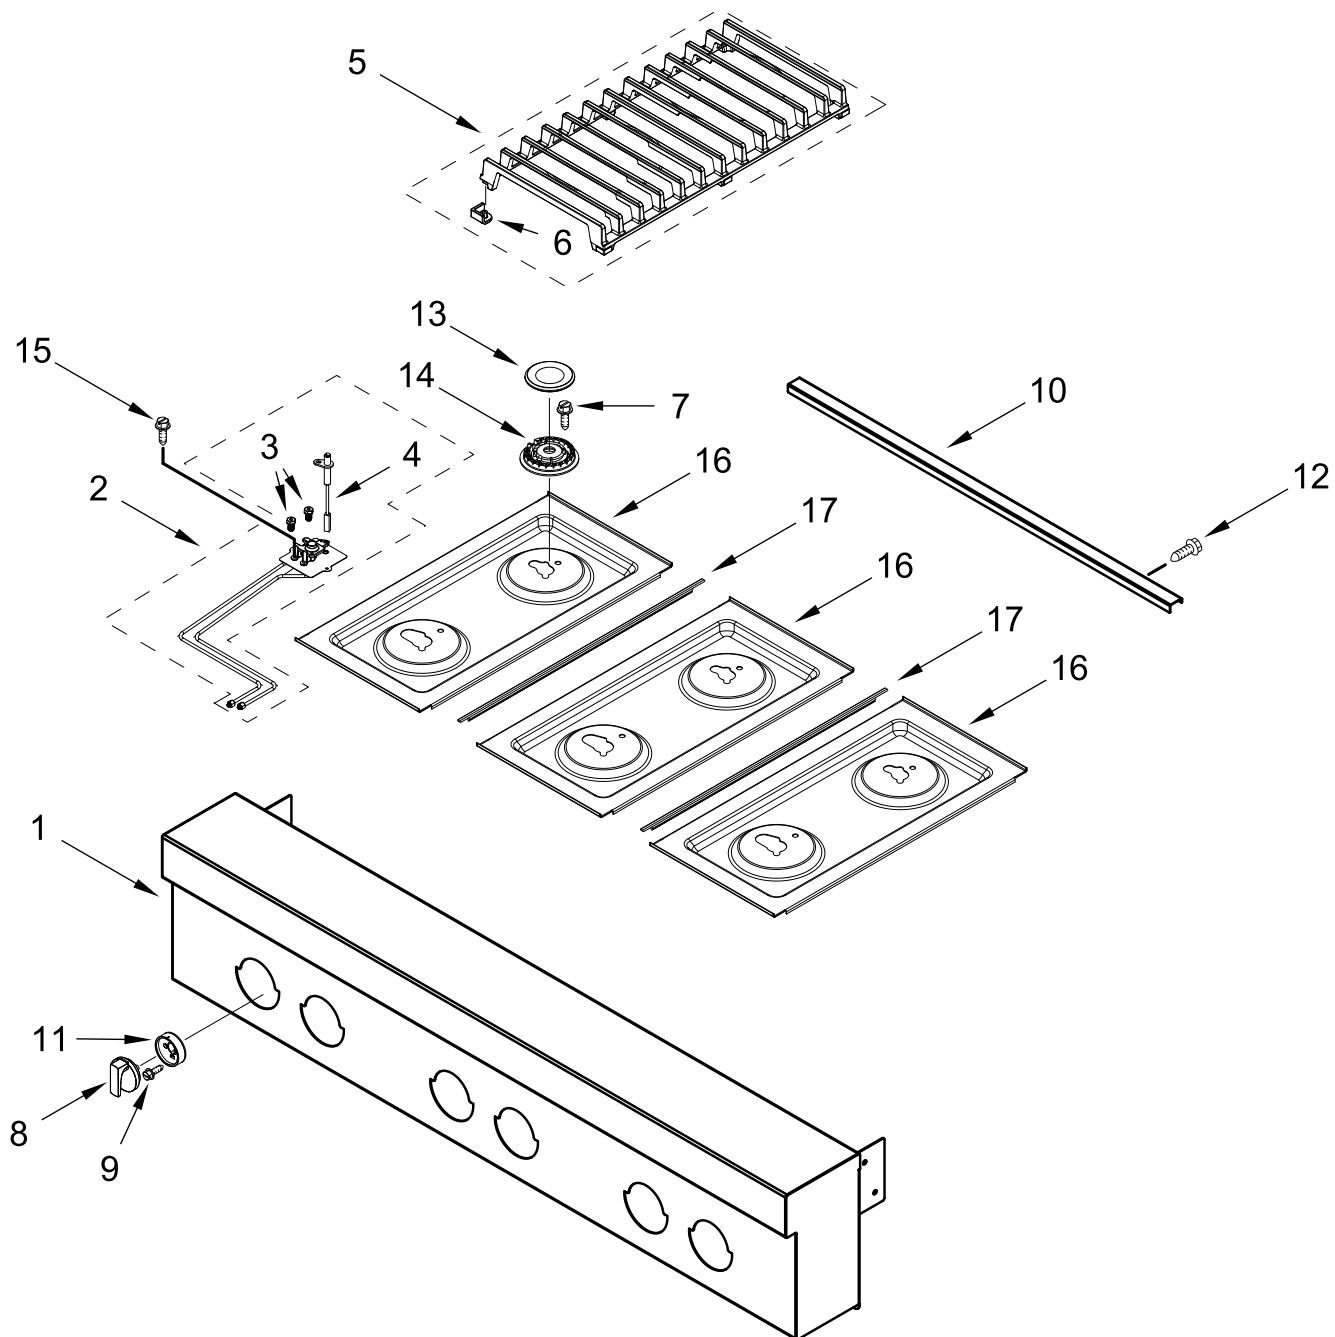

COOKTOP AND BURNER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11253798	Panel, Console	4	W11238758	Igniter (All But Center Rear)	14	W10891987	Spreader, Flame (High)
2	W10892771	Assembly, Orifice Holder (Left Front, Center Front, Right Front)		W11238756	Igniter (Center Rear)			(All But Center Rear)
	W10892486	Assembly, Orifice Holder (Left Rear and Right Rear)	5		Assembly, Grate		W10892022	Spreader, Flame (Low) (Center Rear)
	W10892772	Assembly, Orifice Holder (Center Rear)		W11172289	Black (Left)	15	7101P426-60	Screw
3	W10892422	Orifice, Main (17.4K) (All But Center Rear)		W11172654	Black (Center)	16		Panel, Cooktop
	W10892440	Orifice, Main (7.2K) (Center Rear)		W11172625	Black (Right)		W11038237	Black (Left)
	W10892435	Orifice, Simmer (2.6K) (All But Center Rear)	6	W11042504	Bumper, Grate		W11038241	Black (Center)
	W10892429	Orifice, Simmer (2.0K) (Center Rear)	7	W11196257	Screw		W11038254	Black (Right)
			8		Knob, Burner	17		Trim, T-Strip
				W10887596	Stainless		W10271524	Black
			9	W10919387	Screw			
			10	W11355760	Trim, Island			
			11	W11090284	Bezel, Cooktop			
			12	7101P338-60	Screw			
			13		Cap, Burner			
				W11121392	Black (Set of 6)			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill