

 


RISE 36" GAS RANGETOP
Includes Griddle

MODELS:

JGCP536HL00 (Stainless)


BURNER BOX AND GRIDDLE PARTS

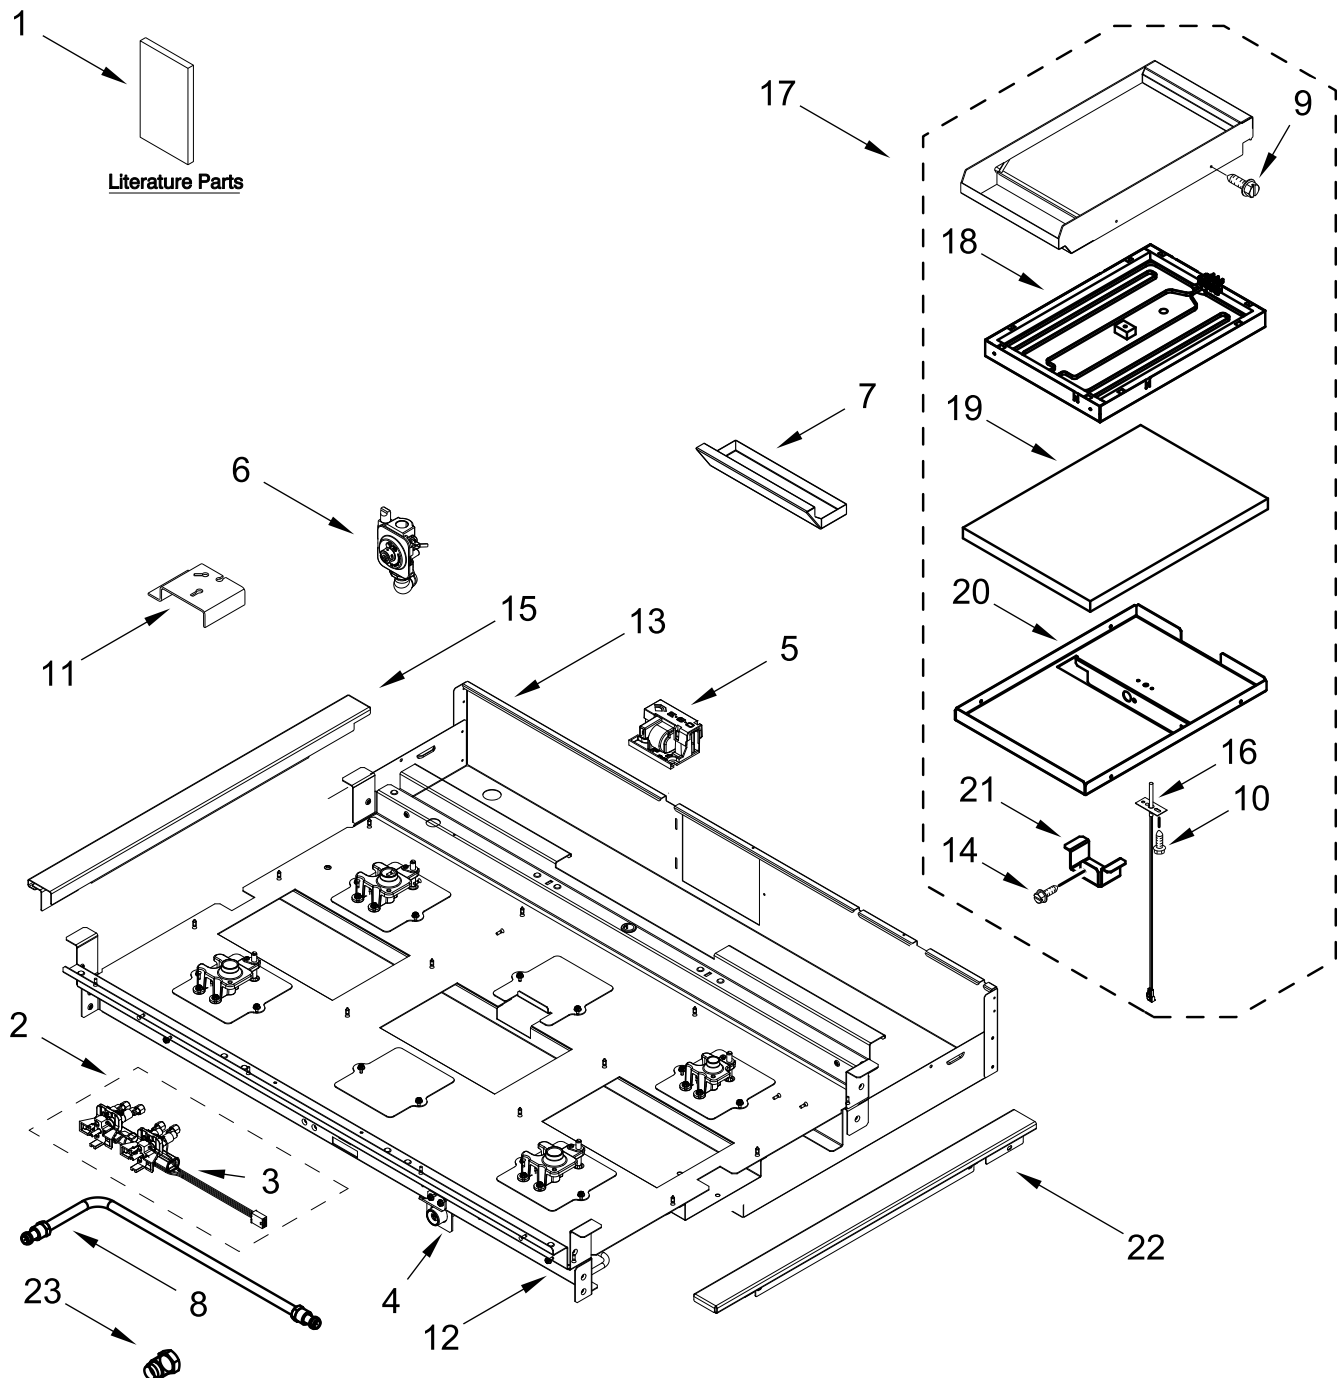

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10449140	Regulator, Pressure	17	W10891745	Assembly, Griddle Module
	W11114328	Guide, Use and Care	7	W10276497	Tray, Griddle Drip	18	W10891698	Element, Griddle
	W11110989	Instructions, Installation	8	W10892452	Tube, Manifold Supply (Left)	19	W11121383	Insulation, Griddle
	W11266585	Diagram, Wiring (Cooktop)		W10892450	Tube, Manifold Supply (Right)	20	W11330430	Tray, Griddle Insulation
	W11266565	Sheet, Tech	9	3196176	Screw	21	W11121384	Bracket, Griddle-RTD
2	W10893053	Assembly, Valve Manifold (Left Front and Left Rear)	10	3196160	Screw	22	W11047752	Main Trim, Right
	W10893062	Assembly, Valve Manifold (Right Front and Right Rear)	11	8285790	Bracket, Mounting Orifice	23	W10892063	Plug, Supply Outlet
			12		Assembly, Burner Box (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
3	W11106300	Switch, Harness	13		Box, Burner (Not Serviced)	W11200326		Harness, Cooktop
4	W11121199	Bracket, Manifold	14	7101P426-60	Screw	W10903727		Harness, Griddle
5	W11121317	Module, Spark	15	W11047750	Main Trim, Left	W11038934		Harness, Jumper
			16	W10891584	Sensor, Griddle	W10624584		Cord, Power
						4450800		Screw, Grounding
						W11238041		Kit, LP Conversion

 COOKTOP, BURNER, AND GRIDDLE PARTS

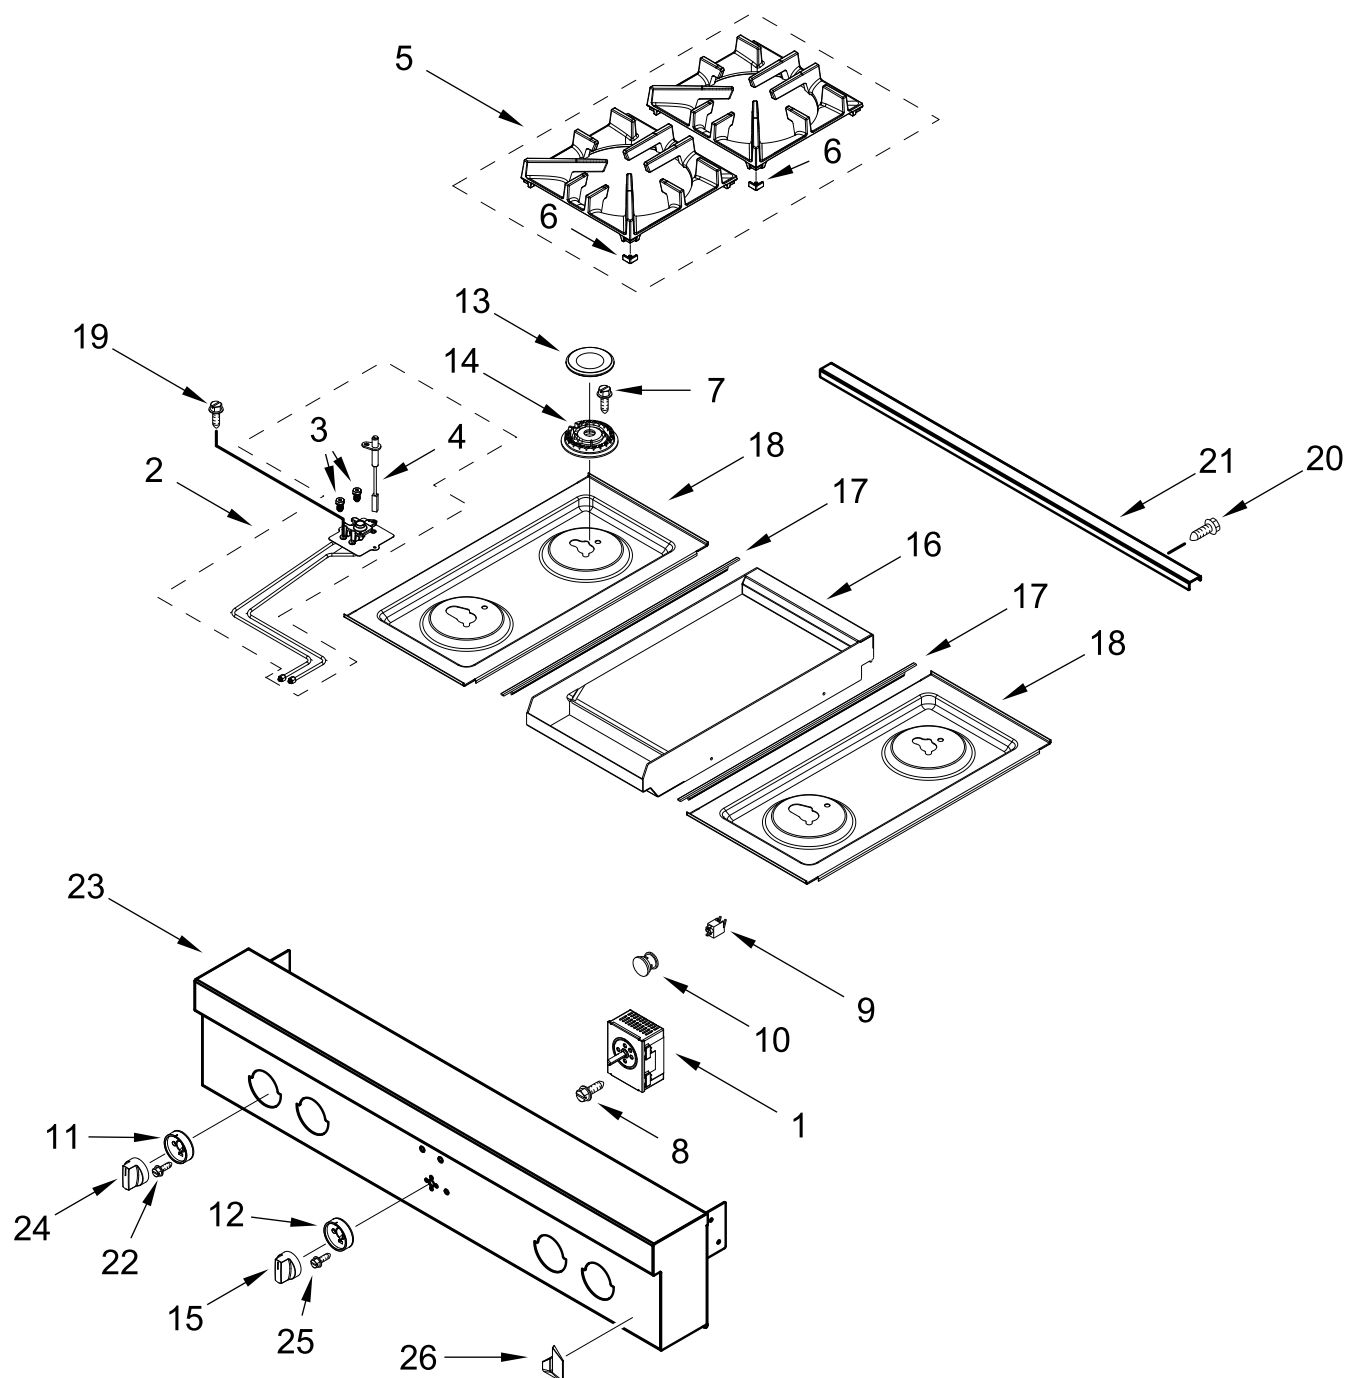

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11033497	Control, Griddle	4	W11238758	Igniter (Left Front, Left Rear, Right Front)	15		Knob, Griddle
2	W10892771	Assembly, Orifice Holder (Left Front and Right Front)		W11238756	Igniter (Right Rear)		W10884943	Stainless
	W10892486	Assembly, Orifice Holder (Left Rear)	5		Assembly, Grate	16	W10891745	Assembly, Griddle Module (Assembly Breakdown Shown on Burner Box Page)
	W10892772	Assembly, Orifice Holder (Right Rear)		W11179862	Black (Set of 2)	17	W10291193	Trim, L-Strip
3	W10892422	Orifice, Main (17.4K) (Left Front, Left Rear, Right Front)	6	W11042504	Bumper, Grate	18		Panel, Cooktop
	W10892440	Orifice, Main (7.2K) (Right Rear)	7	W11196257	Screw		W10803515	Black (Left)
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	8	W10674068	Screw		W10804371	Black (Right)
	W10892429	Orifice, Simmer (2.0K) (Right Rear)	9	W10116114	Light, Indicator Housing	19	7101P426-60	Screw
			10	W10294500	Lens, Indicator Light	20	7101P338-60	Screw
			11	W11090283	Bezel, Cooktop	21	W11355760	Trim, Island
			12	W11104966	Bezel, Griddle	22	W10919387	Screw
			13		Cap, Burner	23	W11253781	Panel, Console
				W11121391	Black (Set of 4)	24		Knob, Burner
			14	W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)		W10882958	Stainless
				W10892022	Spreader, Flame (Low) (Right Rear)	25	7101P309-60	Screw
						26		Badge
							W11238658	Stainless

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill