




GAS COOKTOP
Includes Griddle

MODELS:

JGCP548HM00 (Stainless)


BURNER BOX AND GRIDDLE PARTS

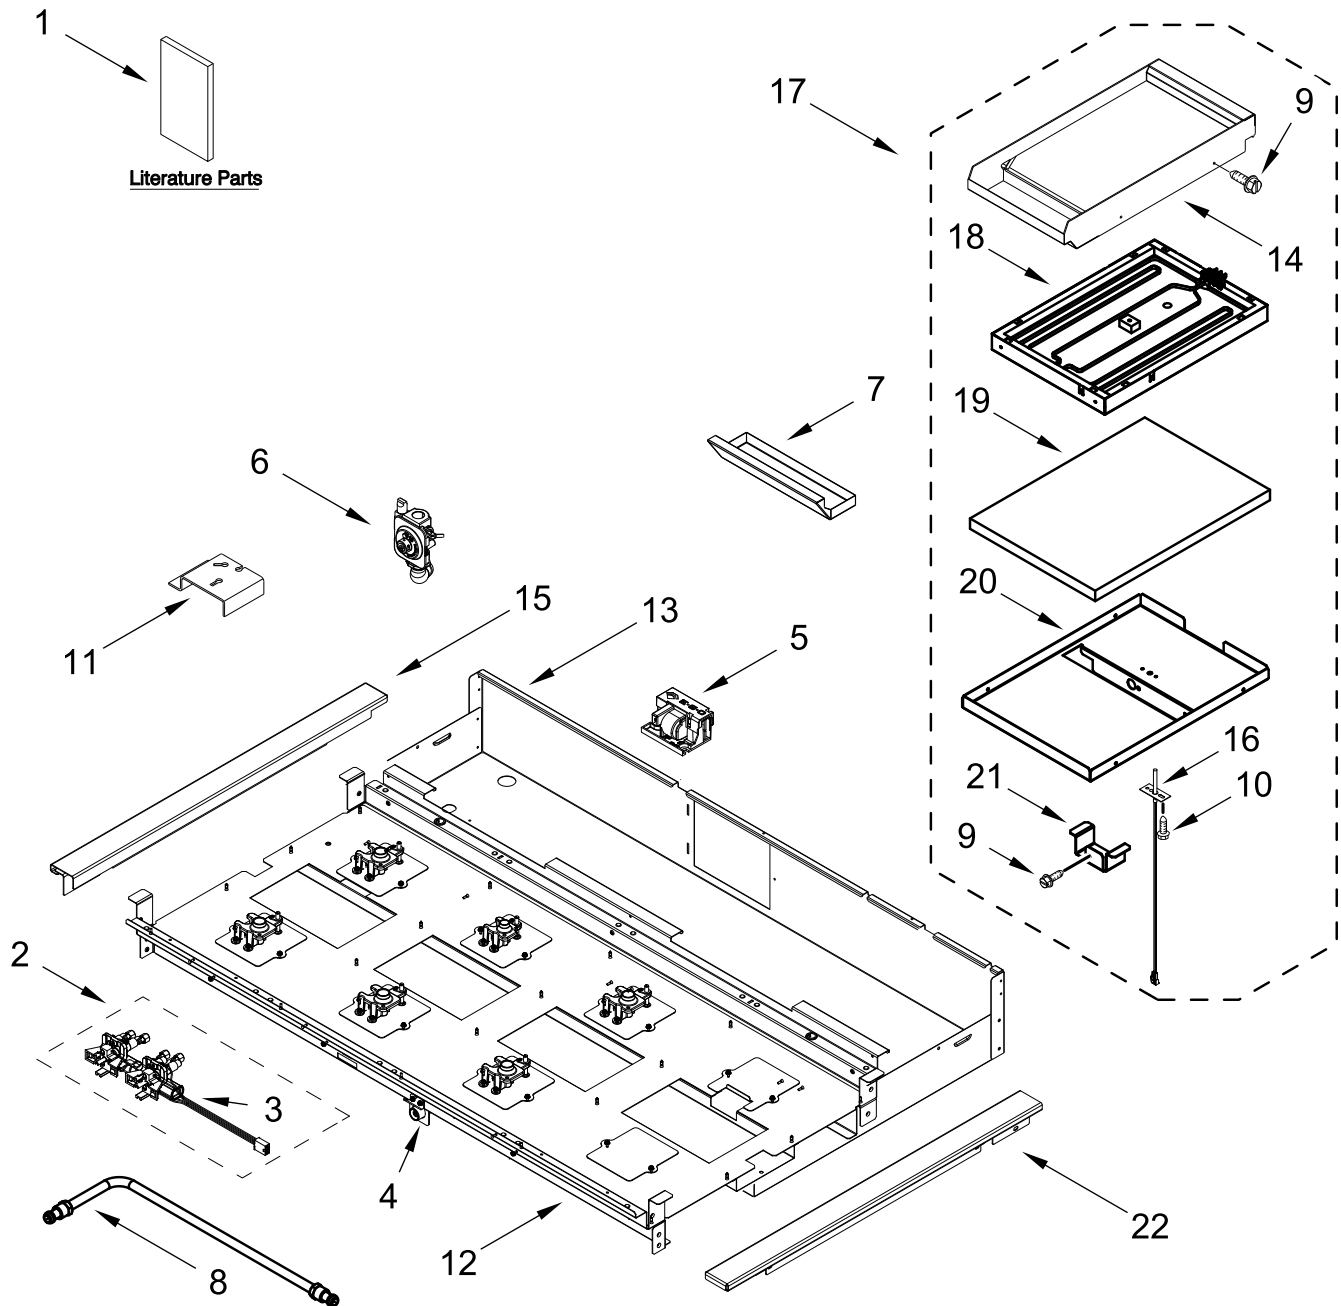

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10449140	Regulator, Pressure	19	W11121383	Insulation, Griddle
	W11508905	Use and Care Guide	7	W10276497	Tray, Griddle Drip	20	W11330430	Tray, Griddle Insulation
	W11508892	Installation Instructions	8	W10892347	Tube, Manifold Supply (Left)	21	W11121384	Bracket, Griddle-RTD
	W11565474	Wiring Diagram (Cooktop)		W10892445	Tube, Manifold Supply (Left Center)	22	W11047751	Main Trim, Right FOLLOWING PARTS NOT ILLUSTRATED
	W11202295	Sheet, Tech		W10892450	Tube, Manifold Supply (Right Center)		W11200329	Harness, Cooktop
2	W11183724	Assembly, Valve Manifold					W10903727	Harness, Griddle
		(Left Front and Left Rear)	9	W10162096	Screw		W11038934	Harness, Jumper
	W10893062	Assembly, Valve Manifold	10	3196160	Screw		W10624584	Cord, Power
		(Left Center Front And Left Center Rear)	11	8285790	Bracket, Mounting Orifice		4450800	Screw, Grounding
	W10893053	Assembly, Valve Manifold	12		Assembly, Burner Box (Not Serviced)		W11422176	Kit, LP Conversion
		(Right Center Front And Right Center Rear)	13		Box, Burner (Not Serviced)			
			14	W10891567	Module, Griddle			
			15	W11047749	Main Trim, Left			
3	W11106300	Switch, Harness	16	W10891584	Sensor, Griddle			
4	W11121199	Bracket, Manifold	17	W10891745	Assembly, Griddle Module			
5	W11121317	Module, Spark	18	W10891698	Element, Griddle			

COOKTOP, BURNER, AND GRIDDLE PARTS

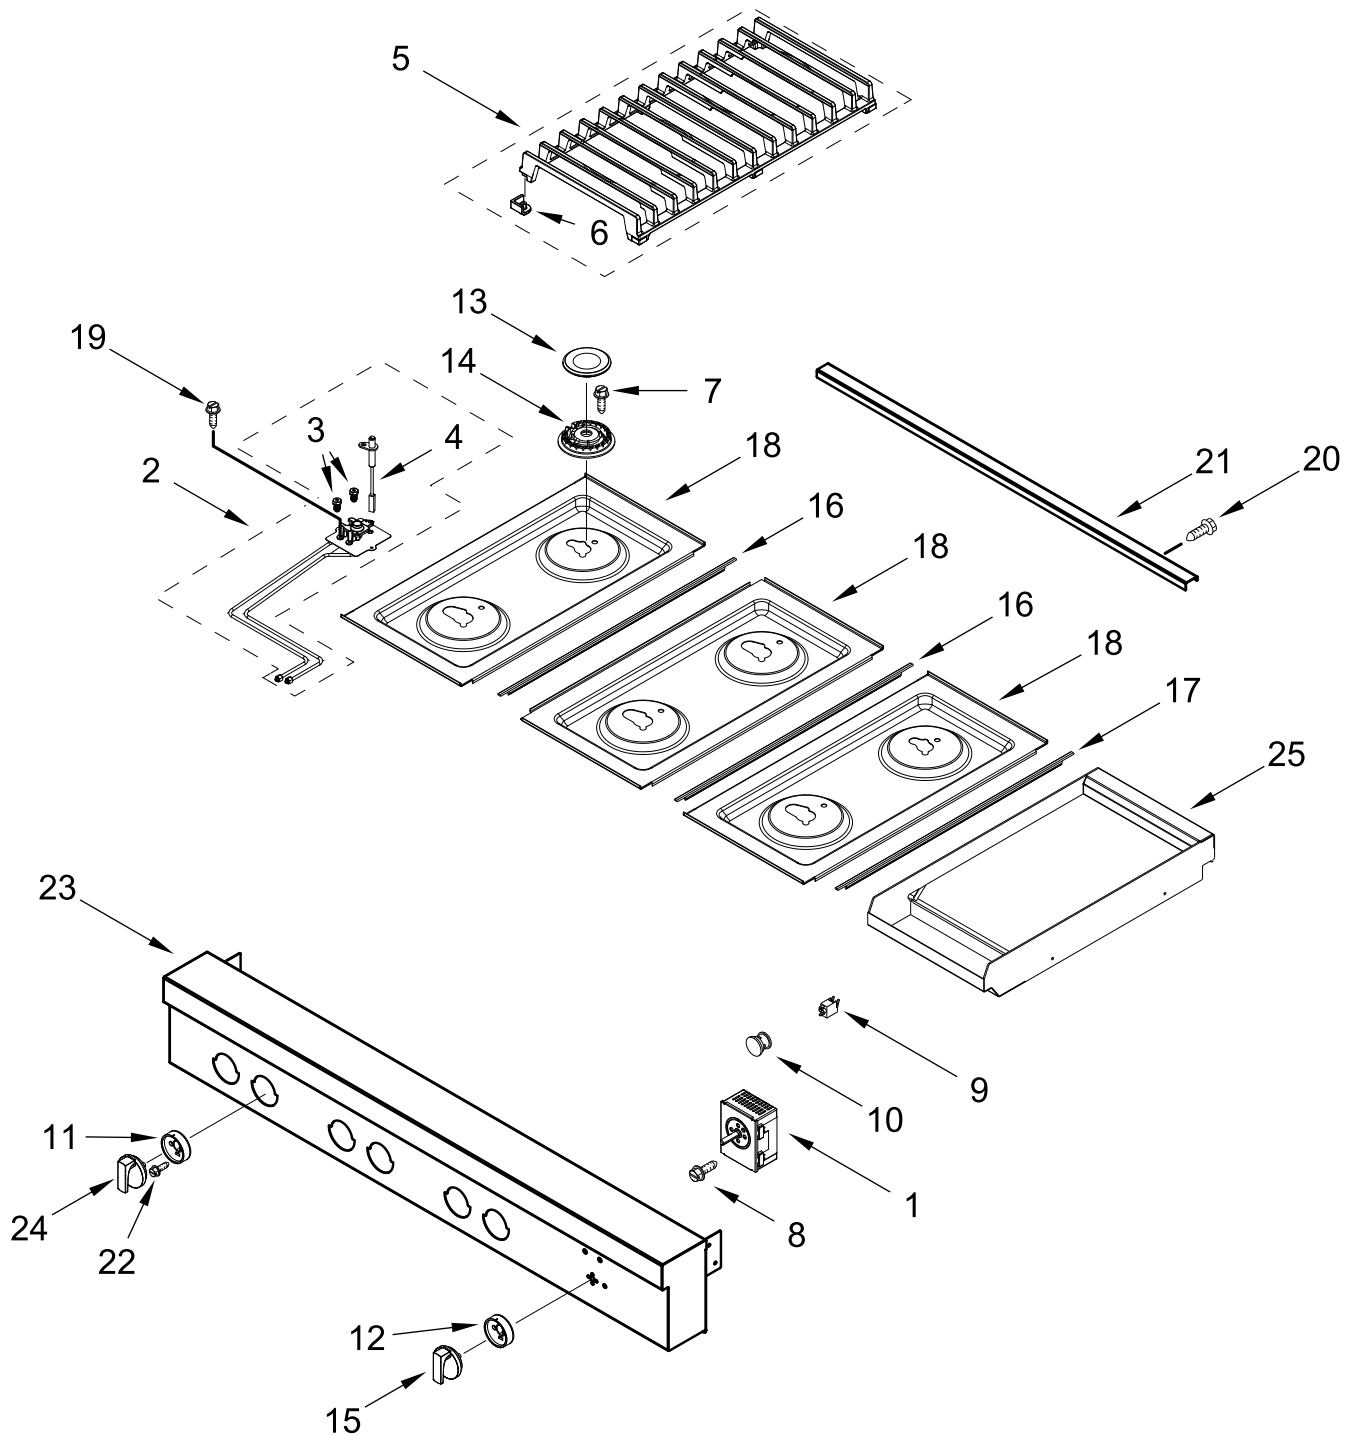

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11033497	Control, Griddle	5		Assembly, Grate	18		Panel, Cooktop
2	W10892771	Assembly, Orifice Holder		W11291180	Black (Left)		W11038237	Black (Left)
		(Left Front, Left Center Front, Right Center Front)		W11291184	Black (Left Center)		W11038241	Black (Left Center)
	W10892486	Assembly, Orifice Holder		W11291182	Black (Right Center)		W11038249	Black (Right Center)
		(Left Rear and Right Center Rear)	6	W11042504	Bumper, Grate	19	7101P426-60	Screw
	W10892772	Assembly, Orifice Holder	7	W11323260	Screw	20	7101P338-60	Screw
		(Left Center Rear)	8	W10674068	Screw	21	W11355761	Trim, Island
3	W10892422	Orifice, Main (17.4K)	9	W10116114	Light, Indicator Housing	22	W11328357	Screw
		(All But Left Center Rear)	10	W10294500	Lens, Indicator Light	23	W11222273	Console Panel
	W10892440	Orifice, Main (7.2K)	11	W11090284	Bezel, Cooktop	24		Knob, Burner
		(Left Center Rear)	12	W11104967	Bezel, Griddle		W10887596	Stainless
	W10892435	Orifice, Simmer (2.6K)	13		Cap, Burner	25	W10891745	Assembly, Griddle Module
		(All But Left Center Rear)		W11121392	Black (Set of 6)			(Assembly Breakdown Shown on Burner Box Page)
	W10892429	Orifice, Simmer (2.0K)	14	W10891987	Spreader, Flame (High)			
		(Left Center Rear)			(All But Left Center Rear)			
				W10892022	Spreader, Flame (Low)			
4	W11238758	Igniter	15		Knob, Griddle			
		(All But Left Center Rear)		W10891923	Stainless			
	W11238756	Igniter	16		Trim, T-Strip			
		(Left Center Rear)		W10271524	Black			
			17	W10291193	Trim, L-Strip			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES NOT INCLUDED OR ILLUSTRATED
	W10216179	Ring, Wok Backsplash
	W10285449	48-In With Shelf
	W10115777	Backsplash, 48 In Stainless Steel
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill