




RISE 36" GAS RANGETOP
Includes Grill

MODELS:

JGCP636HL00 (Stainless)


BURNER BOX AND GRILL PARTS

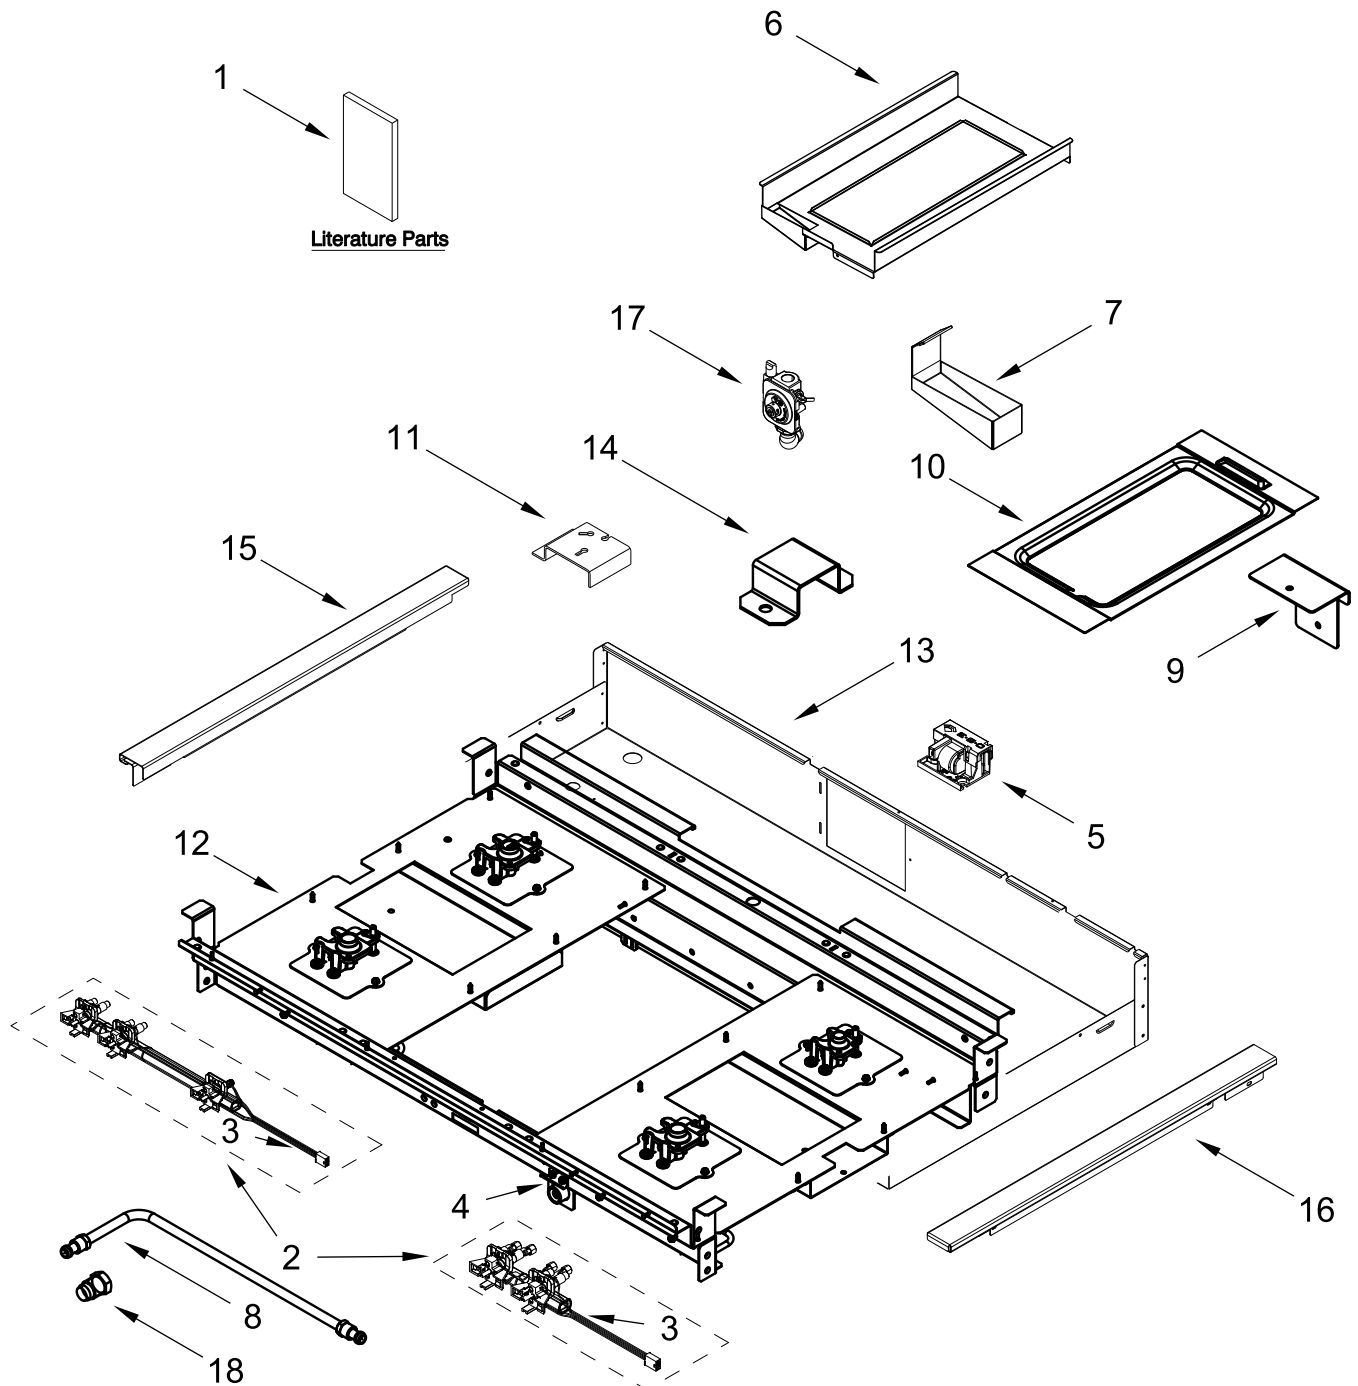

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	18	W10892063	Plug, Supply Outlet
	W11114328	Guide, Use and Care	6	W11120957	Capture, Grill Grease			FOLLOWING PARTS NOT ILLUSTRATED
	W11110989	Instructions, Installation	7	W11174414	Tray, Grill Drip			
	W11266585	Diagram, Wiring (Cooktop)	8	W10892452	Tube, Manifold Supply (Left)		W11292498	Harness, Cooktop
	W11266565	Sheet, Tech		W10892450	Tube, Manifold Supply (Right)		W11038934	Harness, Jumper
2	W10893056	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	9	W11285353	Bracket, Grill Grease Capture		W10624584	Cord, Power
	W10893062	Assembly, Valve Manifold (Right Front and Right Rear)	10	W11120965	Deflector, Grill Heat		4450800	Screw, Grounding
3	W11106304	Switch, Harness (Left Front, Left Rear, And Grill)	11	8285790	Bracket, Mounting Orifice		W11238041	Kit, LP Conversion
	W11106300	Switch, Harness (Right Front and Right Rear)	12		Assembly, Burner Box (Not Serviced)			
4	W11121199	Bracket, Manifold	13		Box, Burner (Not Serviced)			
			14	W11174418	Bracket, Grill Orifice Holder			
			15	W11047750	Main Trim, Left			
			16	W11047752	Main Trim, Right			
			17	W10449140	Regulator, Pressure			

COOKTOP, BURNER, AND GRILL PARTS

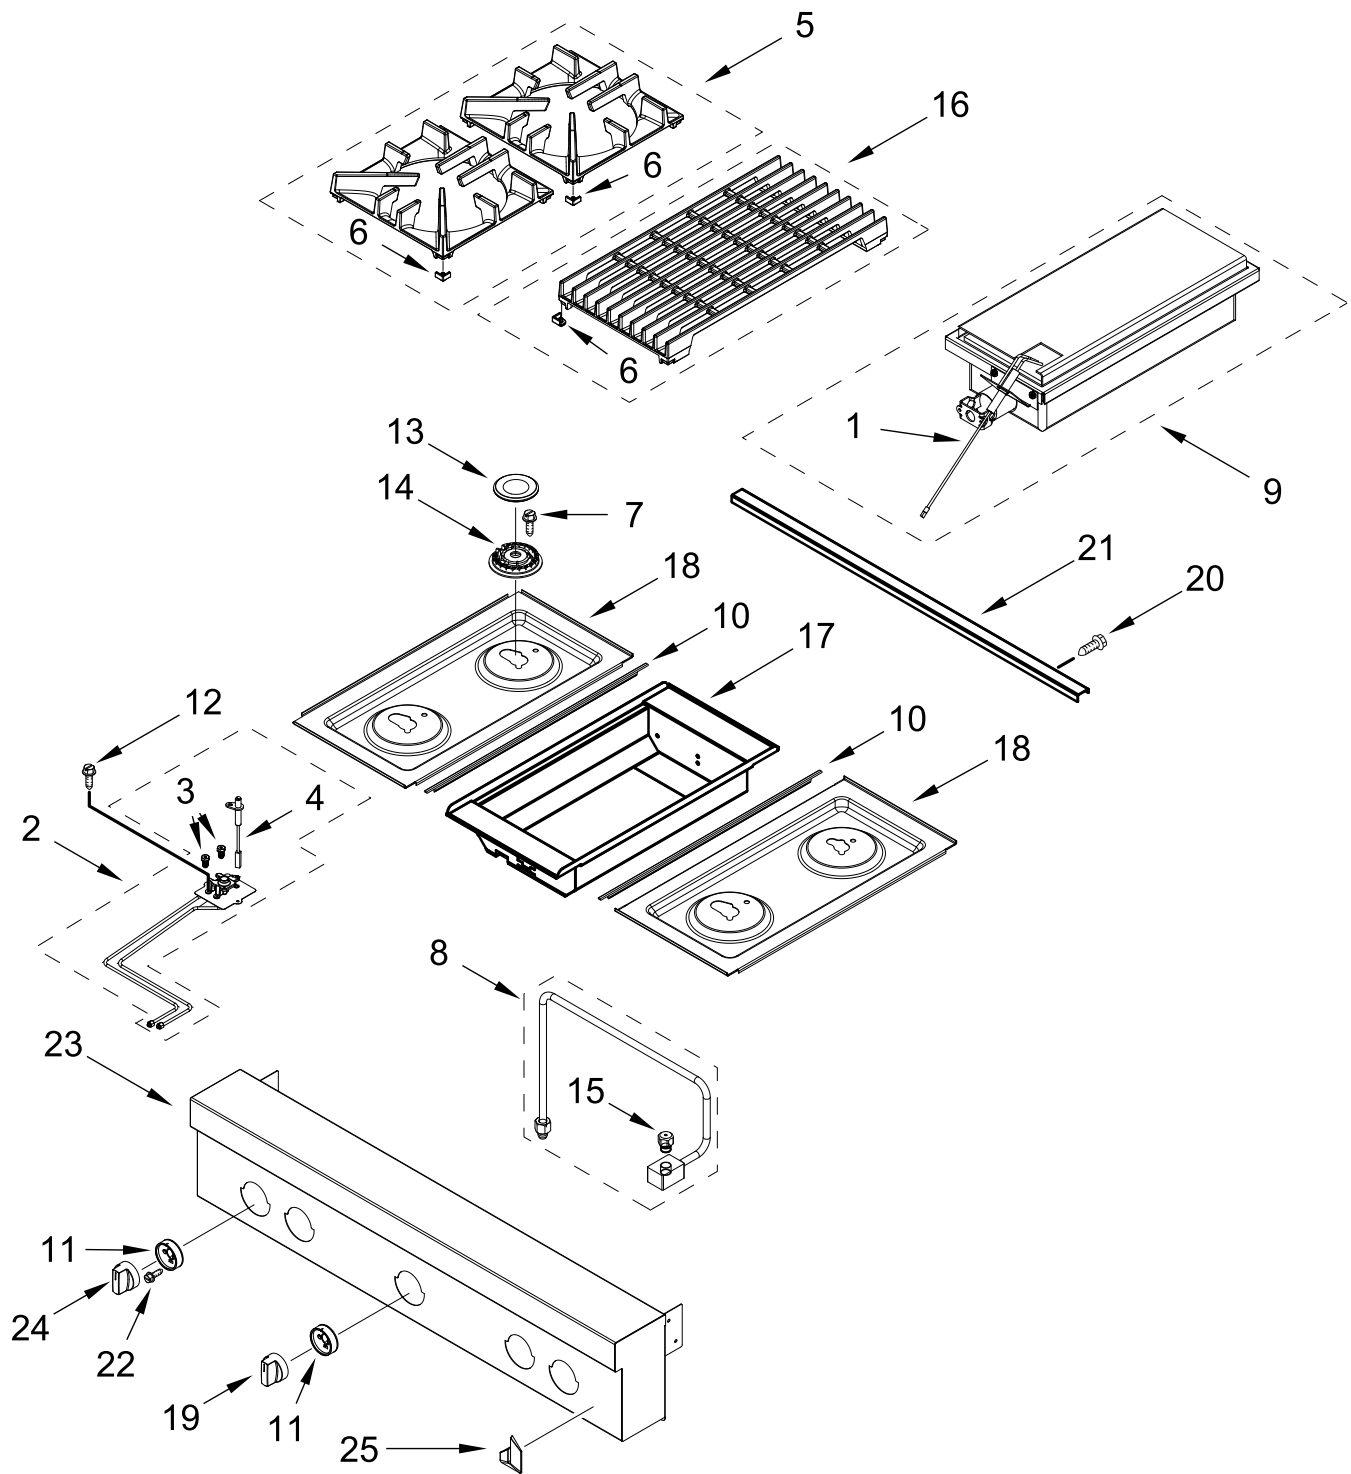

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11174598	Electrode, Grill	4	W11238758	Igniter (Left Front, Left Rear, Right Front)	15	W10892423	Orifice, Grill (18K) (Center)
2	W10892771	Assembly, Orifice Holder (Left Front and Right Front)		W11238756	Igniter (Right Rear)	16	W11179894	Assembly, Grill Grate
	W10892486	Assembly, Orifice Holder (Left Rear)	5		Assembly, Grate	17	W11174429	Assembly, Grill Box
	W10892772	Assembly, Orifice Holder (Right Rear)		W11179862	Black (Set of 2)	18	W10803515	Black (Left)
3	W10892422	Orifice, Main (17.4K) (Left Front, Left Rear, Right Front)	6	W11042504	Bumper, Grate		W10804371	Black (Right)
	W10892440	Orifice, Main (7.2K) (Right Rear)	7	W11196257	Screw	19		Knob, Grill
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	8	W11197930	Assembly, Grill Orifice Holder (Center)		W10894925	Stainless
	W10892429	Orifice, Simmer (2.0K) (Right Rear)	9	W11120976	Assembly, Grill Burner	20	7101P338-60	Screw
			10	W10291193	Trim, L-Strip	21	W11355760	Trim, Island
			11	W11090283	Bezel, Cooktop	22	W10919387	Screw
			12	7101P426-60	Screw	23	W11253780	Panel, Console
			13		Cap, Burner	24		Knob, Burner
				W11121391	Black (Set of 4)		W10882958	Stainless Badge
			14	W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)	25	W11238658	Stainless
				W10892022	Spreader, Flame (Low) (Right Rear)			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill