

 


**NOIR 36" GAS RANGETOP**  
**Includes Grill**

**MODELS:**

JGCP636HM00 (Stainless)


# BURNER BOX AND GRILL PARTS

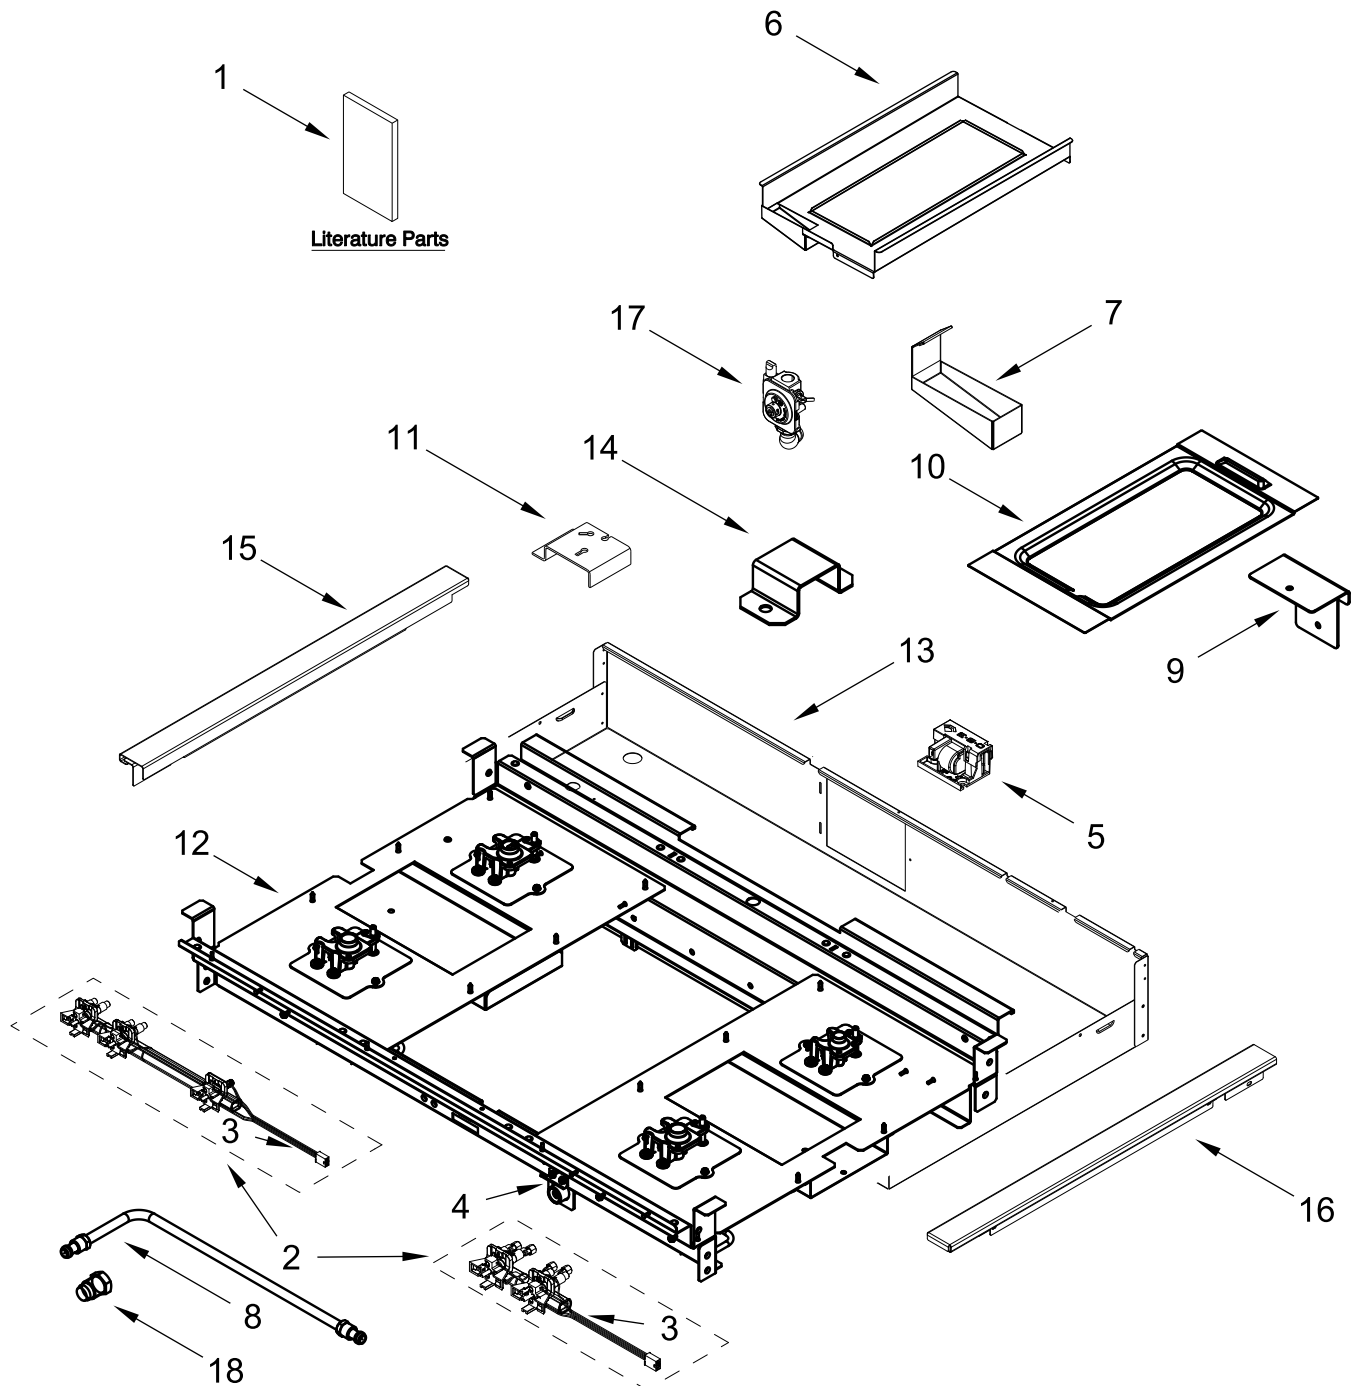

# BURNER BOX AND GRILL PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                       | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                     | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                 |
|-----------------------------|-----------------|----------------------------------------------------------|-----------------------------|-----------------|----------------------------------------|-----------------------------|-----------------|------------------------------------|
| 1                           |                 | Literature Parts                                         | 5                           | W11121317       | Module, Spark                          | 18                          | W10892063       | Plug, Supply Outlet                |
|                             | W11114328       | Guide, Use and Care                                      | 6                           | W11120957       | Capture, Grill Grease                  |                             |                 | FOLLOWING PARTS<br>NOT ILLUSTRATED |
|                             | W11110989       | Instructions,<br>Installation                            | 7                           | W11174414       | Tray, Grill Drip                       |                             |                 |                                    |
|                             | W11266585       | Diagram, Wiring<br>(Cooktop)                             | 8                           | W10892452       | Tube, Manifold Supply<br>(Left)        |                             | W11292498       | Harness, Cooktop                   |
|                             | W11266565       | Sheet, Tech                                              |                             | W10892450       | Tube, Manifold Supply<br>(Right)       |                             | W11038934       | Harness, Jumper                    |
| 2                           | W10893056       | Assembly, Valve<br>Manifold                              | 9                           | W11285353       | Bracket, Grill Grease<br>Capture       |                             | W10624584       | Cord, Power                        |
|                             |                 | (Left Front, Left Rear,<br>And Grill)                    | 10                          | W11120965       | Deflector, Grill Heat                  |                             | 4450800         | Screw, Grounding                   |
|                             | W10893062       | Assembly, Valve<br>Manifold                              | 11                          | 8285790         | Bracket, Mounting<br>Orifice           |                             | W11238041       | Kit, LP Conversion                 |
|                             |                 | (Right Front and Right<br>Rear)                          | 12                          |                 | Assembly, Burner Box<br>(Not Serviced) |                             |                 |                                    |
| 3                           | W11106304       | Switch, Harness<br>(Left Front, Left Rear,<br>And Grill) | 13                          |                 | Box, Burner (Not<br>Serviced)          |                             |                 |                                    |
|                             | W11106300       | Switch, Harness<br>(Right Front and Right<br>Rear)       | 14                          | W11174418       | Bracket, Grill Orifice<br>Holder       |                             |                 |                                    |
| 4                           | W11121199       | Bracket, Manifold                                        | 15                          | W11047750       | Main Trim, Left                        |                             |                 |                                    |
|                             |                 |                                                          | 16                          | W11047752       | Main Trim, Right                       |                             |                 |                                    |
|                             |                 |                                                          | 17                          | W10449140       | Regulator, Pressure                    |                             |                 |                                    |
 
# COOKTOP, BURNER, AND GRILL PARTS

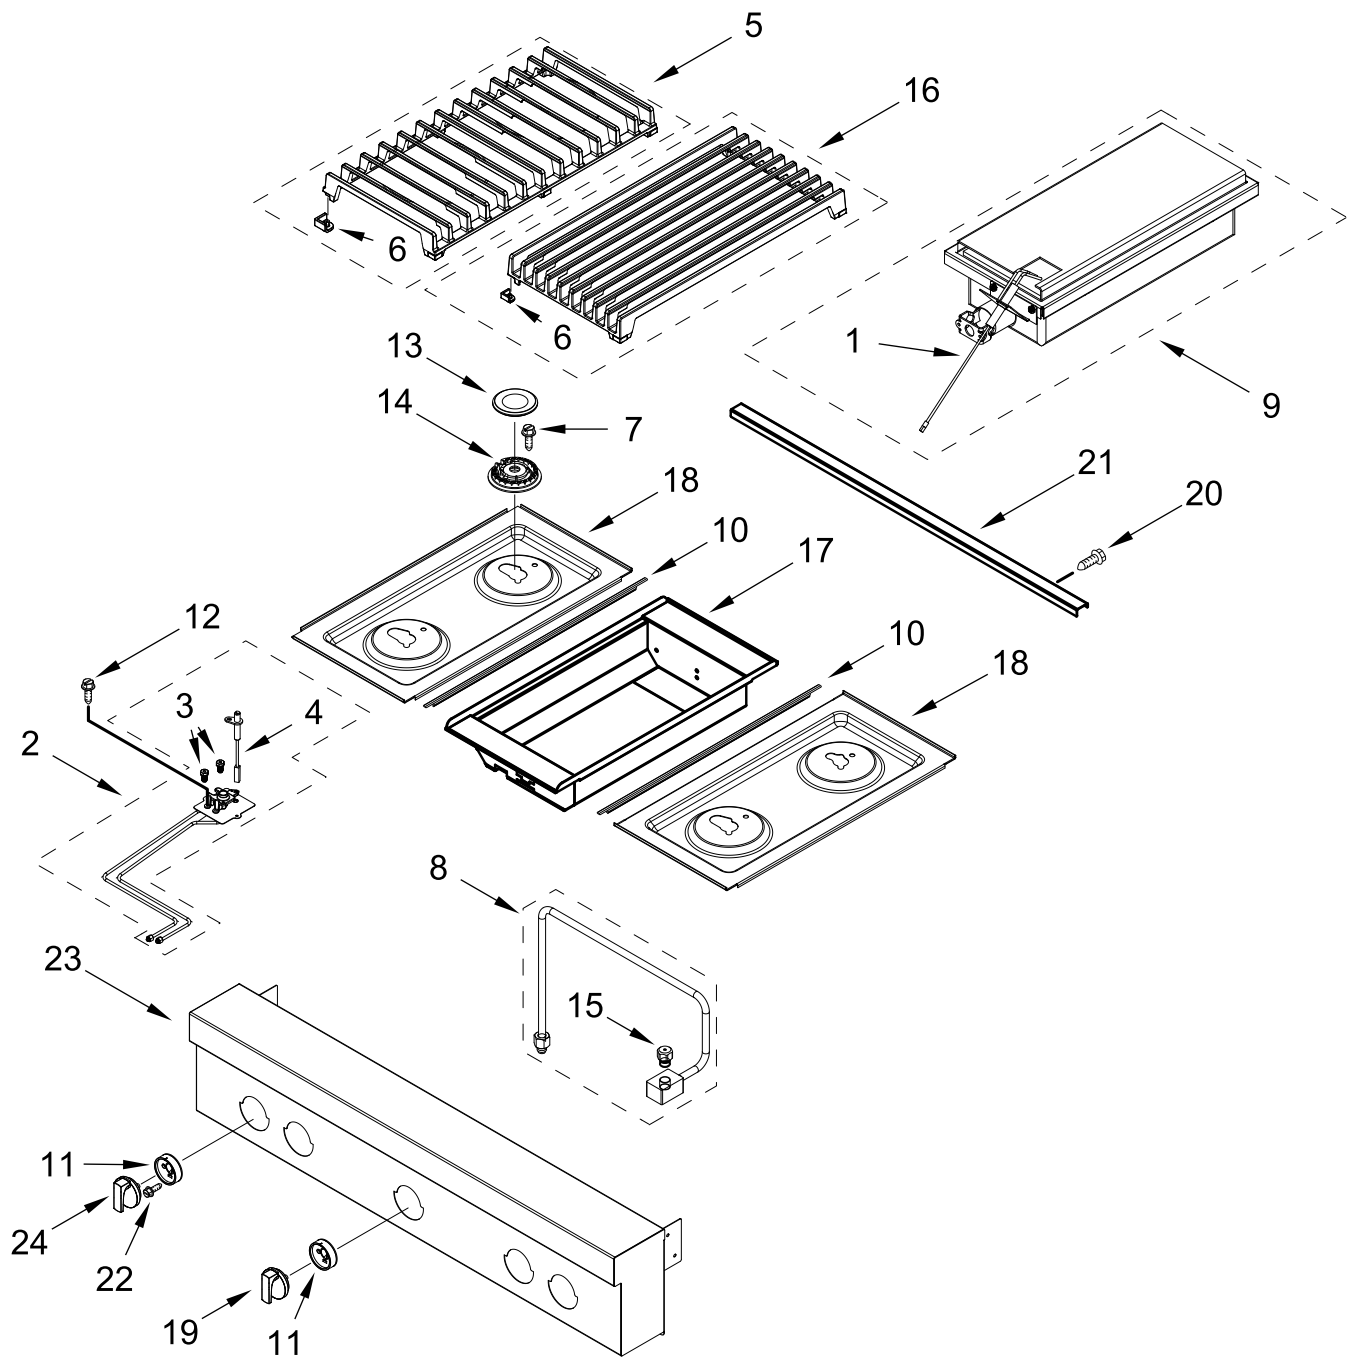

# COOKTOP, BURNER, AND GRILL PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                                | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                 | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                                   |
|-----------------------------|-----------------|-------------------------------------------------------------------|-----------------------------|-----------------|----------------------------------------------------|-----------------------------|-----------------|----------------------------------------------------------------------|
| 1                           | W11174598       | Electrode, Grill                                                  | 4                           | W11238758       | Igniter<br>(Left Front, Left Rear,<br>Right Front) | 14                          | W10891987       | Spreader, Flame<br>(High)<br>(Left Front, Left Rear,<br>Right Front) |
| 2                           | W10892771       | Assembly, Orifice<br>Holder<br>(Left Front and Right<br>Front)    |                             | W11238756       | Igniter<br>(Right Rear)                            |                             | W10892022       | Spreader, Flame (Low)<br>(Right Rear)                                |
|                             | W10892486       | Assembly, Orifice<br>Holder<br>(Left Rear)                        | 5                           |                 | Assembly, Grate                                    | 15                          | W10892423       | Orifice, Grill (18K)<br>(Center)                                     |
|                             | W10892772       | Assembly, Orifice<br>Holder<br>(Right Rear)                       |                             | W11172289       | Black<br>(Left)                                    | 16                          | W11172682       | Assembly, Grill Grate                                                |
|                             |                 |                                                                   |                             | W11172625       | Black<br>(Right)                                   | 17                          | W11174429       | Assembly, Grill Box                                                  |
| 3                           | W10892422       | Orifice, Main (17.4K)<br>(Left Front, Left Rear,<br>Right Front)  | 6                           | W11042504       | Bumper, Grate                                      | 18                          |                 | Panel, Cooktop                                                       |
|                             |                 |                                                                   | 7                           | W11196257       | Screw                                              |                             | W11038237       | Black<br>(Left)                                                      |
|                             |                 |                                                                   | 8                           | W11197930       | Assembly, Grill Orifice<br>Holder<br>(Center)      |                             | W11038253       | Black<br>(Right)                                                     |
|                             | W10892440       | Orifice, Main (7.2K)<br>(Right Rear)                              | 9                           | W11120976       | Assembly, Grill Burner                             | 19                          |                 | Knob, Grill                                                          |
|                             | W10892435       | Orifice, Simmer (2.6K)<br>(Left Front, Left Rear,<br>Right Front) | 10                          | W10291193       | Trim, L-Strip                                      |                             | W10894926       | Stainless                                                            |
|                             |                 |                                                                   | 11                          | W11090284       | Bezel, Cooktop                                     | 20                          | 7101P338-60     | Screw                                                                |
|                             |                 |                                                                   | 12                          | 7101P426-60     | Screw                                              | 21                          | W11355760       | Trim, Island                                                         |
|                             | W10892429       | Orifice, Simmer (2.0K)<br>(Right Rear)                            | 13                          |                 | Cap, Burner                                        | 22                          | W10919387       | Screw                                                                |
|                             |                 |                                                                   |                             | W11121391       | Black (Set of 4)                                   | 23                          | W11253796       | Panel, Console                                                       |
|                             |                 |                                                                   |                             |                 |                                                    | 24                          |                 | Knob, Burner                                                         |
|                             |                 |                                                                   |                             |                 |                                                    |                             | W10887596       | Stainless                                                            |

# OPTIONAL PARTS (NOT INCLUDED)

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                      |
|-----------------------------|-----------------|---------------------------------------------------------|
|                             |                 | ACCESSORY PARTS                                         |
|                             | 4396920         | Stainless Steel<br>Cleaner & Polish                     |
|                             | W10160195       | Cover, Grill/Griddle                                    |
|                             | W10216179       | Ring, Wok<br>Backsplash                                 |
|                             | W10285449       | 48" With Shelves                                        |
|                             | 31464           | Cleaner, Cooktop                                        |
|                             | W10123240       | Rack, Broiler Pan &<br>Roasting                         |
|                             | 8284755         | Backsplash<br>(Adjustable)                              |
|                             | JXA9001CDP      | Stainless Steel<br>Wallsplash                           |
|                             | W11238043       | Kit, High Altitude<br><br>Kit, Burner Cap (Set of<br>4) |
|                             | W11323014       | Brass, Large<br>Burner Cap (Single)                     |
|                             | W11323015       | Brass, Small                                            |
|                             | W11323012       | Brass, Large<br>Kit, Bezel (Set of 4)                   |
|                             | W11323062       | Chrome, Surface and<br>Grill                            |
|                             | W11323068       | Brass, Oven<br>Bezel (Single)                           |
|                             | W11317495       | Brass, Griddle                                          |
|                             | W11323067       | Brass, Oven                                             |
|                             | W11316873       | Brass, Surface and<br>Gril                              |
|                             | W11323024       | Chrome, Griddle                                         |
|                             | W11317499       | Chrome, Oven                                            |
|                             | W11323061       | Chrome, Surface and<br>Grill                            |