

 


RISE 48" GAS RANGETOP
Includes Grill

MODELS:

JGCP648HL00 (Stainless)


BURNER BOX AND GRILL PARTS

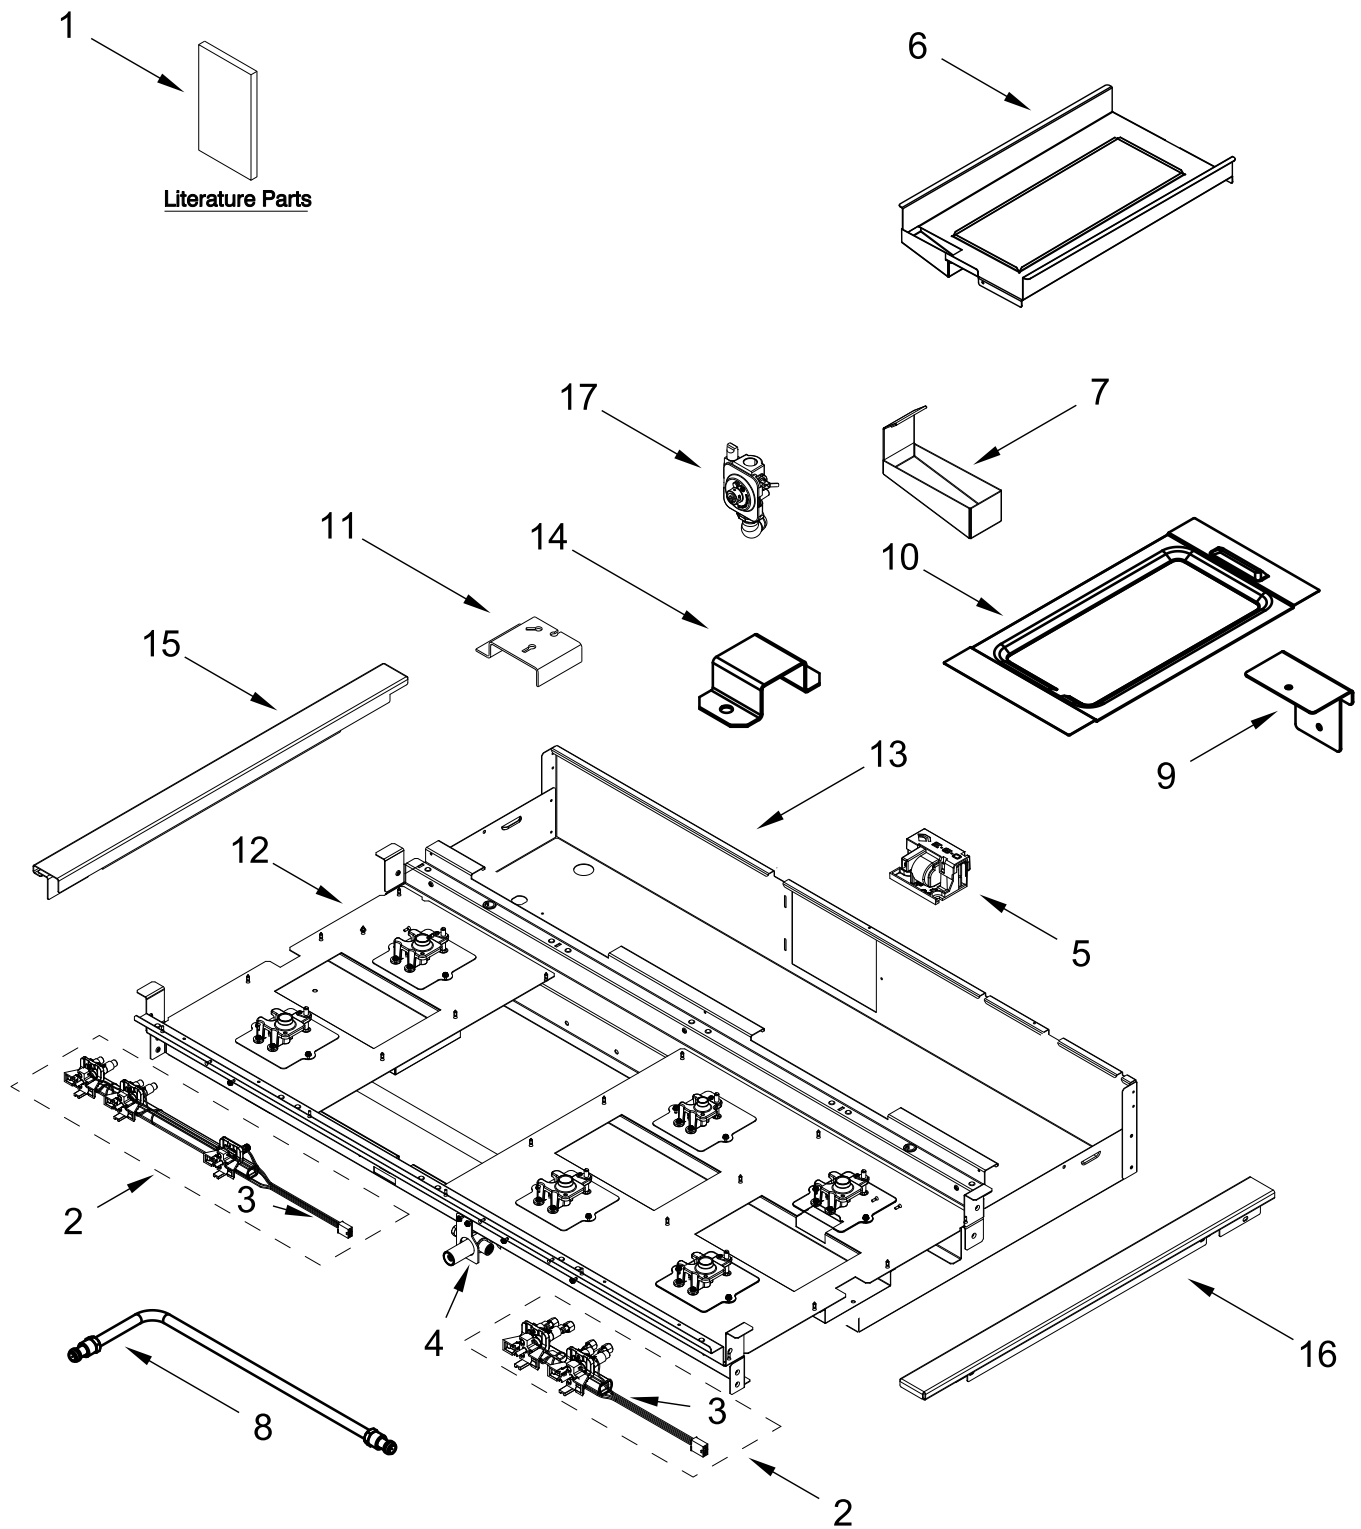

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106304	Switch, Harness	10	W11120965	Deflector, Grill Heat
	W11114328	Guide, Use and Care			(Left Front, Left Rear, And Grill)	11	8285790	Bracket, Mounting Orifice
	W11110989	Instructions, Installation		W11106300	Switch, Harness	12		Assembly, Burner Box (Not Serviced)
	W11266584	Diagram, Wiring (Cooktop)			(Right Center Front, Right Center Rear, Right Front, Right Rear)	13		Box, Burner (Not Serviced)
	W11266565	Sheet, Tech						
2	W10893056	Assembly, Valve Manifold	4	W11121199	Bracket, Manifold	14	W11174418	Bracket, Grill Orifice Holder
		(Left Front, Left Rear, And Grill)	5	W11121317	Module, Spark	15	W11047749	Main Trim, Left
			6	W11120957	Capture, Grill Grease	16	W11047751	Main Trim, Right
	W10893062	Assembly, Valve Manifold	7	W11174414	Tray, Grill Drip	17	W10449140	Regulator, Pressure
		(Right Center Front And Right Center Rear)	8	W10892476	Tube, Manifold Supply (Left)			FOLLOWING PARTS NOT ILLUSTRATED
				W10892445	Tube, Manifold Supply (Right Center)		W11200330	Harness, Cooktop
	W11183724	Assembly, Valve Manifold		W10892347	Tube, Manifold Supply (Right)		W11038934	Harness, Jumper
		(Right Front and Right Rear)	9	W11285353	Bracket, Grill Grease Capture		W10624584	Cord, Power
							4450800	Screw, Grounding
							W11238041	Kit, LP Conversion

 COOKTOP, BURNER, AND GRILL PARTS

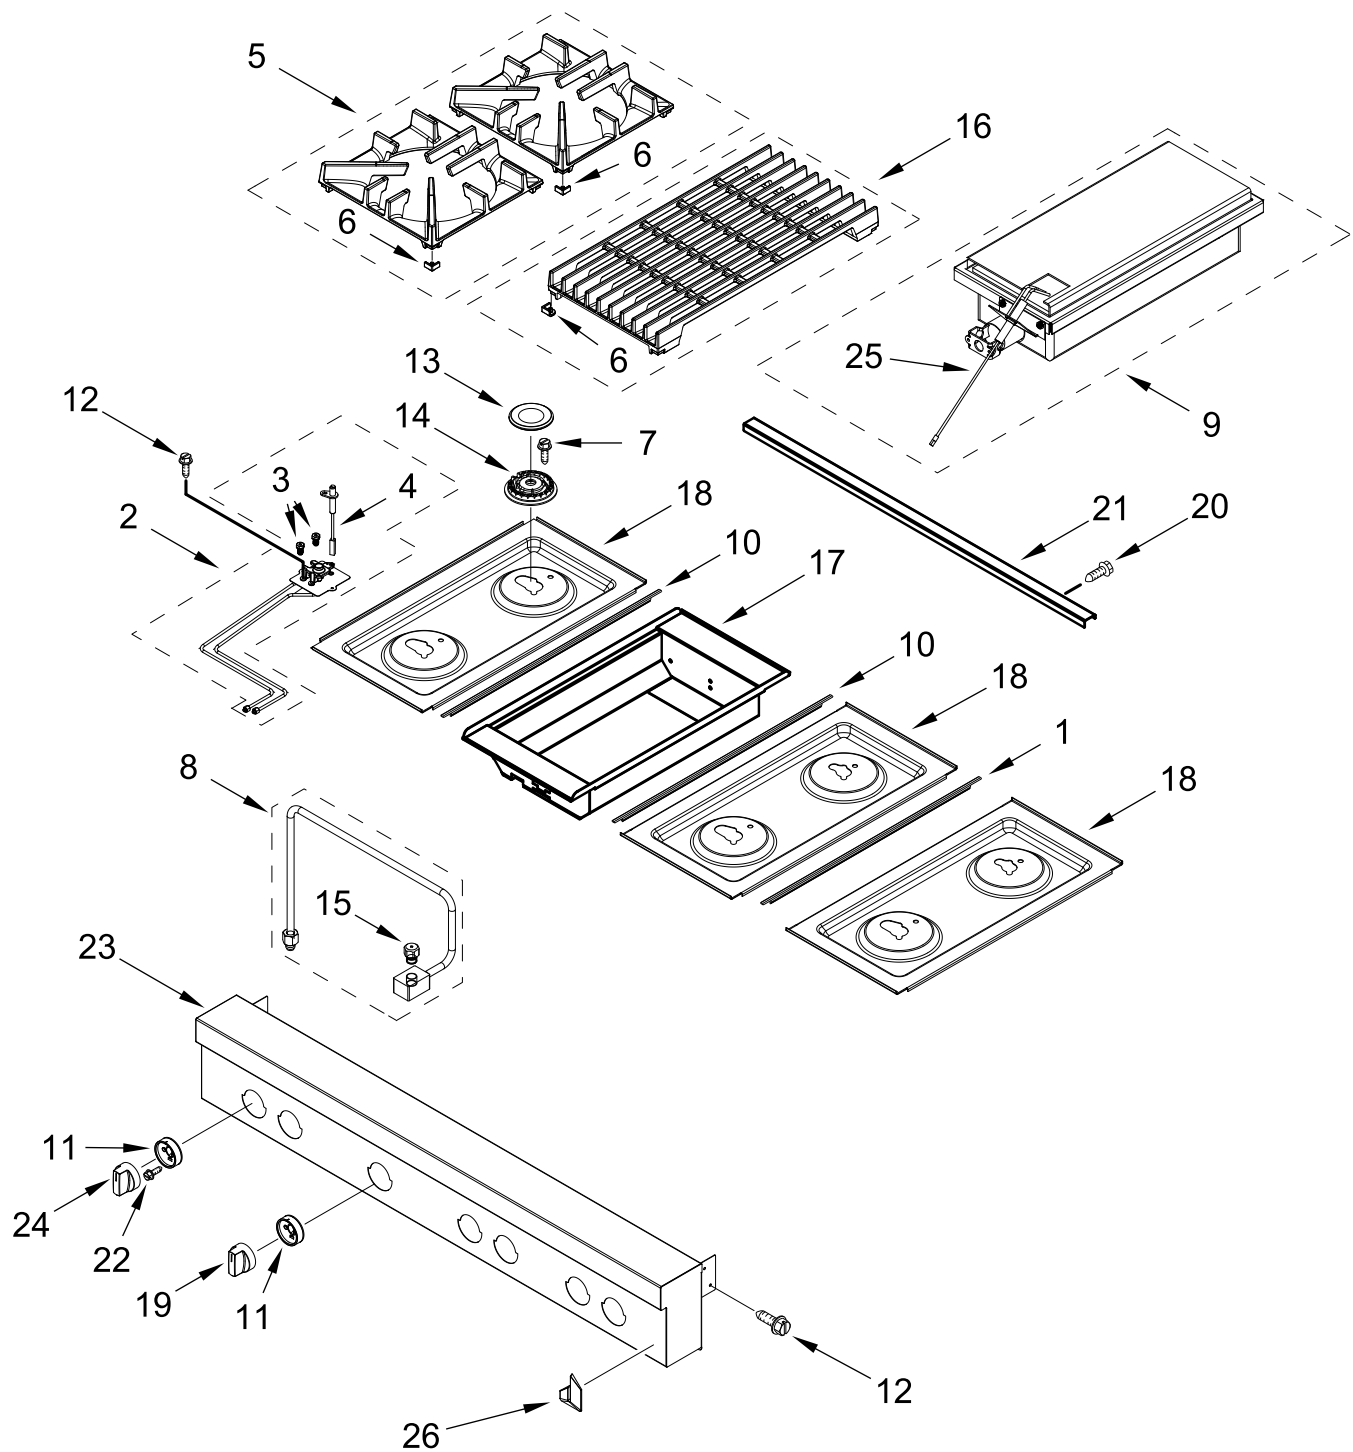

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, T-Strip	4	W11238758	Igniter	15	W10892423	Orifice, Grill (18K)
	W10271524	Black			(All But Right Center Rear)			(Left Center)
2	W10892771	Assembly, Orifice Holder		W11238756	Igniter	16	W11179894	Assembly, Grill Grate
		(Left Front, Right Center Front, Right Front)			(Right Center Rear)	17	W11174429	Assembly, Grill Box
	W10892486	Assembly, Orifice Holder	5		Assembly, Grate	18		Panel, Cooktop
		(Left Rear and Right Rear)		W11179862	Black (Set of 2)		W10803515	Black
	W10892772	Assembly, Orifice Holder	6	W11042504	Bumper, Grate			(Left)
		(Right Center Rear)	7	W11196257	Screw		W10803519	Black
3	W10892422	Orifice, Main (17.4K)	8	W11197930	Assembly, Grill Orifice Holder		W10804373	Black
		(All But Right Center Rear)			(Left Center)			(Right)
	W10892440	Orifice, Main (7.2K)	9	W11120976	Assembly, Grill Burner	19		Knob, Grill
		(Right Center Rear)	10	W10291193	Trim, L-Strip		W10894925	Stainless
	W10892435	Orifice, Simmer (2.6K)	11	W11090283	Bezel, Cooktop	20	7101P338-60	Screw
		(All But Right Center Rear)	12	7101P426-60	Screw	21	W11355761	Trim, Island
	W10892429	Orifice, Simmer (2.0K)	13		Cap, Burner	22	W10919387	Screw
		(Right Center Rear)		W11121392	Black (Set of 6)	23	W11253778	Panel, Console
			14	W10891987	Spreader, Flame (High)	24		Knob, Burner
					(All But Right Center Rear)		W10882958	Stainless
				W10892022	Spreader, Flame (Low)	25	W11174598	Electrode, Grill
					(Right Center Rear)	26		Badge
							W11238658	Stainless

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill