

 


RISE 48" GAS RANGETOP
Includes Griddle and Grill

MODELS:

JGCP748HL00 (Stainless)


BURNER BOX, GRIDDLE, AND GRILL PARTS

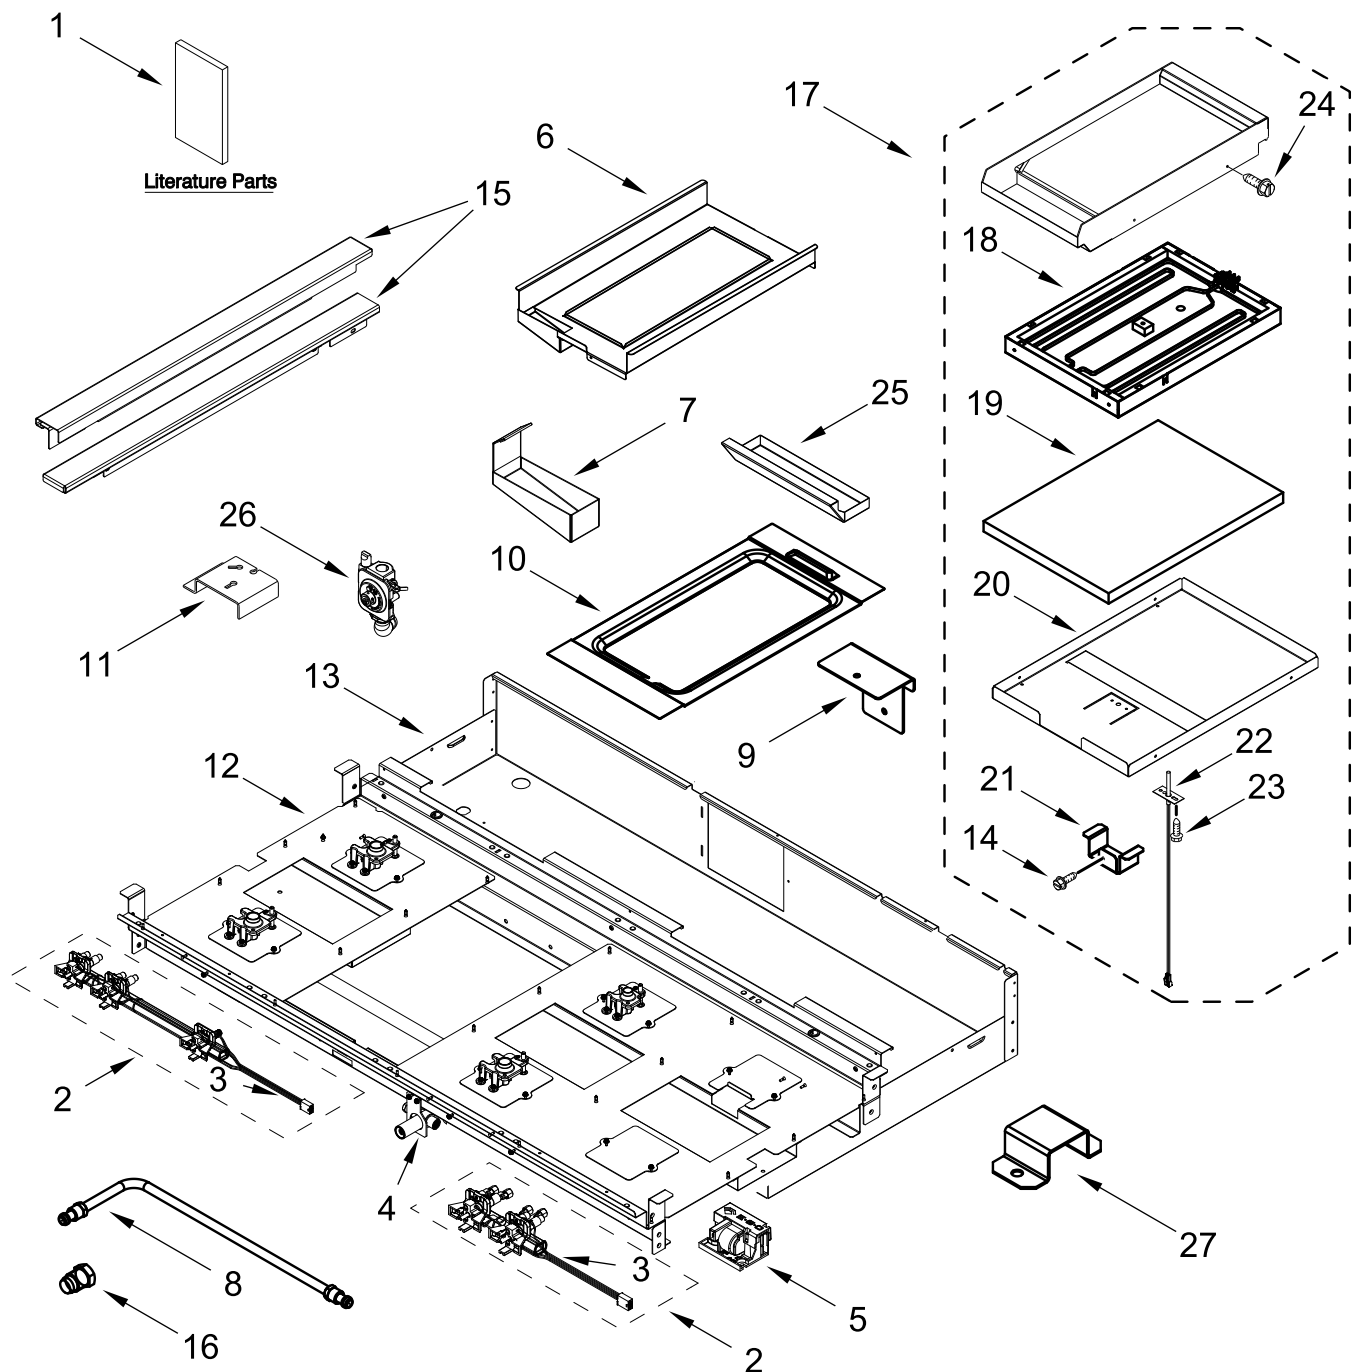

BURNER BOX, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	18	W10891698	Element, Griddle
	W11114328	Guide, Use and Care	6	W11120957	Capture, Grill Grease	19	W11121383	Insulation, Griddle
	W11110989	Instructions, Installation	7	W11174414	Tray, Grill Drip	20	W11330430	Tray, Griddle Insulation
	W11266584	Diagram, Wiring (Cooktop)	8	W10892452	Tube, Manifold Supply (Left)	21	W11121384	Bracket, Griddle-RTD
	W11266565	Sheet, Tech		W10892450	Tube, Manifold Supply (Right Center)	22	W10891584	Sensor, Griddle
2	W10893056	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	9	W11285353	Bracket, Grill Grease Capture	23	3196160	Screw
	W10893062	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	10	W11120965	Deflector, Grill Heat	24	3196176	Screw
			11	8285790	Bracket, Mounting Orifice	25	W10276497	Tray, Griddle Drip
			12		Assembly, Burner Box (Not Serviced)	26	W10449140	Regulator, Pressure
			13		Box, Burner (Not Serviced)	27	W11174418	Bracket, Grill Orifice Holder
3	W11106304	Switch, Harness (Left Front, Left Rear, And Grill)	14	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11106300	Switch, Harness (Right Center Front And Right Center Rear)	15	W11047749	Main Trim, Left	W11200333		Harness, Cooktop
				W11047751	Main Trim, Right	W10903727		Harness, Griddle
			16	W10892063	Plug, Supply Outlet	W11038934		Harness, Jumper
			17	W10891745	Assembly, Griddle Module	W10624584		Cord, Power
4	W11121199	Bracket, Manifold				4450800		Screw, Grounding
						W11238041		Kit, LP Conversion

 COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

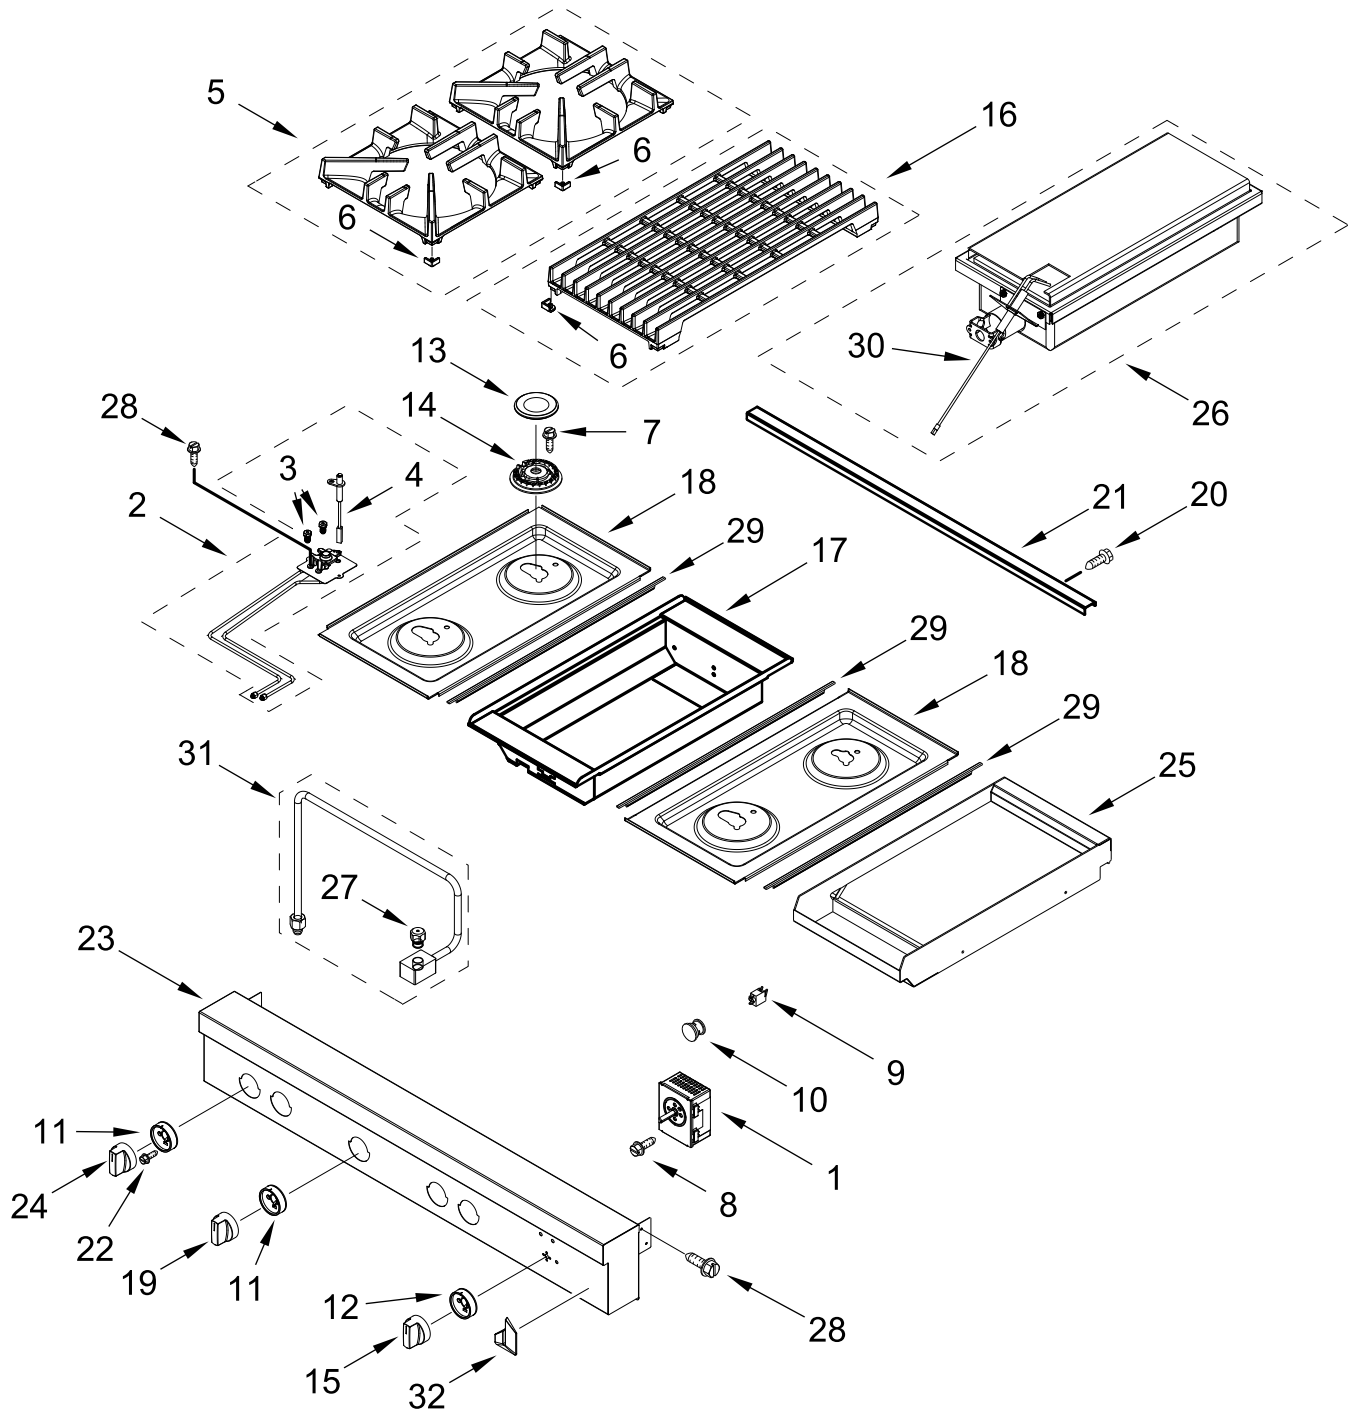

COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11033497	Control, Griddle	6	W11042504	Bumper, Grate	22	W10919387	Screw
2	W10892771	Assembly, Orifice Holder	7	W11196257	Screw	23	W11253777	Panel, Console
		(Left Front And Right Center Front)	8	W10674068	Screw	24		Knob, Burner
	W10892486	Assembly, Orifice Holder	9	W10116114	Light, Indicator Housing		W10882958	Stainless
		(Left Rear)	10	W10294500	Lens, Indicator Light	25	W10891745	Assembly, Griddle Module
	W10892772	Assembly, Orifice Holder	11	W11090283	Bezel, Cooktop			(Assembly Breakdown Shown on Burner Box Page)
		(Right Center Rear)	12	W11104966	Bezel, Griddle	26	W11120976	Assembly, Grill Burner
3	W10892422	Orifice, Main (17.4K)	13		Cap, Burner	27	W10892423	Orifice, Grill (18K)
		(All But Right Center Rear)		W11121391	Black (Set of 4)			(Left Center)
	W10892440	Orifice, Main (7.2K)	14	W10891987	Spreader, Flame (High)	28	7101P426-60	Screw
		(Right Center Rear)			(All But Right Center Rear)	29	W10291193	Trim, L-Strip
	W10892435	Orifice, Simmer (2.6K)		W10892022	Spreader, Flame (Low)	30	W11174598	Electrode, Grill
		(All But Right Center Rear)			(Right Center Rear)	31	W11197930	Assembly, Grill Orifice Holder
	W10892429	Orifice, Simmer (2.0K)	15		Knob, Griddle			(Left Center)
		(Right Center Rear)		W10884943	Stainless	32		Badge
4	W11238758	Igniter	16	W11179894	Assembly, Grill Grate		W11238658	Stainless
		(All But Right Center Rear)	17	W11174429	Assembly, Grill Box			
	W11238756	Igniter	18		Panel, Cooktop			
		(Right Center Rear)		W10803515	Black			
					(Left)			
				W10803519	Black			
					(Right Center)			
			19		Knob, Grill			
				W10894925	Stainless			
5		Assembly, Grate	20	7101P338-60	Screw			
	W11179862	Black (Set of 2)	21	W11355761	Trim, Island			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill