

 


NOIR 48" GAS RANGETOP
Includes Griddle and Grill

MODELS:

JGCP748HM00 (Stainless)


BURNER BOX, GRIDDLE, AND GRILL PARTS

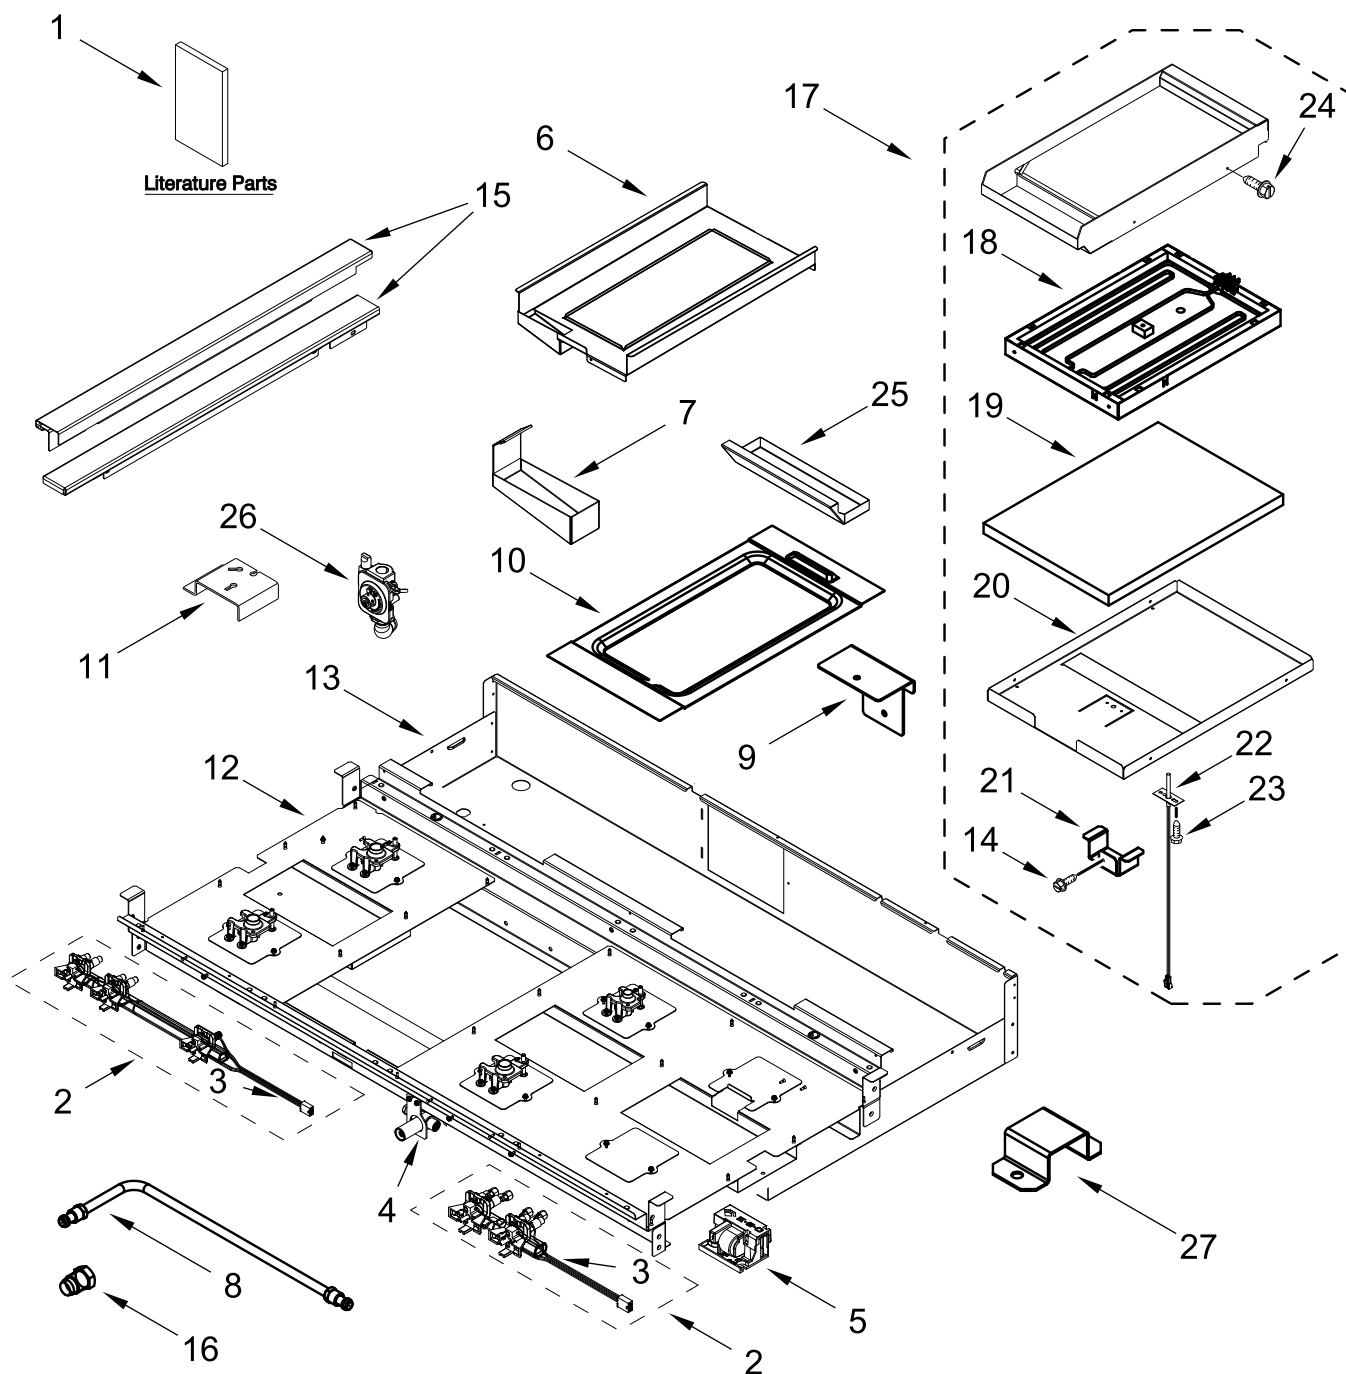

BURNER BOX, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	18	W10891698	Element, Griddle
	W11114328	Guide, Use and Care	6	W11120957	Capture, Grill Grease	19	W11121383	Insulation, Griddle
	W11110989	Instructions, Installation	7	W11174414	Tray, Grill Drip	20	W11330430	Tray, Griddle Insulation
	W11266584	Diagram, Wiring (Cooktop)	8	W10892452	Tube, Manifold Supply (Left)	21	W11121384	Bracket, Griddle-RTD
	W11266565	Sheet, Tech		W10892450	Tube, Manifold Supply (Right Center)	22	W10891584	Sensor, Griddle
2	W10893056	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	9	W11285353	Bracket, Grill Grease Capture	23	3196160	Screw
	W10893062	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	10	W11120965	Deflector, Grill Heat	24	3196176	Screw
			11	8285790	Bracket, Mounting Orifice	25	W10276497	Tray, Griddle Drip
			12		Assembly, Burner Box (Not Serviced)	26	W10449140	Regulator, Pressure
			13		Box, Burner (Not Serviced)	27	W11174418	Bracket, Grill Orifice Holder
3	W11106304	Switch, Harness (Left Front, Left Rear, And Grill)	14	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11106300	Switch, Harness (Right Center Front And Right Center Rear)	15	W11047749	Main Trim, Left	W11200333		Harness, Cooktop
				W11047751	Main Trim, Right	W10903727		Harness, Griddle
			16	W10892063	Plug, Supply Outlet	W11038934		Harness, Jumper
			17	W10891745	Assembly, Griddle Module	W10624584		Cord, Power
4	W11121199	Bracket, Manifold				4450800		Screw, Grounding
						W11238041		Kit, LP Conversion

 COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

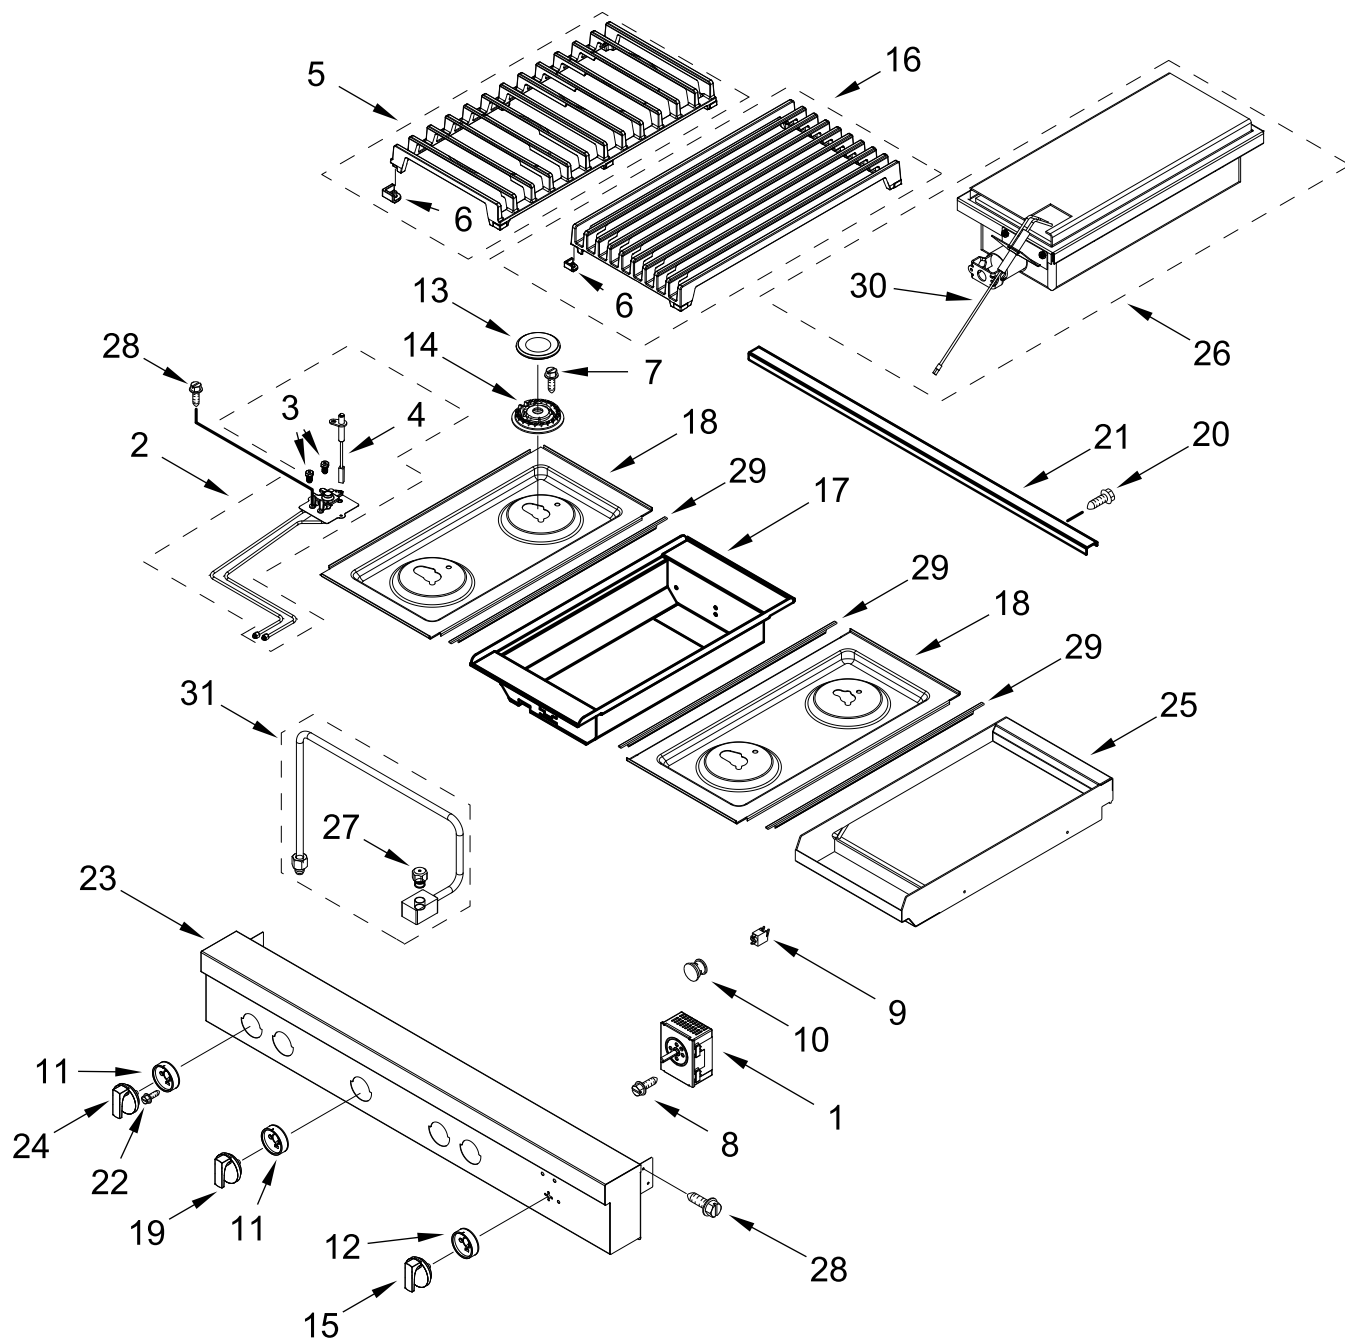

COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11033497	Control, Griddle	5		Assembly, Grate	18		Panel, Cooktop
2	W10892771	Assembly, Orifice Holder		W11172289	Black (Left)		W11038237	Black (Left)
		(Left Front And Right Center Front)		W11172625	Black (Right Center)		W11038241	Black (Right Center)
	W10892486	Assembly, Orifice Holder	6	W11042504	Bumper, Grate	19		Knob, Grill
		(Left Rear)	7	W11196257	Screw		W10894926	Stainless
	W10892772	Assembly, Orifice Holder	8	W10674068	Screw	20	7101P338-60	Screw
		(Right Center Rear)	9	W10116114	Light, Indicator Housing	21	W11355761	Trim, Island
3	W10892422	Orifice, Main (17.4K)	10	W10294500	Lens, Indicator Light	22	W10919387	Screw
		(All But Right Center Rear)	11	W11090284	Bezel, Cooktop	23	W11253793	Panel, Console
	W10892440	Orifice, Main (7.2K)	12	W11104967	Bezel, Griddle	24		Knob, Burner
		(Right Center Rear)	13		Cap, Burner		W10887596	Stainless
	W10892435	Orifice, Simmer (2.6K)		W11121391	Black (Set of 4)	25	W10891745	Assembly, Griddle Module
		(All But Right Center Rear)	14	W10891987	Spreader, Flame (High)			(Assembly Breakdown Shown on Burner Box Page)
	W10892429	Orifice, Simmer (2.0K)			(All But Right Center Rear)	26	W11120976	Assembly, Grill Burner
		(Right Center Rear)		W10892022	Spreader, Flame (Low)	27	W10892423	Orifice, Grill (18K)
4	W11238758	Igniter			(Right Center Rear)			(Left Center)
		(All But Right Center Rear)	15		Knob, Griddle	28	7101P426-60	Screw
	W11238756	Igniter		W10891923	Stainless	29	W10291193	Trim, L-Strip
		(Right Center Rear)	16	W11172682	Assembly, Grill Grate	30	W11174598	Electrode, Grill
			17	W11174429	Assembly, Grill Box	31	W11197930	Assembly, Grill Orifice Holder
								(Left Center)

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill