




GAS RANGE

MODELS:

JGRP436HM05 (Stainless)


BURNER BOX PARTS

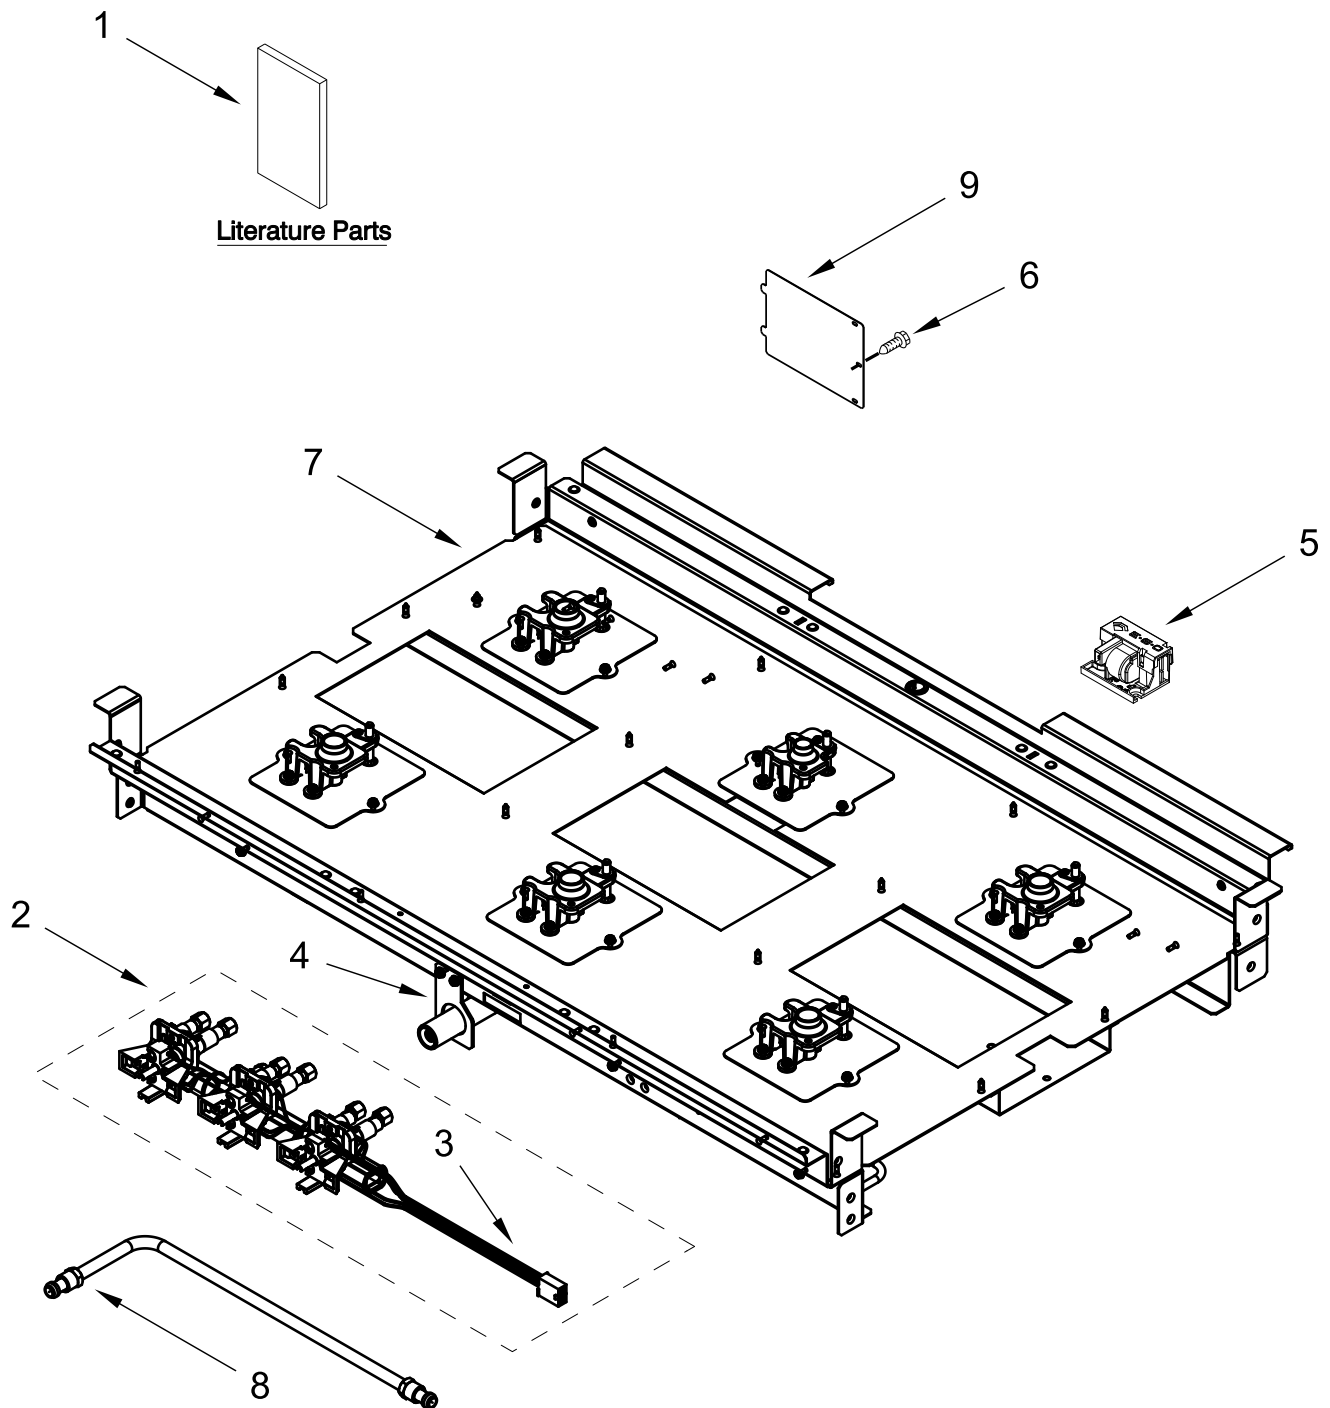

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106302	Switch, Harness	9	W10115843	Cover, Ignition
	W11508896	Use and Care Guide	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11508888	Installation Instructions	5	W11121317	Module, Spark		W11448067	Harness, Main (36")
	W11177312	Guide, Quick Start	6	7101P426-60	Screw		W11200332	Harness, Cooktop
	W11184746	Guide, Internet Connectivity	7		Box, Burner (Not Serviced)		W10780278	Harness, Door Lock
	W11575703	Diagram, Wiring (Cooktop)	8	W10892370	Tube, Manifold Supply (Left)		W11200325	Harness, Communication
	W11565476	Diagram, Wiring (Oven)		W10892417	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
	W11202275	Sheet, Tech					313438	Clip, Harness
2	W10893052	Assembly, Valve Manifold (Left Front, Left Rear, Center Rear)					W10624584	Cord, Power
	W10893059	Assembly, Valve Manifold (Center Front, Right Front, Right Rear)					4450800	Screw, Grounding
							W11311196	Ignitor Wire, Wire-Electrode Bake
							W11311197	Ignitor Wire, Wire-Electrode Broil
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11422176	Kit, LP Conversion


COOKTOP, BURNER, AND GRATE PARTS

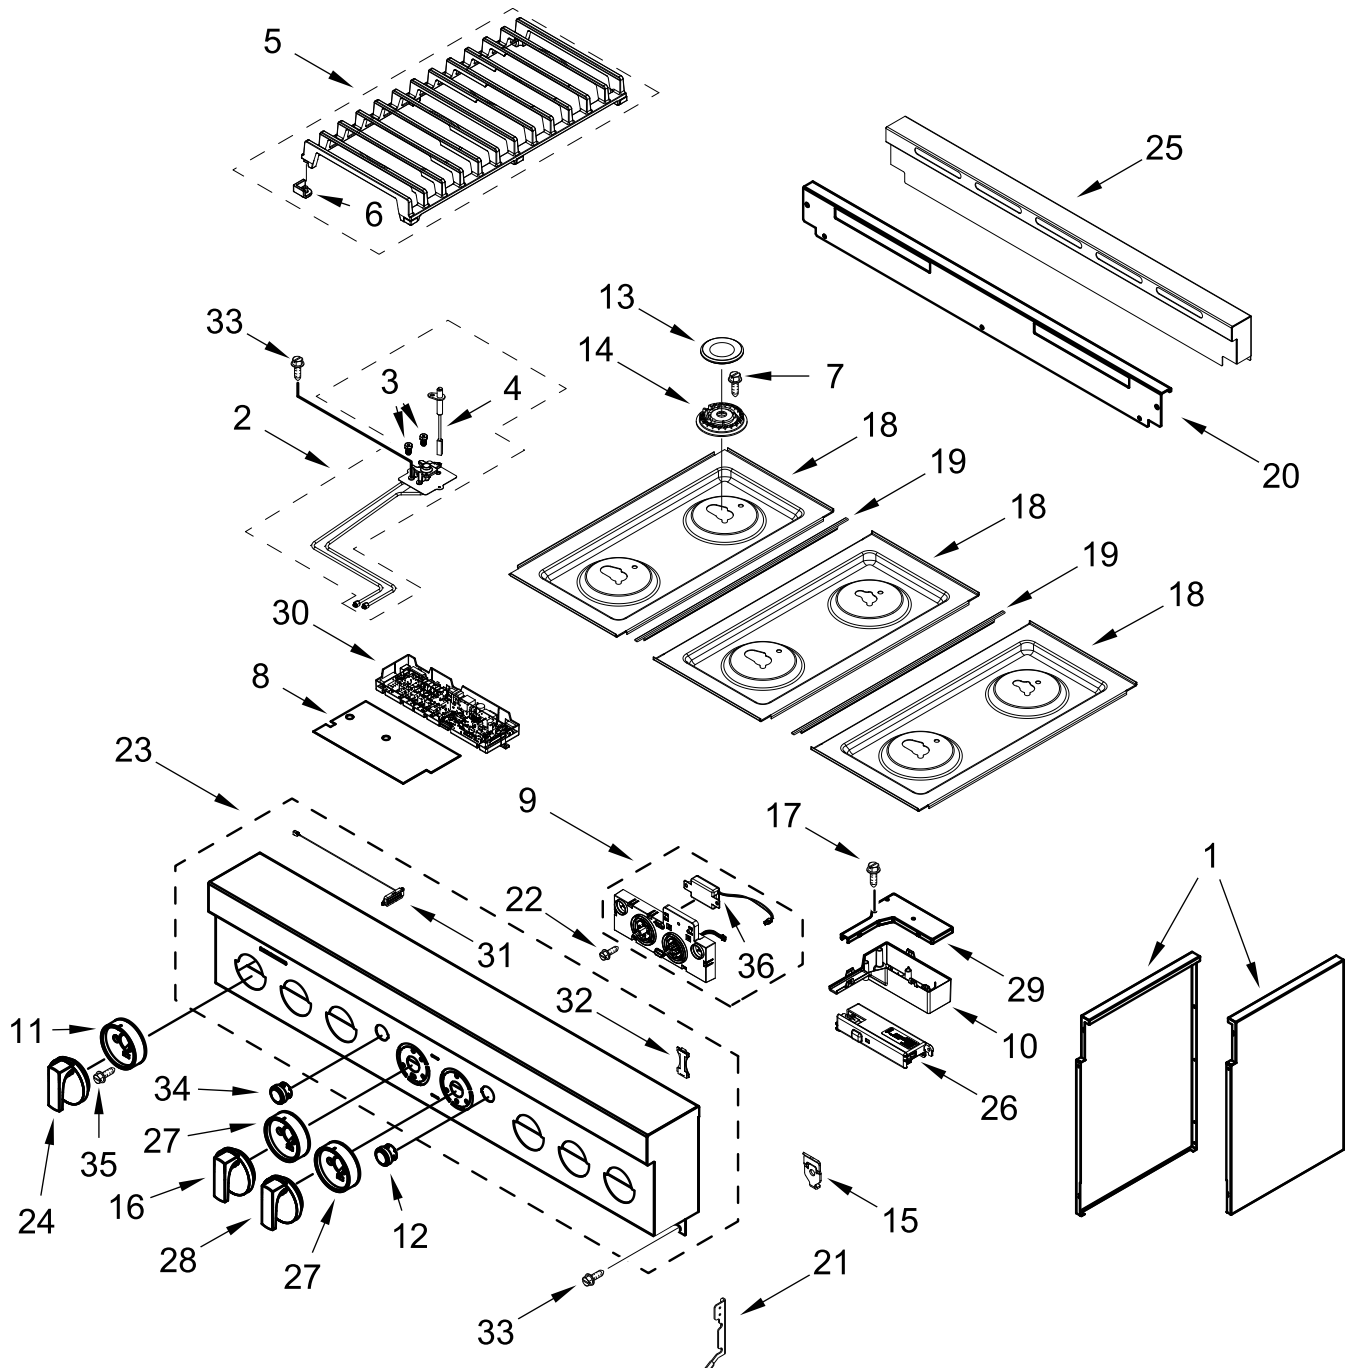

COOKTOP, BURNER, AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	4	W11238757	Igniter (Left Front, Left Rear, Right Front, Right Rear)	18		Panel, Cooktop
	W11106880	Panel, Cabinet Side (Right)		W11238758	Igniter (Center Front)		W11038237	Black (Left)
2	W10892793	Assembly, Orifice Holder (Left Front)		W11238756	Igniter (Center Rear)		W11038241	Black (Center)
	W10892494	Assembly, Orifice Holder (Left Rear)	5		Assembly, Grate		W11038254	Black (Right)
	W10892501	Assembly, Orifice Holder (Center Front)		W11291180	Black (Left)	19	W10271524	Trim, T-Strip Black
	W10892810	Assembly, Orifice Holder (Center Rear)		W11291184	Black (Center)	20	W10323250	Insert, Island Trim
	W10892731	Assembly, Orifice Holder (Right Front)		W11291182	Black (Right)	21	W10130760	Bracket, Moving Console (Left)
	W10892482	Assembly, Orifice Holder (Right Rear)	6	W11042504	Bumper, Grate		W10130759	Bracket, Moving Console (Right)
3	W10892422	Orifice, Main (17.4K) (Left Front and Right Front)	7	W11323260	Screw	22	3400814	Screw
	W10892418	Orifice, Main (15.4K) (Left Rear, Center Front, Right Rear)	8	W11281269	Barrier, Appliance Manager	23	W10878252	Panel, Console
	W10892440	Orifice, Main (7.2K) (Center Rear)	9	W11436327	Interface, User	24		Knob, Burner (For 6 Cooktop Burners)
	W10892435	Orifice, Simmer (2.6K) (All Except Center Rear)	10	W11205795	Cover, WIFI Outer		W10887596	Stainless
	W10892429	Orifice, Simmer (2.0K) (Center Rear)	11	W11090284	Bezel, Cooktop (For 6 Cooktop Burners)	25	W11476245	Trim, Island
			12	W11090650	Button Assembly, Oven Start	26	W11110768	Assembly, WIFI Module
			13		Cap, Burner	27		Bezel, Oven (For 2 Oven Knobs)
				W11121392	Black (Set of 6)		W11042375	Stainless
			14	W10891987	Spreader, Flame (High) (All Except Center Rear)	28		Knob, Oven Temperature
				W10892022	Spreader, Flame (Low) (Center Rear)		W10891868	Stainless
			15	W11036559	Spring Clip, Range	29	W11205794	Cover, WIFI Inner
			16		Knob, Oven Mode	30	W11543348	Manager, Powermax Appliance
				W11317854	Stainless	31	W11130078	Antenna, WIFI
			17	3196560	Screw	32	W10896369	Assembly, Light Pipe
						33	7101P426-60	Screw
						34	W11090651	Button Assembly, Oven Light
						35	W11328357	Screw
						36	W10568405	Assembly, Speaker


CHASSIS PARTS

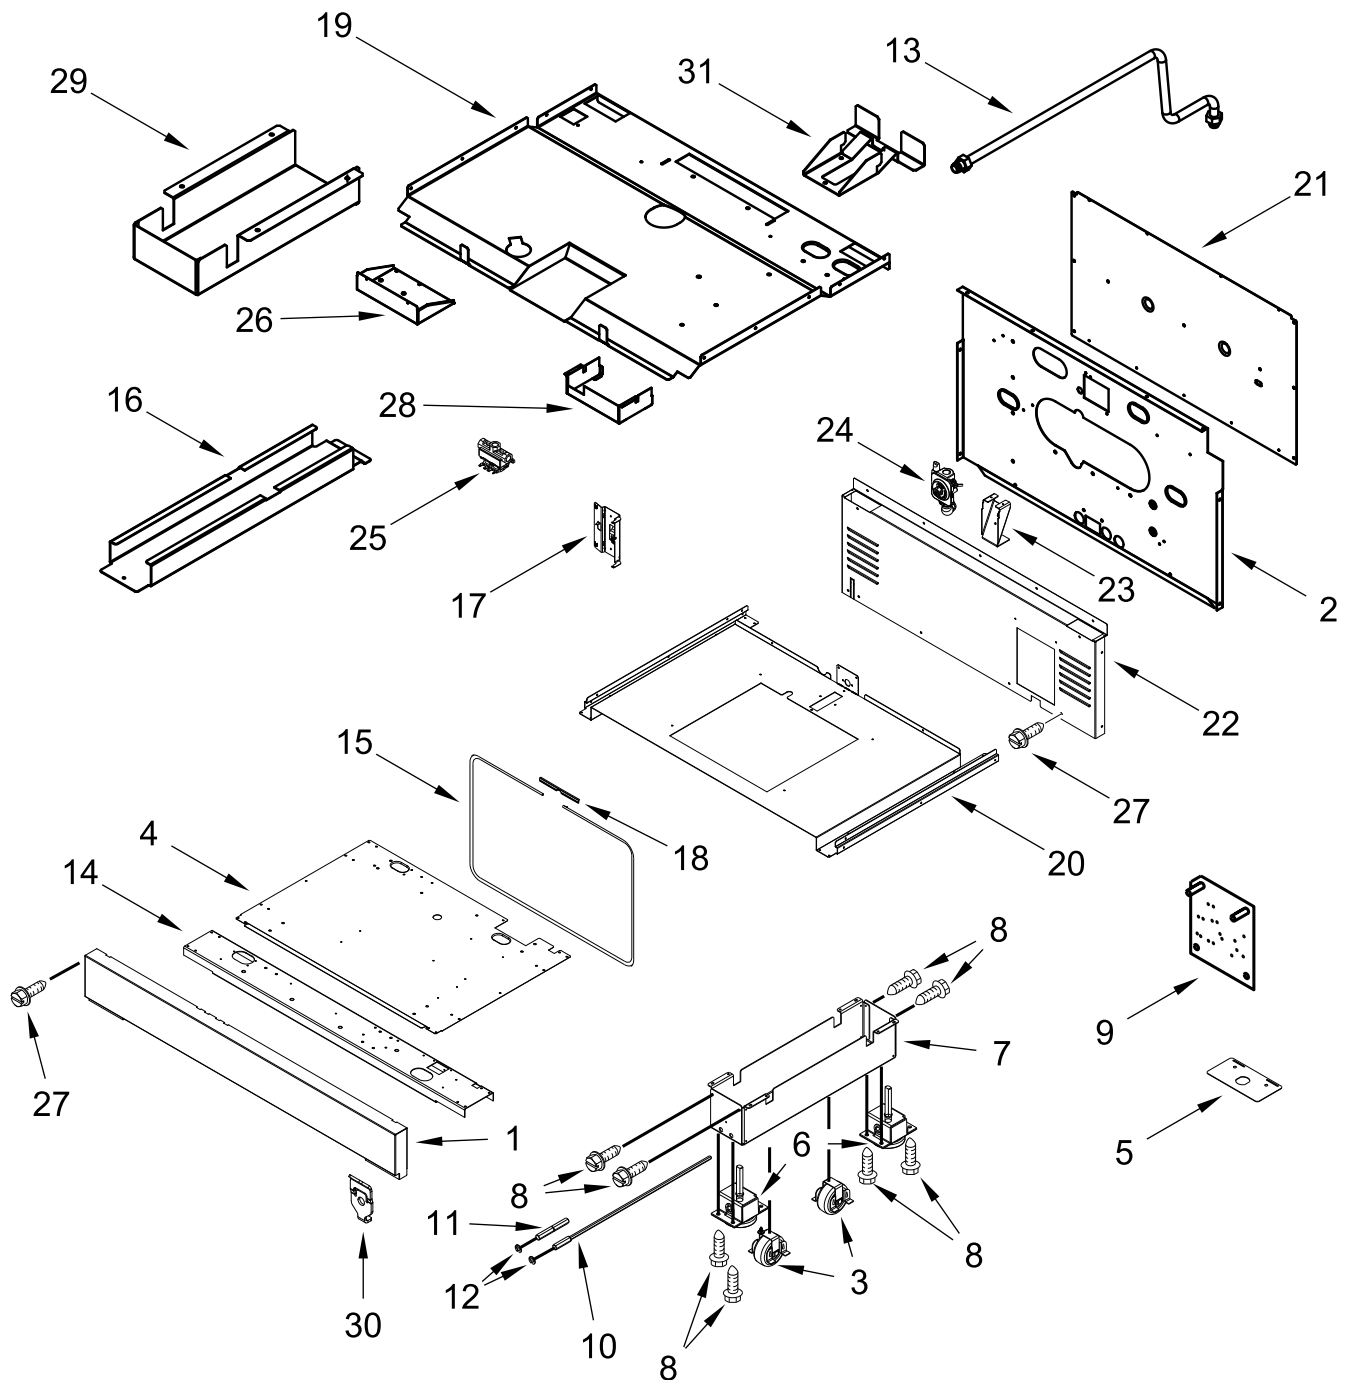

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	14	W11087493	Support, Channel	25	W10145680	Valve, Dual
2	W11324988	Back, Chassis	15	W11115330	Gasket, Oven (36")	26	W11106341	Drawer, Appliance Manager
3	W10138054	Assembly, Roller	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
4	W11095572	Duct, Bottom (36")	17	W10145362	Bracket-Board, DSI	28	W11369237	Cabinet, Appliance Manager
5	W10115855	Holder, Strain Relief	18	W11362015	Retainer, Gasket (9" Long)	29	W11368831	Channel, Wire
6	9760860	Leveler	19	W11324985	Top, Chassis	30	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	20	W11040801	Chassis, Bottom	31	W11190223	Bracket, Bake Alignment
8	4449743	Screw	21	W11103333	Panel, Back Top			
9	W10511278	Module, Spark DSI	22	W11034133	Panel, Back Bottom			
10	W10115869	Shaft, Long	23	W11096823	Bracket, Pressure Regulator			
11	W10115793	Shaft, Short	24	W10896959	Regulator, Pressure			
12	489504	E-Ring						
13	W11181648	Tube, Pressure Regulator						


OVEN PARTS

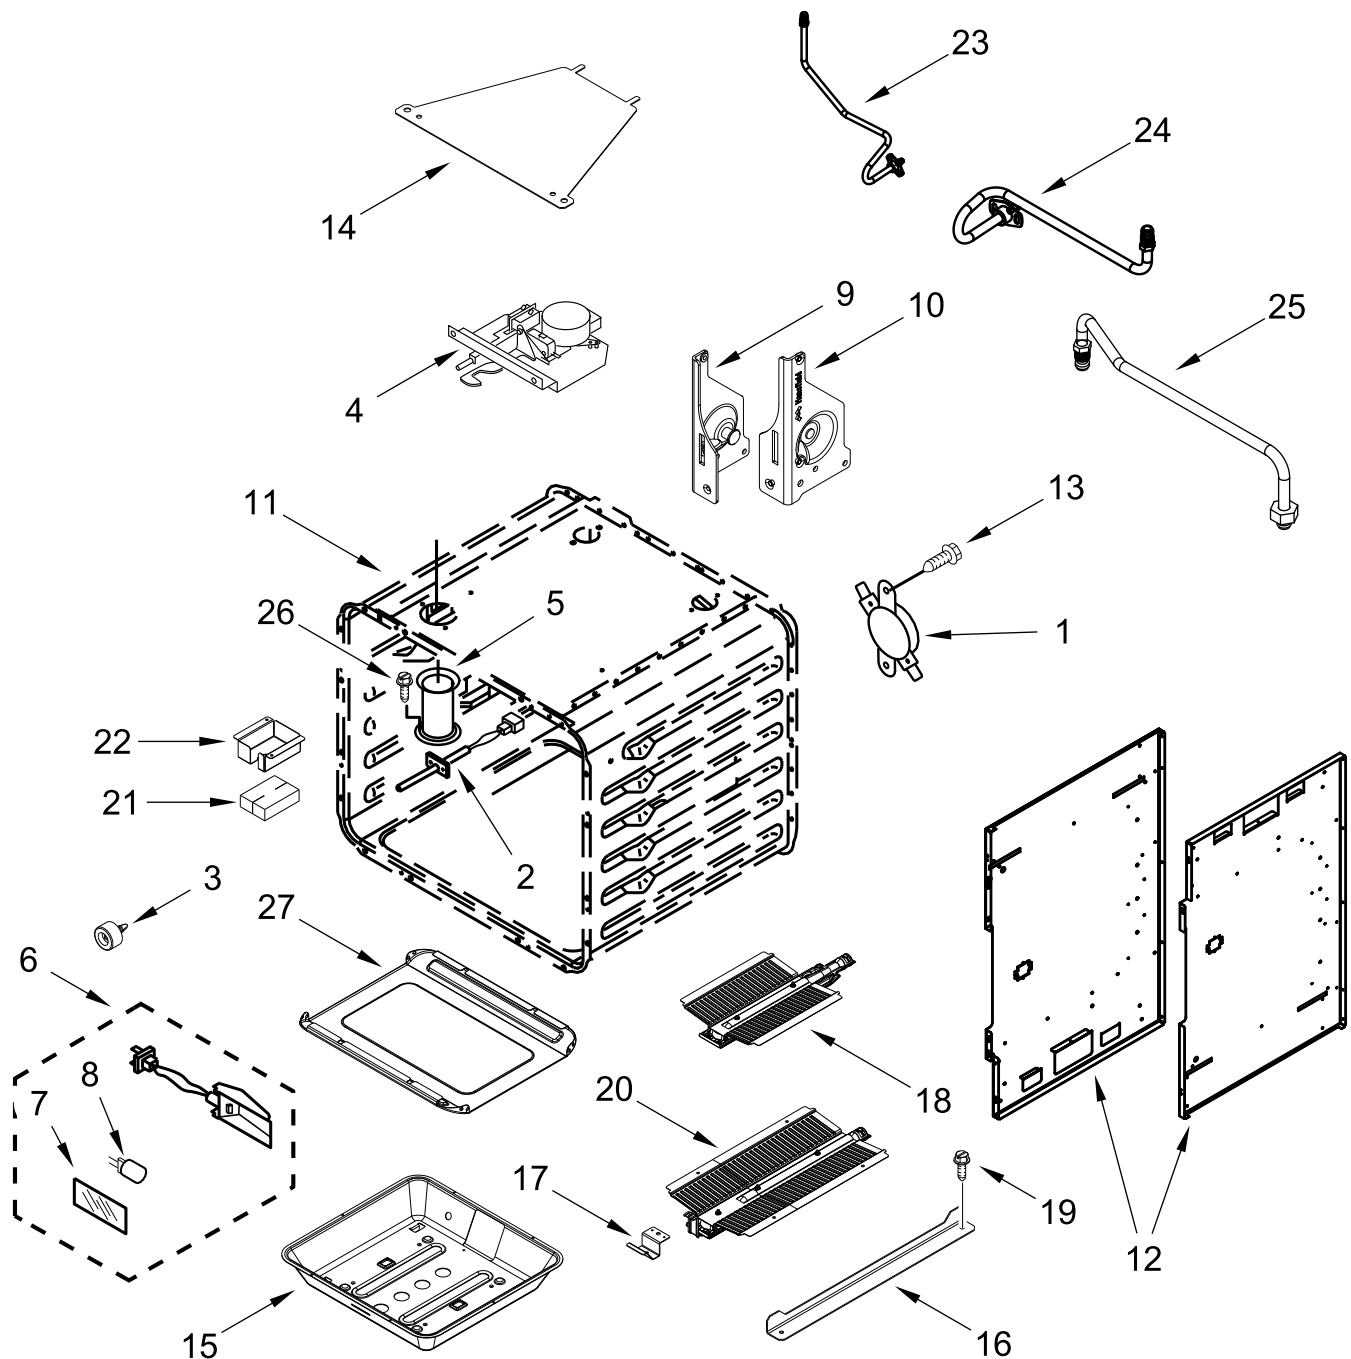

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	13	7101P426-60	Screw	27	W10496809	Pan, Oven Bottom
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	15	W10145744	Support, Bake Pan			
4	W10830016	Latch, Motorized	16	W10317437	Bracket, Broil Standoff	W10282811		Insulation, Wrap
5	W10145743	Tube, Vent	17	W10308040	Bracket, Bake Burner	W10299351		Insulation, Back
6	W11223932	Assembly, Oven Light	18	W10878504	Burner, Bake	W10299356		Insulation, Bottom
7	W10169756	Lens, Light	19	7101P434-60	Screw	3400968		Nut
8	W10169757	Bulb, Light	20	W10311335	Burner, Broil			
9	W11096294	Receiver, Hinge (Left)	21	W10311009	Insulation, Broil Cover			
10	W11096293	Receiver, Hinge (Right)	22	W10310985	Cover, Broil			
11		Liner, Oven (Not Serviced)	23	W11109238	Tube, Broil			
12	W11102297	Chassis, Side (Left)	24	W11106980	Tube, Bake			
	W11102296	Chassis, Side (Right)	25	W11107279	Tube, Gas			
			26	3196176	Screw			


VENTING PARTS

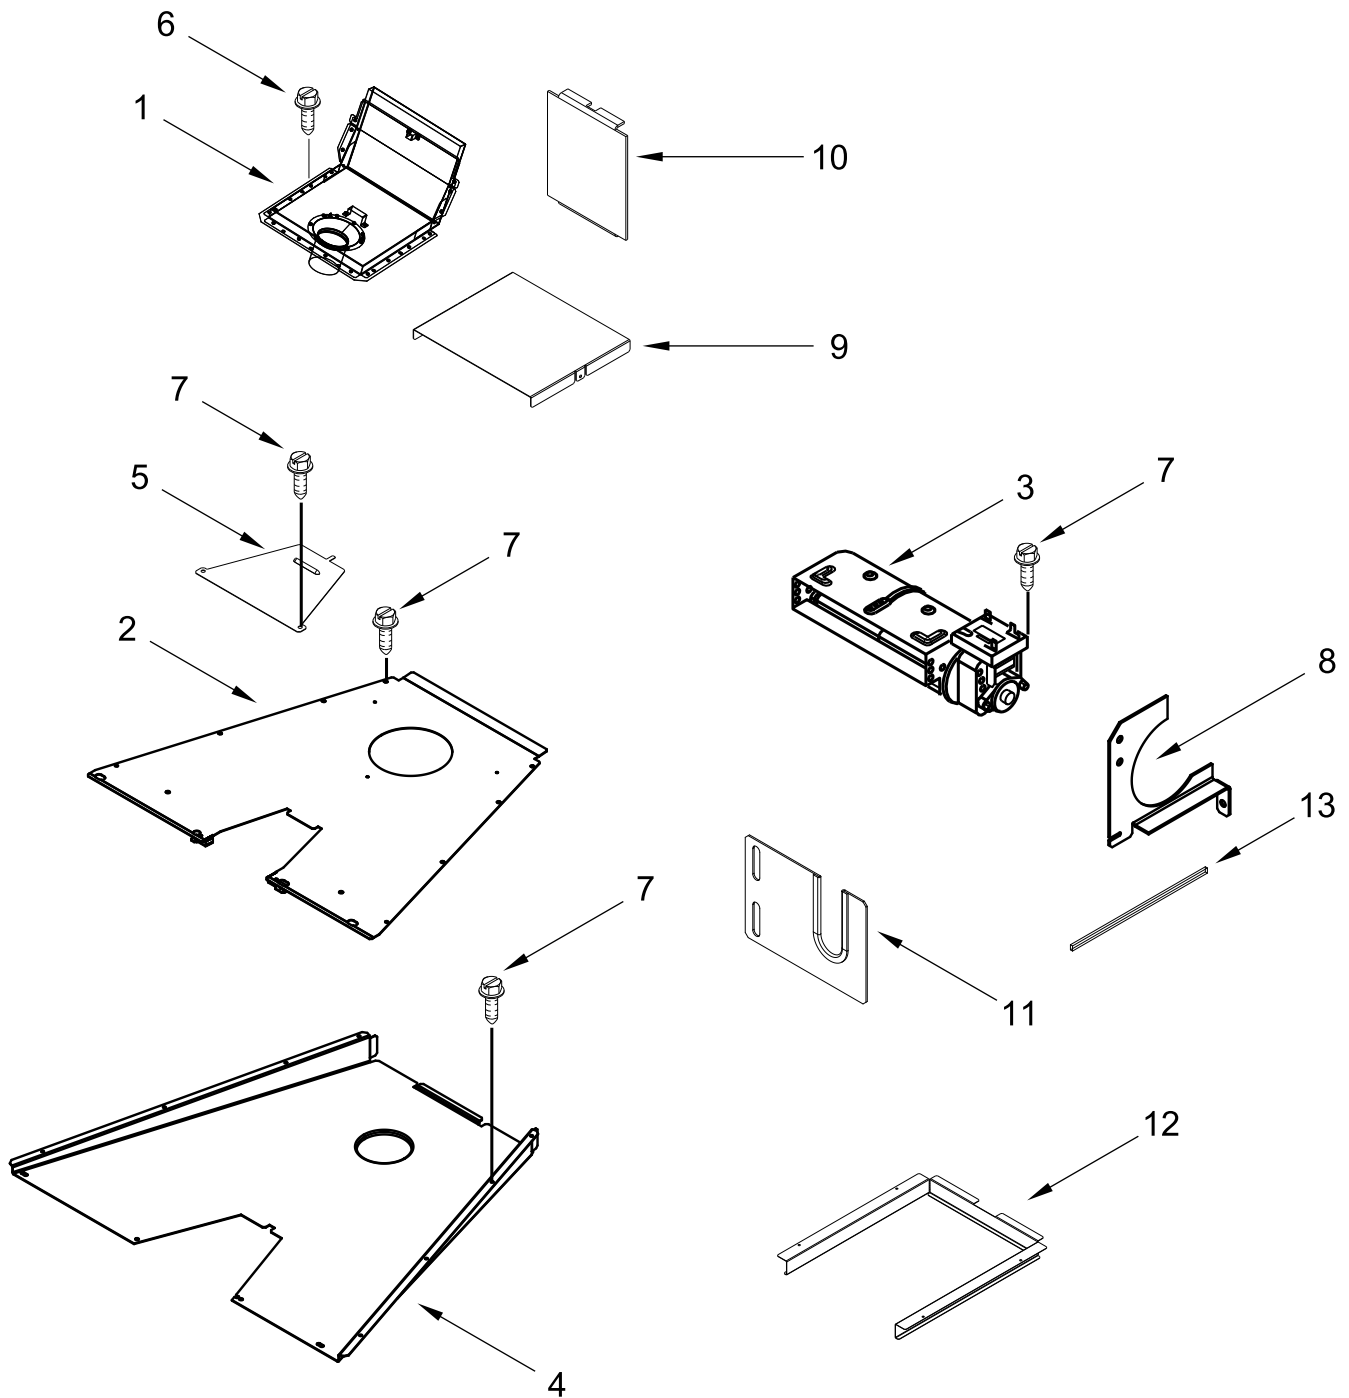

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	9	W10246086	Retainer, Insulation
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10246087	Insulation, Chimney
3	W11200129	Blower	6	3400805	Screw (Zinc)	11	W11106956	Cover, Channel
			7	7101P426-60	Screw	12	W10145363	Duct, Primary Air (30")
			8	W11047754	Bracket, Blower Mount	13	W10919715	Gasket


OVEN DOOR PARTS

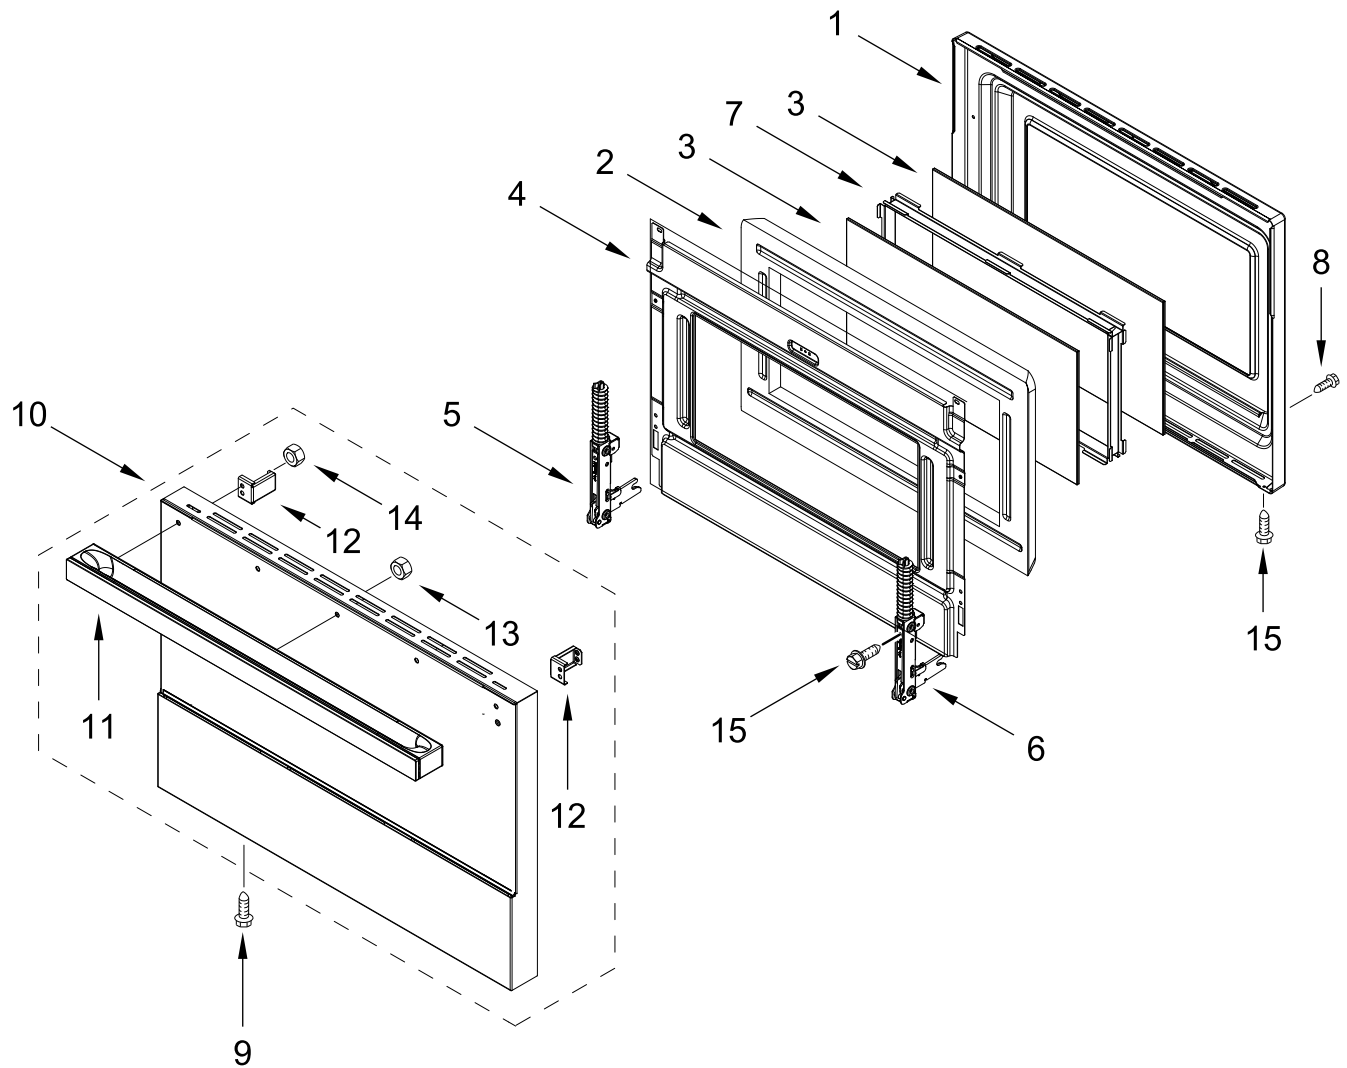

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10898280	Screw	14	999299	Nut
2	W10884823	Insulation, Door	9	W10162096	Screw	15	W10607120	Screw
3	W11036791	Glass, Inner	10	W10870229	Assembly, Outer Door Glass (Includes Handle)			
4	W11194820	Retainer, Glass						
5	W11096984	Hinge, Door (Left)	11	W11411781	Handle, Door			
6	W11096983	Hinge, Door (Right)	12	W11194816	Bracket, Handle			
7	W11194814	Frame, Glass	13	W11198435	Nut			

INTERNAL OVEN PARTS

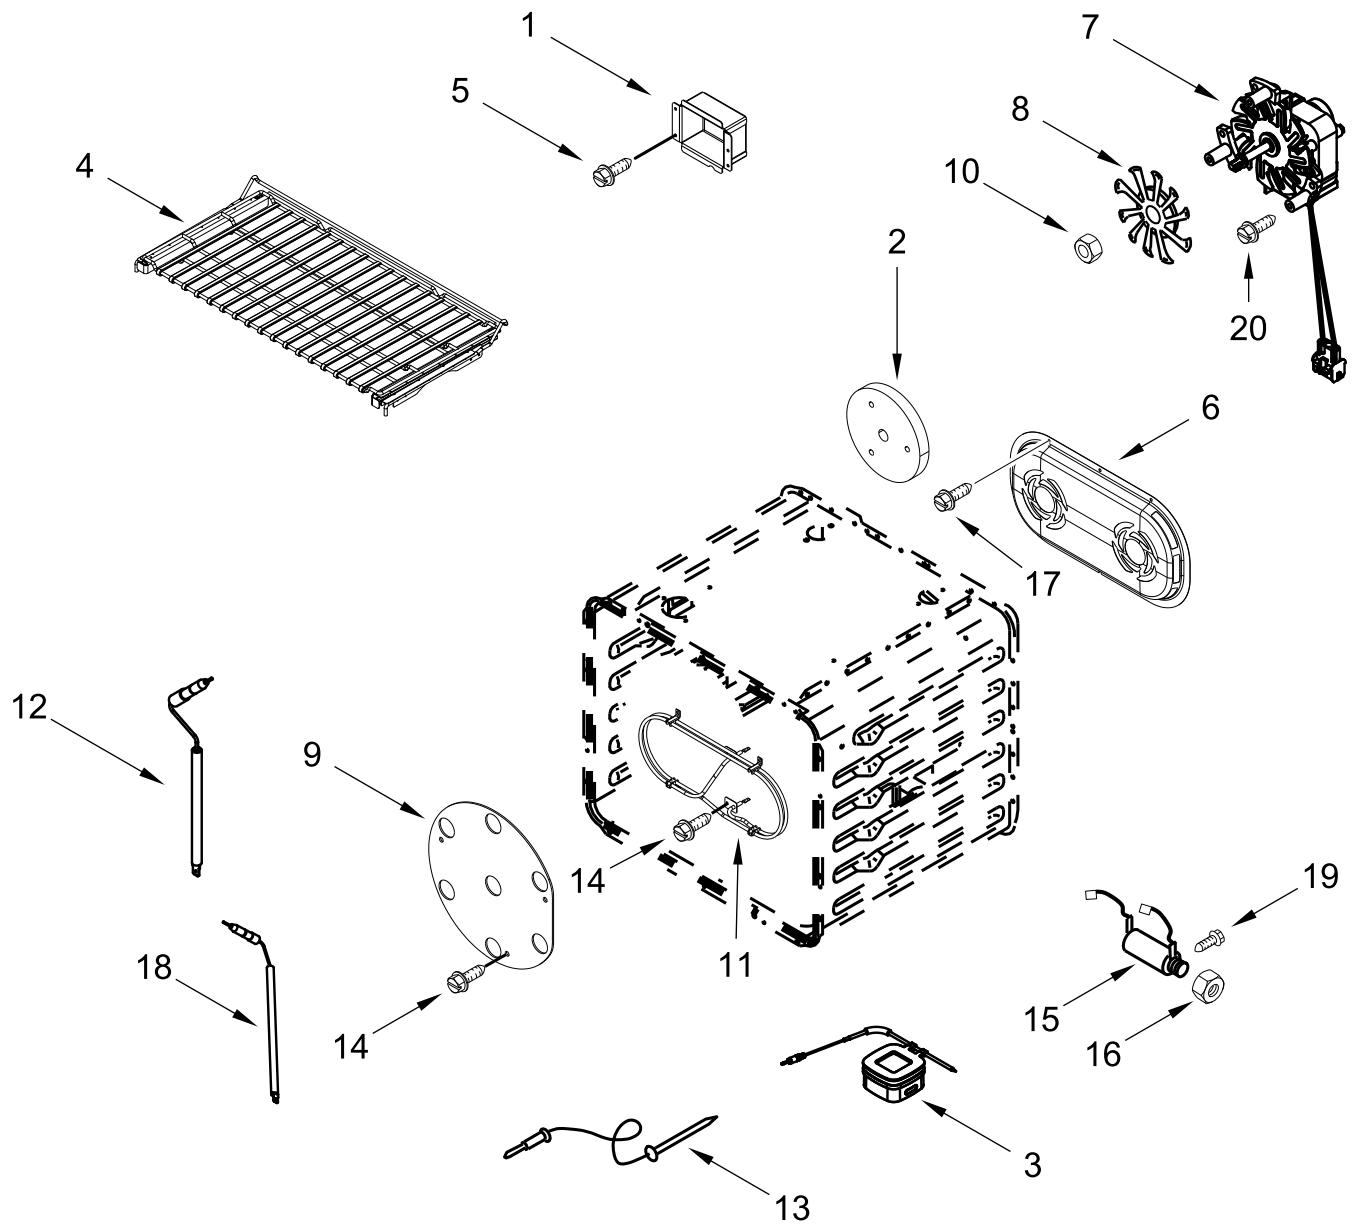

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491350	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
		Backsplash
	W10285448	36" With Shelf
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large