




**GAS RANGE**  
**Includes Griddle**

**MODELS:**

JGRP536HL05 (Stainless)


# BURNER BOX AND GRIDDLE PARTS

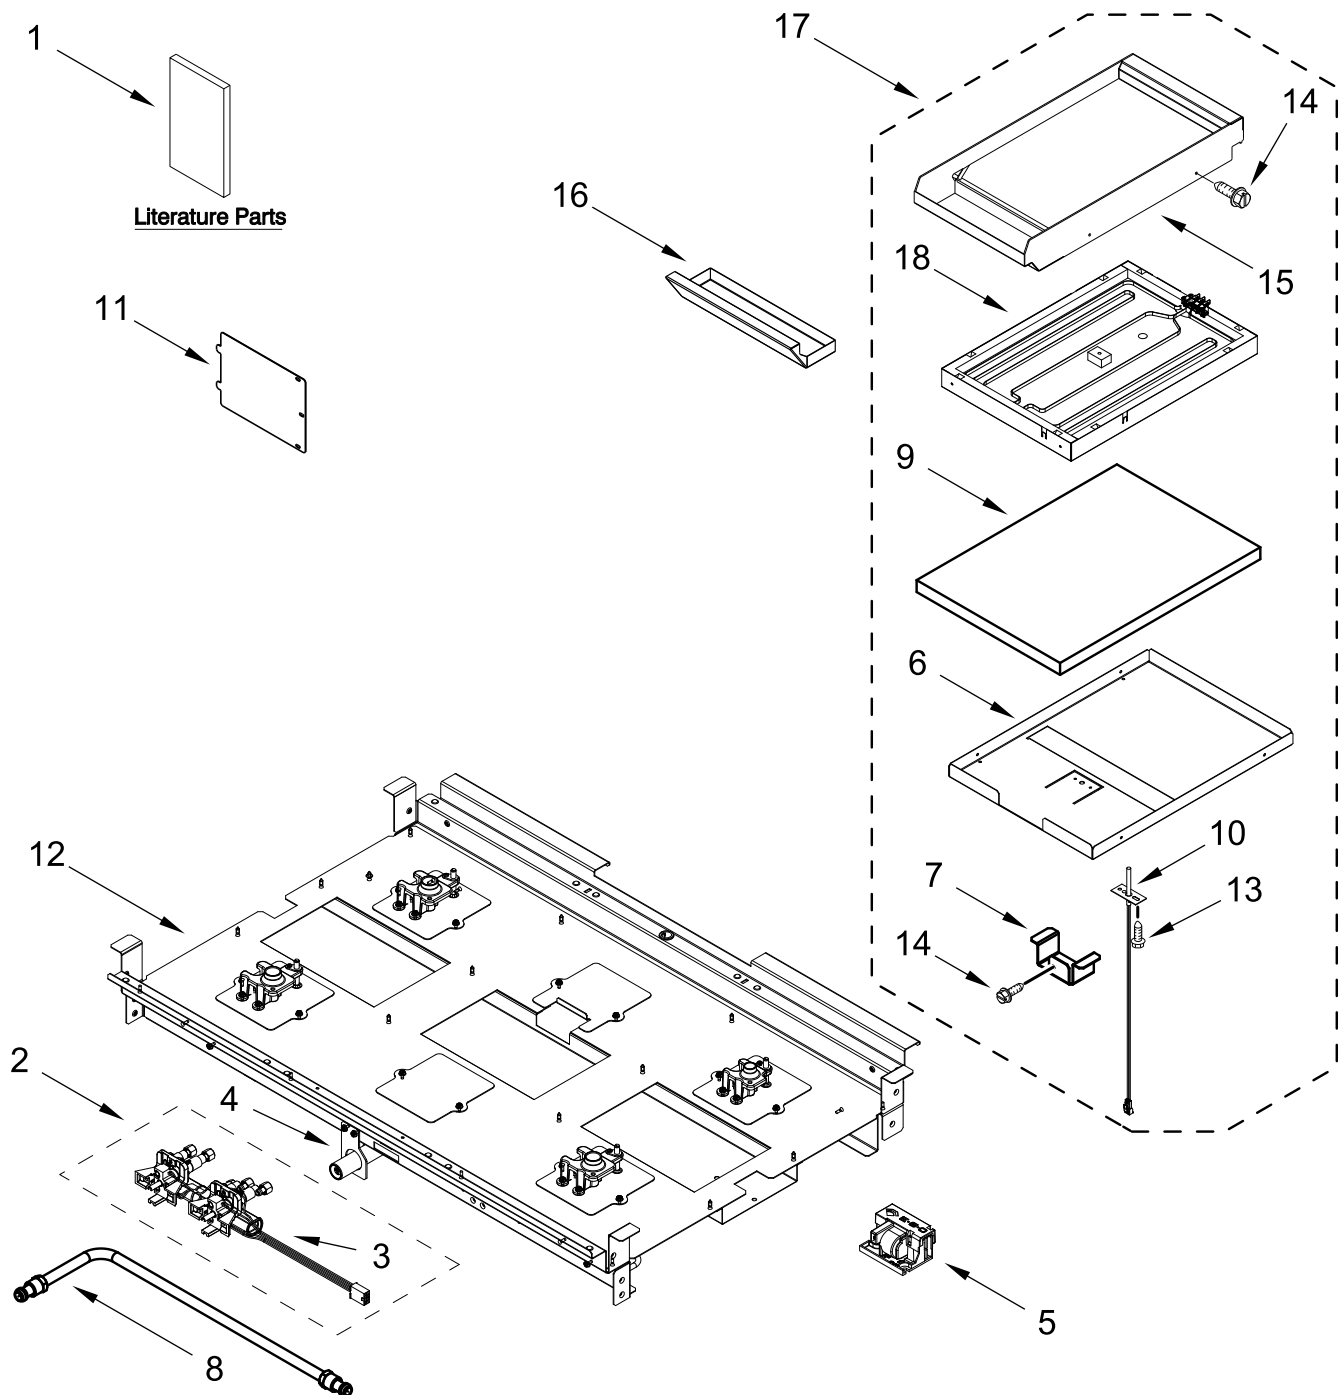

# BURNER BOX AND GRIDDLE PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                                 | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>               | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                    |
|-----------------------------|-----------------|--------------------------------------------------------------------|-----------------------------|-----------------|----------------------------------|-----------------------------|-----------------|---------------------------------------|
| 1                           |                 | Literature Parts                                                   | 4                           | W11121194       | Bracket, Manifold                | 18                          | W10891698       | Element, Griddle                      |
|                             | W11508896       | Use and Care Guide                                                 | 5                           | W11121317       | Module, Spark                    |                             |                 | FOLLOWING PARTS<br>NOT ILLUSTRATED    |
|                             | W11508888       | Installation<br>Instructions                                       | 6                           | W11330430       | Tray, Griddle<br>Insulation      |                             | W11448068       | Harness, Main (36 in)                 |
|                             | W11177312       | Guide, Quick Start                                                 | 7                           | W11121384       | Bracket, Griddle-RTD             |                             | W10903727       | Harness, Griddle                      |
|                             | W11184746       | Guide, Internet<br>Connectivity                                    | 8                           | W10892370       | Tube, Manifold Supply<br>(Left)  |                             | W11200326       | Harness, Cooktop                      |
|                             | W11575703       | Diagram, Wiring<br>(Cooktop)                                       |                             | W10892443       | Tube, Manifold Supply<br>(Right) |                             | W10780278       | Harness, Door Lock                    |
|                             | W11565476       | Diagram, Wiring<br>(Oven)                                          | 9                           | W11121383       | Insulation, Griddle              |                             | W11200325       | Harness,<br>Communication             |
|                             | W11202275       | Sheet, Tech                                                        | 10                          | W10891584       | Sensor, Griddle                  |                             | W11242785       | Harness, WIFI                         |
| 2                           | W10893053       | Assembly, Valve<br>Manifold<br><br>(Left Front and Left<br>Rear)   | 11                          | W10115843       | Cover, Ignition                  |                             | 313438          | Clip, Harness                         |
|                             |                 |                                                                    | 12                          |                 | Box, Burner (Not<br>Serviced)    |                             | W10624584       | Cord, Power                           |
|                             | W10893062       | Assembly, Valve<br>Manifold<br><br>(Right Front and Right<br>Rear) | 13                          | 3196160         | Screw                            |                             | 4450800         | Screw, Grounding                      |
|                             |                 |                                                                    | 14                          | W10162096       | Screw                            |                             | W11311196       | Ignitor Wire,<br>Wire-Electrode Bake  |
|                             |                 |                                                                    | 15                          | W11360151       | Module, Griddle                  |                             | W11311197       | Ignitor Wire,<br>Wire-Electrode Broil |
|                             |                 |                                                                    | 16                          | W10276497       | Tray, Griddle Drip               |                             | W10253333       | Bracket, Anti-Tip                     |
| 3                           | W11106300       | Switch, Harness                                                    | 17                          | W11505236       | Griddle Module<br>Assembly       |                             | 7101P485-60     | Screw, Anti-Tip Kit                   |
|                             |                 |                                                                    |                             |                 |                                  |                             | W11422176       | Kit, LP Conversion                    |


# COOKTOP, BURNER, AND GRIDDLE PARTS

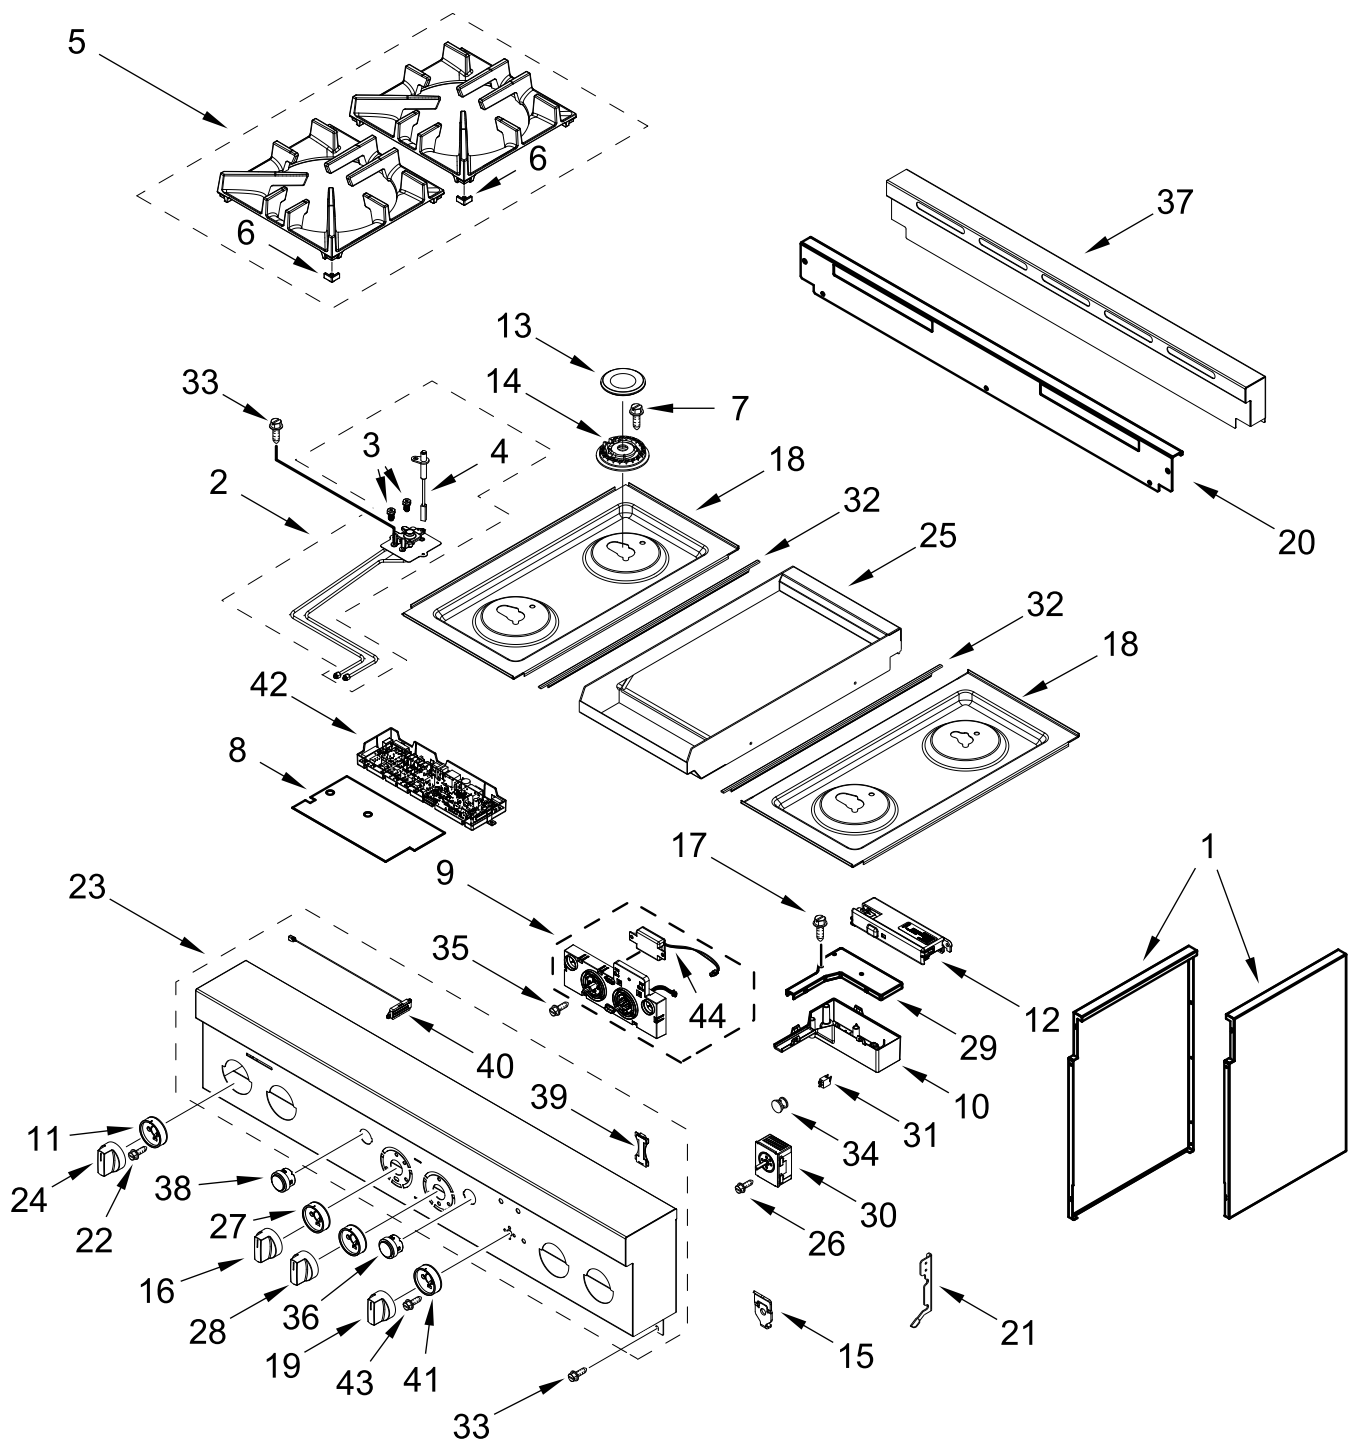

# COOKTOP, BURNER, AND GRIDDLE PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                          | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                          | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                                 |
|-----------------------------|-----------------|-------------------------------------------------------------|-----------------------------|-----------------|-------------------------------------------------------------|-----------------------------|-----------------|--------------------------------------------------------------------|
| 1                           | W11106881       | Panel, Cabinet Side (Left)                                  | 8                           | W11281269       | Barrier, Appliance Manager                                  | 24                          |                 | Knob, Burner (For 4 Cooktop Burners)                               |
|                             | W11106880       | Panel, Cabinet Side (Right)                                 | 9                           | W11436327       | Interface, User                                             |                             | W11496088       | Stainless                                                          |
| 2                           | W10892793       | Assembly, Orifice Holder (Left Front)                       | 10                          | W11205795       | Cover, WIFI Outer                                           | 25                          |                 | Assembly, Griddle Module (Part Number Included on Burner Box Page) |
|                             | W10892494       | Assembly, Orifice Holder (Left Rear)                        | 11                          | W11090283       | Bezel (For 4 Cooktop Burners)                               | 26                          | 3196537         | Screw                                                              |
|                             | W10892475       | Assembly, Orifice Holder (Right Front)                      | 12                          | W11110768       | Assembly, WIFI Module                                       | 27                          |                 | Bezel, Oven (For 2 Oven Knobs)                                     |
|                             | W10892730       | Assembly, Orifice Holder (Right Rear)                       | 13                          |                 | Cap, Burner                                                 |                             | W10914998       | Stainless                                                          |
| 3                           | W10892422       | Orifice, Main (17.4K) (Left Front)                          | 14                          | W11121391       | Black (Set of 4)                                            | 28                          |                 | Knob, Oven Temperature                                             |
|                             | W10892418       | Orifice, Main (15.4K) (Left Rear and Right Front)           |                             | W10891987       | Spreader, Flame (High) (Left Front, Left Rear, Right Front) |                             | W11496091       | Stainless                                                          |
|                             | W10892440       | Orifice, Main (7.2K) (Right Rear)                           |                             | W10892022       | Spreader, Flame (Low) (Right Rear)                          | 29                          | W11205794       | Cover, WIFI Inner                                                  |
|                             | W10892435       | Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front) | 15                          | W11036559       | Spring Clip, Range                                          | 30                          | W11033497       | Control, Griddle                                                   |
|                             | W10892429       | Orifice, Simmer (2.0K) (Right Rear)                         | 16                          |                 | Knob, Oven Mode                                             | 31                          | W10116114       | Light, Indicator Housing                                           |
| 4                           | W11238757       | Igniter (Left Front, Left Rear, Right Front)                |                             | W11496094       | Stainless                                                   | 32                          | W10291193       | Trim, L-Strip                                                      |
|                             | W11238756       | Igniter (Right Rear)                                        | 17                          | 3196560         | Screw                                                       | 33                          | 7101P426-60     | Screw                                                              |
| 5                           |                 | Assembly, Grate                                             | 18                          |                 | Panel, Cooktop                                              | 34                          | W10294500       | Lens, Indicator Light                                              |
|                             | W11291176       | Black (Set of 2)                                            |                             | W10803515       | Black (Left)                                                | 35                          | 3400814         | Screw                                                              |
| 6                           | W11042504       | Bumper, Grate                                               |                             | W10804371       | Black (Right)                                               | 36                          | W11090650       | Button Assembly, Oven Start                                        |
| 7                           | W11323260       | Screw                                                       | 19                          |                 | Knob, Griddle                                               | 37                          | W11476245       | Trim, Island                                                       |
|                             |                 |                                                             |                             | W11496089       | Stainless                                                   | 38                          | W11090651       | Button Assembly, Oven Light                                        |
|                             |                 |                                                             | 20                          | W10323250       | Insert, Island Trim                                         | 39                          | W10896369       | Assembly, Light Pipe                                               |
|                             |                 |                                                             | 21                          | W10130760       | Bracket, Moving Console (Left)                              | 40                          | W11130078       | Antenna, WIFI                                                      |
|                             |                 |                                                             |                             | W10130759       | Bracket, Moving Console (Right)                             | 41                          | W11104966       | Bezel, Griddle                                                     |
|                             |                 |                                                             | 22                          | W11328357       | Screw                                                       | 42                          | W11543348       | Manager, Powermax Appliance                                        |
|                             |                 |                                                             | 23                          | W10878253       | Panel, Cooktop                                              | 43                          | 7101P309-60     | Screw                                                              |
|                             |                 |                                                             |                             |                 |                                                             | 44                          | W10568405       | Assembly, Speaker                                                  |


# CHASSIS PARTS

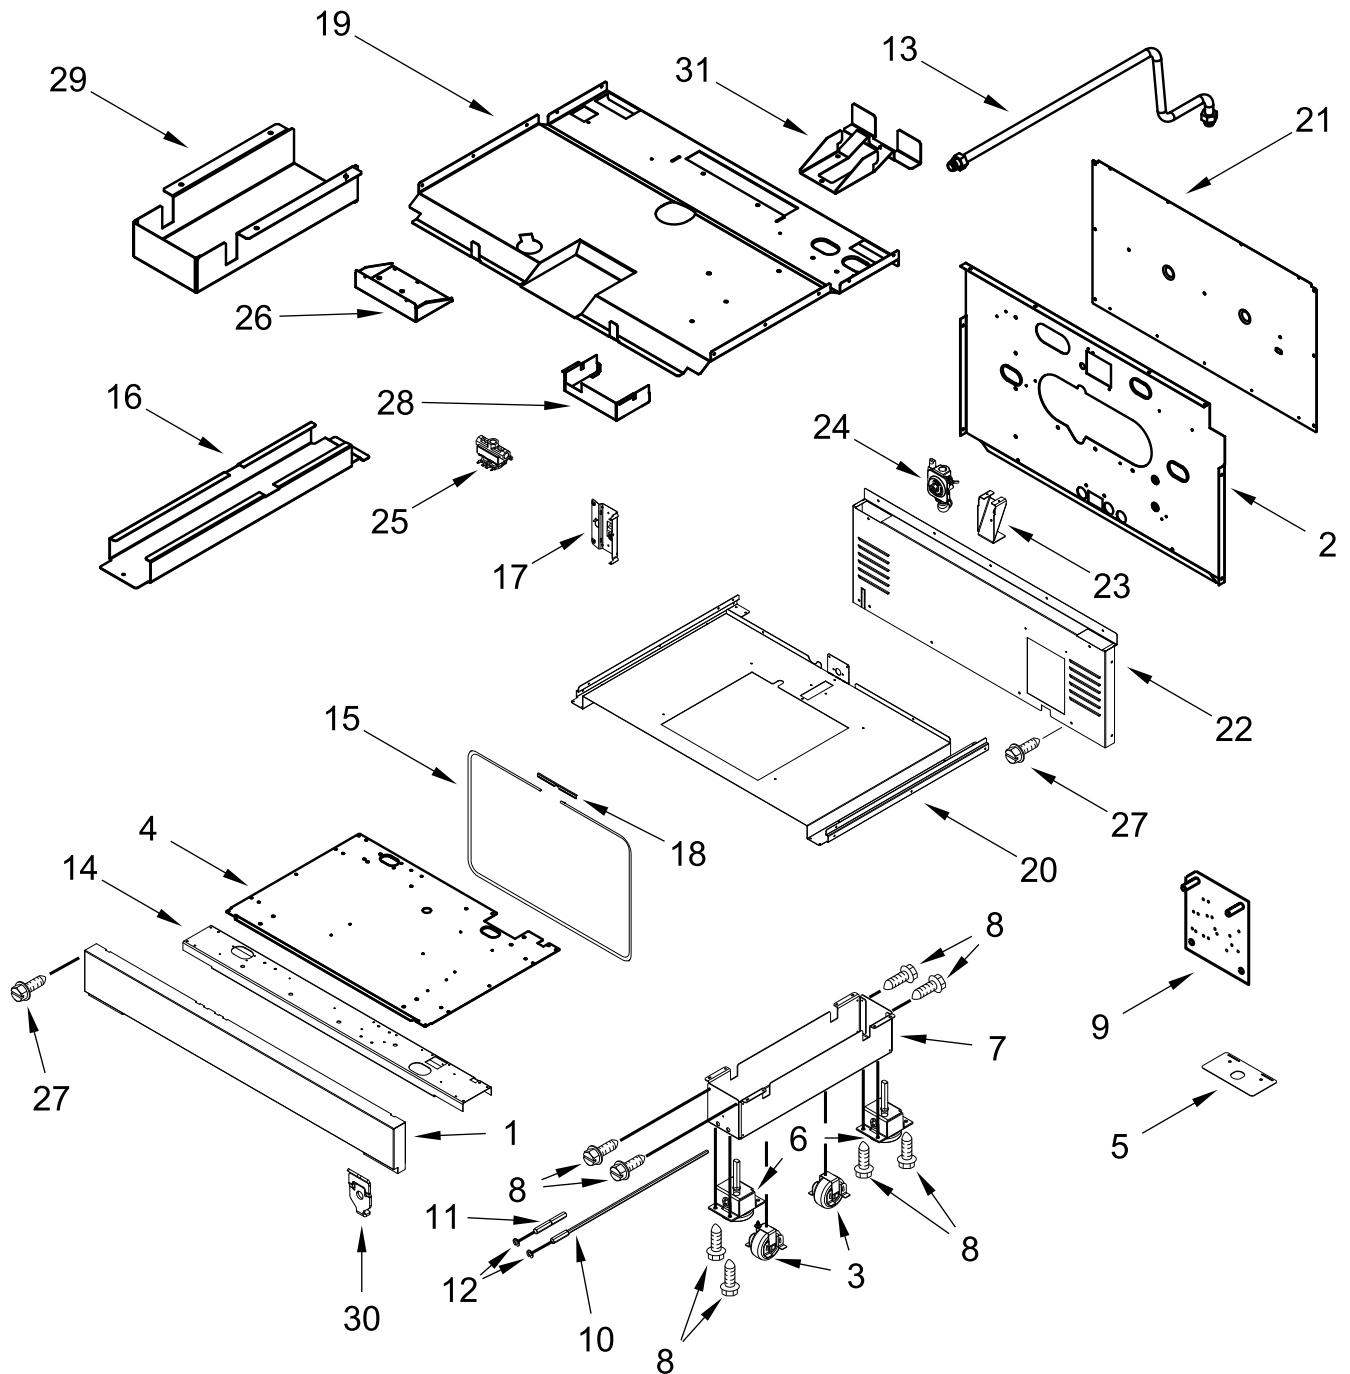

# CHASSIS PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>       | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>         |
|-----------------------------|-----------------|--------------------------|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|----------------------------|
| 1                           | W10883794       | Kickplate                | 14                          | W11087493       | Support, Channel             | 25                          | W10145680       | Valve, Dual                |
| 2                           | W11324988       | Back, Chassis            | 15                          | W11115330       | Gasket, Oven (36 in)         | 26                          | W11106341       | Drawer, Appliance Manager  |
| 3                           | W10138054       | Assembly, Roller         | 16                          | W11050145       | Duct-Chassis, Rear           | 27                          | 7101P426-60     | Screw                      |
| 4                           | W11095572       | Duct, Bottom (36 in)     | 17                          | W10145362       | Bracket-Board, DSI           | 28                          | W11369237       | Cabinet, Appliance Manager |
| 5                           | W10115855       | Holder, Strain Relief    | 18                          | W11362015       | Retainer, Gasket (9 in Long) | 29                          | W11368831       | Channel, Wire              |
| 6                           | 9760860         | Leveler                  | 19                          | W11324985       | Top, Chassis                 | 30                          | W11036559       | Spring Clip, Range         |
| 7                           | W10908710       | Base, Leveling Leg       | 20                          | W11040801       | Chassis, Bottom              | 31                          | W11190223       | Bracket, Bake Alignment    |
| 8                           | 4449743         | Screw                    | 21                          | W11103333       | Panel, Back Top              |                             |                 |                            |
| 9                           | W10511278       | Module, Spark DSI        | 22                          | W11034133       | Panel, Back Bottom           |                             |                 |                            |
| 10                          | W10115869       | Shaft, Long              | 23                          | W11096823       | Bracket, Pressure Regulator  |                             |                 |                            |
| 11                          | W10115793       | Shaft, Short             | 24                          | W10896959       | Regulator, Pressure          |                             |                 |                            |
| 12                          | 489504          | E-Ring                   |                             |                 |                              |                             |                 |                            |
| 13                          | W11181648       | Tube, Pressure Regulator |                             |                 |                              |                             |                 |                            |

# OVEN PARTS

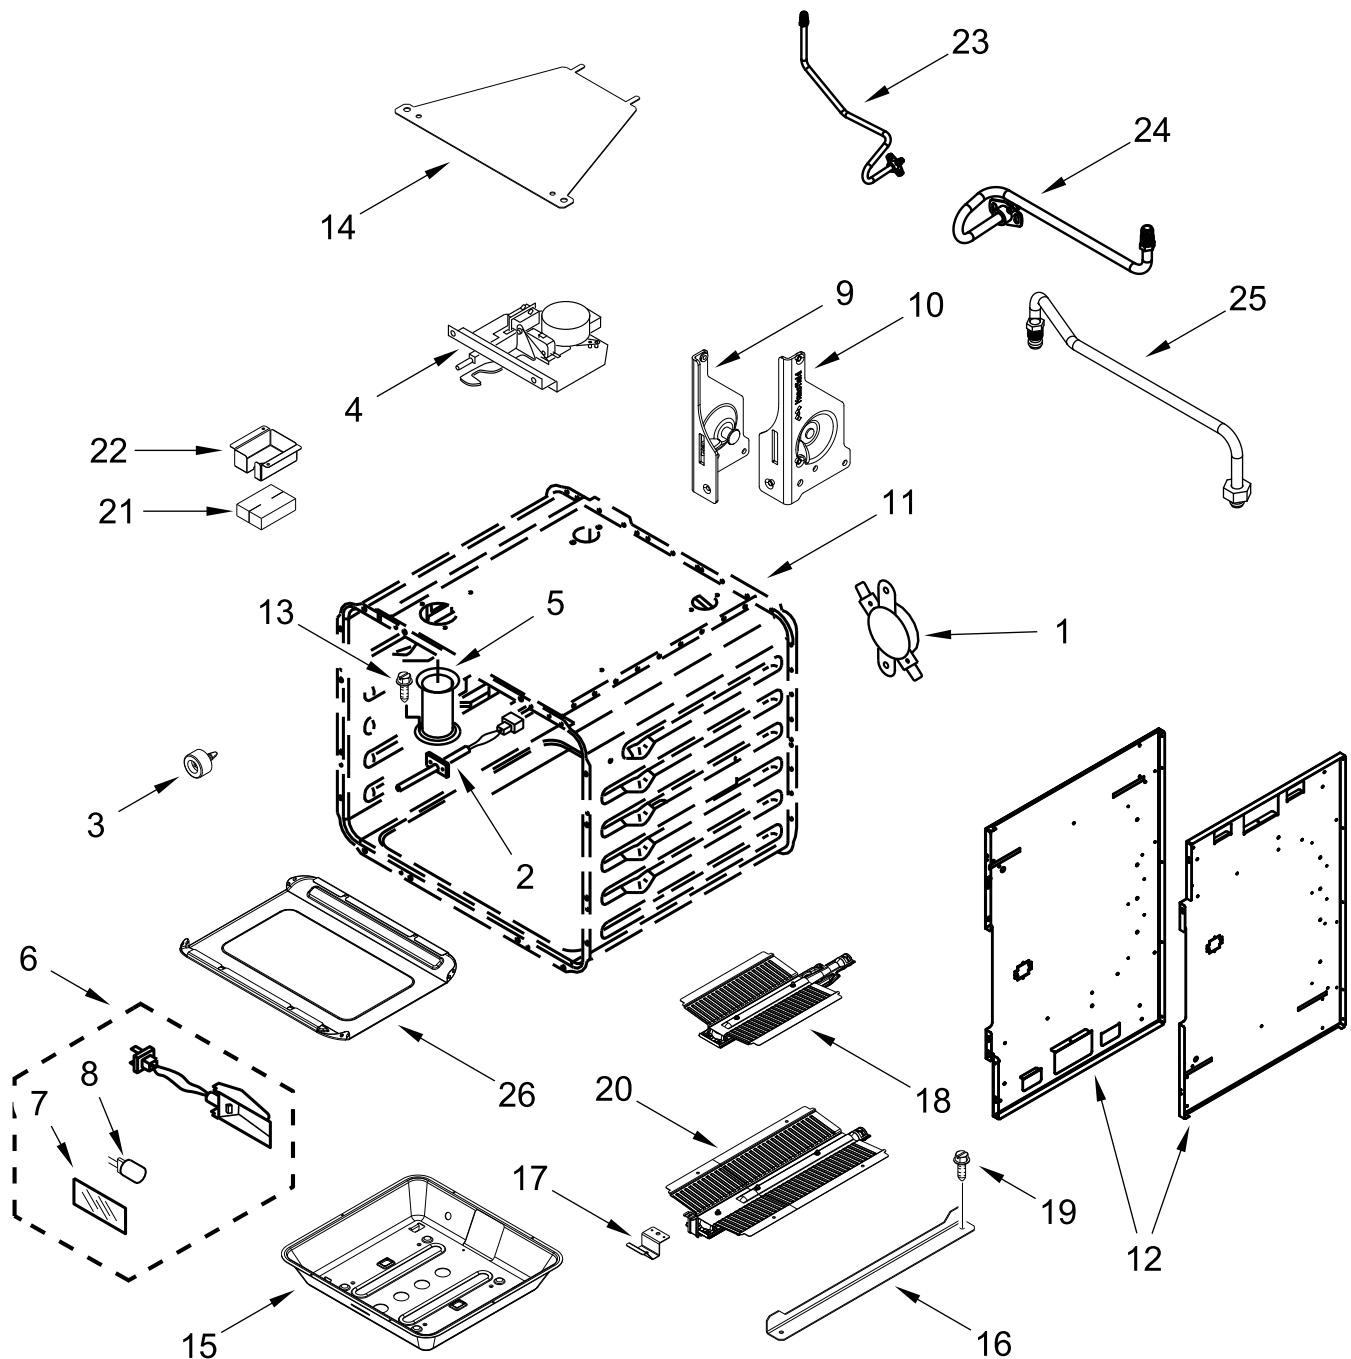




# OVEN PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>            | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>      | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                 |
|-----------------------------|-----------------|-------------------------------|-----------------------------|-----------------|-------------------------|-----------------------------|-----------------|------------------------------------|
| 1                           | 4450249         | Thermostat (TOD)              | 12                          | W11102297       | Chassis, Side (Left)    | 22                          | W10310985       | Cover, Broil                       |
| 2                           | W10622170       | Probe, Sensor                 |                             | W11102296       | Chassis, Side (Right)   | 23                          | W11109238       | Tube, Broil                        |
| 3                           | W10351278       | Bumper and Screw              | 13                          | 3196176         | Screw                   | 24                          | W11106980       | Tube, Bake                         |
| 4                           | W10830016       | Latch, Motorized              | 14                          | W10160858       | Cover, Latch            | 25                          | W11107279       | Tube, Gas                          |
| 5                           | W10145743       | Tube, Vent                    | 15                          | W10145744       | Support, Bake Pan       | 26                          | W10496809       | Pan, Oven Bottom                   |
| 6                           | W11223932       | Assembly, Oven Light          | 16                          | W10317437       | Bracket, Broil Standoff |                             |                 | FOLLOWING PARTS<br>NOT ILLUSTRATED |
| 7                           | W10169756       | Lens, Light                   | 17                          | W10308040       | Bracket, Bake Burner    |                             | W10282811       | Insulation, Wrap                   |
| 8                           | W10169757       | Bulb, Light                   | 18                          | W10878504       | Burner, Bake            |                             | W10299351       | Insulation, Back                   |
| 9                           | W11096294       | Receiver, Hinge (Left)        | 19                          | 7101P434-60     | Screw                   |                             | W10299356       | Insulation, Bottom                 |
| 10                          | W11096293       | Receiver, Hinge<br>(Right)    | 20                          | W10311335       | Burner, Broil           |                             | 3400968         | Nut                                |
| 11                          |                 | Liner, Oven (Not<br>Serviced) | 21                          | W10311009       | Insulation, Broil Cover |                             |                 |                                    |


# VENTING PARTS

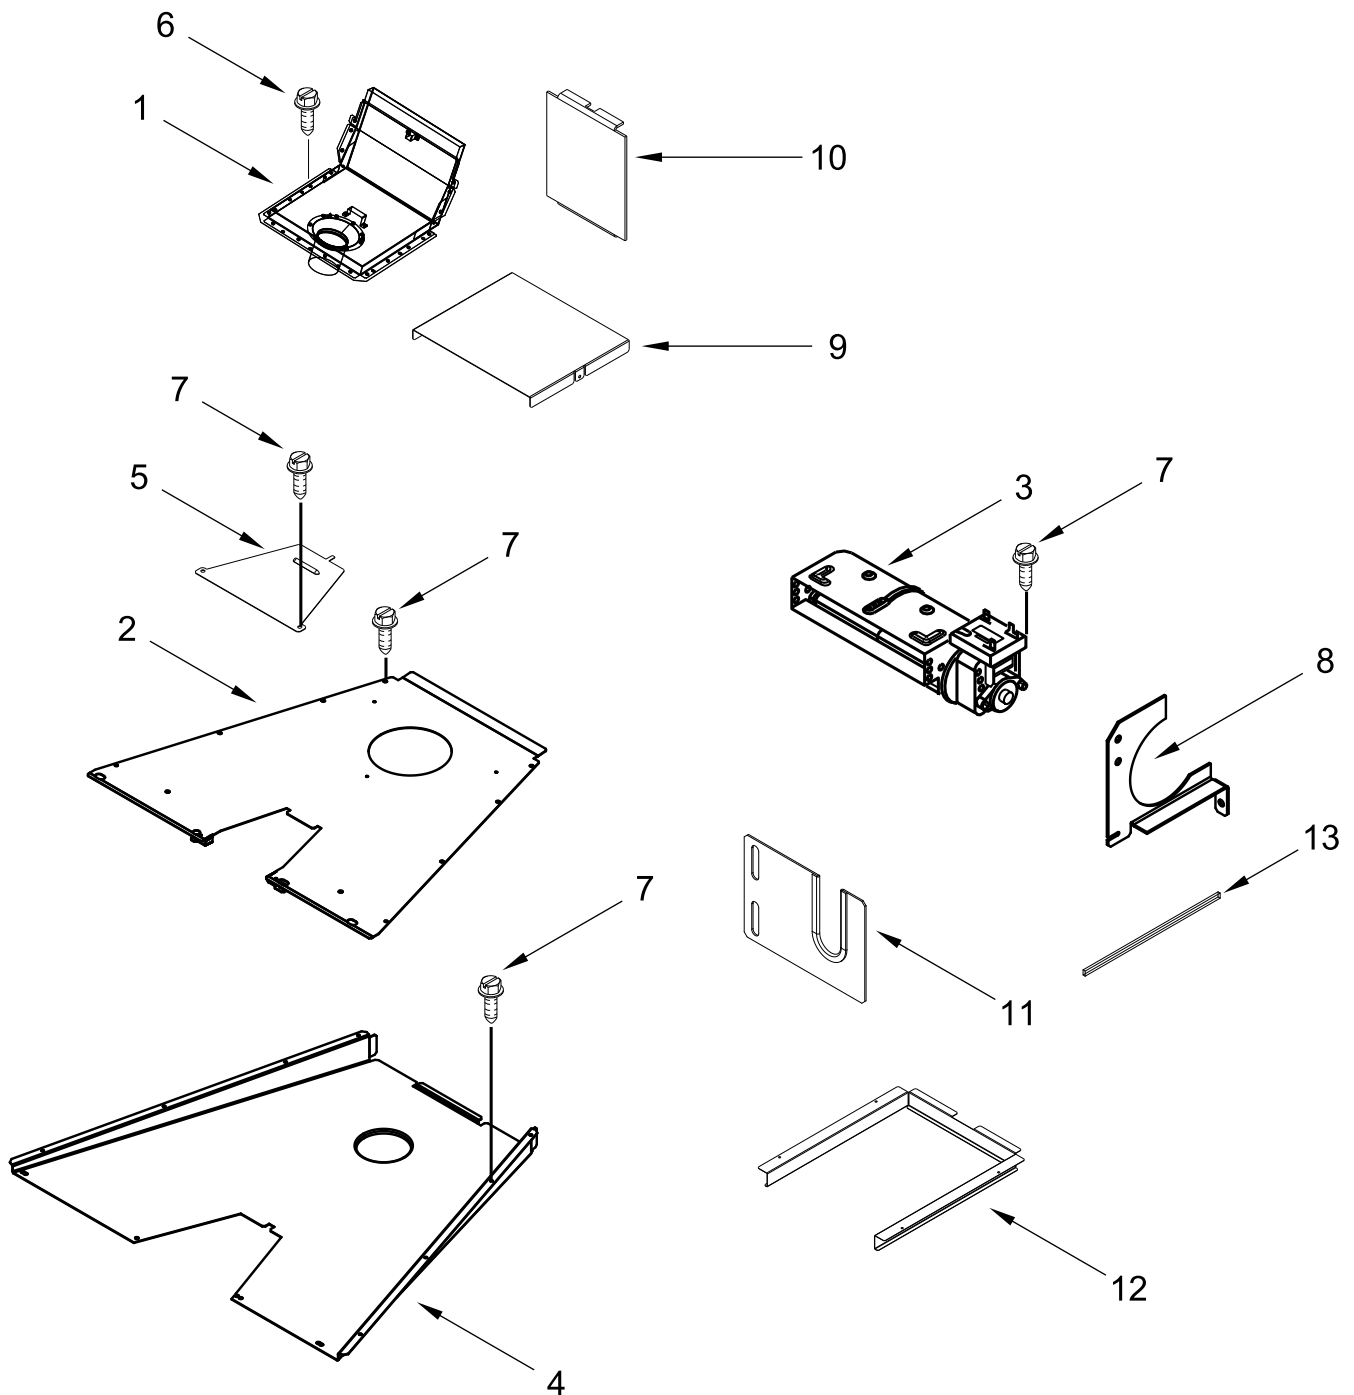

# VENTING PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                   | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>    | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           |
|-----------------------------|-----------------|--------------------------------------|-----------------------------|-----------------|-----------------------|-----------------------------|-----------------|------------------------------|
| 1                           | W10340579       | Vent, Chimney Box<br>(30 in / 36 in) | 6                           | 3400805         | Screw (Zinc)          | 12                          | W10145363       | Duct, Primary Air (30<br>in) |
| 2                           | W11105221       | Vent, Cooling Top (30<br>in)         | 7                           | 7101P426-60     | Screw                 | 13                          | W10919715       | Gasket                       |
| 3                           | W11200129       | Blower                               | 8                           | W11047754       | Bracket, Blower Mount |                             |                 |                              |
| 4                           | W11091676       | Vent, Cooling Bottom<br>(30 in)      | 9                           | W10246086       | Retainer, Insulation  |                             |                 |                              |
| 5                           | W11109518       | Plate, Cooling Latch                 | 10                          | W10246087       | Insulation, Chimney   |                             |                 |                              |
|                             |                 |                                      | 11                          | W11106956       | Cover, Channel        |                             |                 |                              |


# OVEN DOOR PARTS

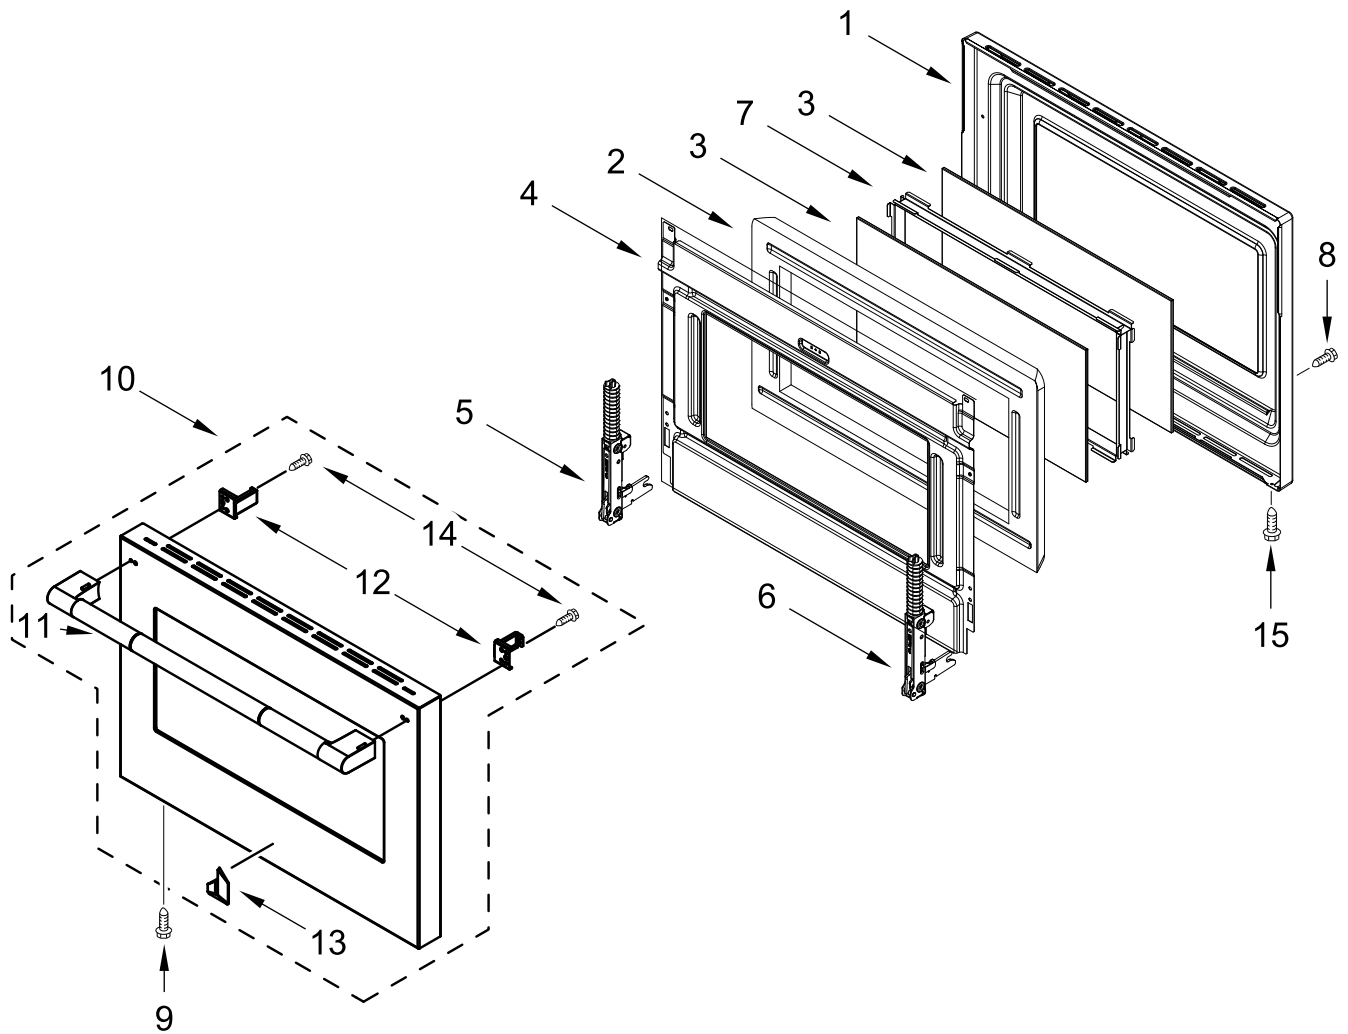

# OVEN DOOR PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>  | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                 | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------------------|-----------------|---------------------|-----------------------------|-----------------|----------------------------------------------------|-----------------------------|-----------------|--------------------|
| 1                           | W11036772       | Liner, Door         | 8                           | W10898280       | Screw                                              | 13                          |                 | Badge              |
| 2                           | W10884823       | Insulation, Door    | 9                           | W10162096       | Screw                                              |                             | W11238656       | Stainless          |
| 3                           | W11036791       | Glass, Inner        | 10                          | W10799310       | Assembly, Outer<br>Door Glass (Includes<br>Handle) | 14                          | W10276043       | Screw              |
| 4                           | W11194820       | Retainer, Glass     |                             |                 |                                                    | 15                          | W10607120       | Screw              |
| 5                           | W11096978       | Hinge, Door (Left)  | 11                          | W11102828       | Handle, Door                                       |                             |                 |                    |
| 6                           | W11096977       | Hinge, Door (Right) | 12                          | W11197830       | Bracket, Handle                                    |                             |                 |                    |
| 7                           | W11194814       | Frame, Glass        |                             |                 |                                                    |                             |                 |                    |

# INTERNAL OVEN PARTS

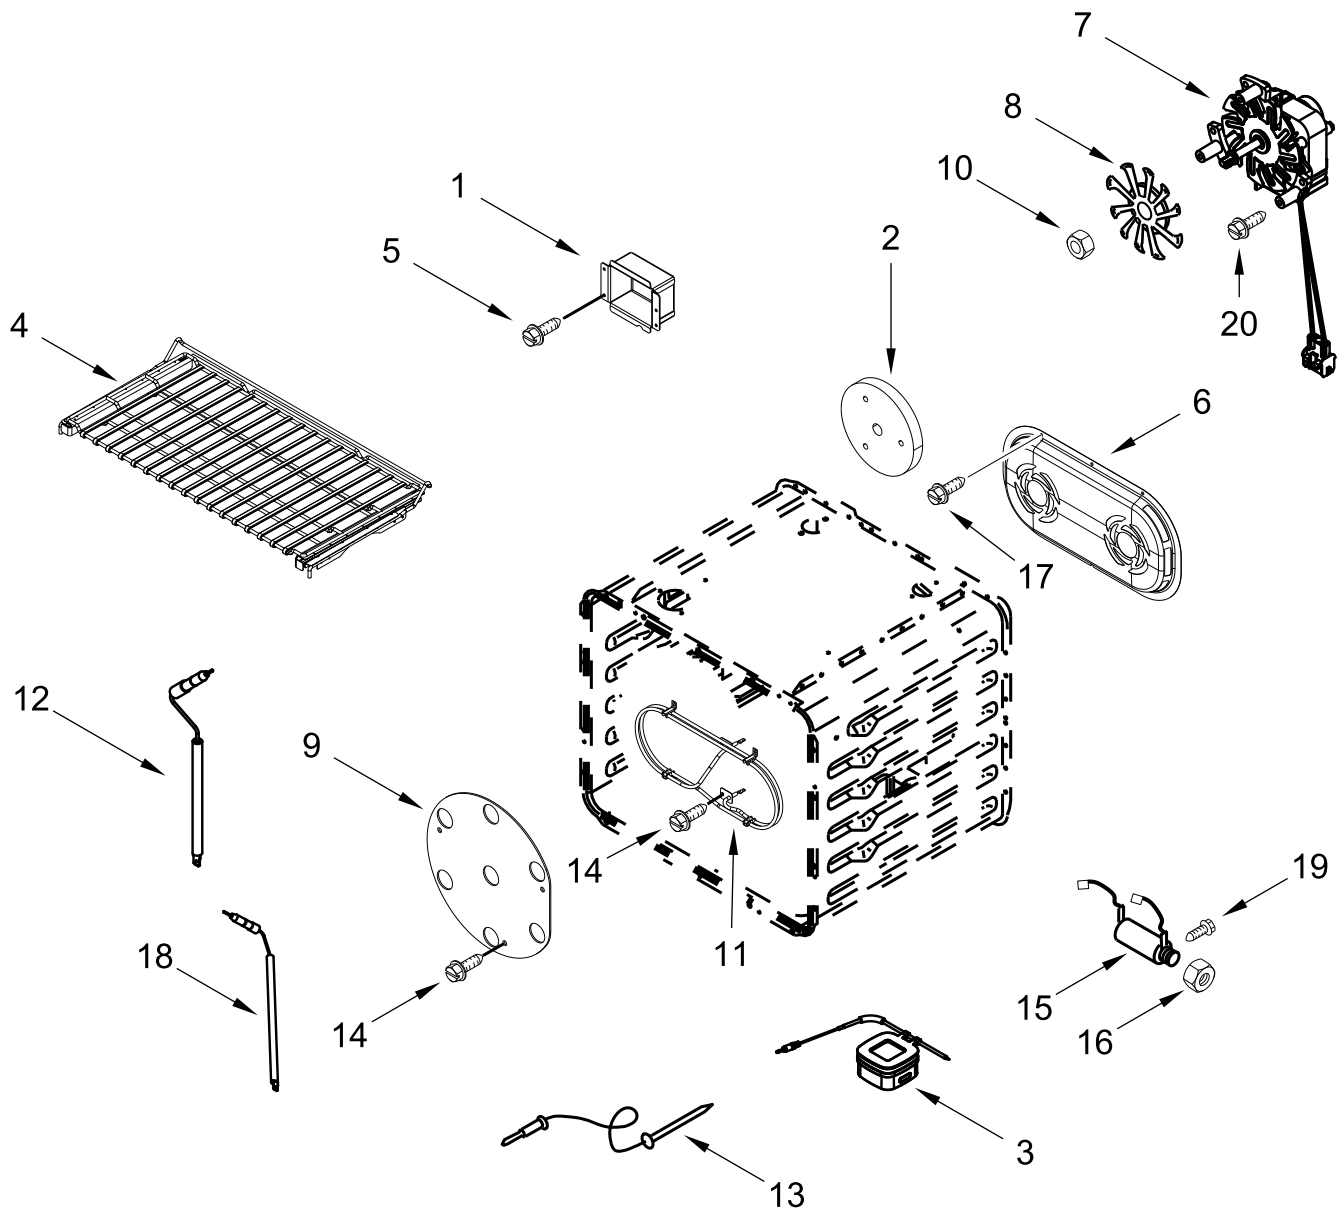

# INTERNAL OVEN PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>  | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|---------------------|-----------------------------|-----------------|--------------------|
| 1                           | W10308051       | Box, Broil                   | 7                           | W10631506       | Motor, Convection   | 14                          | 4449154         | Screw              |
| 2                           | W10282821       | Insulation, Convection Cover | 8                           | W11108376       | Blade, Fan          | 15                          | 9755543         | Jack, Meat Probe   |
| 3                           | W11186918       | Probe, Wireless Meat         | 9                           | W10261523       | Plate, Fan          | 16                          | W11033111       | Nut, Locking       |
| 4                           | W11491350       | Rack, Sliding Oven           | 10                          | W10631504       | Nut, Acorn (LH)     | 17                          | W10739592       | Screw              |
| 5                           | 7101P434-60     | Screw                        | 11                          | W10145949       | Element, Convection | 18                          | W11205400       | Electrode, Bake    |
| 6                           | W11232487       | Baffle, Convection           | 12                          | W11182863       | Electrode, Broil    | 19                          | 12992902        | Screw              |
|                             |                 |                              | 13                          | 9755542         | Probe, Temperature  | 20                          | W10720084       | Screw              |

# OPTIONAL PARTS (NOT INCLUDED)

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                    |
|-----------------------------|-----------------|---------------------------------------|
|                             |                 | ACCESSORY PARTS                       |
|                             | 30-48KITRC      | Gas Range Connector Kit               |
|                             | 4396096RB       | Griddle                               |
|                             | 4396923         | Broiler Pan and Grid                  |
|                             | W11035424       | Wok, Round Bottom                     |
|                             | W10115776       | Backguard (36 in)                     |
|                             |                 | Backsplash                            |
|                             | W10285448       | 36 in With Shelf                      |
|                             |                 | Kit, Burner Cap (Set of 4)            |
|                             | W11323014       | Brass, Large<br>Burner Cap (Single)   |
|                             | W11323015       | Brass, Small                          |
|                             | W11323012       | Brass, Large<br>Kit, Bezel (Set of 4) |
|                             | W11323062       | Chrome, Surface and Grill             |
|                             | W11323068       | Brass, Oven<br>Bezel (Single)         |
|                             | W11317495       | Brass, Griddle                        |
|                             | W11316873       | Brass, Surface and Grill              |
|                             | W11323024       | Chrome, Griddle                       |
|                             | W11317499       | Chrome, Oven                          |
|                             | W11323061       | Chrome, Surface and Grill             |