




GAS RANGE
Includes Griddle

MODELS:

JGRP536HM05 (Floating Glass Black)


BURNER BOX AND GRIDDLE PARTS

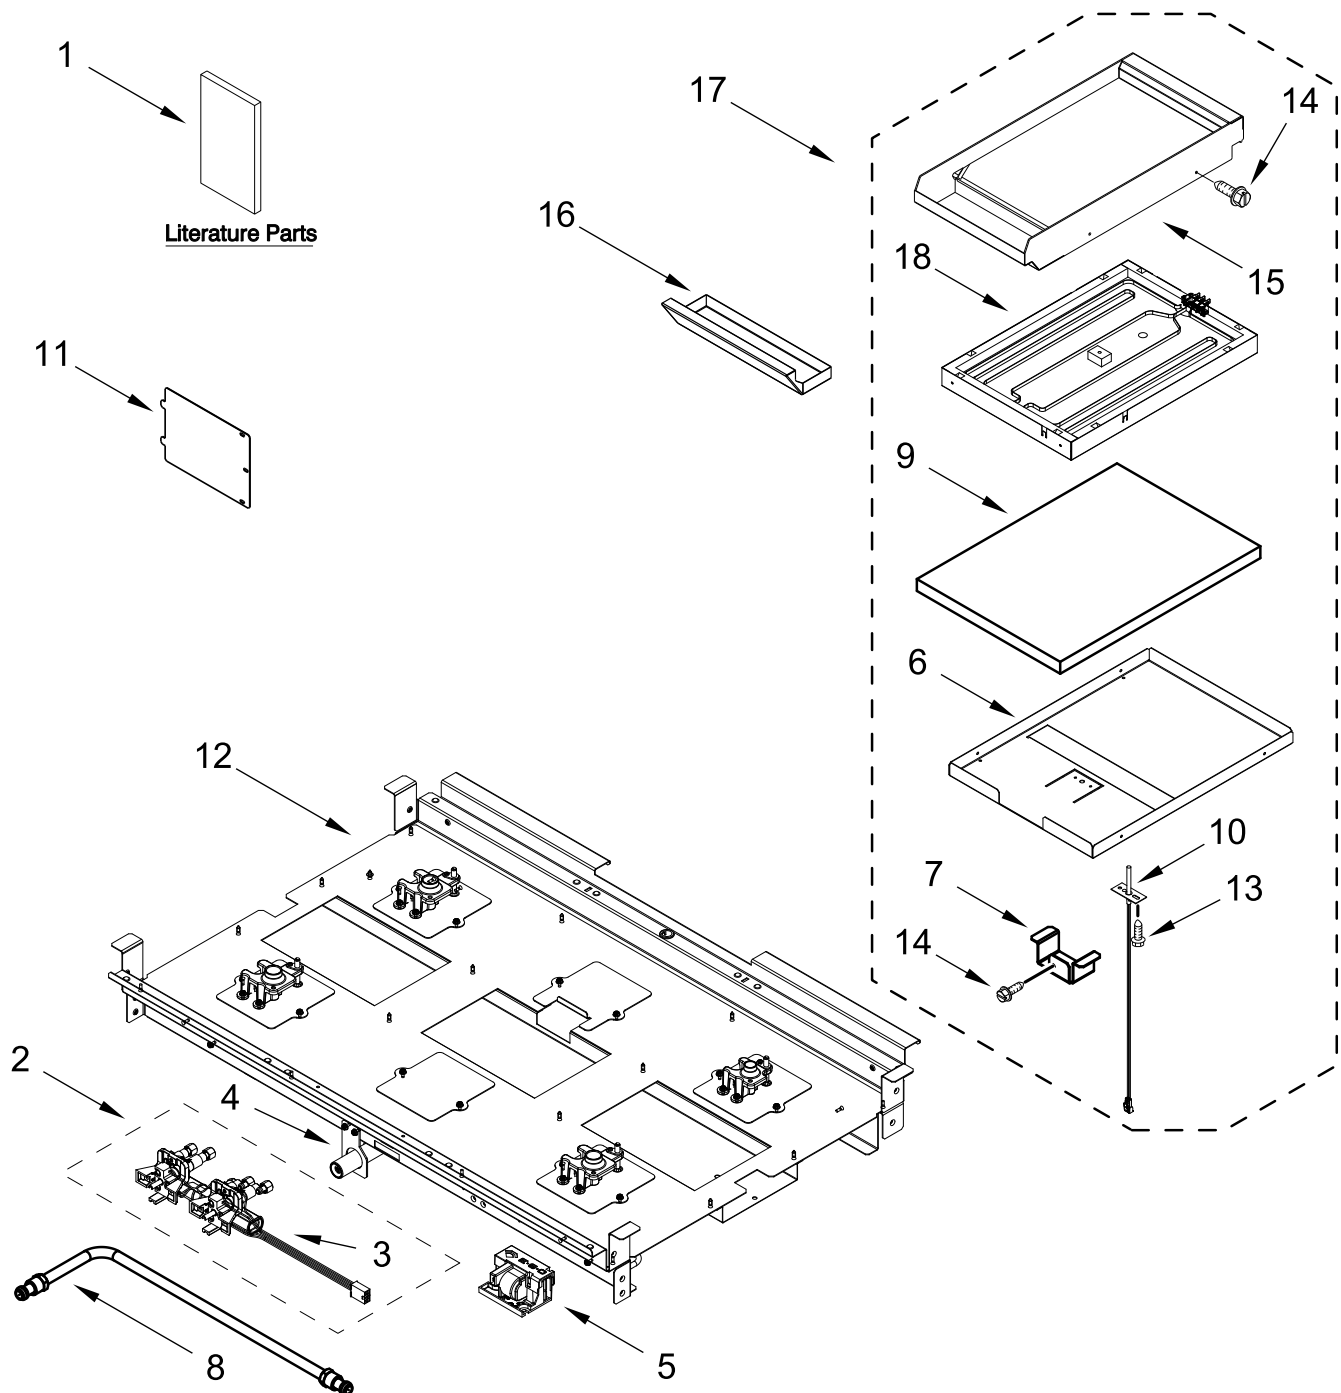

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121194	Bracket, Manifold	18	W10891698	Element, Griddle
	W11508896	Use and Care Guide	5	W11121317	Module, Spark			FOLLOWING PARTS NOT ILLUSTRATED
	W11508888	Installation Instructions	6	W11330430	Tray, Griddle Insulation		W11448068	Harness, Main (36 in)
	W11177312	Guide, Quick Start	7	W11121384	Bracket, Griddle-RTD		W10903727	Harness, Griddle
	W11184746	Guide, Internet Connectivity	8	W10892370	Tube, Manifold Supply (Left)		W11200326	Harness, Cooktop
	W11575703	Diagram, Wiring (Cooktop)		W10892443	Tube, Manifold Supply (Right)		W10780278	Harness, Door Lock
	W11565476	Diagram, Wiring (Oven)					W11200325	Harness, Communication
	W11202275	Sheet, Tech	9	W11121383	Insulation, Griddle		W11242785	Harness, WIFI
2	W10893053	Assembly, Valve Manifold	10	W10891584	Sensor, Griddle		313438	Clip, Harness
		(Left Front and Left Rear)	11	W10115843	Cover, Ignition		W10624584	Cord, Power
			12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
	W10893062	Assembly, Valve Manifold	13	3196160	Screw		W11311196	Ignitor Wire, Wire-Electrode Bake
		(Right Front and Right Rear)	14	W10162096	Screw		W11311197	Ignitor Wire, Wire-Electrode Broil
3	W11106300	Switch, Harness	15	W11360151	Module, Griddle		W10253333	Bracket, Anti-Tip
			16	W10276497	Tray, Griddle Drip		7101P485-60	Screw, Anti-Tip Kit
			17	W11505236	Griddle Module Assembly		W11422176	Kit, LP Conversion


COOKTOP, BURNER, AND GRIDDLE PARTS

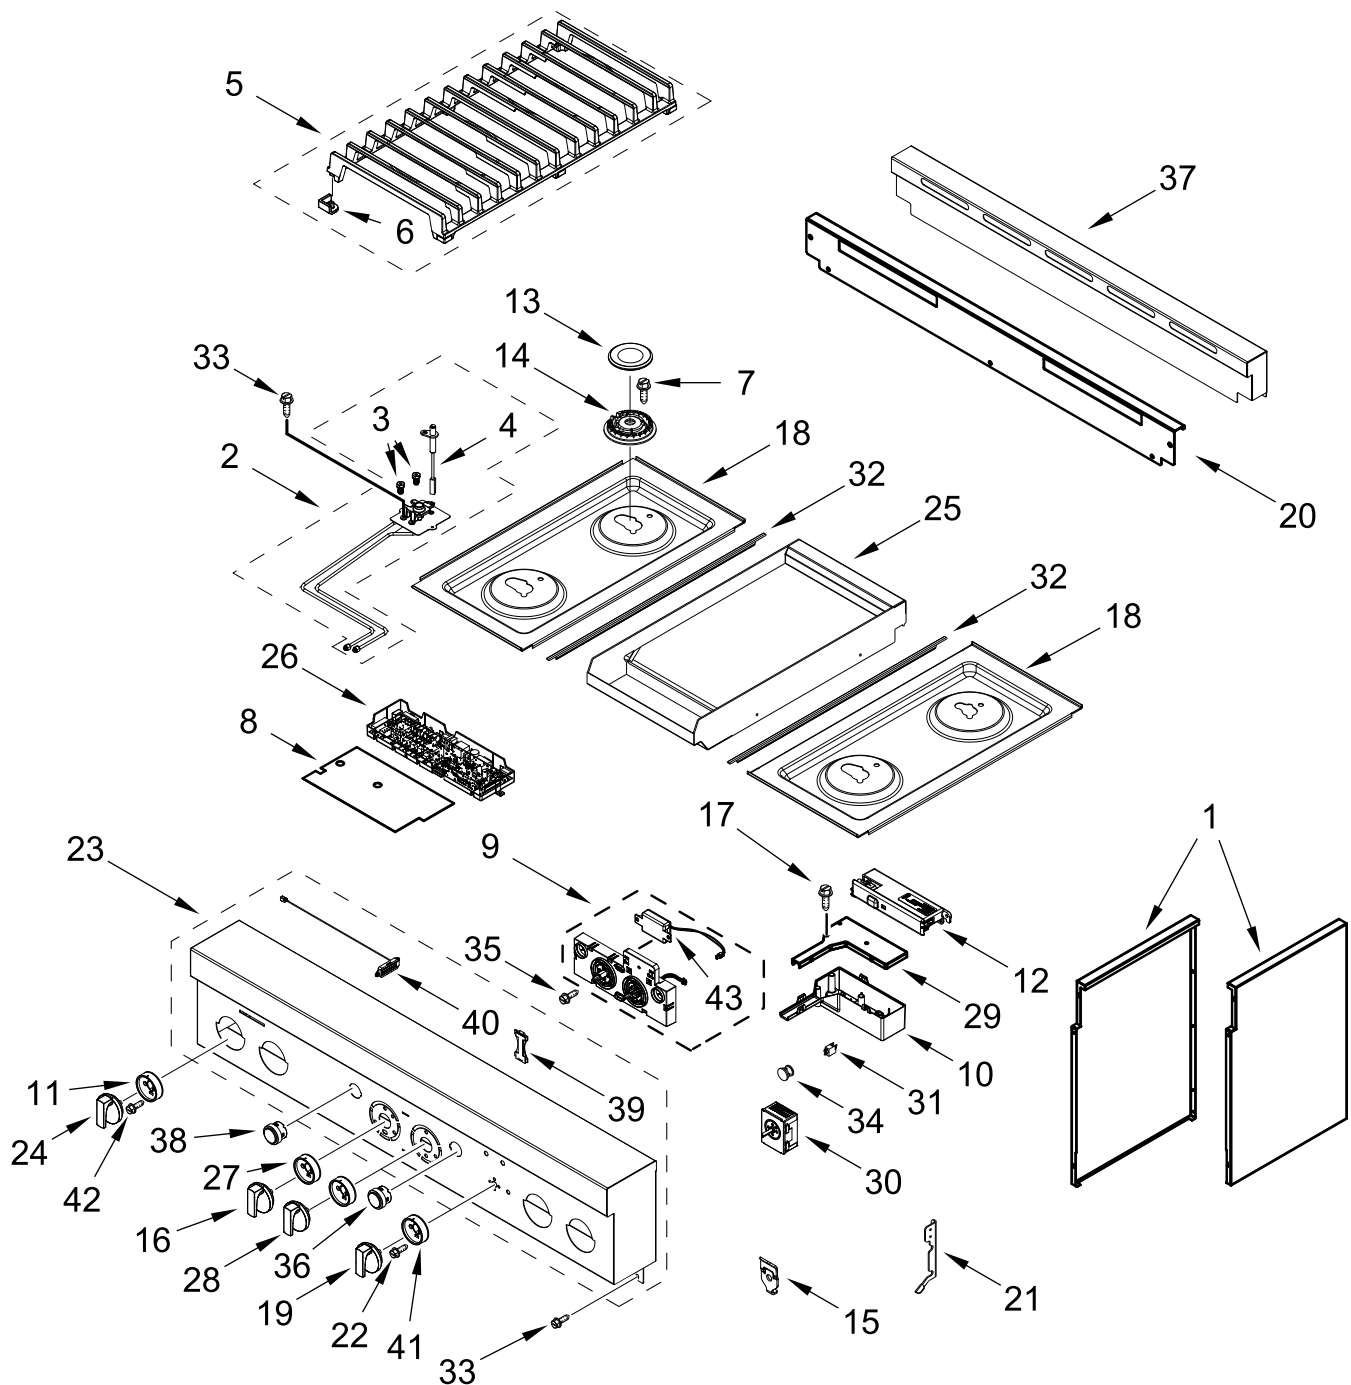

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	6	W11042504	Bumper, Grate	24		Knob, Burner (For 4 Cooktop Burners)
	W11106880	Panel, Cabinet Side (Right)	7	W11323260	Screw		W10887596	Stainless
2	W10892793	Assembly, Orifice Holder (Left Front)	8	W11281269	Barrier, Appliance Manager	25		Assembly, Griddle Module (Part Number Included on Burner Box Page)
	W10892494	Assembly, Orifice Holder (Left Rear)	9	W11436327	Interface, User	26	W11543348	Manager, Powermax Appliance
	W10892475	Assembly, Orifice Holder (Right Front)	10	W11205795	Cover, WIFI Outer	27		Bezel, Oven (For 2 Oven Knobs)
	W10892730	Assembly, Orifice Holder (Right Rear)	11	W11090284	Bezel, Cooktop (For 4 Cooktop Burners)	28	W11042375	Stainless Knob, Oven Temperature
3	W10892422	Orifice, Main (17.4K) (Left Front)	12	W11110768	Assembly, WIFI Module	29	W10891868	Stainless
	W10892418	Orifice, Main (15.4K) (Left Rear and Right Front)	13		Cap, Burner	30	W11205794	Cover, WIFI Inner
	W10892440	Orifice, Main (7.2K) (Right Rear)	14	W11121391	Black (Set of 4)	31	W11033497	Control, Griddle
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	15	W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)	32	W10116114	Light, Indicator Housing
	W10892429	Orifice, Simmer (2.0K) (Right Rear)	16	W10892022	Spreader, Flame (Low) (Right Rear)	33	W10291193	Trim, L-Strip
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	17	W11036559	Spring Clip, Range	34	7101P426-60	Screw
	W11238756	Igniter (Right Rear)	18	W11317854	Stainless	35	W10294500	Lens, Indicator Light
5		Assembly, Grate	19	3196560	Screw	36	3400814	Screw
	W11291180	Black (Left)	20	W11038237	Black (Left)	37	W11090650	Button Assembly, Oven Start
	W11291182	Black (Right)	21	W11038253	Black (Right)	38	W11476245	Trim, Island
			22	W10891923	Knob, Griddle	39	W11090651	Button Assembly, Oven Light
			23	W10891923	Stainless	40	W10896369	Assembly, Light Pipe
				W10323250	Insert, Island Trim	41	W11130078	Antenna, WIFI
				W10130760	Bracket, Moving Console (Left)	42	W11104967	Bezel, Griddle
				W10130759	Bracket, Moving Console (Right)	43	W11328357	Screw
				W10674068	Screw		W10568405	Assembly, Speaker
				W10878253	Panel, Cooktop			


CHASSIS PARTS

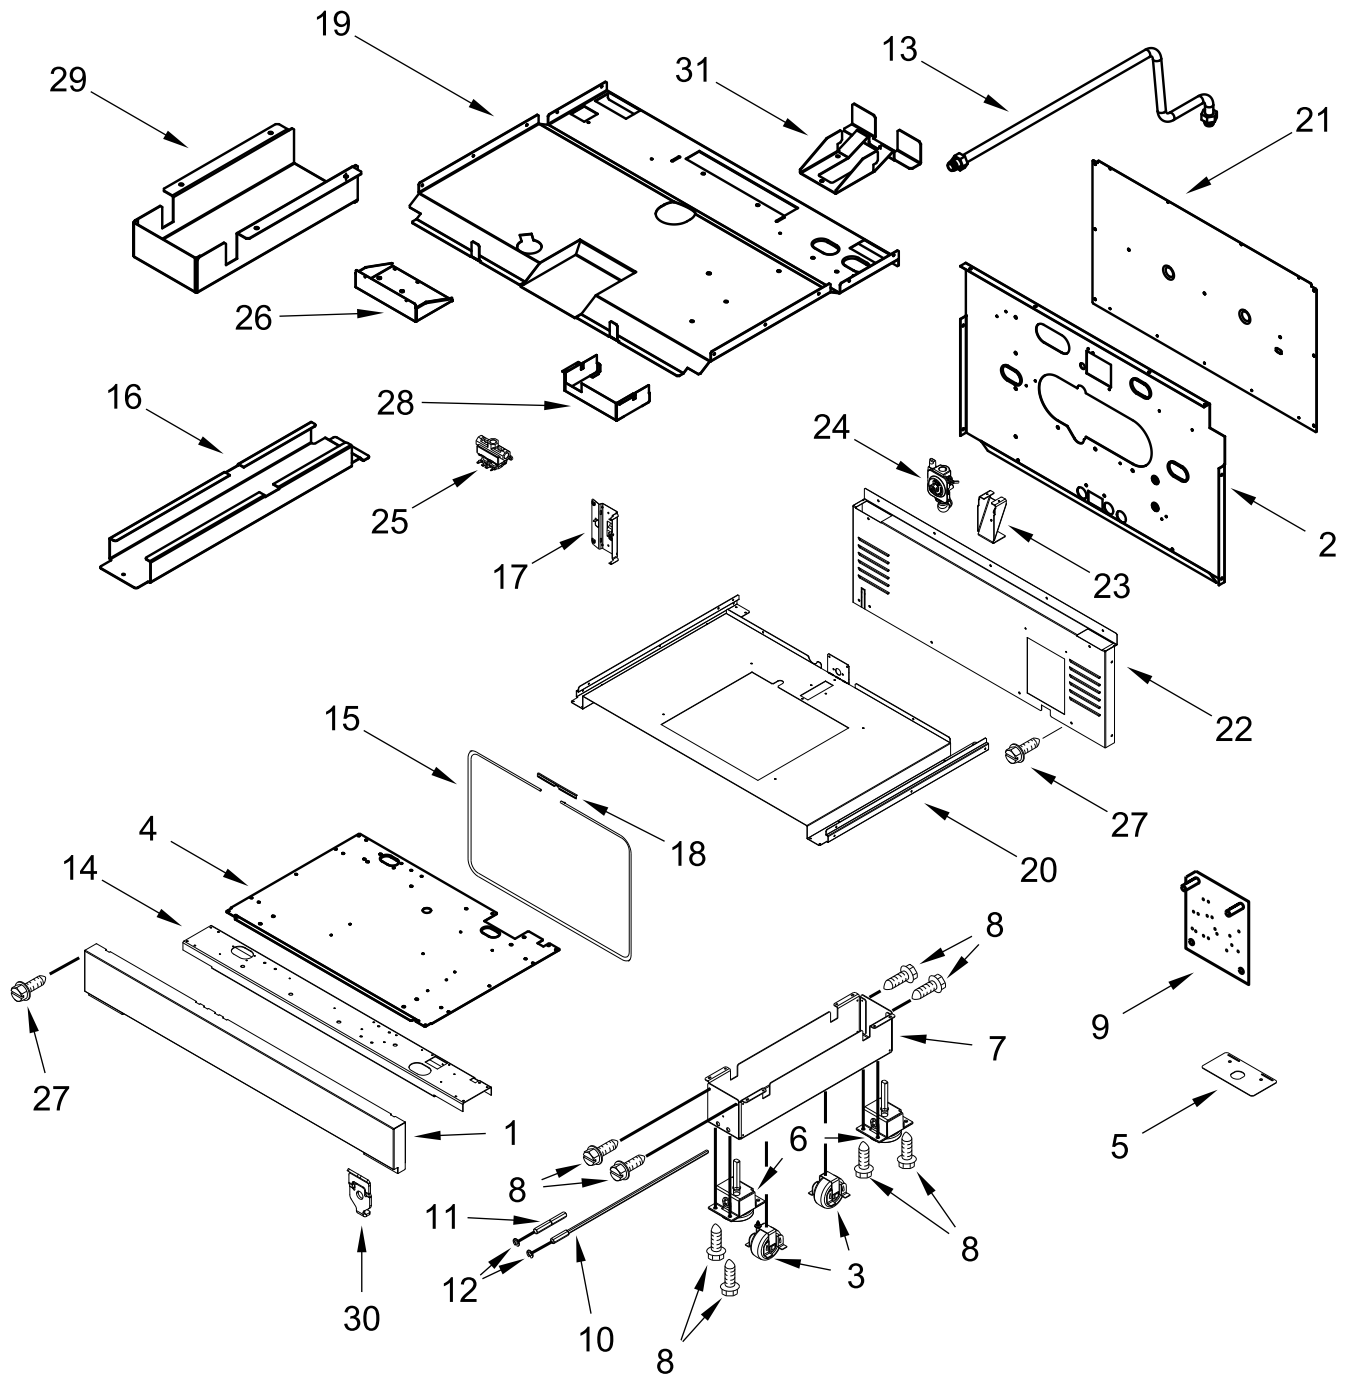

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	14	W11087493	Support, Channel	25	W10145680	Valve, Dual
2	W11324988	Back, Chassis	15	W11115330	Gasket, Oven (36 in)	26	W11106341	Drawer, Appliance Manager
3	W10138054	Assembly, Roller	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
4	W11095572	Duct, Bottom (36 in)	17	W10145362	Bracket-Board, DSI	28	W11369237	Cabinet, Appliance Manager
5	W10115855	Holder, Strain Relief	18	W11362015	Retainer, Gasket (9 in Long)	29	W11368831	Channel, Wire
6	9760860	Leveler	19	W11324985	Top, Chassis	30	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	20	W11040801	Chassis, Bottom	31	W11190223	Bracket, Bake Alignment
8	4449743	Screw	21	W11103333	Panel, Back Top			
9	W10511278	Module, Spark DSI	22	W11034133	Panel, Back Bottom			
10	W10115869	Shaft, Long	23	W11096823	Bracket, Pressure Regulator			
11	W10115793	Shaft, Short	24	W10896959	Regulator, Pressure			
12	489504	E-Ring						
13	W11181648	Tube, Pressure Regulator						


OVEN PARTS

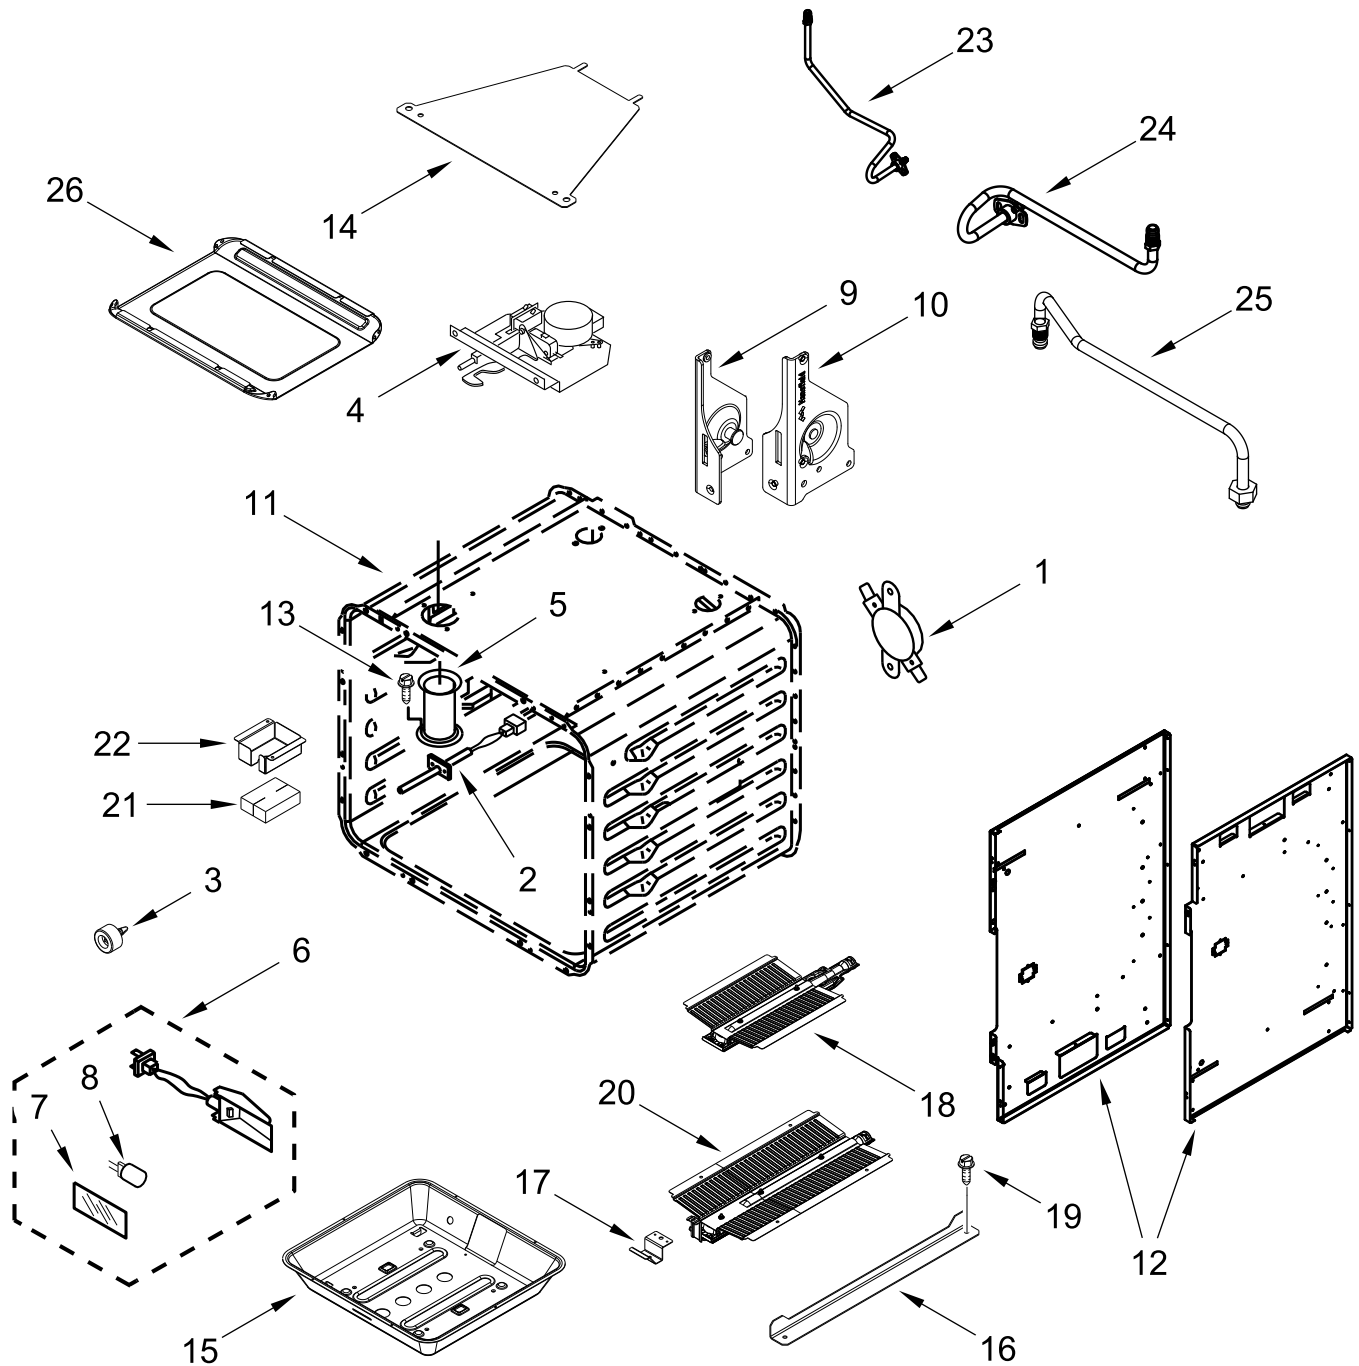

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10310985	Cover, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W11109238	Tube, Broil
3	W10351278	Bumper and Screw	13	3196176	Screw	24	W11106980	Tube, Bake
4	W10830016	Latch, Motorized	14	W10160858	Cover, Latch	25	W11107279	Tube, Gas
5	W10145743	Tube, Vent	15	W10145744	Support, Bake Pan	26	W10496809	Pan, Oven Bottom
6	W11223932	Assembly, Oven Light	16	W10317437	Bracket, Broil Standoff			FOLLOWING PARTS NOT ILLUSTRATED
7	W10169756	Lens, Light	17	W10308040	Bracket, Bake Burner		W10282811	Insulation, Wrap
8	W10169757	Bulb, Light	18	W10878504	Burner, Bake		W10299351	Insulation, Back
9	W11096294	Receiver, Hinge (Left)	19	7101P434-60	Screw		W10299356	Insulation, Bottom
10	W11096293	Receiver, Hinge (Right)	20	W10311335	Burner, Broil		3400968	Nut
11		Liner, Oven (Not Serviced)	21	W10311009	Insulation, Broil Cover			


VENTING PARTS

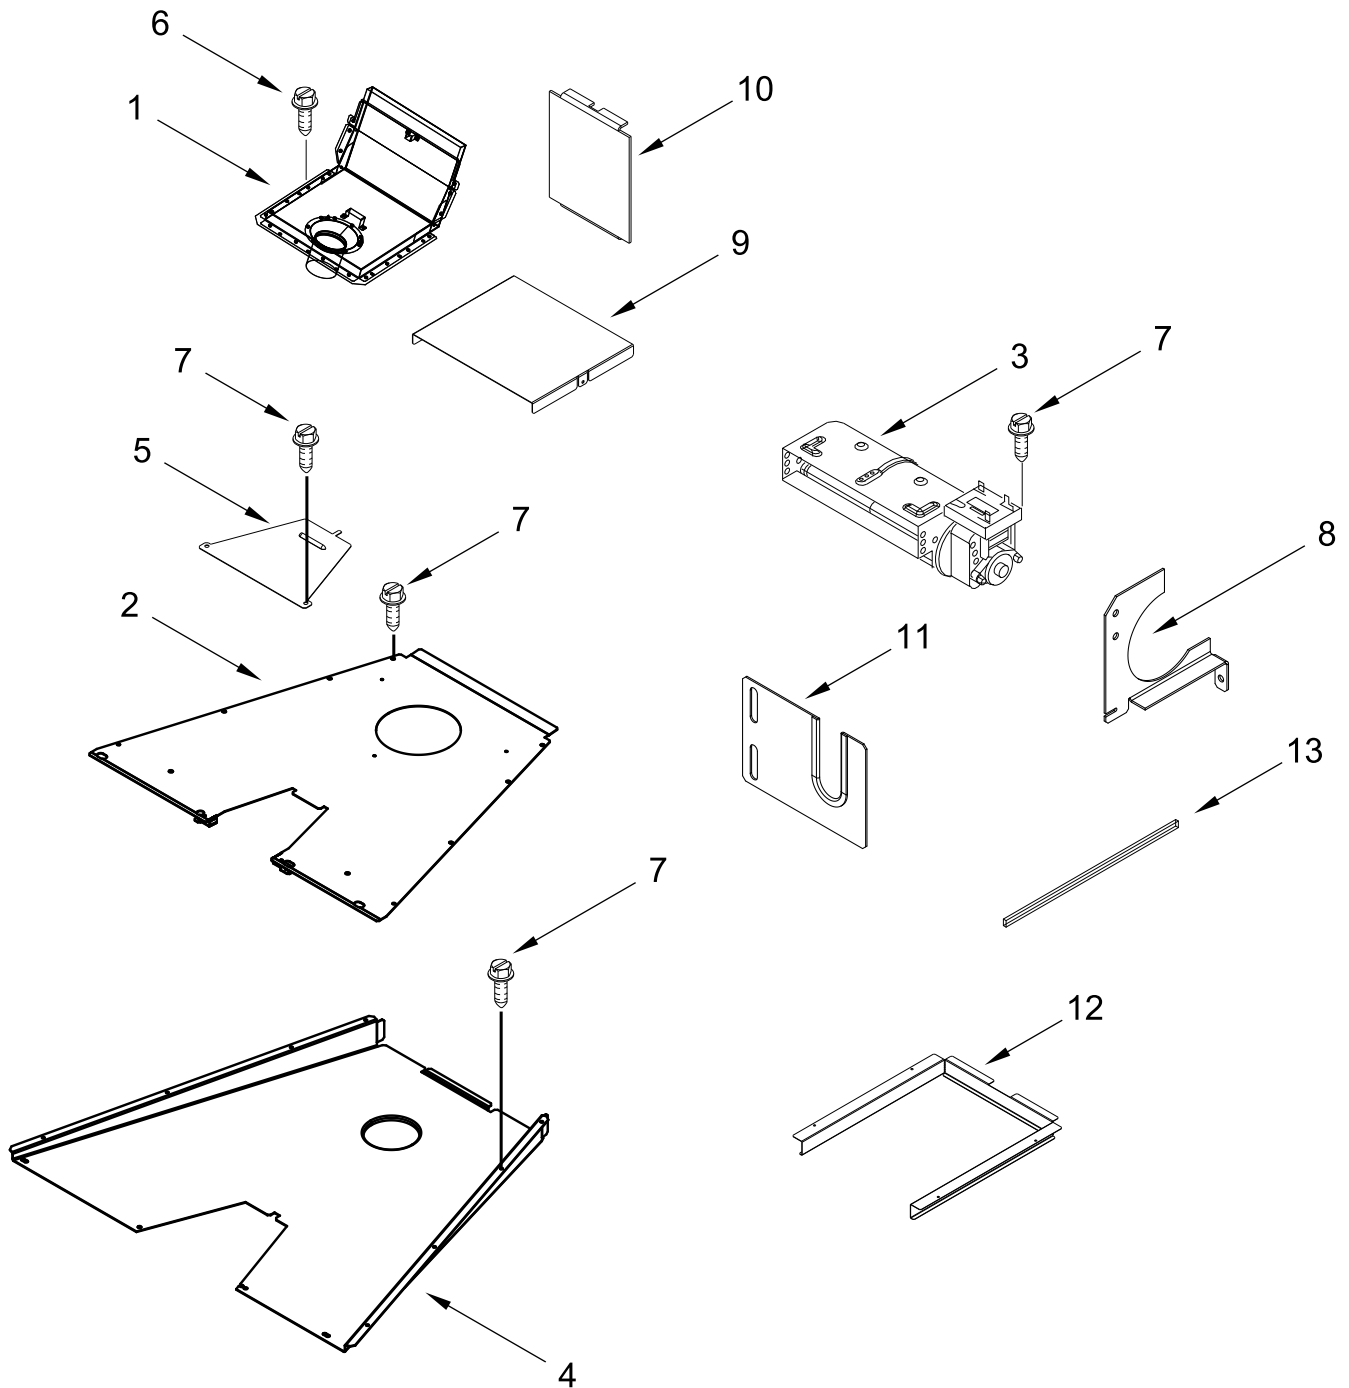

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30 in)
2	W11105221	Vent, Cooling Top (30 in)	7	7101P426-60	Screw	13	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11091676	Vent, Cooling Bottom (30 in)	9	W10246086	Retainer, Insulation			
5	W11109518	Plate, Cooling Latch	10	W10246087	Insulation, Chimney			
			11	W11106956	Cover, Channel			


OVEN DOOR PARTS

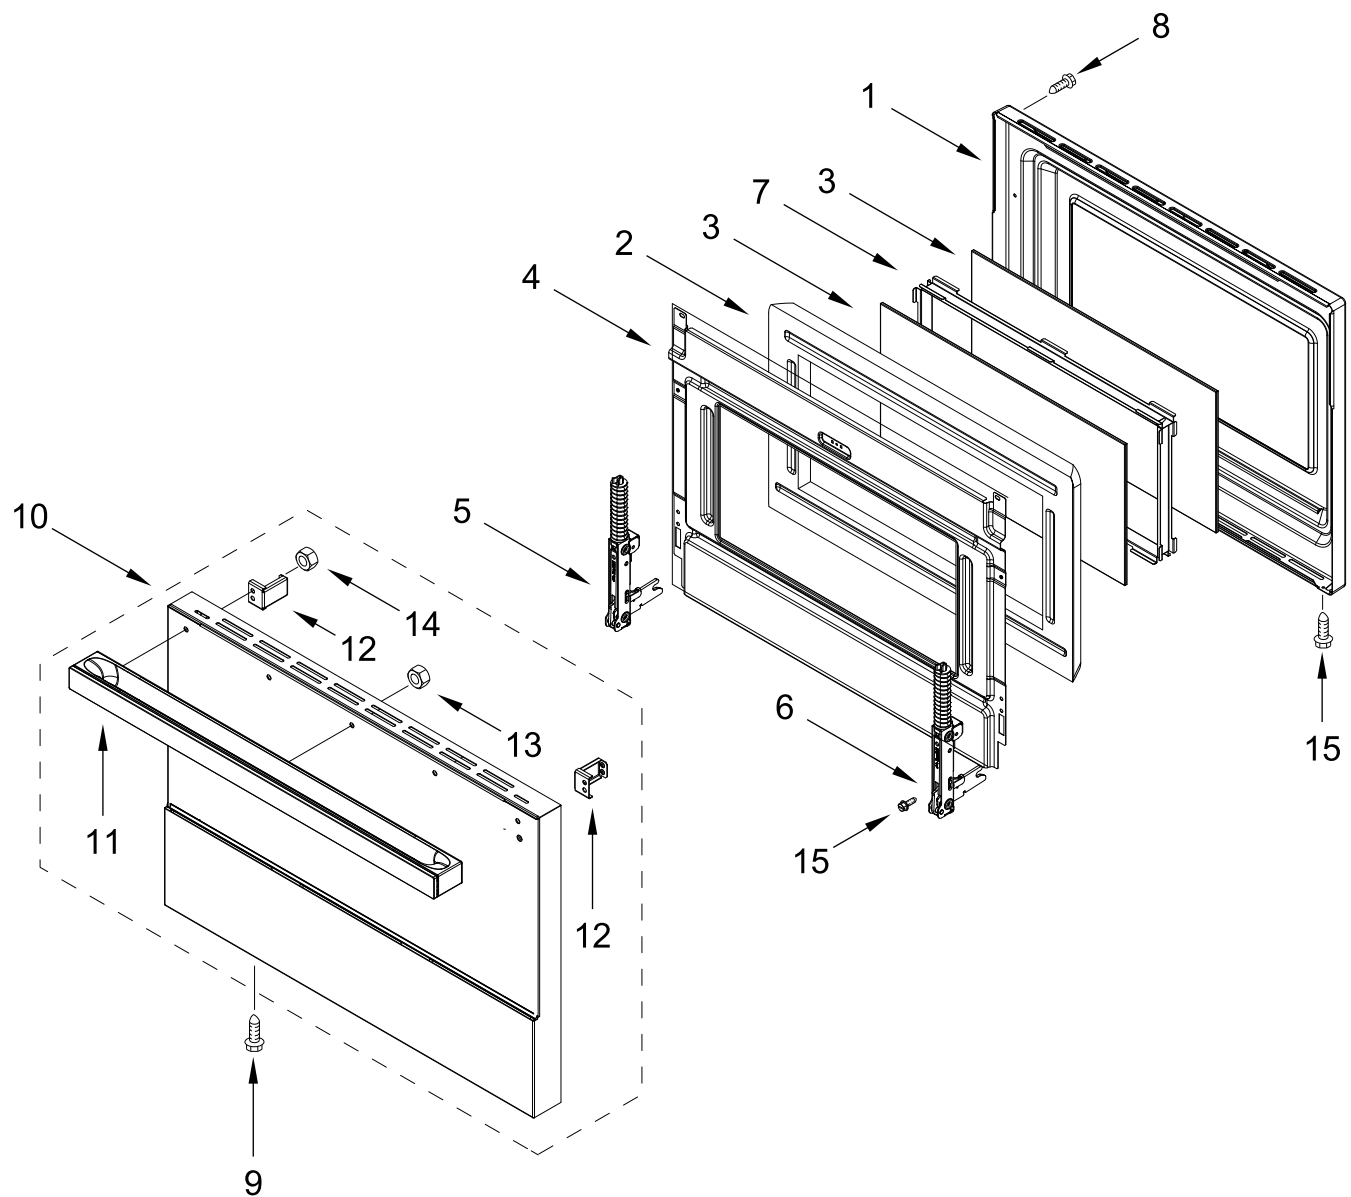

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10898280	Screw	14	999299	Nut
2	W10884823	Insulation, Door	9	W10162096	Screw	15	W10607120	Screw
3	W11036791	Glass, Inner	10	W10870229	Assembly, Outer Door Glass (Includes Handle)			
4	W11194820	Retainer, Glass						
5	W11096984	Hinge, Door (Left)	11	W11411781	Handle, Door			
6	W11096983	Hinge, Door (Right)	12	W11194816	Bracket, Handle			
7	W11194814	Frame, Glass	13	W11198435	Nut			

INTERNAL OVEN PARTS

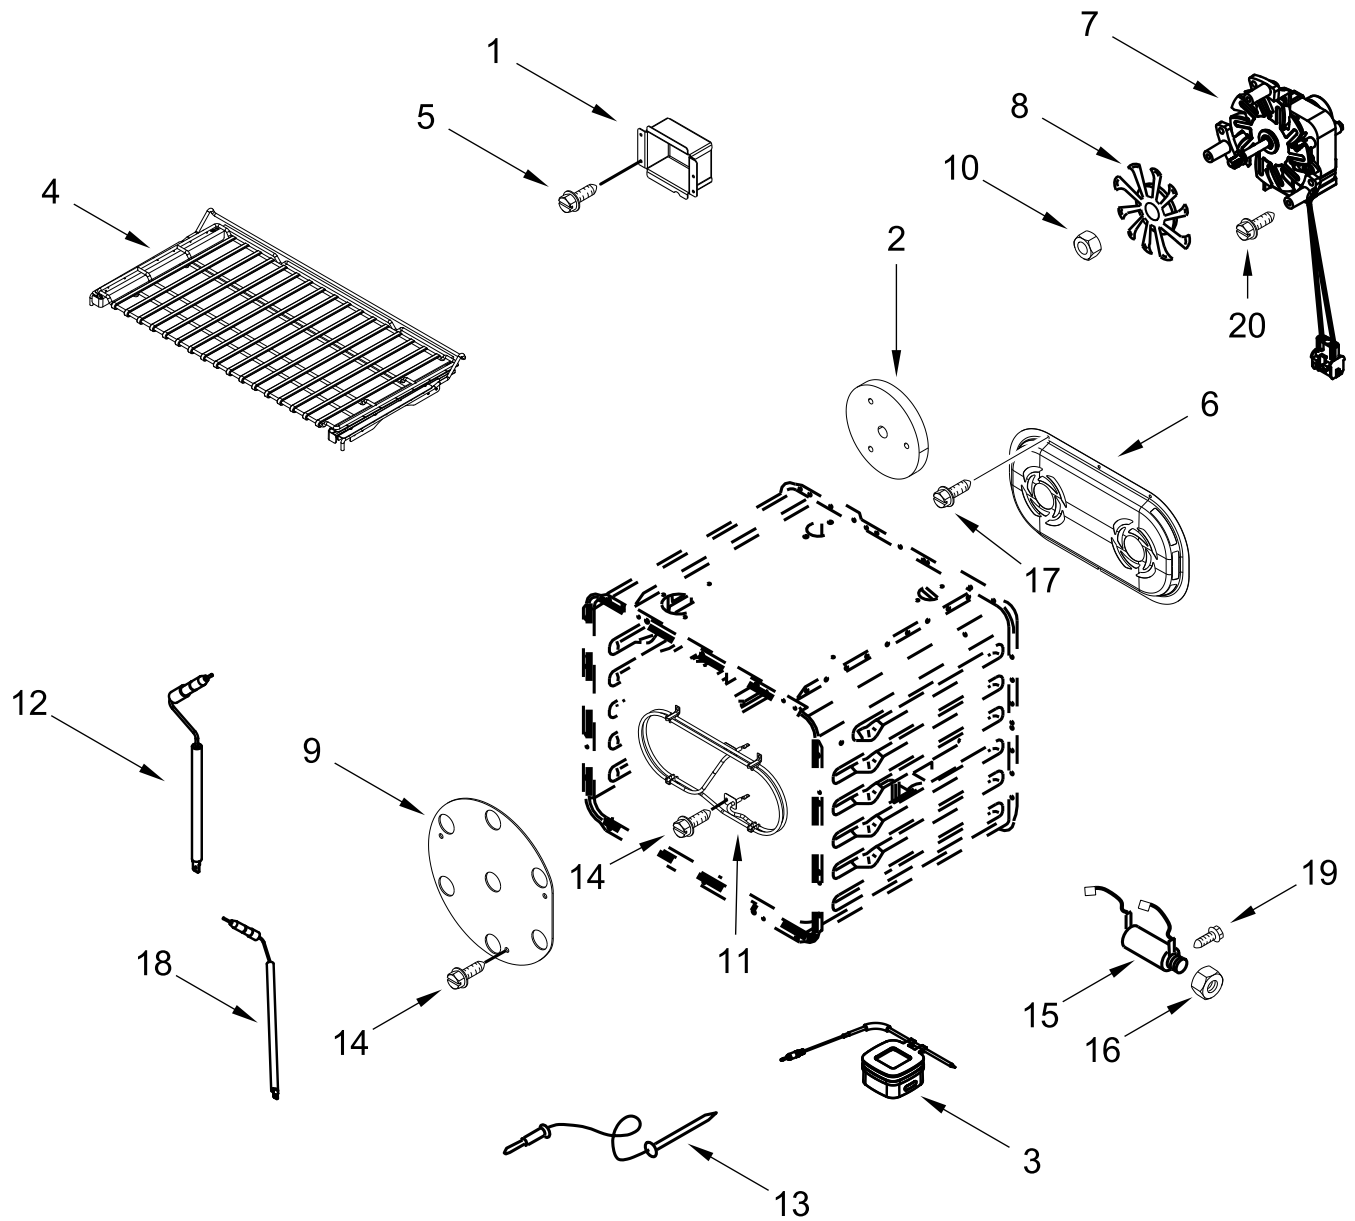

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491350	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W11035424	Wok, Round Bottom
	W10115776	Backguard (36 in)
		Backsplash
	W10285448	36 in With Shelf
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large