




GAS RANGE
Includes Griddle

MODELS:

JGRP548HM05 (Stainless)


BURNER BOX AND GRIDDLE PARTS

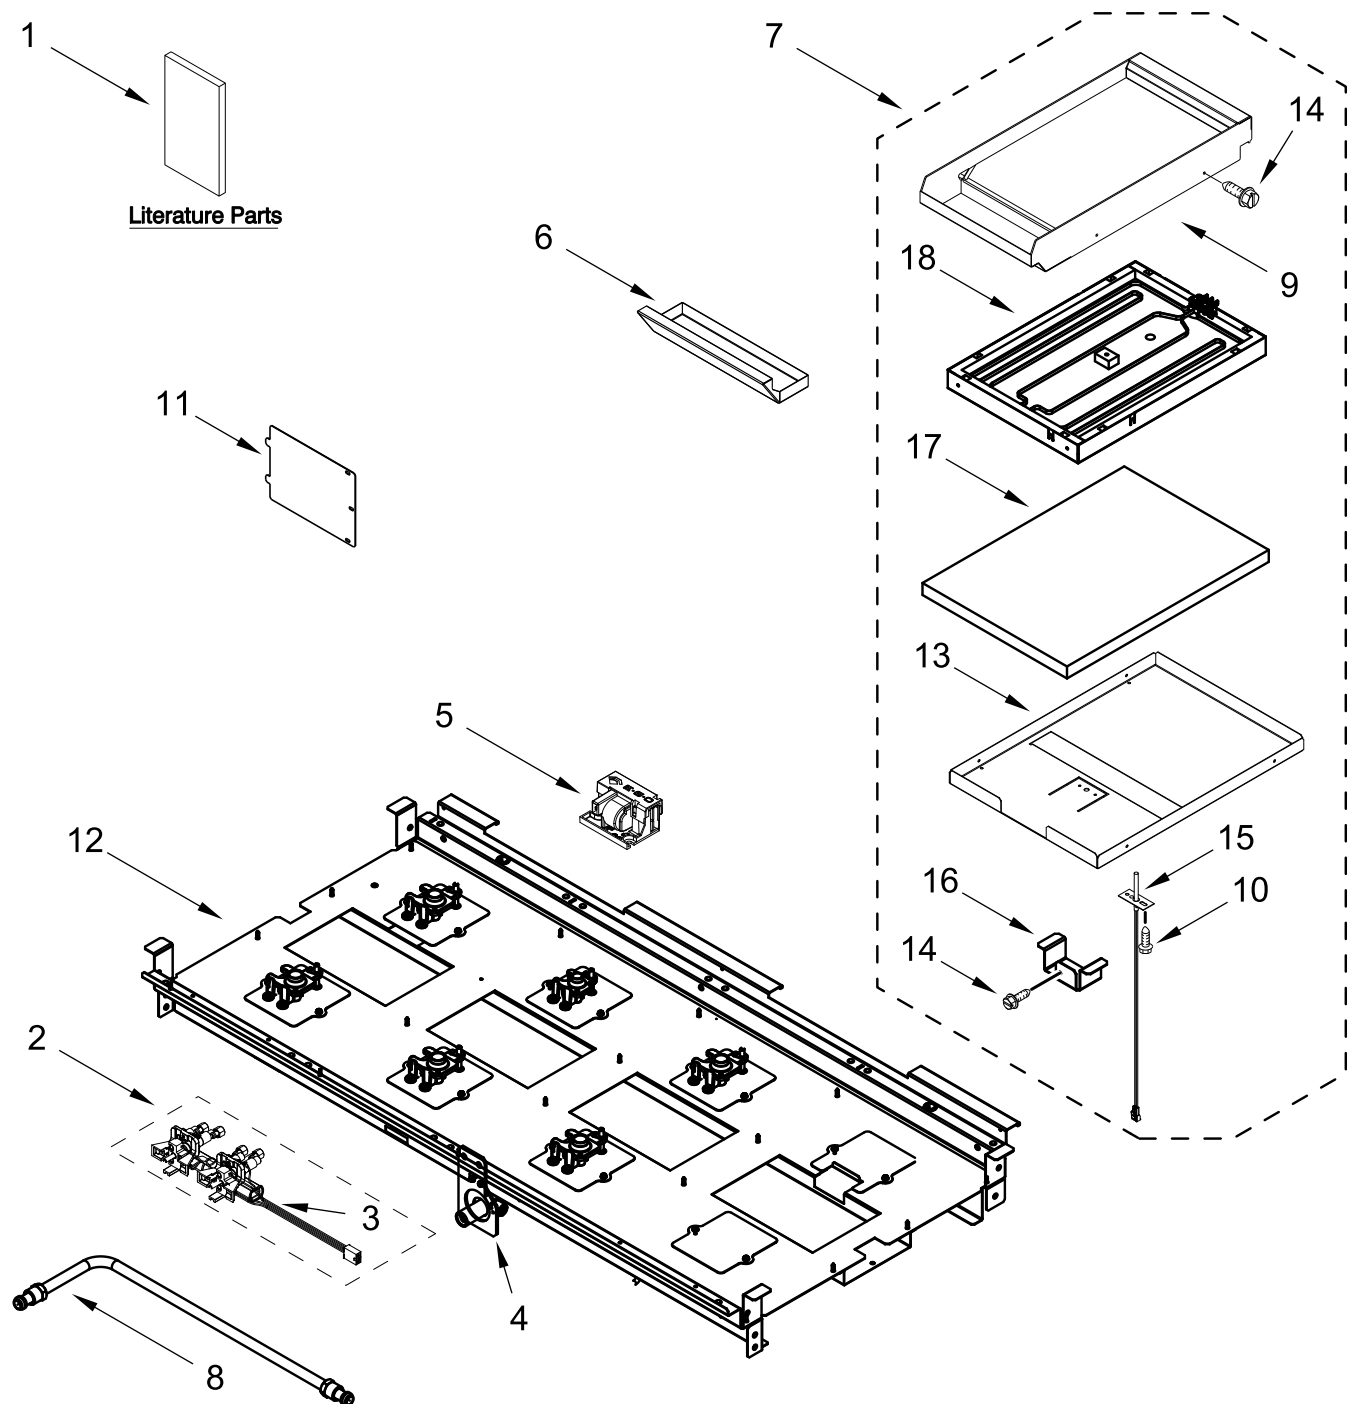

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106300	Switch, Harness	18	W10891698	Element, Griddle
	W11508896	Use and Care Guide	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11508888	Installation Instructions	5	W11121317	Module, Spark		W11447992	Harness, Main (48")
	W11184746	Guide, Internet Connectivity	6	W10276497	Tray, Griddle Drip		W10903727	Harness, Griddle
	W11177312	Guide, Quick Start	7	W11505236	Griddle Module Assembly		W11200329	Harness, Cooktop
	W11565477	Wiring Diagram (Oven)	8	W10892784	Tube, Manifold Supply (Left)		W10780278	Harness, Door Lock
	W11575704	Wiring Diagram (Cooktop)		W10892775	Tube, Manifold Supply (Left Center)		W11200318	Harness, Communication
	W11202275	Sheet, Tech		W10892789	Tube, Manifold Supply (Right Center)		W11242785	Harness, WIFI
2	W11183722	Assembly, Valve Manifold (Left Front and Left Rear)	9	W11360151	Module, Griddle		313438	Clip, Harness
	W10893058	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	10	3196160	Screw		W10624584	Cord, Power
	W10893051	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	11	W10115843	Cover, Ignition		4450800	Screw, Grounding
			12		Box, Burner (Not Serviced)		W11311196	Ignitor Wire, Wire-Electrode Bake
			13	W11330430	Tray, Griddle Insulation		W11311197	Ignitor Wire, Wire-Electrode Broil
			14	W10162096	Screw		W10253333	Bracket, Anti-Tip
			15	W10891584	Sensor, Griddle		7101P485-60	Screw, Anti-Tip Kit
			16	W11121384	Bracket, Griddle-RTD		W11422176	Kit, LP Conversion
			17	W11121383	Insulation, Griddle			


COOKTOP, BURNER, AND GRIDDLE PARTS

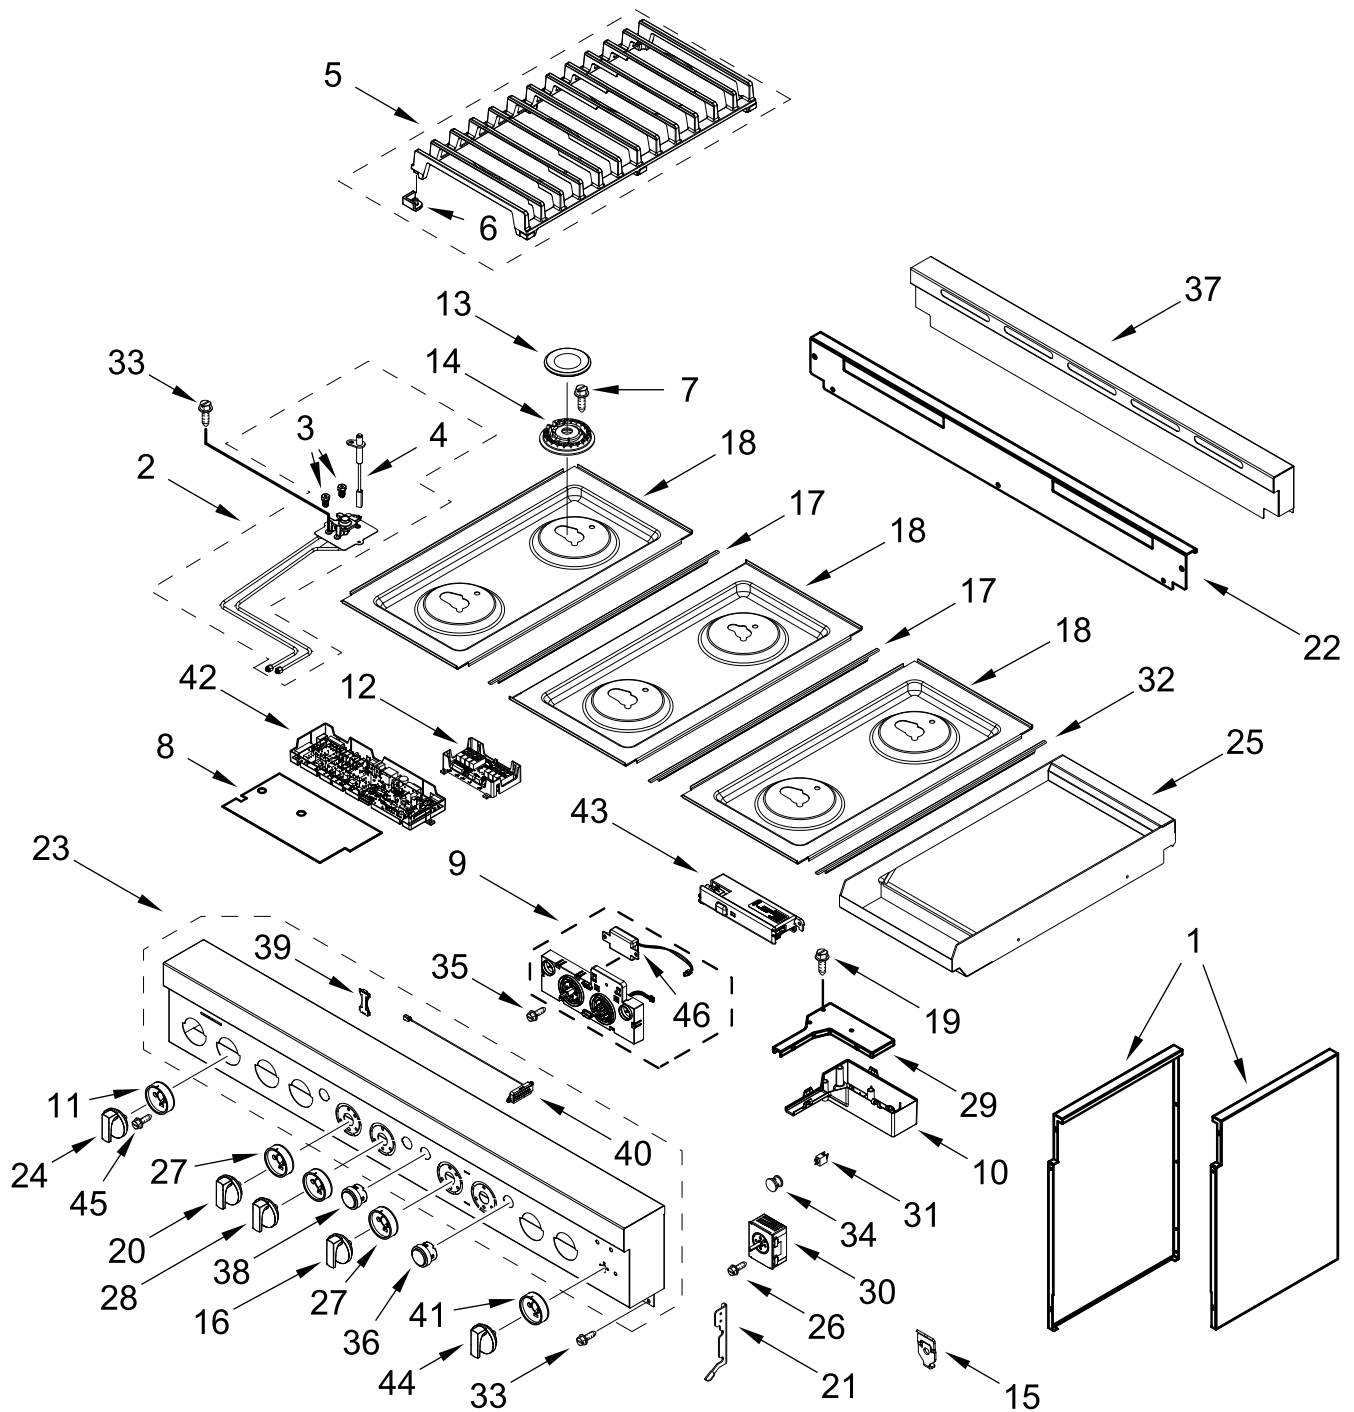

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	5		Assembly, Grate	22	W10323252	Trim, Island Insert
	W11111428	Panel, Cabinet Side (Right)		W11291180	Black	23	W10878256	Panel, Control
				W11291184	Black	24		Knob, Burner
2	W10892807	Assembly, Orifice Holder			(Left Center)			(For 6 Cooktop Burners)
		(Left Front)		W11291182	Black		W10887596	Stainless
	W10892495	Assembly, Orifice Holder	6	W11042504	Bumper, Grate	25		Assembly, Griddle Module
		(Left Rear)	7	W11323260	Screw			(Part Number Included on Burner Box Page)
	W11114338	Assembly, Orifice Holder	8	W11281269	Barrier, Appliance Manager	26	W10674068	Screw
		(Left Center Front)	9	W11436326	Interface, User	27		Bezel, Oven
	W10892810	Assembly, Orifice Holder	10	W11205795	Cover, WIFI Outer			(For 4 Oven Knobs)
		(Left Center Rear)	11	W11090284	Bezel, Cooktop		W11042375	Stainless
					(For 6 Cooktop Burners)	28		Knob, Oven Temperature
	W10892505	Assembly, Orifice Holder	12	W10871065	Manager, Appliance (Expansion)		W11325047	Stainless
		(Right Center Front)	13		Cap, Burner			(For 18" Oven)
				W11121392	Black (Set of 6)		W10891868	Stainless
	W10892444	Assembly, Orifice Holder	14	W10891987	Spreader, Flame (High)	29	W11205794	Cover, WIFI Inner
		(Right Center Rear)			(All But Left Center Rear)	30	W11033497	Control, Griddle
3	W10892422	Orifice, Main (17.4K)		W10892022	Spreader, Flame (Low)	31	W10116114	Light, Indicator Housing
		(Left Front And Right Center Front)			(Left Center Rear)	32	W10291193	Trim, L-Strip
	W10892418	Orifice, Main (15.4K)	15	W11036559	Spring Clip, Range	33	7101P426-60	Screw
		(Left Rear, Left Center Front, Right Center Rear)	16		Knob, 30" Oven Mode	34	W10294500	Lens, Indicator Light
				W11317854	Stainless	35	3400814	Screw
	W10892440	Orifice, Main (7.2K)	17		Trim, T-Strip	36	W11090650	Button Assembly, Oven Start
		(Left Center Rear)		W10271524	Black	37	W11476244	Island Trim
	W10892435	Orifice, Simmer (2.6K)	18		Panel, Cooktop	38	W11090651	Button Assembly, Oven Light
		(All But Left Center Rear)		W11038237	Black	39	W10896369	Assembly, Light Pipe
					(Left)	40	W11130078	Antenna, WIFI
	W10892429	Orifice, Simmer (2.0K)		W11038241	Black	41	W11104967	Bezel, Griddle
		(Left Center Rear)			(Left Center)	42	W11543349	Manager, Powermax Appliance
				W11038249	Black			
					(Right Center)			
4	W11238757	Igniter	19	7101P624-60	Screw	43	W11110768	Assembly, WIFI Module
		(Left Front, Left Rear, Right Center Front)	20		Knob, 18" Oven Mode Gas	44		Knob, Griddle
	W11238758	Igniter		W11325046	Stainless		W10891923	Stainless
		(Left Center Front, Right Center Rear)	21	W10130760	Bracket, Moving Console (Left)	45	W11328357	Screw
	W11238756	Igniter		W10130759	Bracket, Moving Console (Right)	46	W10568405	Assembly, Speaker
		(Left Center Rear)						


48" CHASSIS PARTS

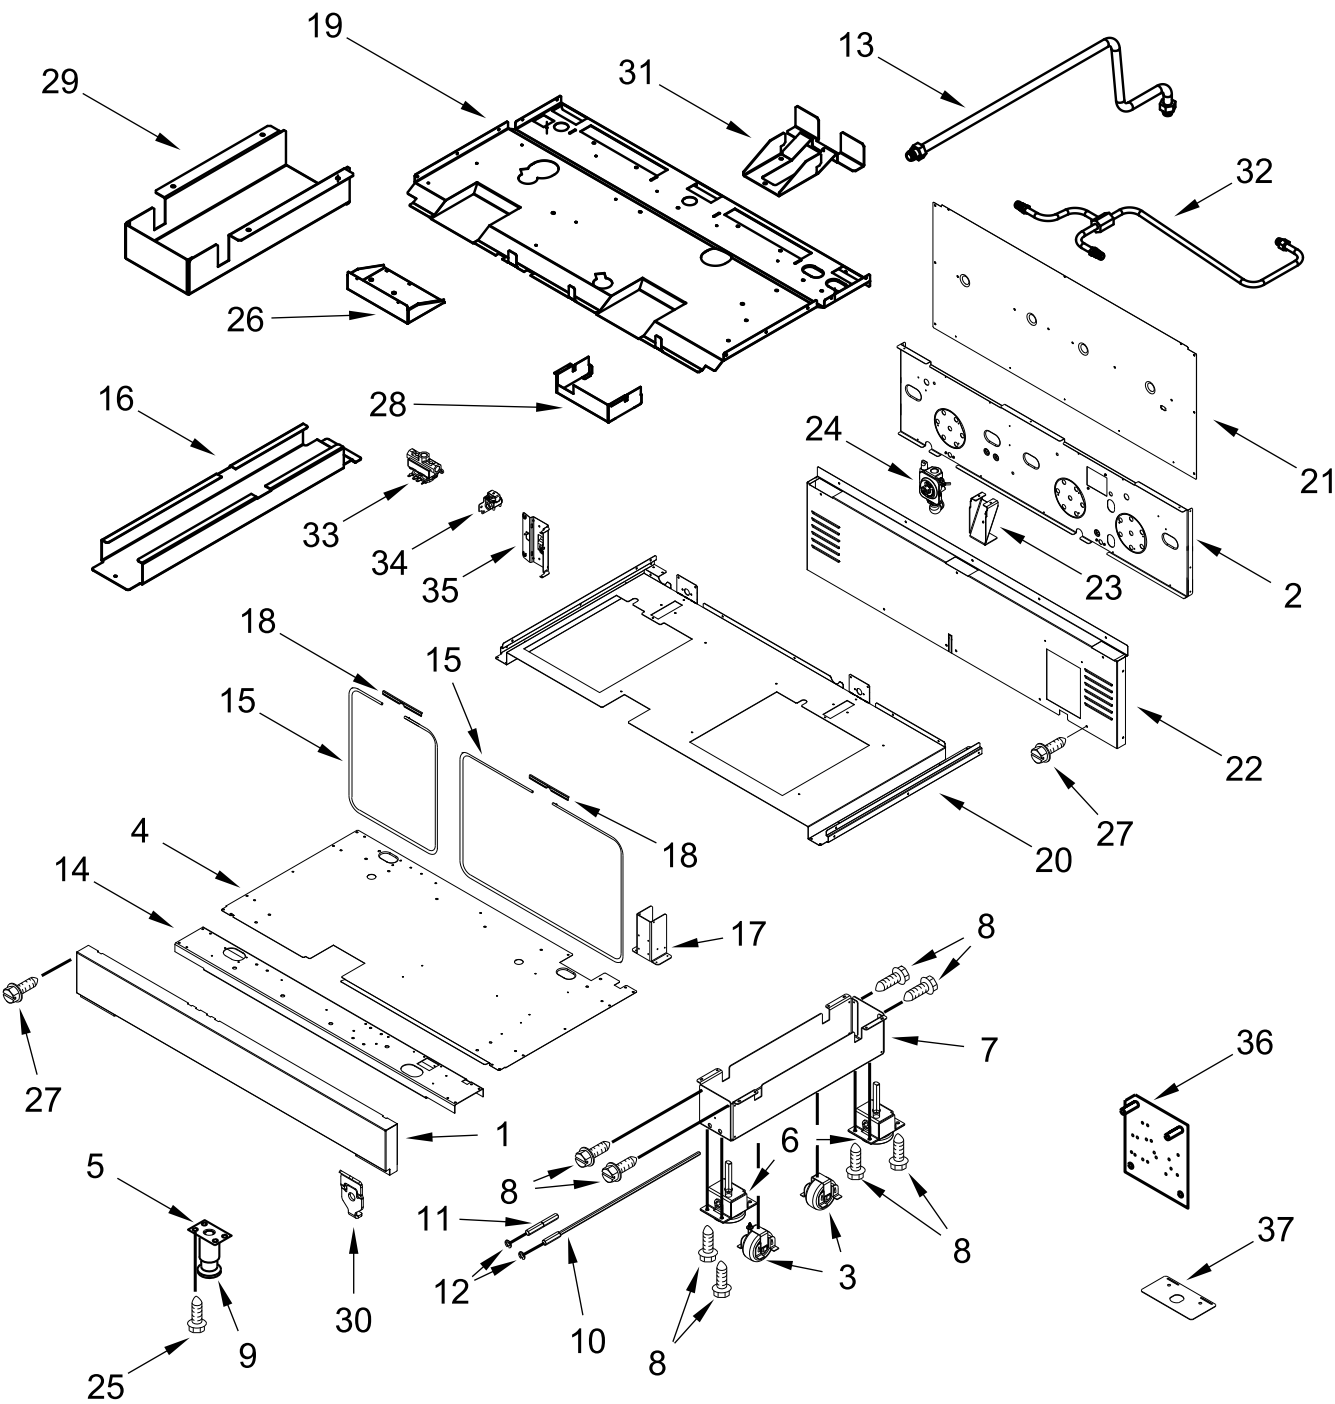

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11368831	Channel, Wire
2	W11324987	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48")	19	W11324984	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11369237	Cabinet, Appliance Manager			
14	W11369238	Support, Channel						
15	W11115328	Gasket, Oven (30")						
	W11115326	Gasket, Oven (18")						


30" OVEN PARTS

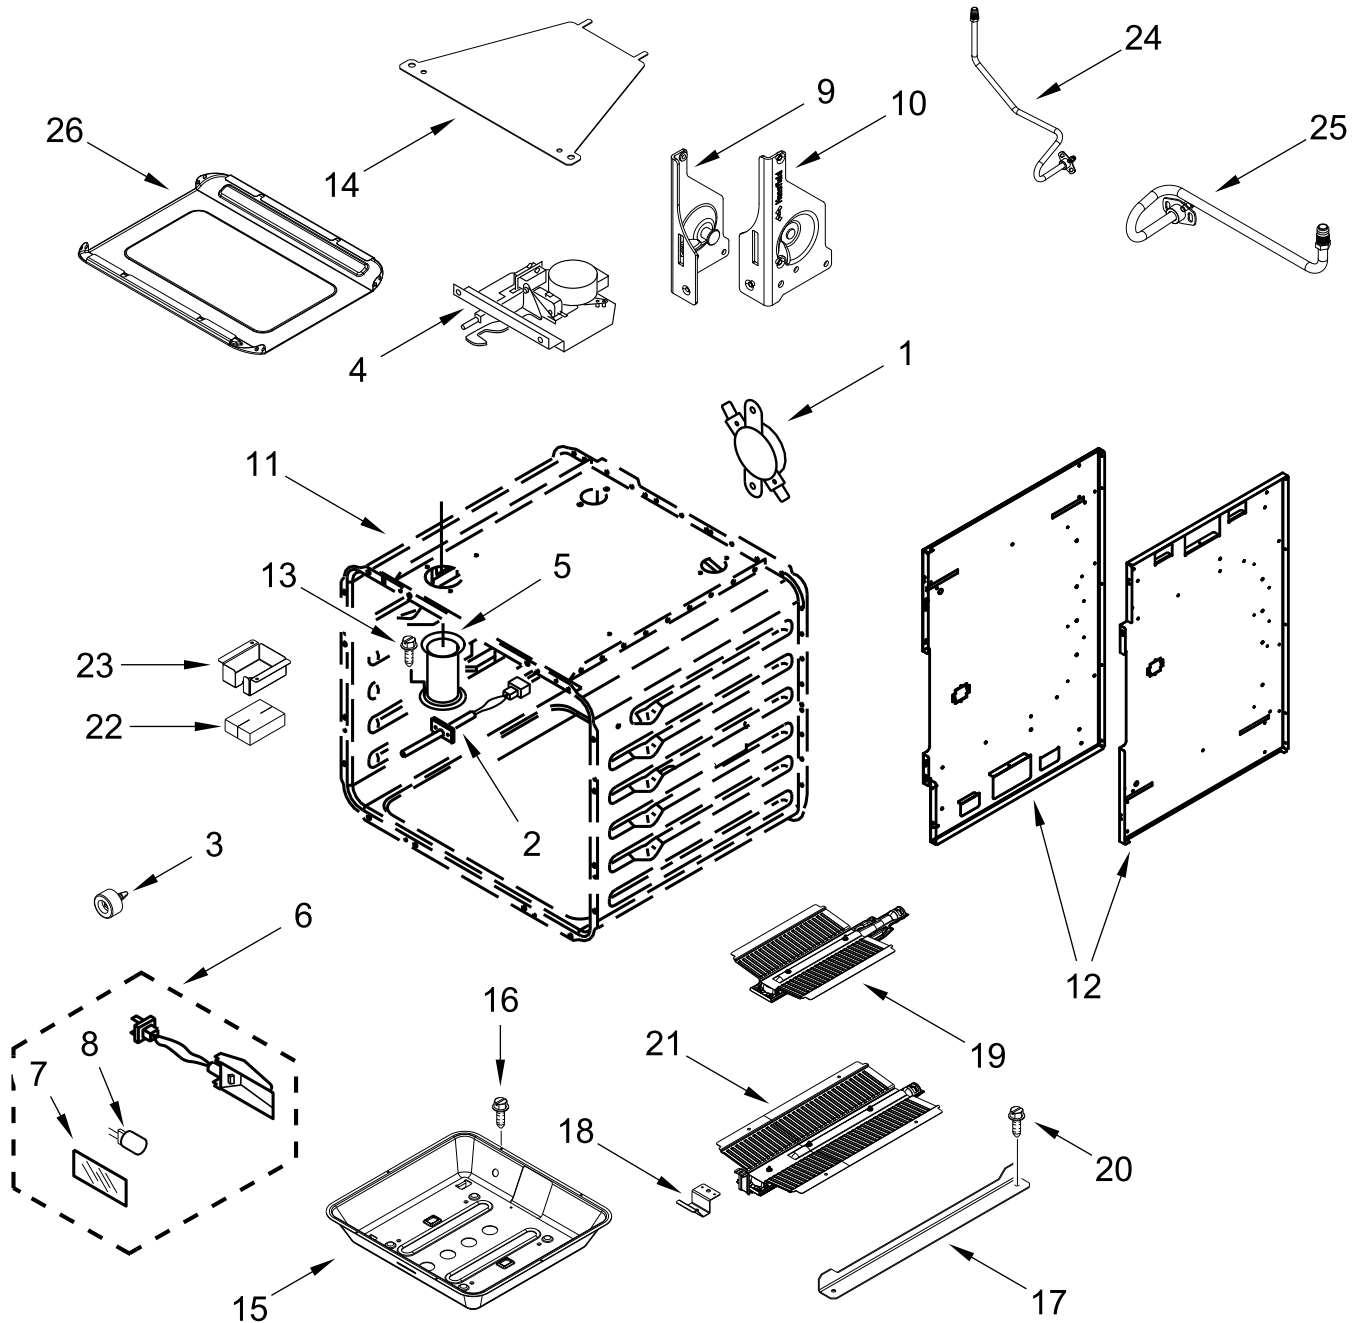

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	13	3196176	Screw	26	W10496809	Pan, Oven Bottom
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	15	W10145744	Support, Bake Pan			
4	W10830016	Latch, Motorized	16	12992902	Screw	W10282810		Insulation, Wrap, 30"
5	W10145743	Tube, Vent	17	W10317437	Bracket, Broil Standoff	W10299350		Insulation, Back, 30"
6	W11223932	Assembly, Oven Light	18	W10308040	Bracket, Bake Burner	W10299354		Insulation, Bottom
7	W10169756	Lens, Light	19	W10878504	Burner, Bake	3400968		Nut
8	W10169757	Bulb, Light	20	7101P434-60	Screw			
9	W11096294	Receiver, Hinge (Left)	21	W10311335	Burner, Broil			
10	W11096293	Receiver, Hinge (Right)	22	W10311009	Insulation, Broil Cover			
11		Liner, Oven (Not Serviced)	23	W10310985	Cover, Broil			
12	W11102297	Chassis, Side (Left)	24	W11109238	Tube, Broil			
	W11102296	Chassis, Side (Right)	25	W11106980	Tube, Bake			


18" OVEN PARTS

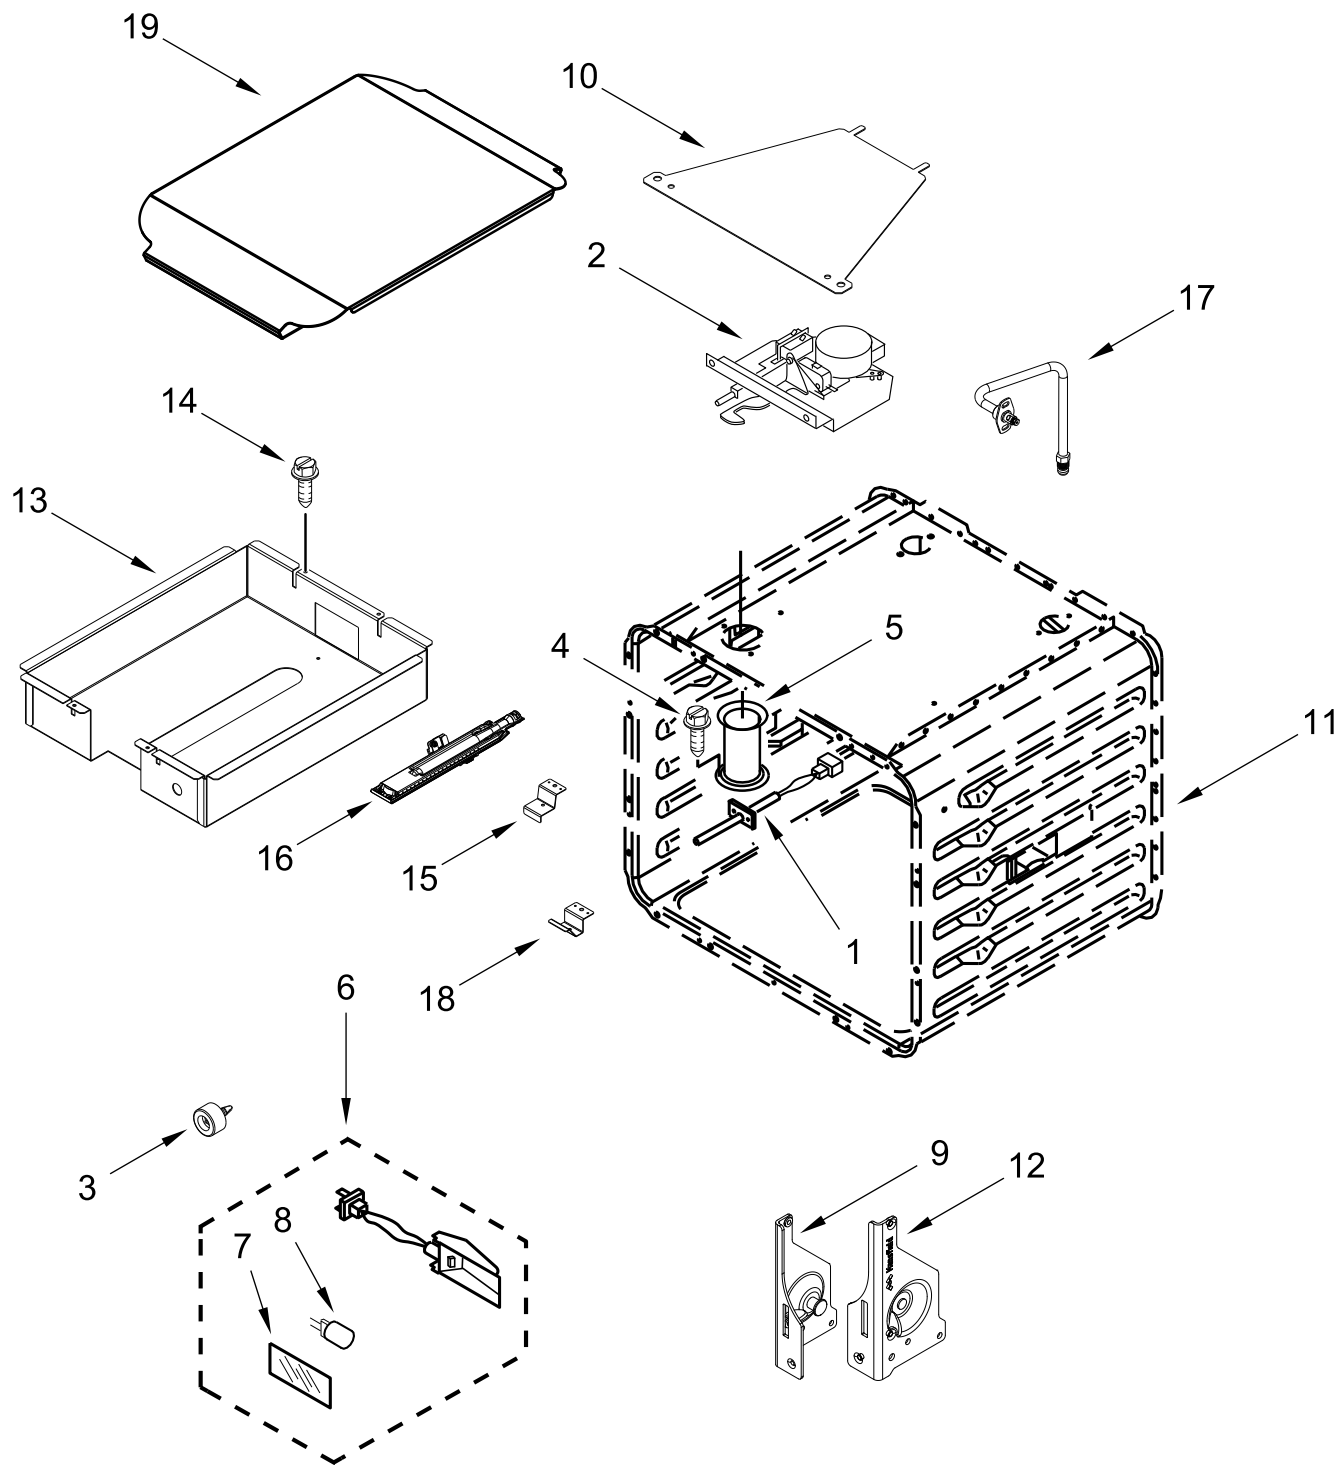

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	19	W11211936	Cover, Bake
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	13	W10145651	Support, Bake Pan			
4	3196176	Screw	14	12992902	Screw		W10282820	Insulation, Wrap, 18"
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner 18" Cavity		W10299353	Insulation, Back, 18"
6	W11223932	Assembly, Oven Light					W10299355	Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader		3400968	Nut
8	W10169757	Bulb, Light	17	W10145706	Tube, Bake			
9	W11096294	Receiver, Hinge (Left)	18	W10308040	Bracket, Bake Burner			
10	W10160858	Cover, Latch						
11		Liner, Oven (Not Serviced)						


VENTING PARTS

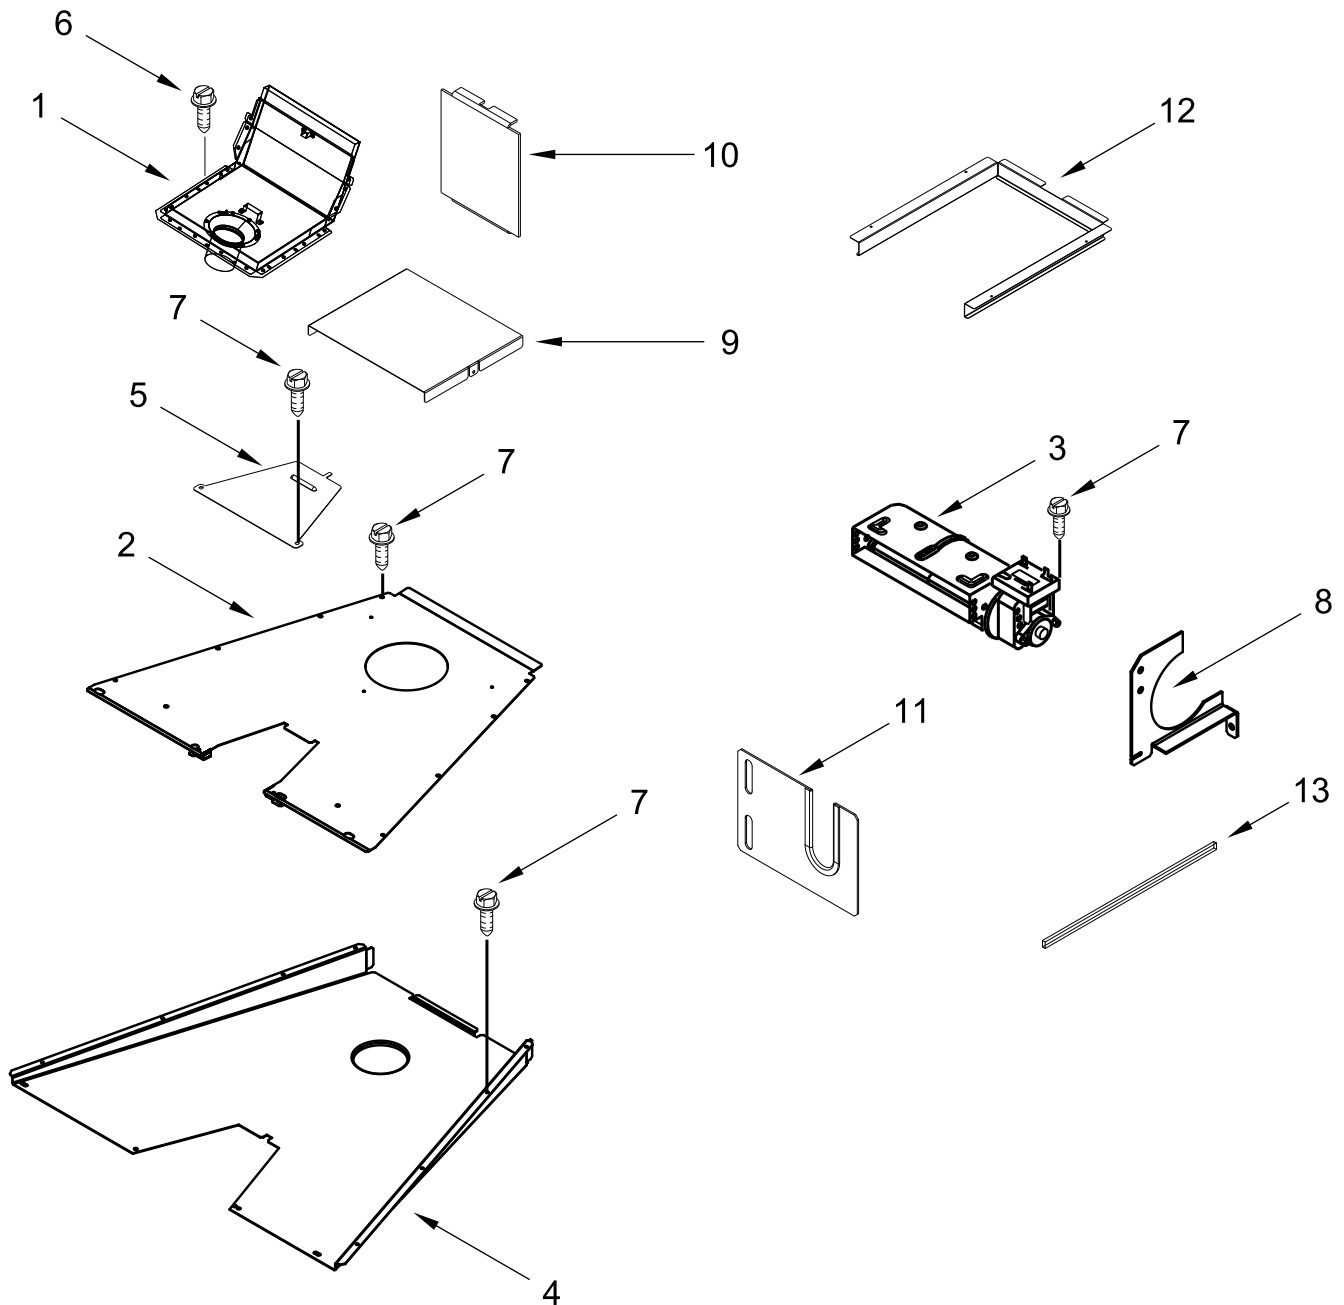

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	3	W11200129	Blower	8	W11047754	Bracket, Blower Mount
	W11476247	Vent, Chimney Box (18")	4	W11091676	Vent, Cooling Bottom (30")	9	W10246086	Retainer, Insulation
				W11113377	Vent, Cooling Bottom (18")	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18")	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30")
			7	7101P426-60	Screw		W10145364	Duct, Primary Air (18")
						13	W10919715	Gasket


30" OVEN DOOR PARTS

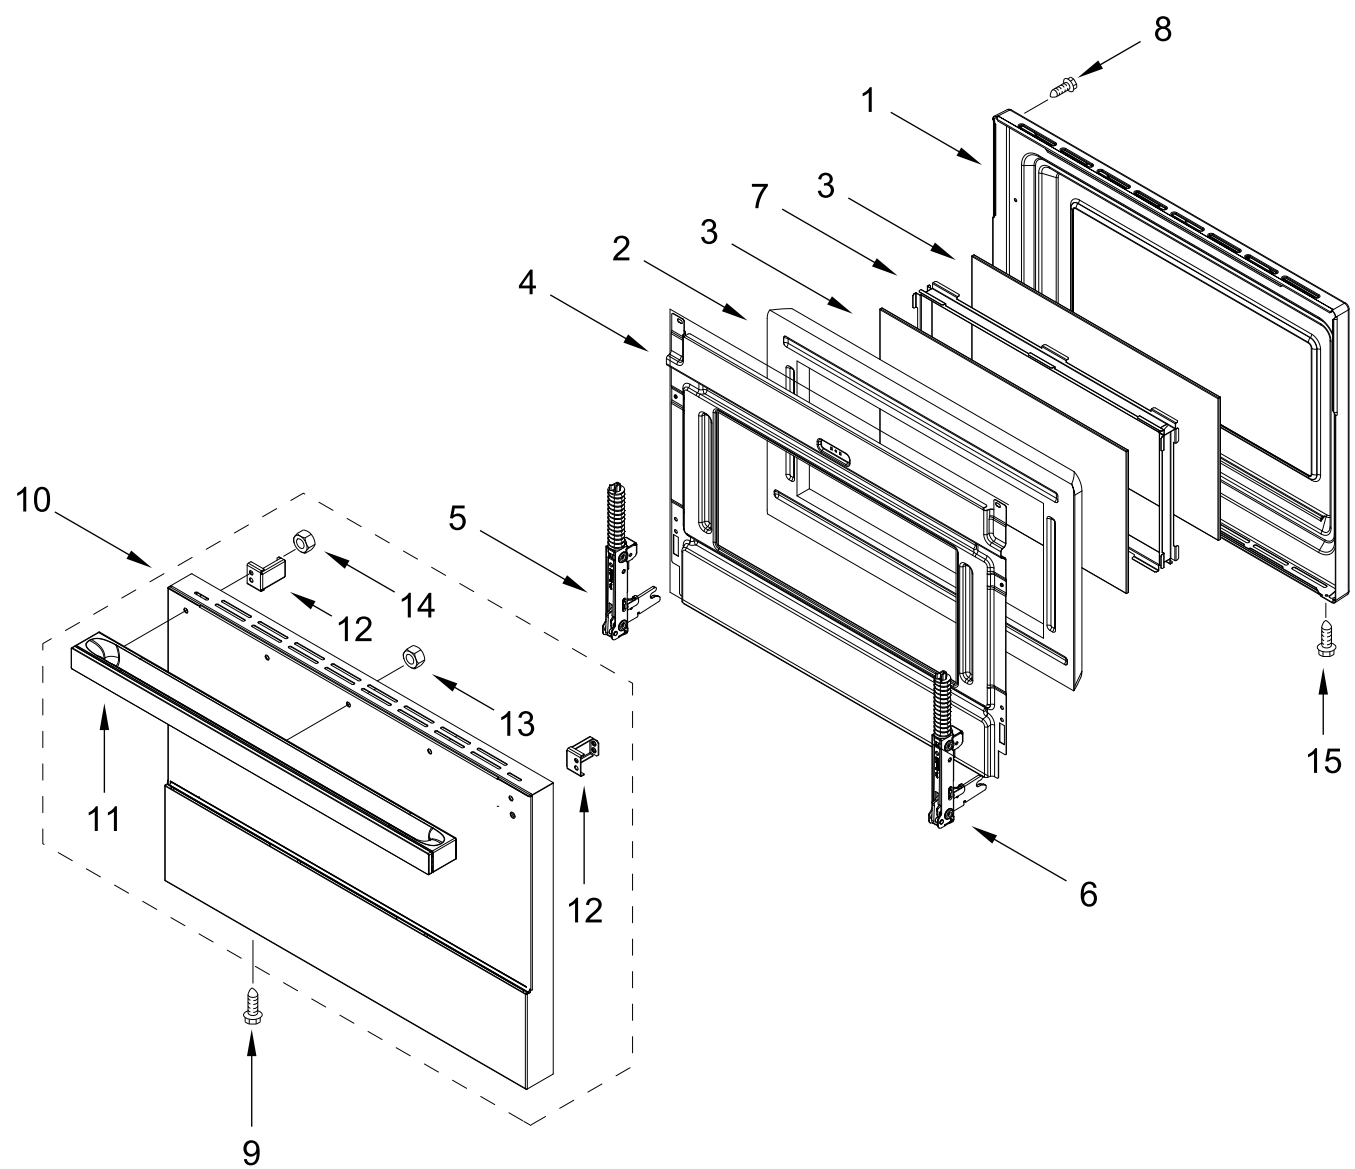

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11194816	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13	W11198435	Nut
3	W11184409	Glass, Inner	9	W10162096	Screw	14	999299	Nut
4	W11194821	Retainer, Glass	10	W10870221	Assembly, Outer Door Glass (Includes Handle)	15	W10607120	Screw
5	W11096978	Hinge, Door (Left)						
6	W11096977	Hinge, Door (Right)	11	W11411876	Handle, Door			


18" OVEN DOOR PARTS

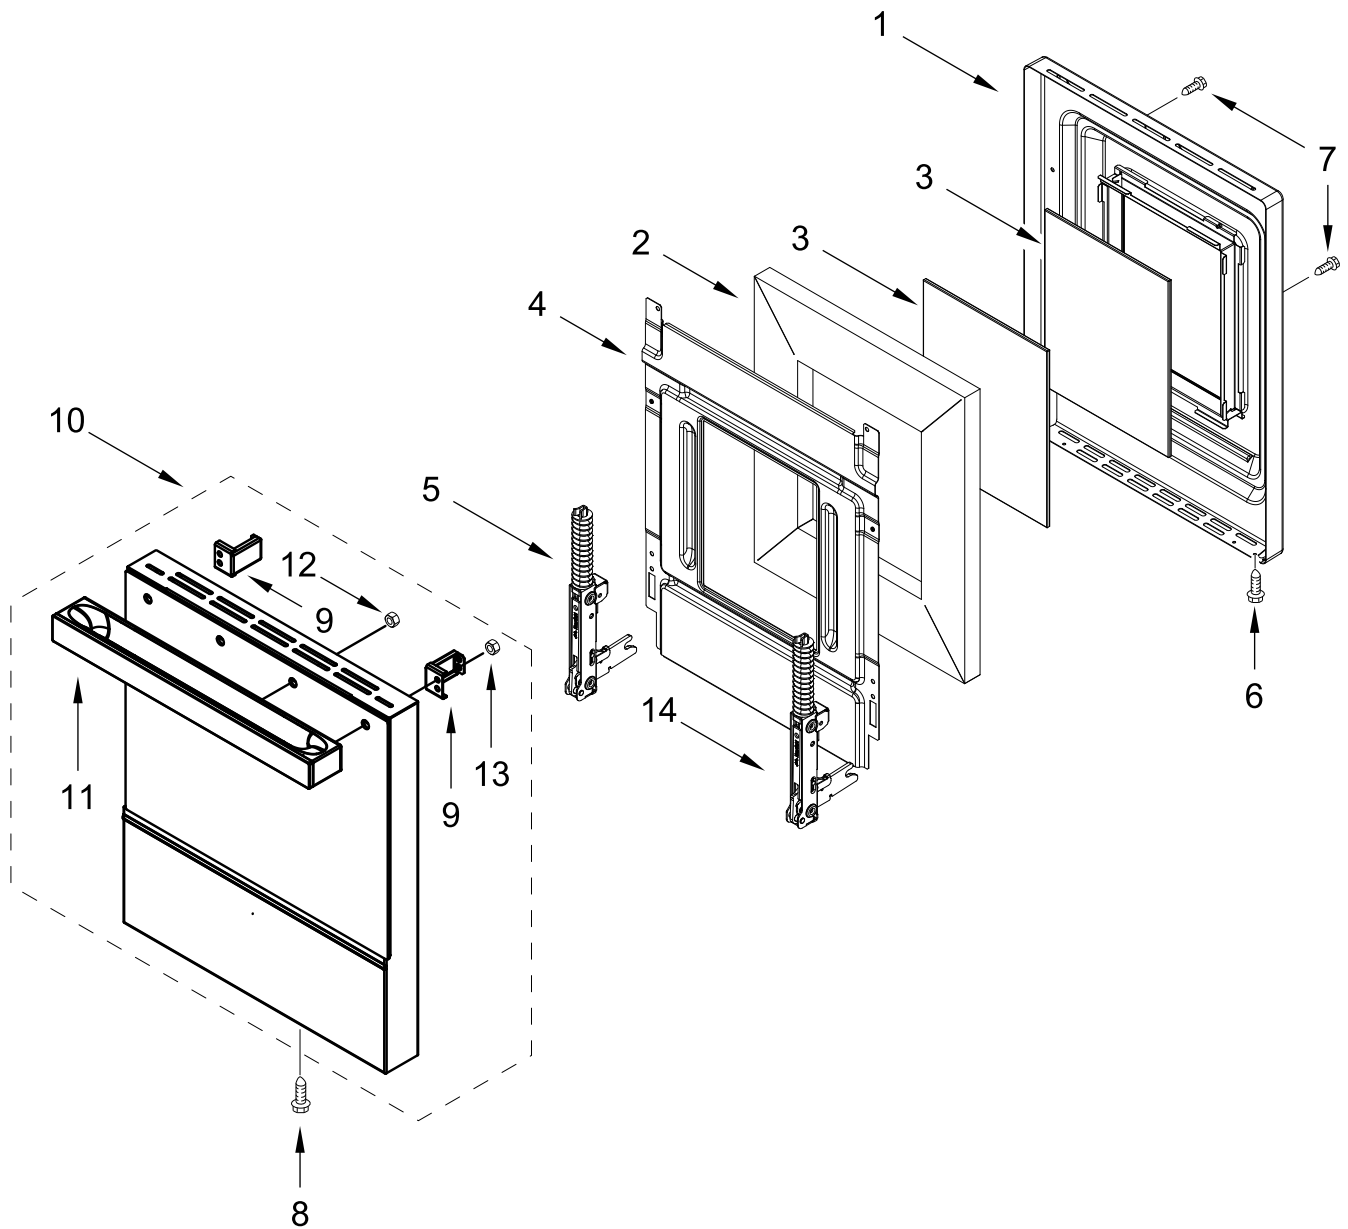

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W11198435	Nut
2	W10884821	Insulation, Door	8	W10162096	Screw	13	999299	Nut
3	W11036789	Glass, Inner	9	W11194816	Bracket, Handle	14	W11096981	Hinge, Door (Right)
4	W11194818	Retainer, Glass	10	W10870212	Assembly, Outer Door Glass (Includes Handle)			
5	W11096982	Hinge, Door (Left)	11	W11411883	Handle, Door			
6	W10607120	Screw						


30" INTERNAL OVEN PARTS

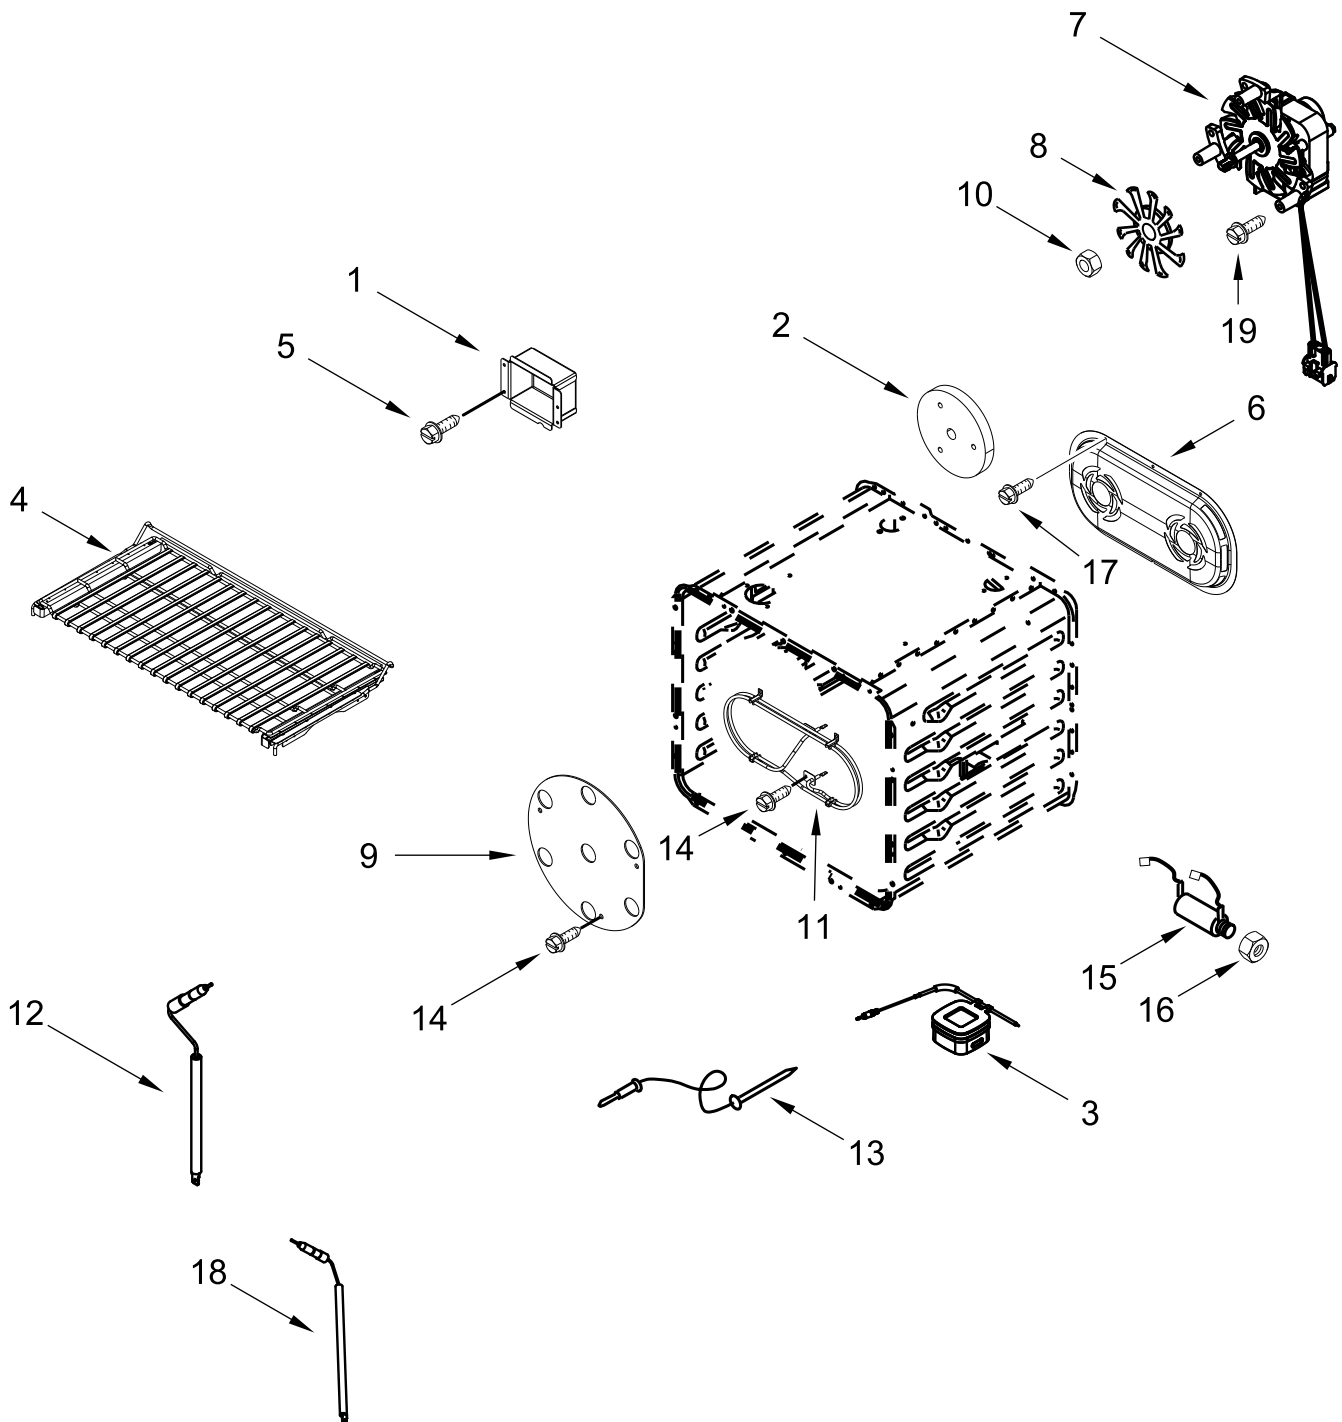

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491351	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	W10720084	Screw
			13	9755542	Probe, Temperature			

18" INTERNAL OVEN PARTS

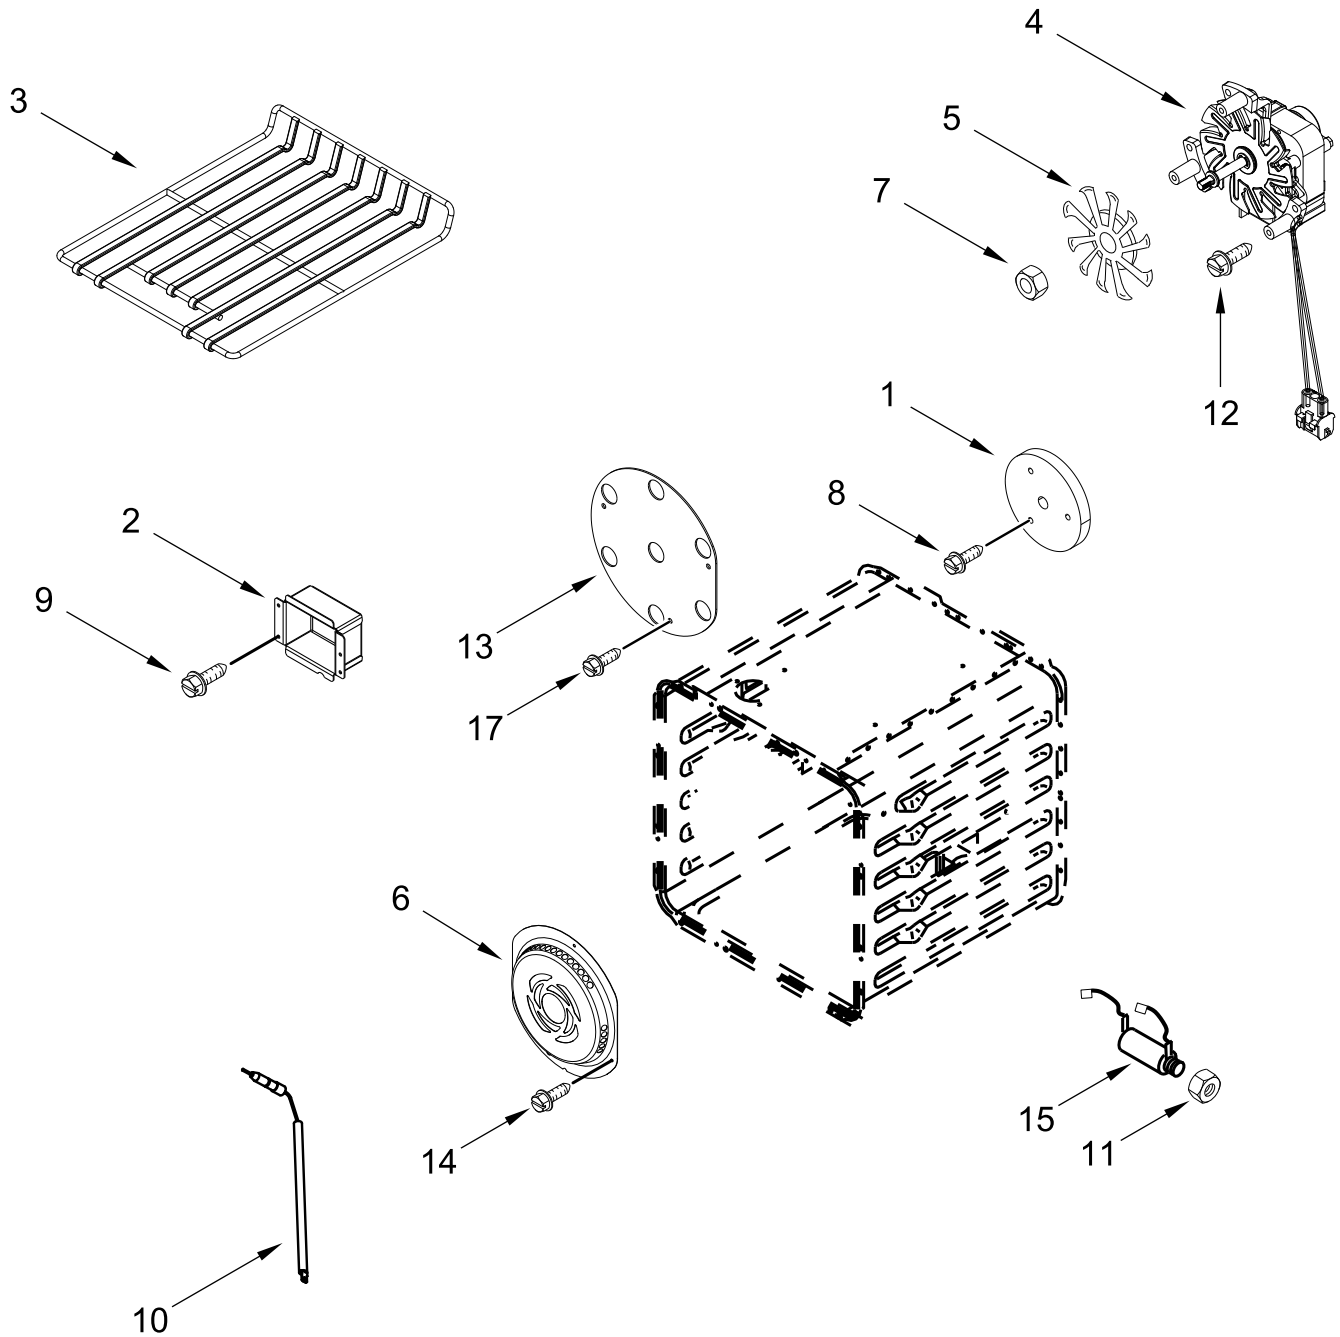

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake
2	W10308051	Box, Broil	6	W11368180	Cover, Fan	11	W11033111	Nut, Locking
3	W11111351	Rack, Oven (18")	7	W10631504	Nut, Acorn (LH)	12	W10720084	Screw
4	W10631506	Motor, Convection	8	4449154	Screw	13	W10261523	Plate, Fan
			9	7101P434-60	Screw	14	W10739592	Screw
						15	9755543	Jack, Meat Probe

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W11035424	Wok, Round Bottom
		Backsplash
	W10285449	48" With Shelf
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large