




GAS RANGE

MODELS:

JGRP636HL05 (Stainless)


BURNER BOX AND GRILL PARTS

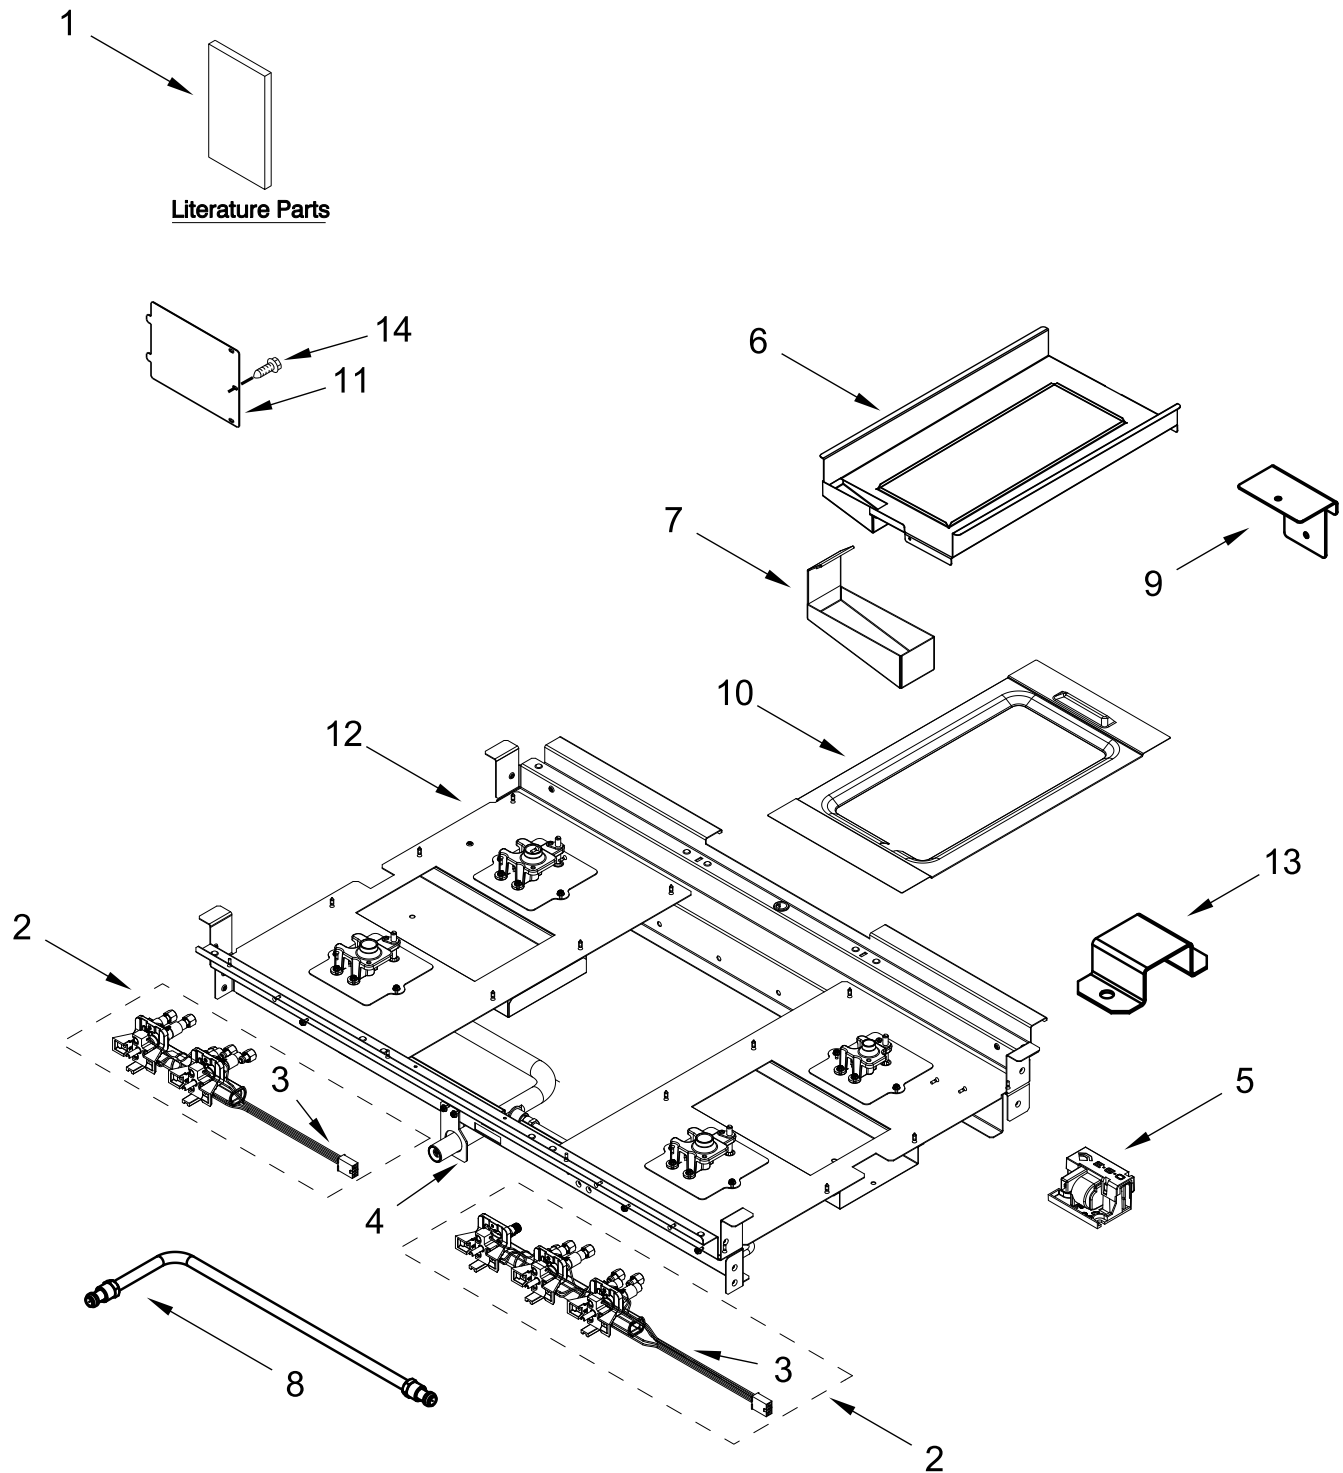

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106300	Switch, Harness (Left Front and Left Rear)	14	7101P426-60	Screw
	W11508896	Use and Care Guide						FOLLOWING PARTS NOT ILLUSTRATED
	W11508888	Installation Instructions		W11106302	Switch, Harness (Grill, Right Front, Right Rear)		W11448067	Harness, Main (36 In)
	W11184746	Guide, Internet Connectivity					W11212328	Harness, Cooktop
	W11575703	Diagram, Wiring (Cooktop)	4	W11121194	Bracket, Manifold		W10780278	Harness, Door Lock
	W11565476	Diagram, Wiring (Oven)	5	W11121317	Module, Spark		W11200325	Harness, Communication
	W11202275	Sheet, Tech	6	W11120957	Capture, Grill Grease		W11242785	Harness, WIFI
	W11177312	Guide, Quick Start	7	W11174414	Tray, Grill Drip		313438	Clip, Harness
2	W10893053	Assembly, Valve Manifold (Left Front and Left Rear)	8	W10892370	Tube, Manifold Supply (Left)		W10624584	Cord, Power
				W10892417	Tube, Manifold Supply (Right)		4450800	Screw, Grounding
	W10893077	Assembly, Valve Manifold (Grill, Right Front, Right Rear)	9	W11285353	Bracket, Grill Grease Capture		W10253333	Bracket, Anti-Tip
			10	W11120965	Deflector, Grill Heat		7101P485-60	Screw, Anti-Tip Kit
			11	W10115843	Cover, Ignition		W11422176	Kit, LP Conversion
			12		Box, Burner (Not Serviced)		W11311196	Ignitor Wire, Wire-Electrode Bake
			13	W11174418	Bracket, Grill Orifice Holder		W11311197	Ignitor Wire, Wire-Electrode Broil


COOKTOP, BURNER, AND GRILL PARTS

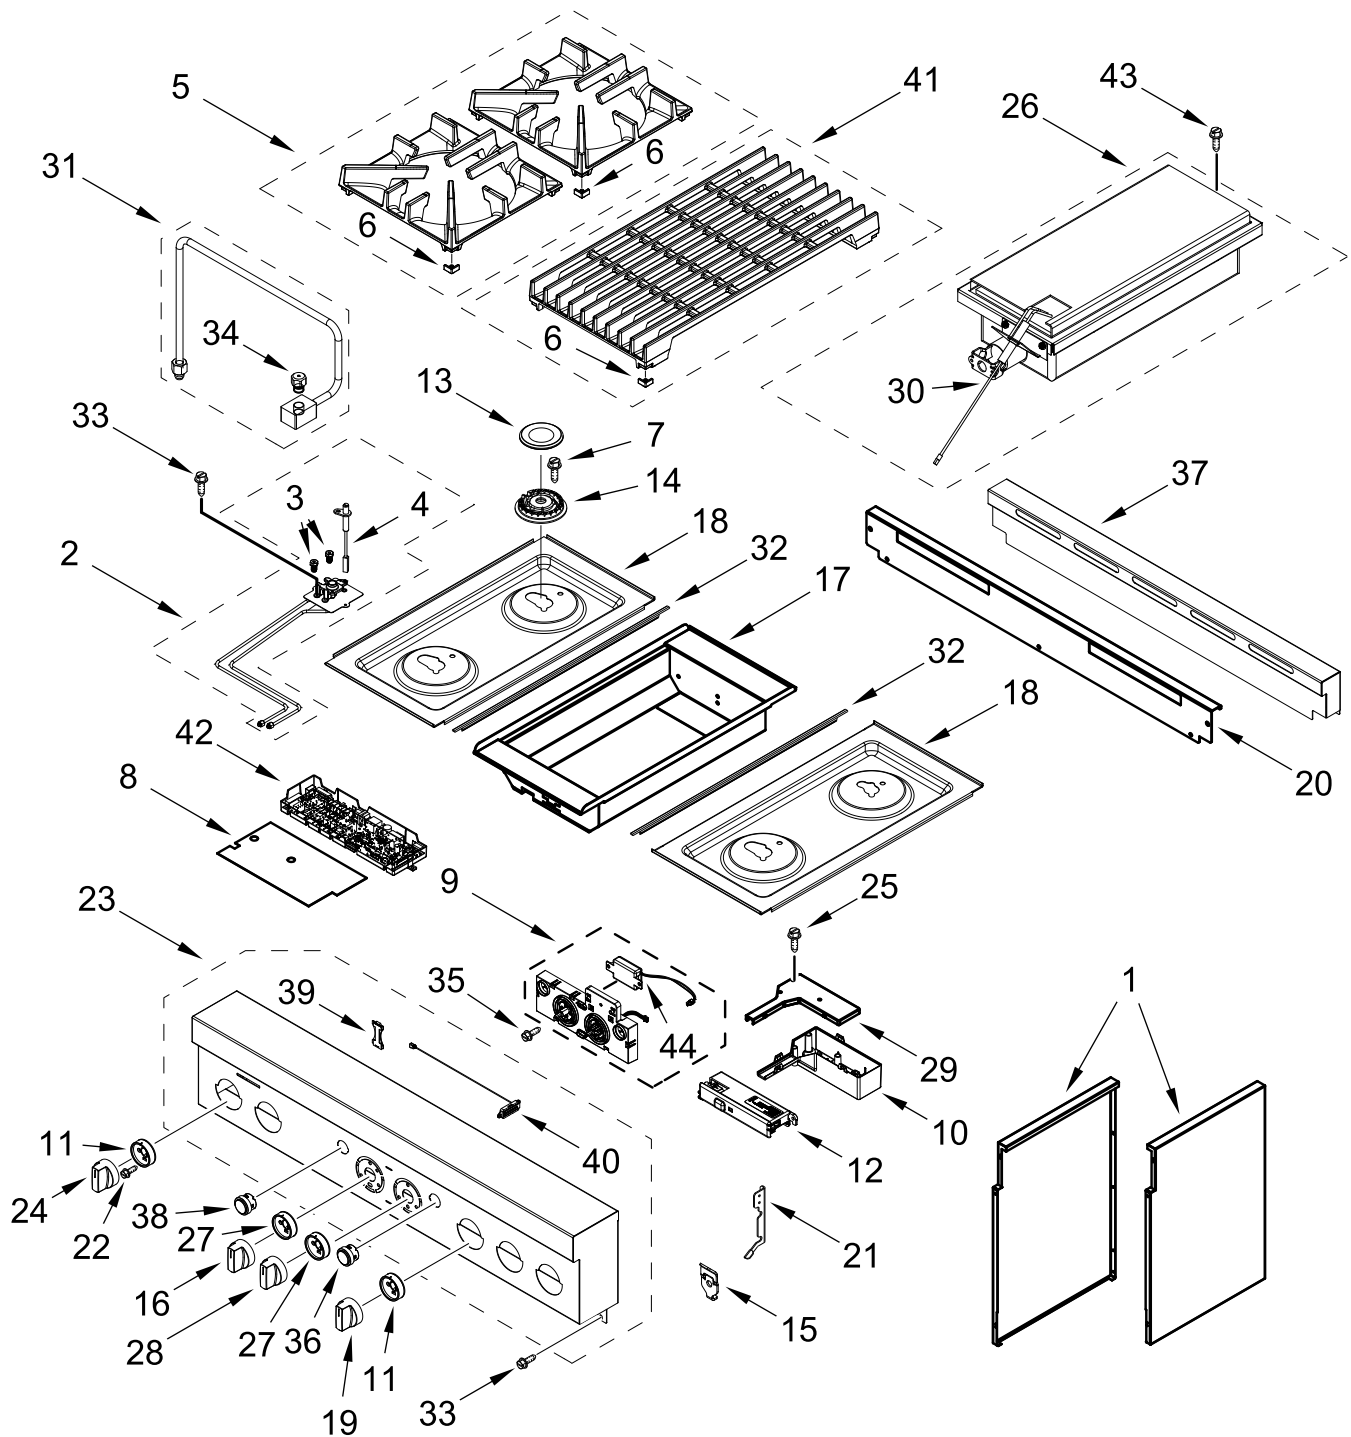

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	8	W11281269	Barrier, Appliance Manager	24		Knob, Burner (For 4 Cooktop Burners)
	W11106880	Panel, Cabinet Side (Right)	9	W11436327	Interface, User		W11496088	Stainless
2	W10892793	Assembly, Orifice Holder (Left Front)	10	W11205795	Cover, WIFI Outer	25	3196560	Screw
	W10892494	Assembly, Orifice Holder (Left Rear)	11		Bezel (For 4 Cooktop Burners and Grill)	26	W11120976	Assembly, Grill Burner
	W10892475	Assembly, Orifice Holder (Right Front)		W11090283	Brass	27		Bezel, Oven (For 2 Oven Knobs)
	W10892730	Assembly, Orifice Holder (Right Rear)	12	W11110768	Assembly, WIFI Module		W10914998	Stainless
3	W10892422	Orifice, Main (17.4K) (Left Front)	13		Cap, Burner	28		Knob, Oven Temperature
	W10892418	Orifice, Main (15.4K) (Left Rear and Right Front)	14	W11121391	Black (Set of 4)		W11496091	Stainless
	W10892440	Orifice, Main (7.2K) (Right Rear)		W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)	29	W11205794	Cover, WIFI Inner
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)		W10892022	Spreader, Flame (Low) (Right Rear)	30	W11174598	Electrode, Grill
	W10892429	Orifice, Simmer (2.0K) (Right Rear)	15	W11036559	Spring Clip, Range	31	W11419280	Grill Orifice Holder Assembly (Center)
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	16		Knob, Oven Mode	32	W10291193	Trim, L-Strip
	W11238756	Igniter (Right Rear)		W11496094	Stainless	33	7101P426-60	Screw
5		Assembly, Grate	17	W11174429	Assembly, Grill Box	34	W11419282	Orifice, Grill (18K) (Center)
	W11291176	Black (Set of 2)	18		Panel, Cooktop	35	3400814	Screw
6	W11042504	Bumper, Grate		W10803515	Black (Left)	36	W11090650	Button Assembly, Oven Start
7	W11323260	Screw		W10804371	Black (Right)	37	W11476245	Trim, Island
			19		Knob, Grill	38	W11090651	Button Assembly, Oven Light
				W11496090	Stainless	39	W10896369	Assembly, Light Pipe
			20	W10323250	Insert, Island Trim	40	W11130078	Antenna, WIFI
			21	W10130760	Bracket, Moving Console (Left)	41	W11291177	Grill Grate Assembly
				W10130759	Bracket, Moving Console (Right)	42	W11543348	Manager, Powermax Appliance
			22	W11328357	Screw	43	3196537	Screw
			23	W10878255	Panel, Console	44	W10568405	Assembly, Speaker


CHASSIS PARTS

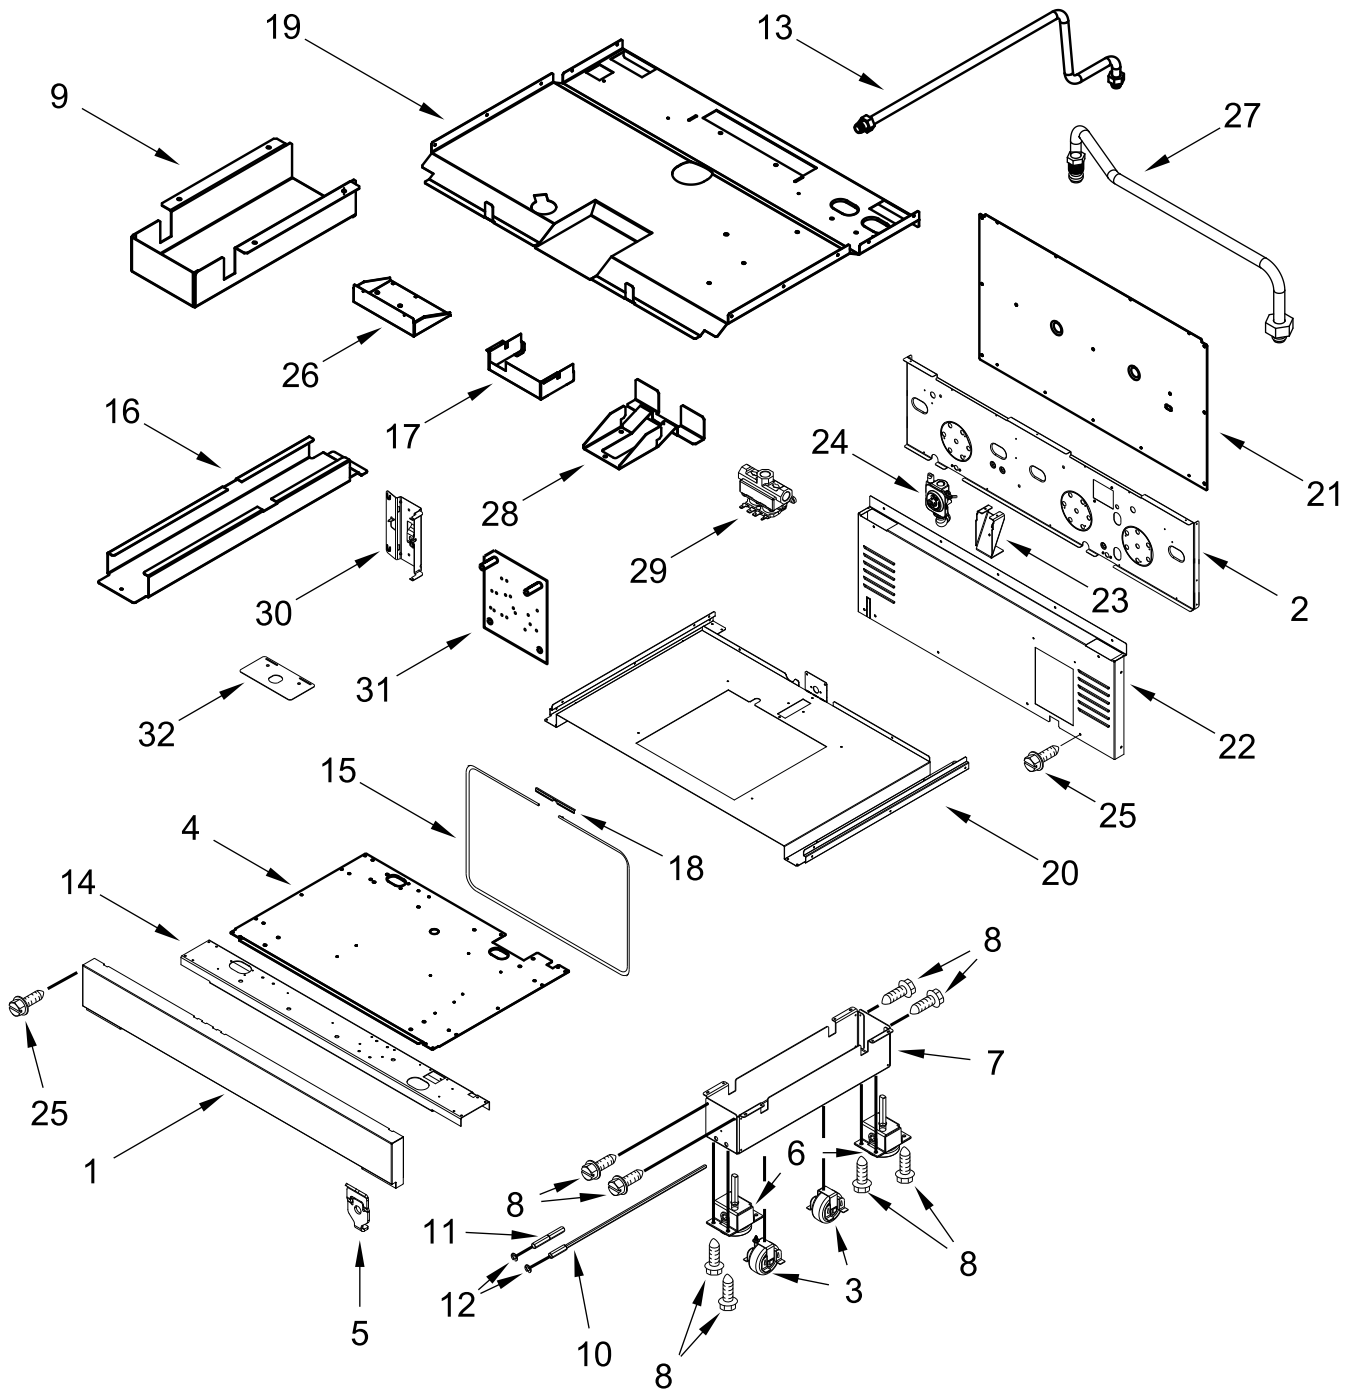

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	16	W11050145	Duct-Chassis, Rear	28	W11190223	Bracket, Bake Alignment
2	W11324988	Back, Chassis	17	W11369237	Cabinet, Appliance Manager	29	W10145680	Valve, Dual
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9 in Long)	30	W10145362	Bracket-Board, DSI
4	W11095572	Duct, Bottom (36 in)	19	W11324985	Top, Chassis	31	W10511278	Module, Spark DSI
5	W11036559	Spring Clip, Range	20	W11040801	Chassis, Bottom	32	W10115855	Holder, Strain Relief
6	9760860	Leveler	21	W11103333	Panel, Back Top			
7	W10908710	Base, Leveling Leg	22	W11034133	Panel, Back Bottom			
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator			
9	W11368831	Channel, Wire	24	W10896959	Regulator, Pressure			
10	W10115869	Shaft, Long	25	7101P426-60	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	W11107279	Tube, Gas			
13	W11181648	Tube, Pressure Regulator						
14	W11087493	Support, Channel						
15	W11115330	Gasket, Oven (36 in)						

OVEN PARTS

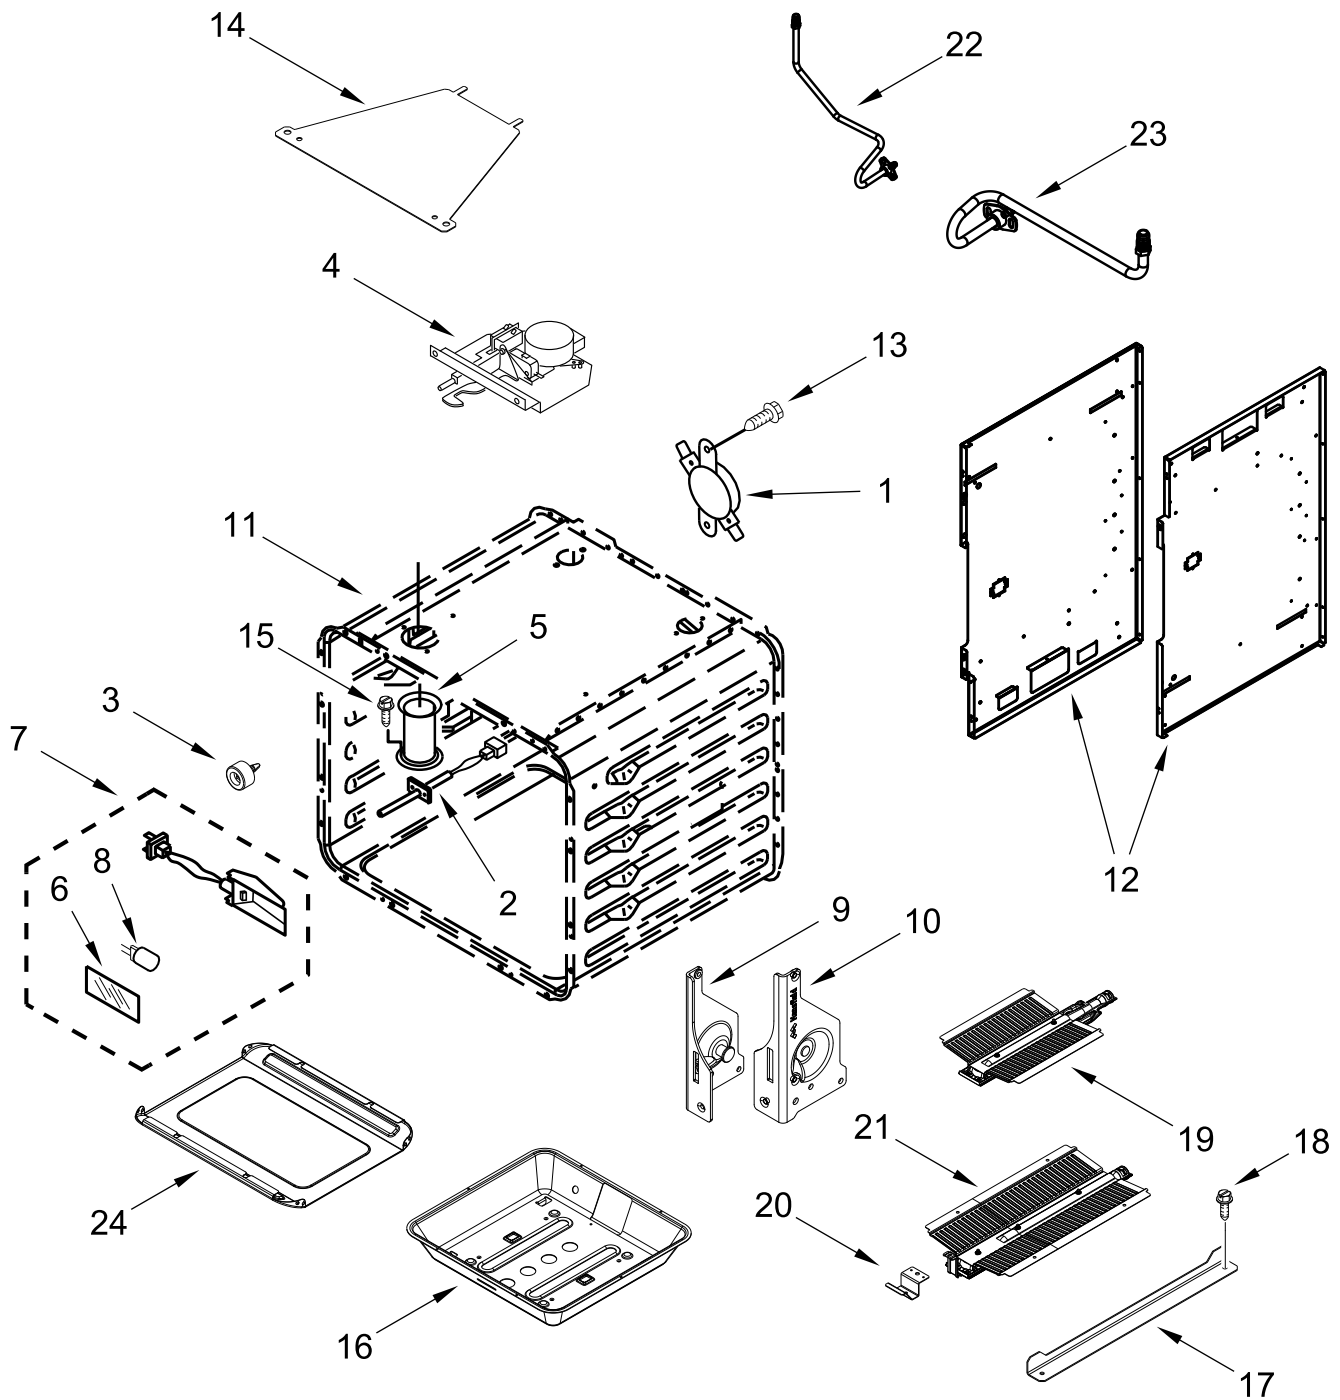

OVEN PARTS

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)
2	W10622170	Probe, Sensor
3	W10351278	Bumper and Screw
4	W10830016	Latch, Motorized
5	W10145743	Tube, Vent
6	W10169756	Lens, Light
7	W11223932	Assembly, Oven Light
8	W10169757	Bulb, Light
9	W11096294	Receiver, Hinge (Left)
10	W11096293	Receiver, Hinge (Right)
11		Liner, Oven (Not Serviced)


Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	W11102297	Chassis, Side (Left)
	W11102296	Chassis, Side (Right)
13	7101P426-60	Screw
14	W10160858	Cover, Latch
15	3196176	Screw
16	W10145744	Support, Bake Pan
17	W10317437	Bracket, Broil Standoff
18	7101P434-60	Screw
19	W10878504	Burner, Bake
20	W10308040	Bracket, Bake Burner
21	W10311335	Burner, Broil

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
22	W11109238	Tube, Broil
23	W11106980	Tube, Bake
24	W10496809	Pan, Oven Bottom
		FOLLOWING PARTS NOT ILLUSTRATED
	W10282811	Insulation, Wrap
	W10299351	Insulation, Back
	W10299356	Insulation, Bottom
	3400968	Nut


VENTING PARTS

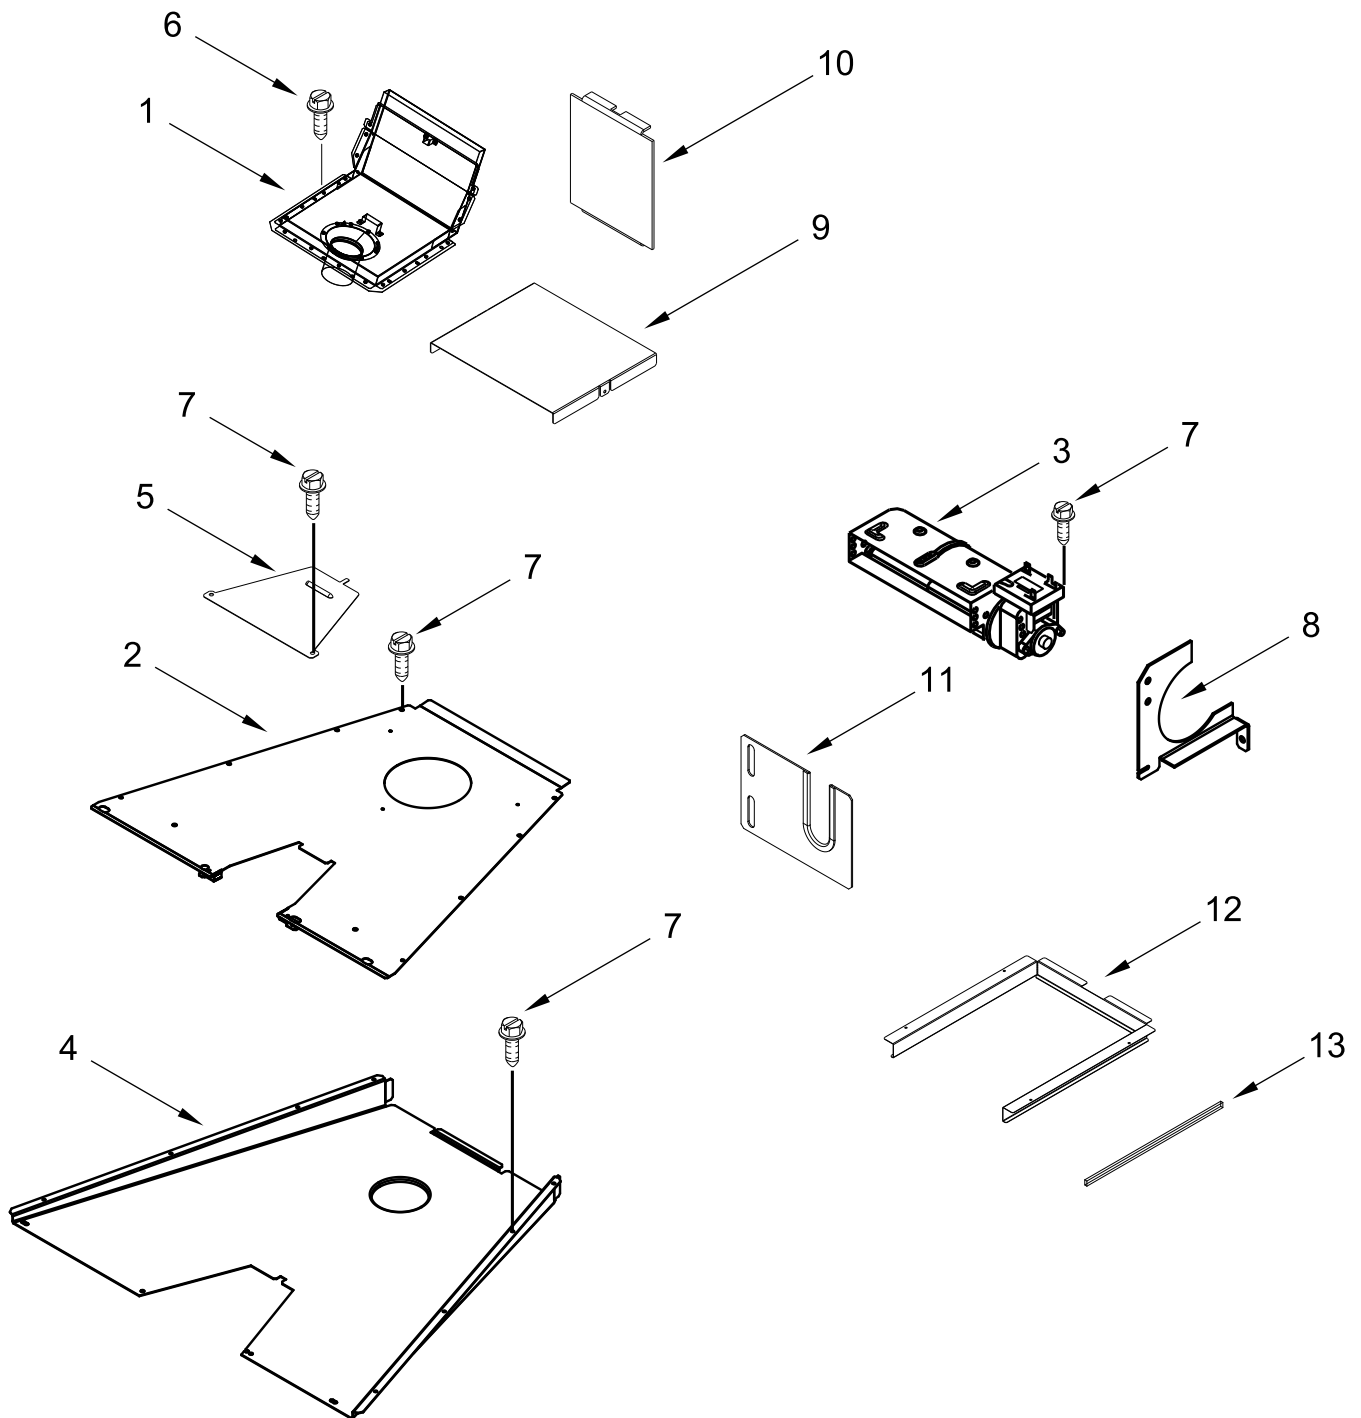

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30 in)
2	W11105221	Vent, Cooling Top (30 in)	7	7101P426-60	Screw	13	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11091676	Vent, Cooling Bottom (30 in)	9	W10246086	Retainer, Insulation			
5	W11109518	Plate, Cooling Latch	10	W10246087	Insulation, Chimney			
			11	W11106956	Cover, Channel			


OVEN DOOR PARTS

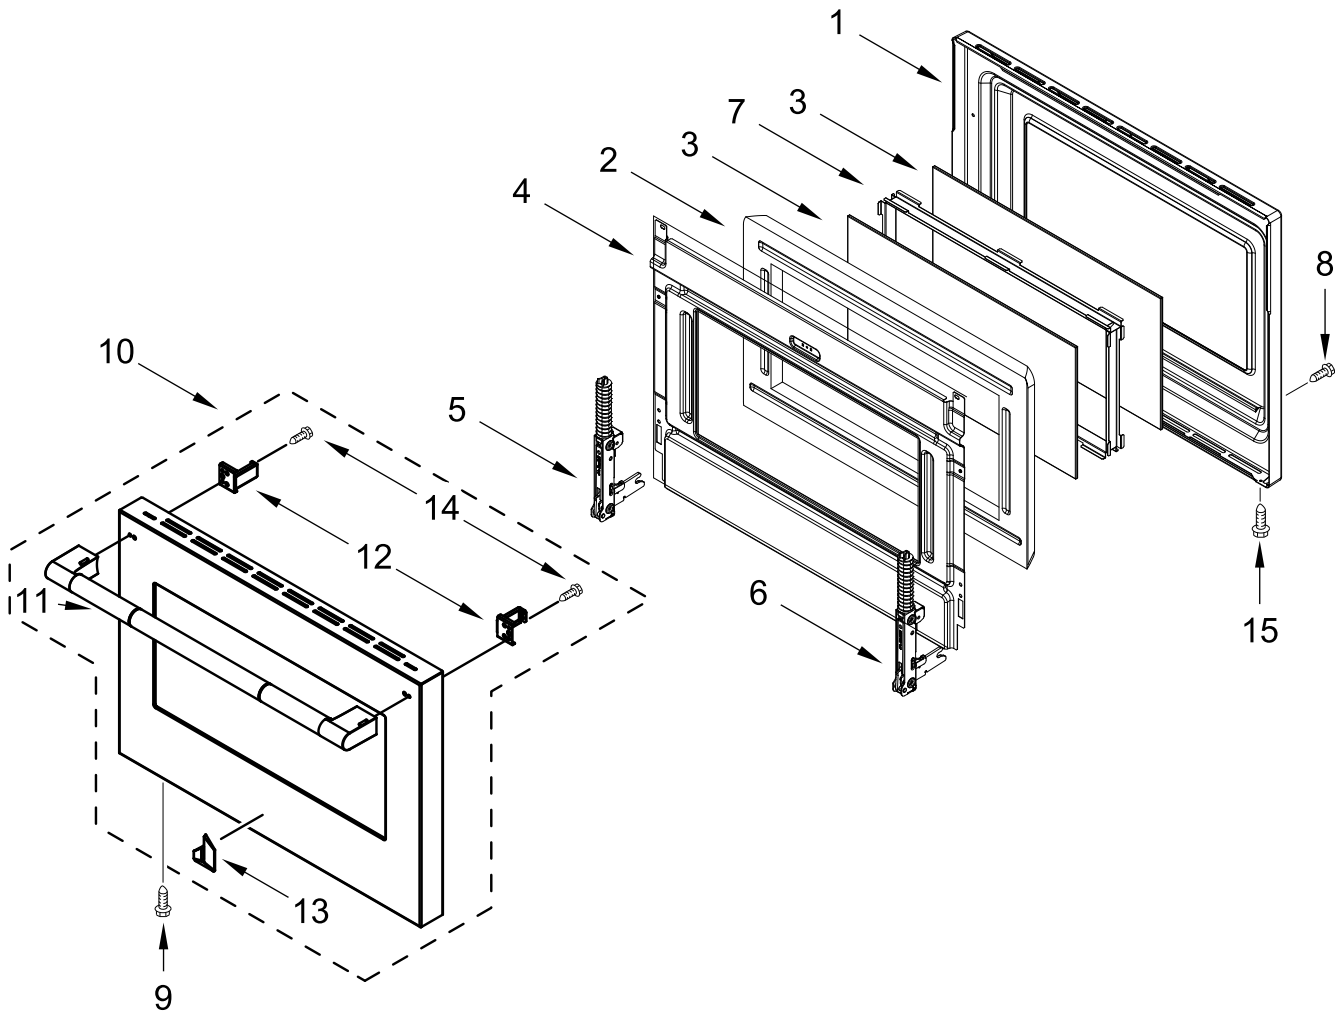

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10898280	Screw	13		Badge
2	W10884823	Insulation, Door	9	W10162096	Screw		W11238656	Stainless
3	W11036791	Glass, Inner	10	W10799310	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
4	W11194820	Retainer, Glass				15	W10607120	Screw
5	W11096978	Hinge, Door (Left)	11	W11102828	Handle, Door			
6	W11096977	Hinge, Door (Right)	12	W11197830	Bracket, Handle			
7	W11194814	Frame, Glass						

INTERNAL OVEN PARTS

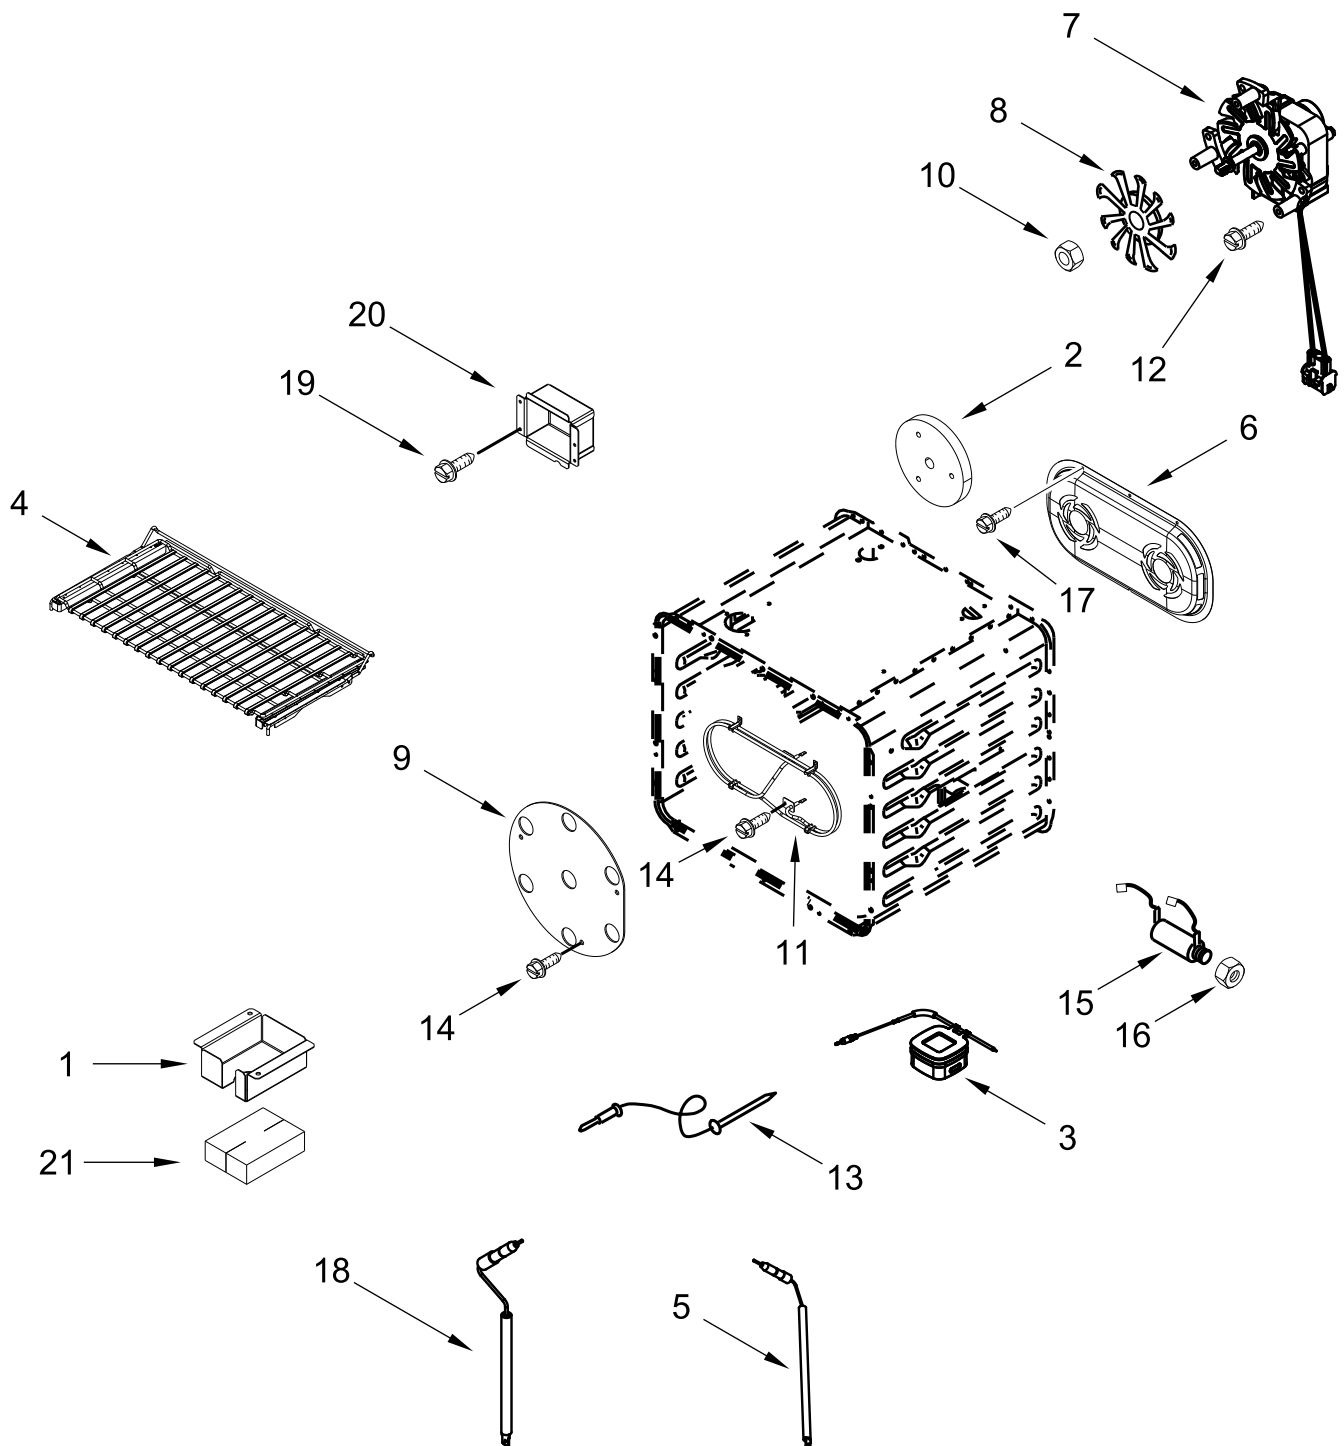

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10310985	Cover, Broil	9	W10261523	Plate, Fan	19	7101P434-60	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	20	W10308051	Box, Broil
			11	W10145949	Element, Convection	21	W10311009	Insulation, Broil Cover
3	W11186918	Probe, Wireless Meat	12	W10720084	Screw			
4	W11491350	Rack, Sliding Oven	13	9755542	Probe, Temperature			
5	W11205400	Electrode, Bake	14	4449154	Screw			
6	W11232487	Baffle, Convection	15	9755543	Jack, Meat Probe			
7	W10631506	Motor, Convection	16	W11033111	Nut, Locking			
8	W11108376	Blade, Fan	17	W10739592	Screw			
			18	W11182863	Electrode, Broil			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10115776	Backguard (36 in)
	W11035424	Wok, Round Bottom
	W11239671	Lid, Stainless Steel Grill Cover
		Backsplash
	W10285448	36-in With Shelf
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11316873	Brass, Surface and Grill
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill