




GAS RANGE
Includes Infrared Grill

MODELS:

JGRP648HL05 (Stainless)


BURNER BOX AND GRILL PARTS

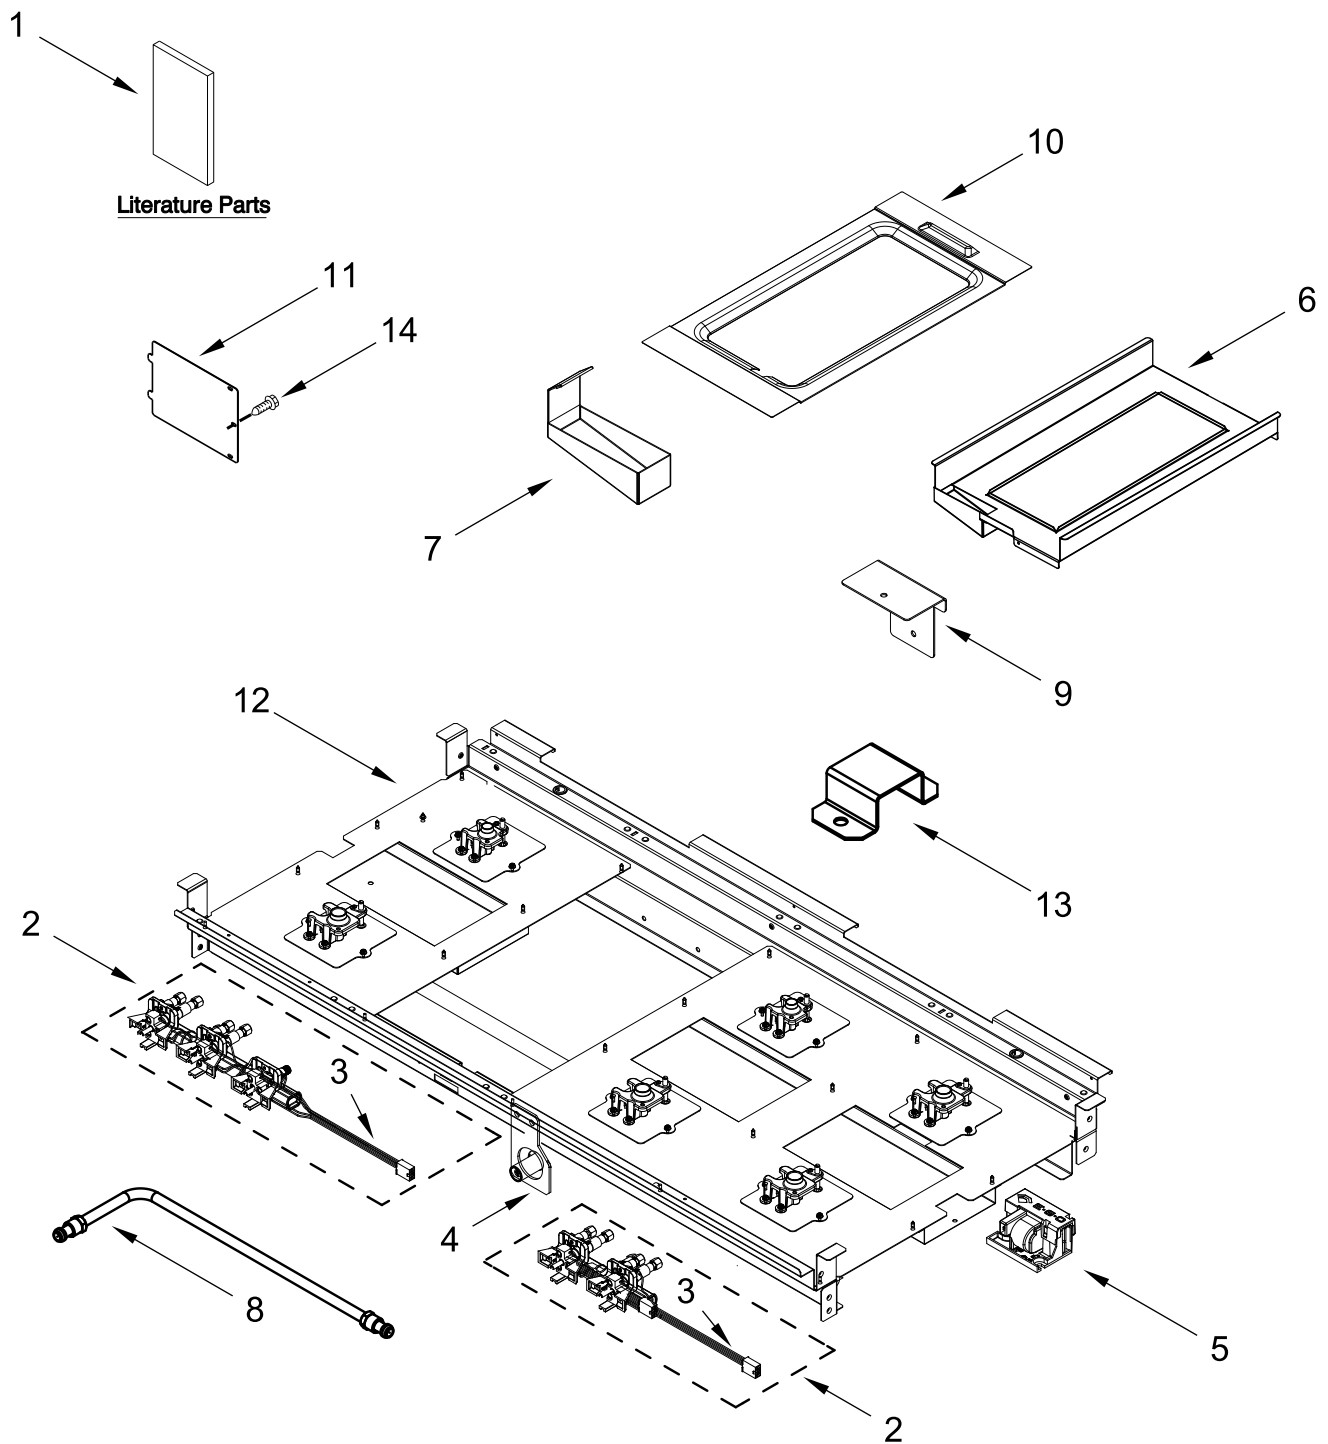

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	13	W11174418	Bracket, Grill Orifice Holder
	W11508896	Use and Care Guide				14	7101P426-60	Screw
	W11508888	Installation Instructions		W11106300	Switch, Harness (Right Center Front, Right Center Rear, Right Front, Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start					W11448012	Harness, Main (48 in)
	W11184746	Guide, Internet Connectivity					W11200330	Harness, Cooktop
	W11575704	Wiring Diagram (Cooktop)	4	W11121194	Bracket, Manifold		W10780278	Harness, Door Lock
	W11565477	Wiring Diagram (Oven)	5	W11121317	Module, Spark		W11200318	Harness, Communication
	W11202275	Sheet, Tech	6	W11120957	Capture, Grill Grease		W11242785	Harness, WIFI
2	W10893054	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	7	W11174414	Tray, Grill Drip		313438	Clip, Harness
			8	W10892803	Tube, Manifold Supply (Left)		W10624584	Cord, Power
				W10892801	Tube, Manifold Supply (Right Center)		4450800	Screw, Grounding
	W10893058	Assembly, Valve Manifold (Right Center Front And Right Center Rear)		W10892802	Tube, Manifold Supply (Right)		W11311196	Ignitor Wire, Wire-Electrode Bake
			9	W11285353	Bracket, Grill Grease Capture		W11311197	Ignitor Wire, Wire-Electrode Broil
	W11183722	Assembly, Valve Manifold (Right Front and Right Rear)	10	W11120965	Deflector, Grill Heat		W10253333	Bracket, Anti-Tip
			11	W10115843	Cover, Ignition		7101P485-60	Screw, Anti-Tip Kit
			12		Box, Burner (Not Serviced)		W11422176	Kit, LP Conversion


COOKTOP, BURNER, AND GRILL PARTS

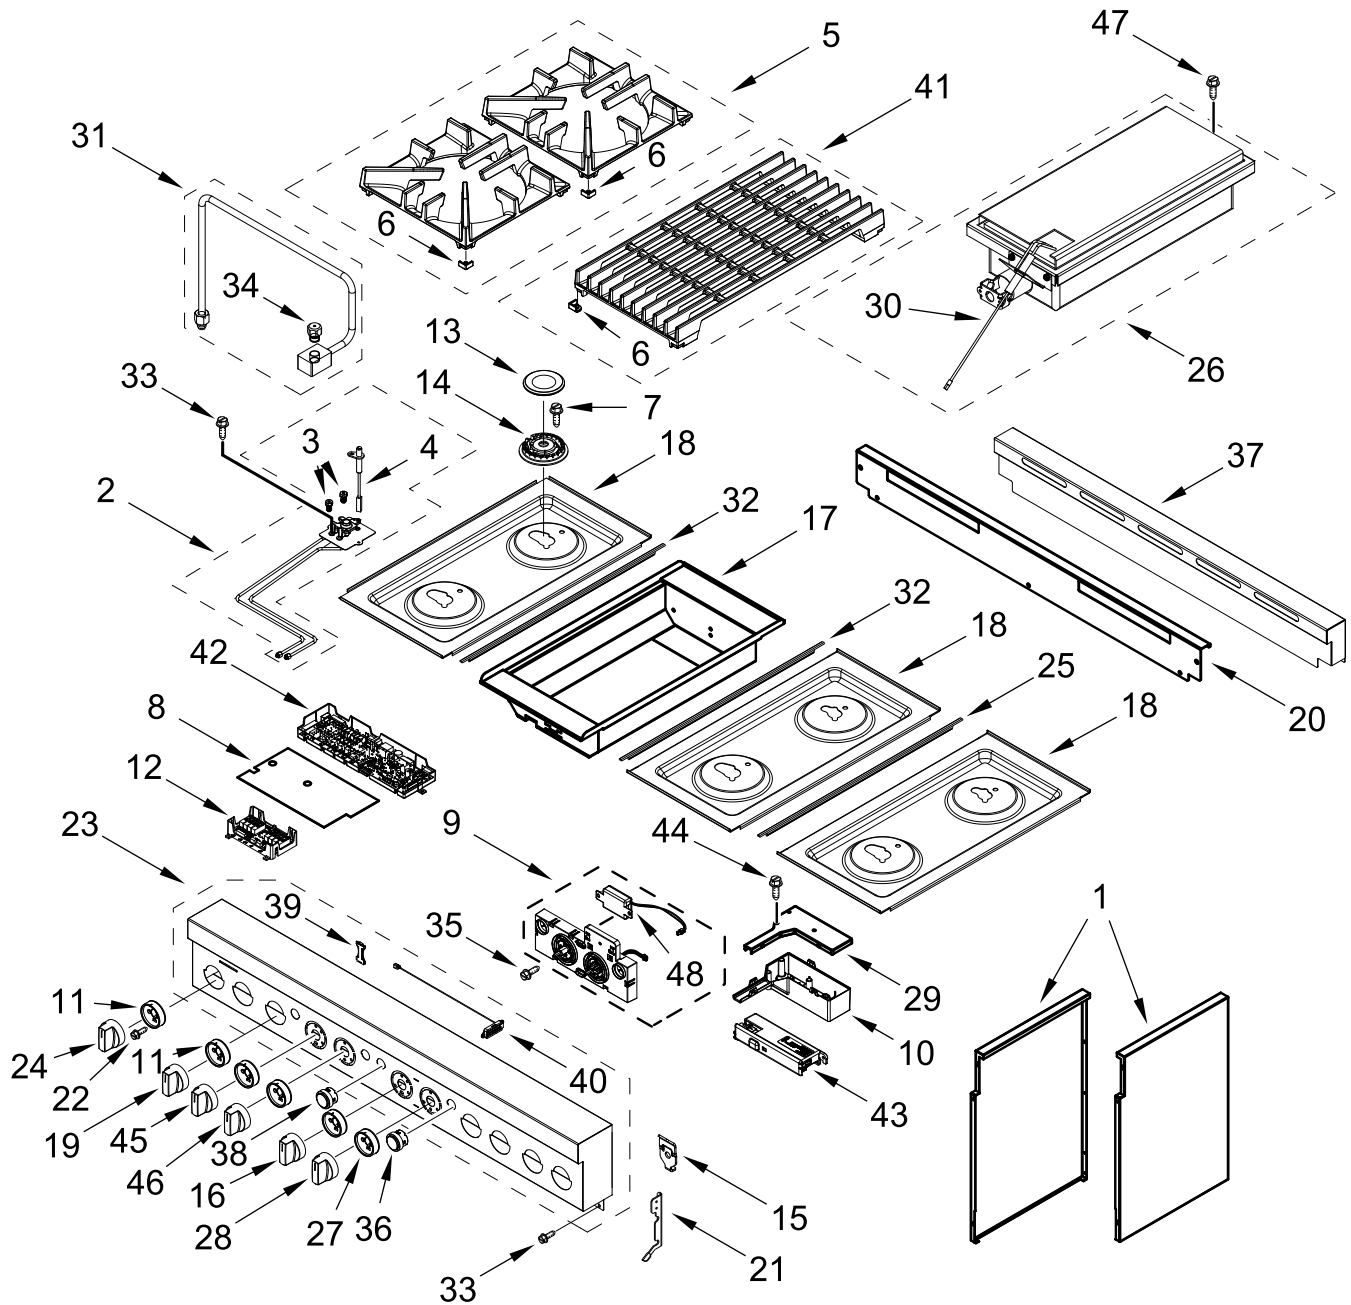

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	7	W11323260	Screw	25		Trim, T-Strip
	W11111428	Panel, Cabinet Side (Right)	8	W11281269	Barrier, Appliance Manager		W10271524	Black
2	W10892807	Assembly, Orifice Holder	9	W11436326	Interface, User	26	W11120976	Assembly, Grill Burner
		(Left Front)	10	W11205795	Cover, WIFI Outer	27		Bezel, Oven
	W10892495	Assembly, Orifice Holder	11		Bezel			(For 4 Oven Knobs)
		(Left Rear)			(For 6 Cooktop Burners and Grill)	28	W10914998	Stainless
	W10892471	Assembly, Orifice Holder		W11090283	Brass			Knob, Oven Temperature
		(Right Center Front)	12	W10871065	Manager, Appliance (Expansion)			(For 30 in Oven)
	W10892724	Assembly, Orifice Holder	13		Cap, Burner	29	W11496091	Stainless
		(Right Center Rear)		W11121392	Black (Set of 6)	30	W11205794	Cover, WIFI Inner
	W10892726	Assembly, Orifice Holder	14	W10891987	Spreader, Flame (High)	31	W11174598	Electrode, Grill
		(Right Front)			(All But Right Center Rear)	32	W11419278	Grill Orifice Holder Assembly
	W10892474	Assembly, Orifice Holder		W10892022	Spreader, Flame (Low)	33		(Left Center)
		(Right Rear)			(Right Center Rear)	34	W10291193	Trim, L-Strip
3	W10892422	Orifice, Main (17.4K)	15	W11036559	Spring Clip, Range	35	7101P426-60	Screw
		(Left Front and Right Front)	16		Knob, Oven Mode	36	W11419282	Orifice, Grill (18K)
	W10892418	Orifice, Main (15.4K)		W11496094	Stainless			(Left Center)
		(Left Rear, Right Center Front, Right Rear)	17	W11174429	Assembly, Grill Box	35	3400814	Screw
	W10892440	Orifice, Main (7.2K)	18		Panel, Cooktop	36	W11090650	Button Assembly, Oven Start
		(Right Center Rear)		W10803515	Black	37	W11476244	Island Trim
	W10892435	Orifice, Simmer (2.6K)		W10803519	Black	38	W11090651	Button Assembly, Oven Light
		(All But Right Center Rear)		W10804373	Black	39	W10896369	Assembly, Light Pipe
	W10892429	Orifice, Simmer (2.0K)	19		Knob, Grill	40	W11130078	Antenna, WIFI
		(Right Center Rear)		W11496090	Stainless	41	W11291177	Grill Grate Assembly
4	W11238757	Igniter	20	W10323252	Trim, Island Insert	42	W11543349	Manager, Powermax Appliance
		(All But Right Center Rear)	21	W10130760	Bracket, Moving Console (Left)	43	W11110768	Assembly, WIFI Module
	W11238756	Igniter		W10130759	Bracket, Moving Console (Right)	44	7101P624-60	Screw
		(Right Center Rear)	22	W11328357	Screw	45		Knob, Oven Mode
5		Assembly, Grate	23	W10878258	Panel, Console		W11496095	Stainless
	W11291176	Black (Set of 2)	24		Knob, Burner	46		Knob, Oven Temperature
6	W11042504	Bumper, Grate			(For 6 Cooktop Burners)			(For 18 in Oven)
				W11496088	Stainless	47	3196537	Screw
						48	W10568405	Assembly, Speaker


48-IN CHASSIS PARTS

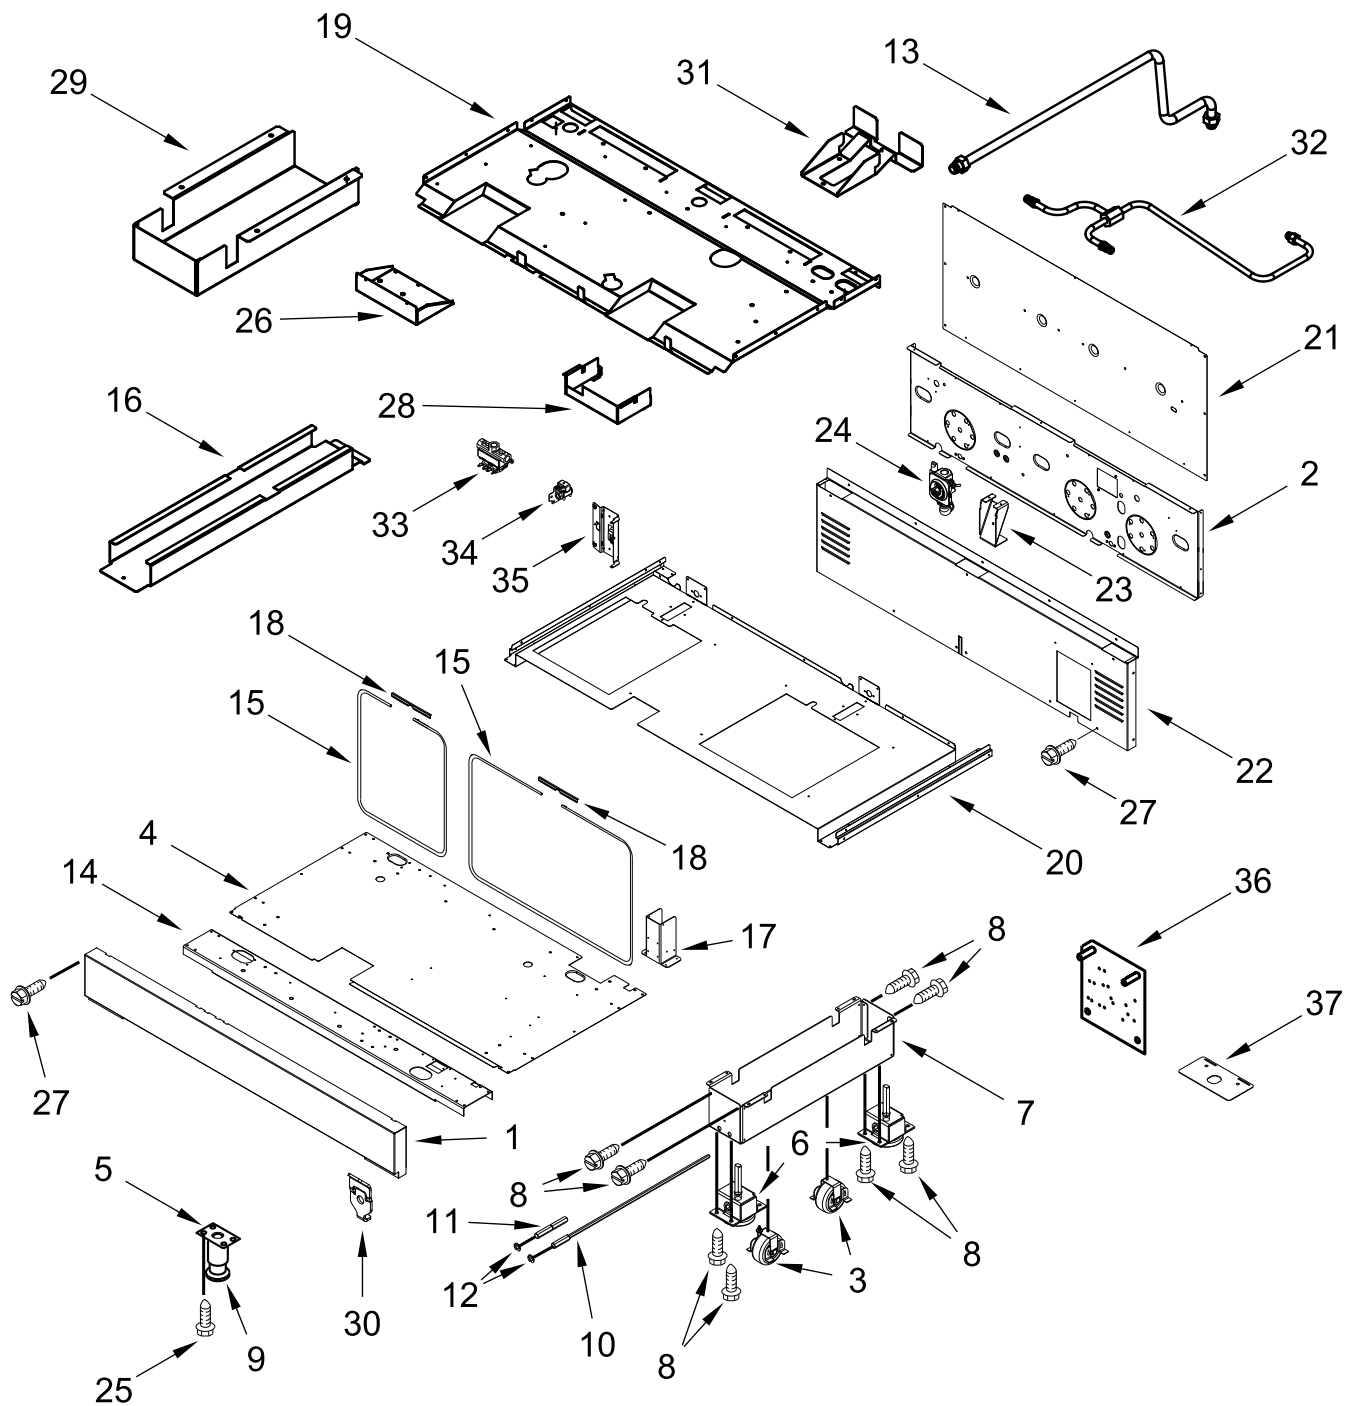

48-IN CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11368831	Channel, Wire
2	W11324987	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9 in Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48 in)	19	W11324984	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11369237	Cabinet, Appliance Manager			
14	W11369238	Support, Channel						
15	W11115328	Gasket, Oven (30 in)						
	W11115326	Gasket, Oven (18 in)						


30-IN OVEN PARTS

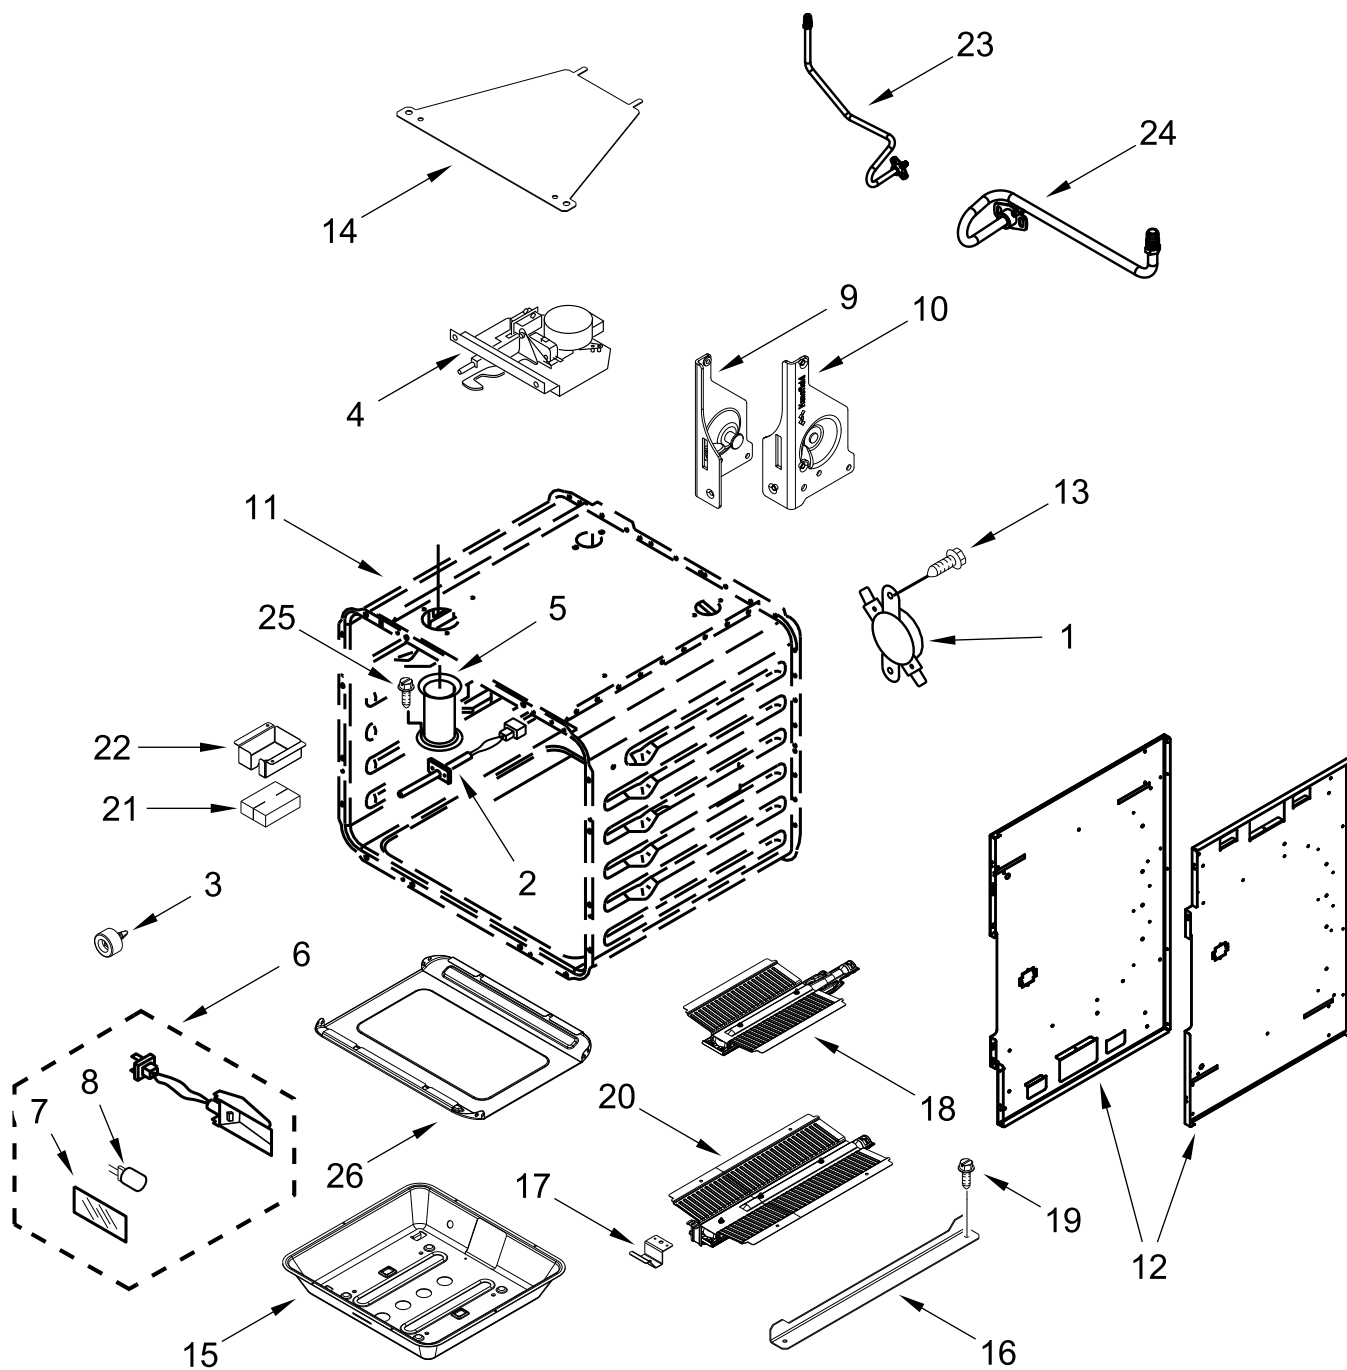

30-IN OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10310985	Cover, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W11109238	Tube, Broil
3	W10351278	Bumper and Screw	13	7101P426-60	Screw	24	W11106980	Tube, Bake
4	W10830016	Latch, Motorized	14	W10160858	Cover, Latch	25	3196176	Screw
5	W10145743	Tube, Vent	15	W10145744	Support, Bake Pan	26	W10496809	Pan, Oven Bottom
6	W11223932	Assembly, Oven Light	16	W10317437	Bracket, Broil Standoff			FOLLOWING PARTS NOT ILLUSTRATED
7	W10169756	Lens, Light	17	W10308040	Bracket, Bake Burner		W10282810	Insulation, Wrap (30 in)
8	W10169757	Bulb, Light	18	W10878504	Burner, Bake		W10299350	Insulation, Back, (30 in)
9	W11096294	Receiver, Hinge (Left)	19	7101P434-60	Screw		W10299354	Insulation, Bottom
10	W11096293	Receiver, Hinge (Right)	20	W10311335	Burner, Broil		3400968	Nut
11		Liner, Oven (Not Serviced)	21	W10311009	Insulation, Broil Cover			


18-IN OVEN PARTS

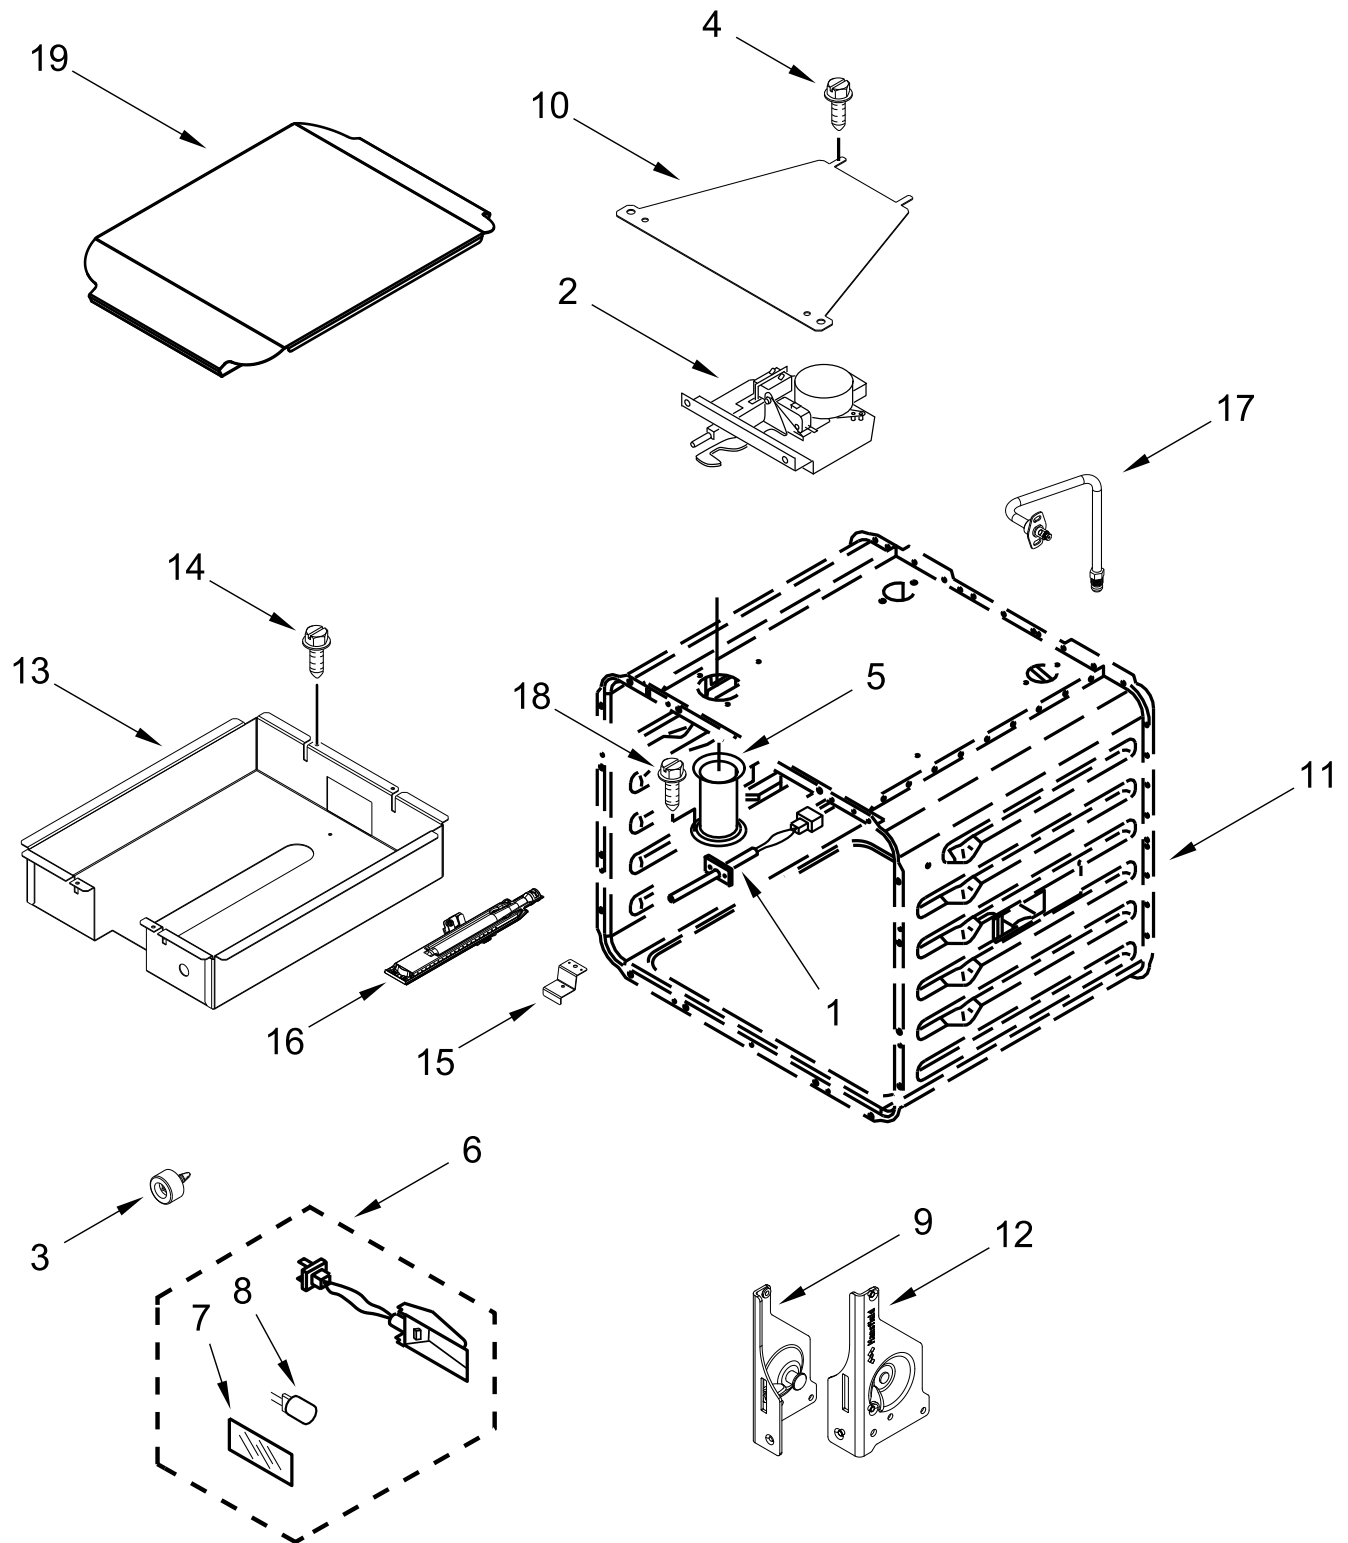

18-IN OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	19	W11211936	Cover, Bake
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	13	W10145651	Support, Bake Pan			
4	7101P426-60	Screw	14	12992902	Screw	W10282820		Insulation, Wrap, 18 in
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner (18 in Cavity)	W10299353		Insulation, Back, 18 in
6	W11223932	Assembly, Oven Light				W10299355		Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader	3400968		Nut
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)	17	W10145706	Tube, Bake			
10	W10160858	Cover, Latch	18	3196176	Screw			
11		Liner, Oven (Not Serviced)						


VENTING PARTS

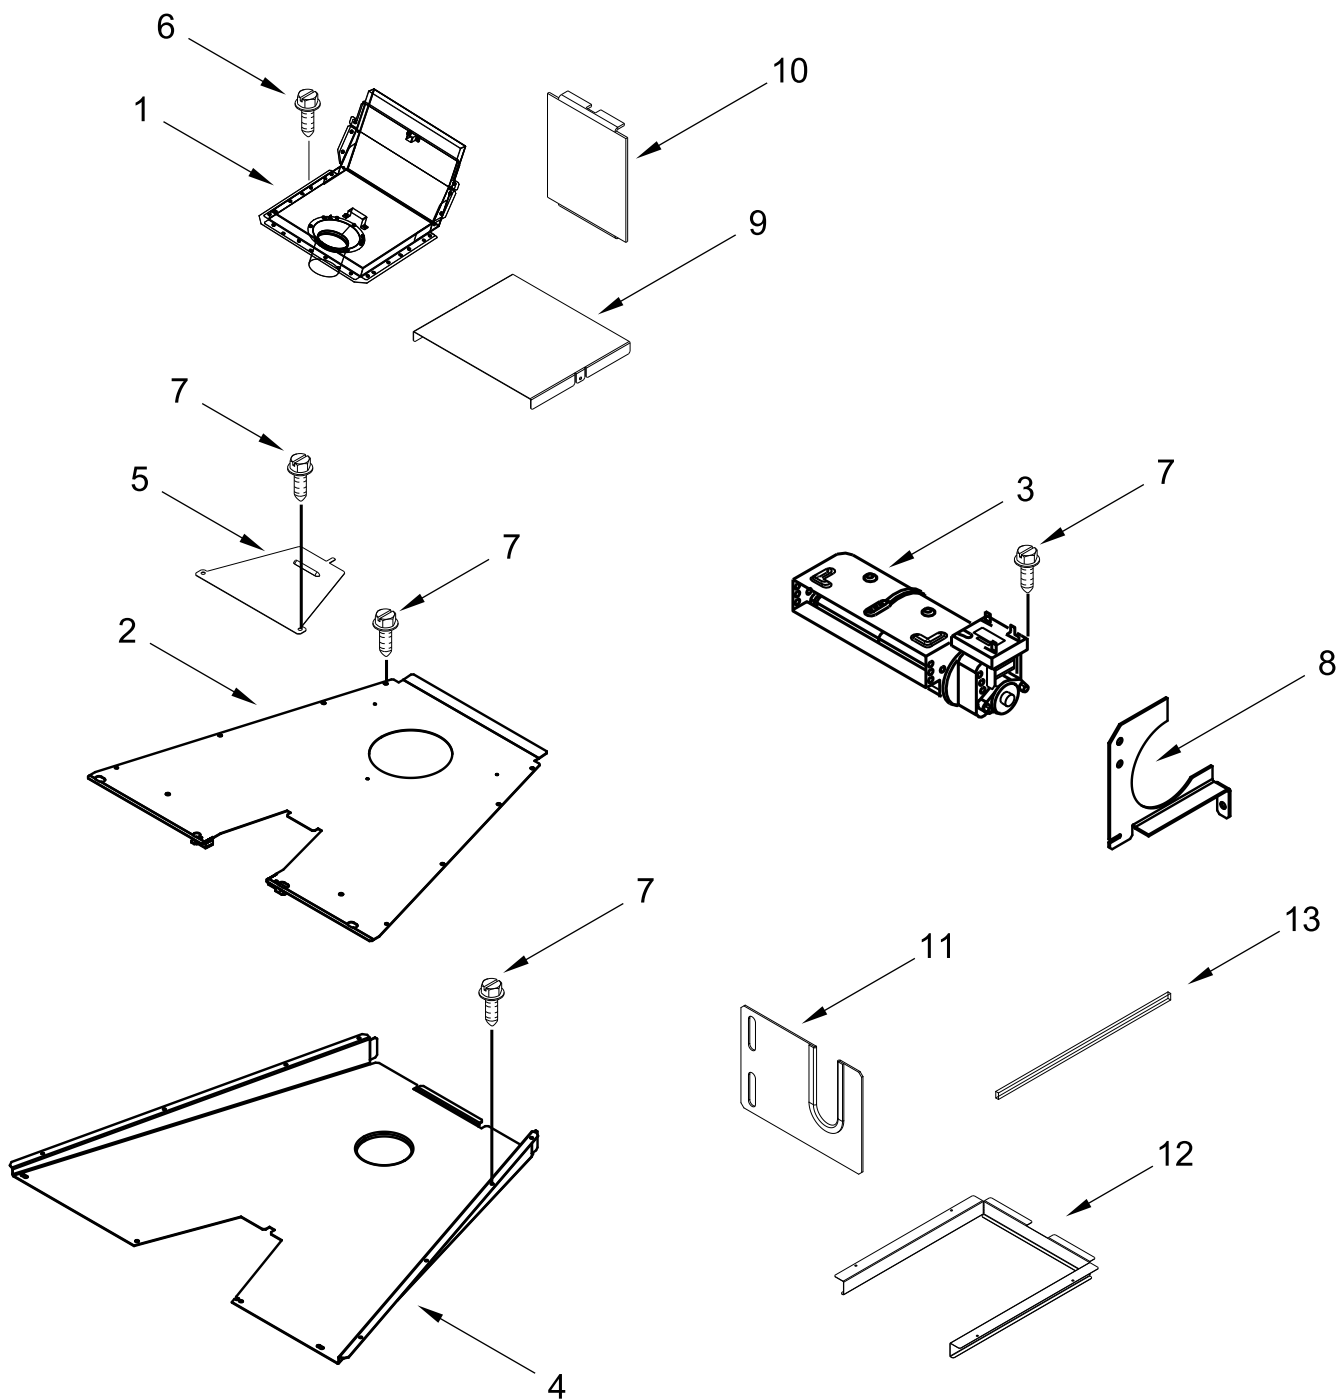

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	4	W11091676	Vent, Cooling Bottom (30 in)	9	W10246086	Retainer, Insulation
	W11476247	Vent, Chimney Box (18 in)		W11113377	Vent, Cooling Bottom (18 in)	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30 in)	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18 in)	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30 in)
			7	7101P426-60	Screw		W10145364	Duct, Primary Air (18 in)
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W10919715	Gasket


30-IN OVEN DOOR PARTS

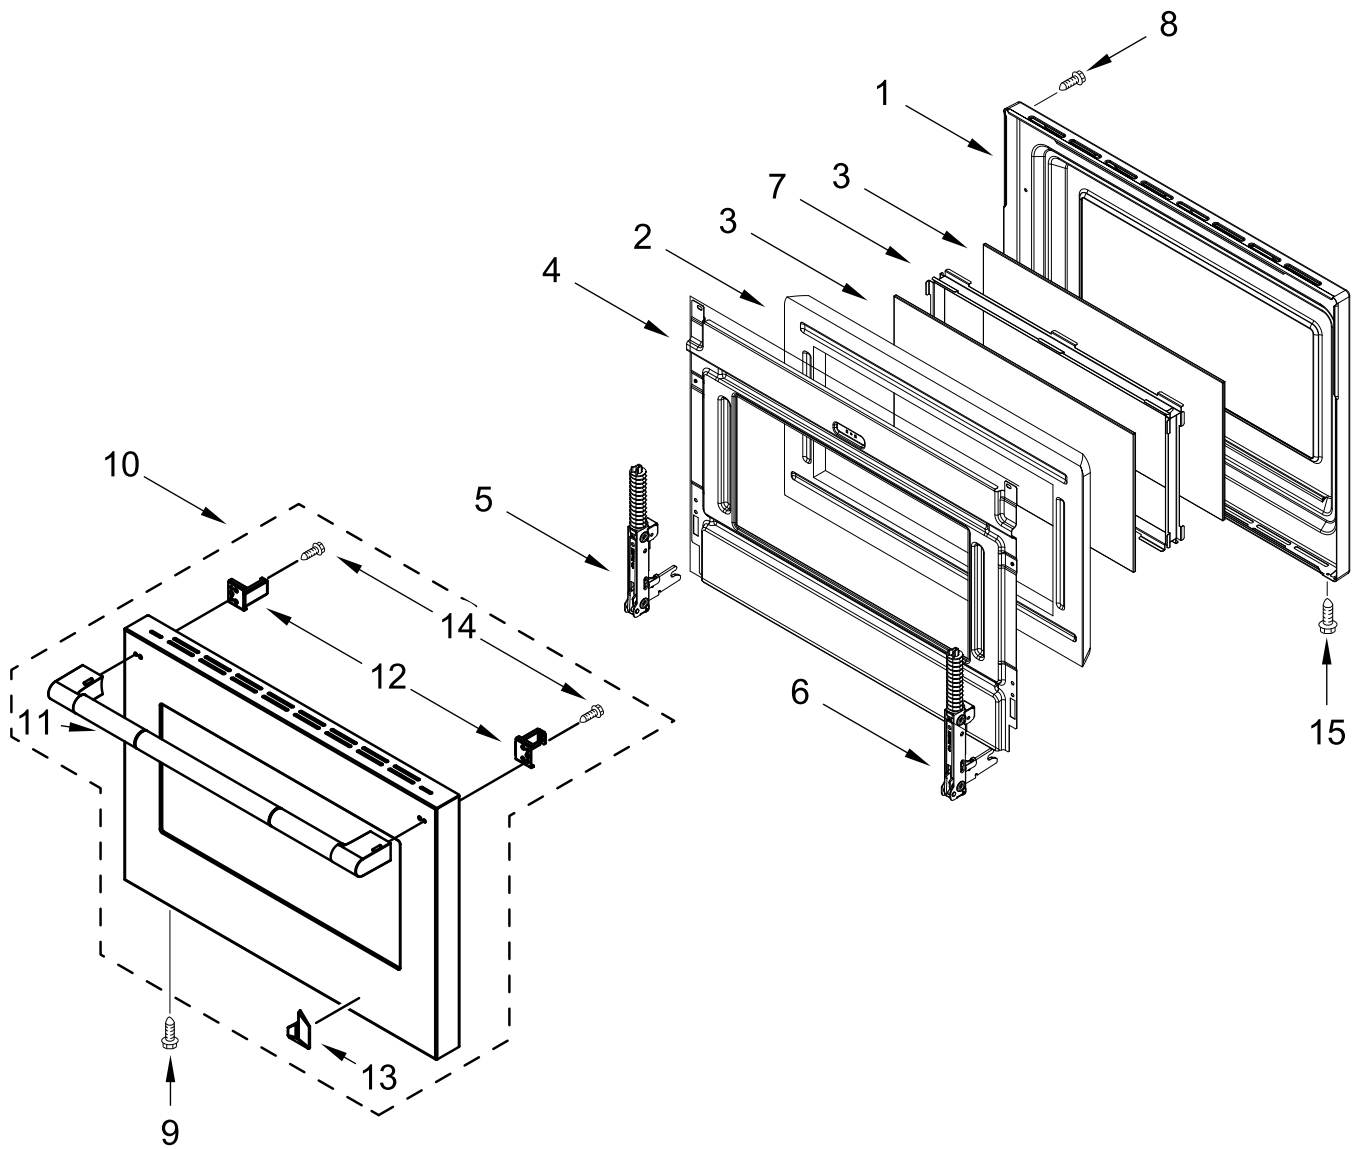

30-IN OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W11199071	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			


18-IN OVEN DOOR PARTS

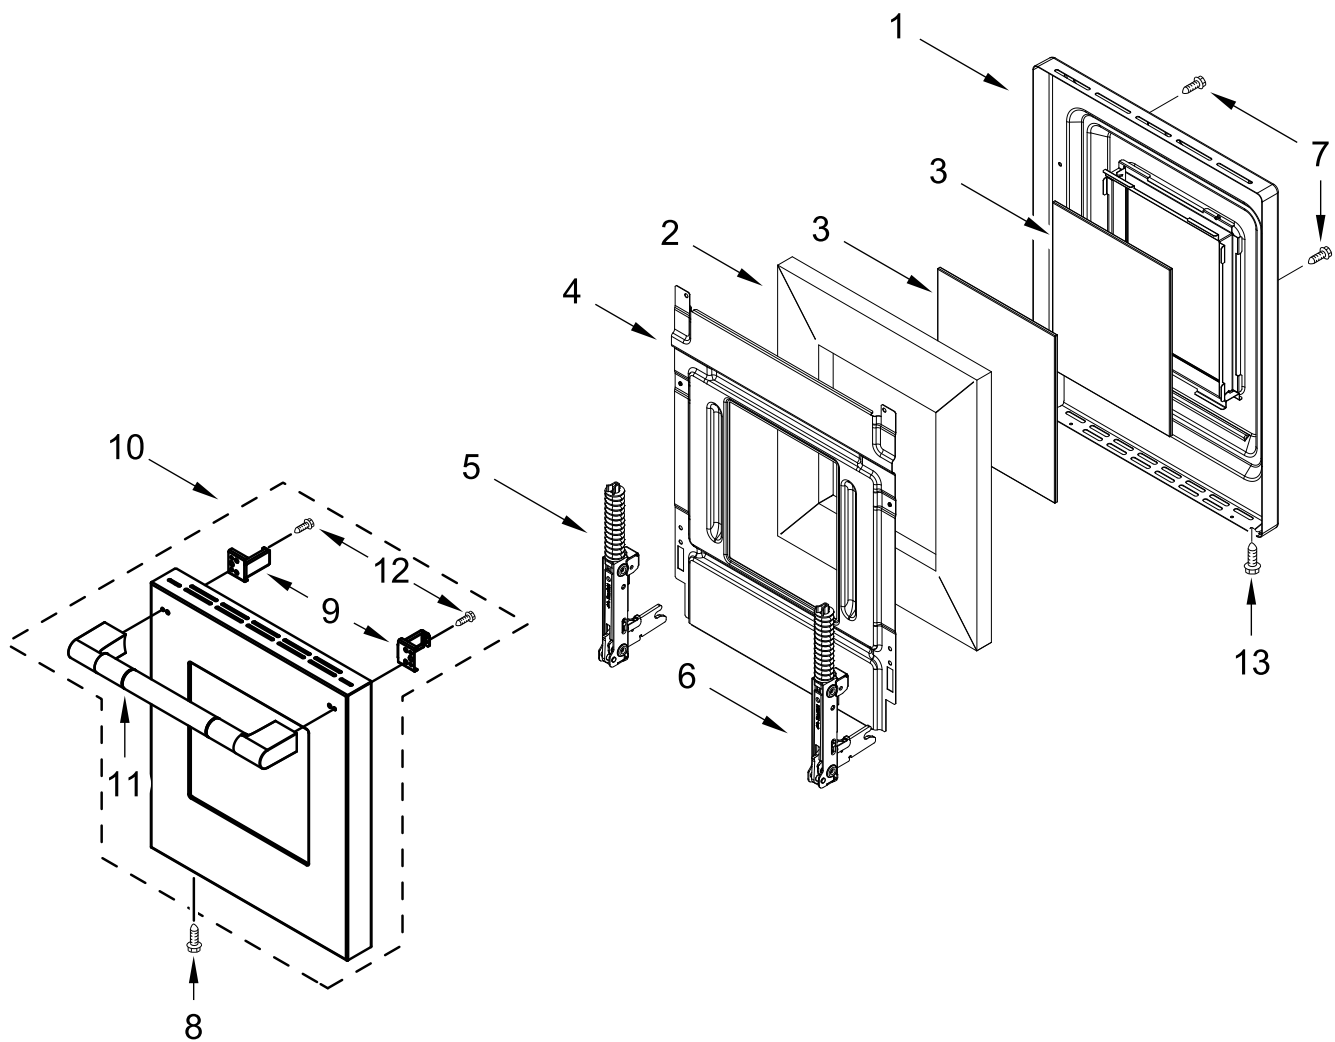

18-IN OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	11	W11102824	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W10276043	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	13	W10607120	Screw
4	W11194818	Retainer, Glass	10	W10799306	Assembly, Outer Door Glass (Includes Handle)			
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)						


30-IN INTERNAL OVEN PARTS

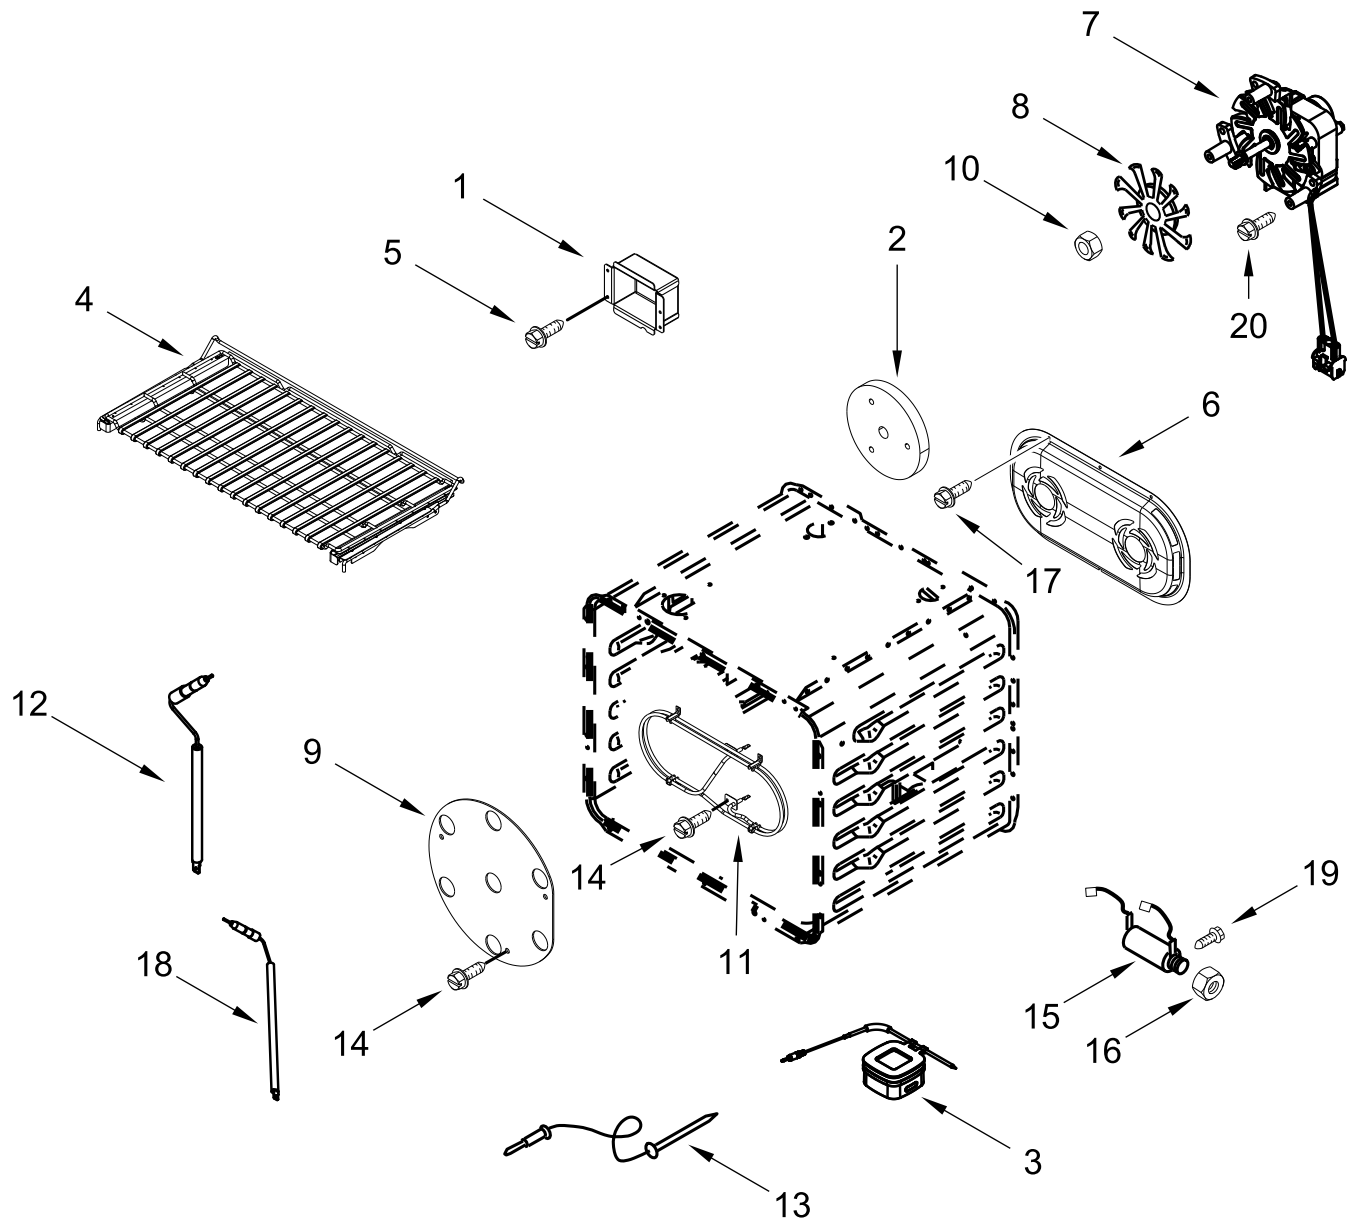

30-IN INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491351	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

18-IN INTERNAL OVEN PARTS

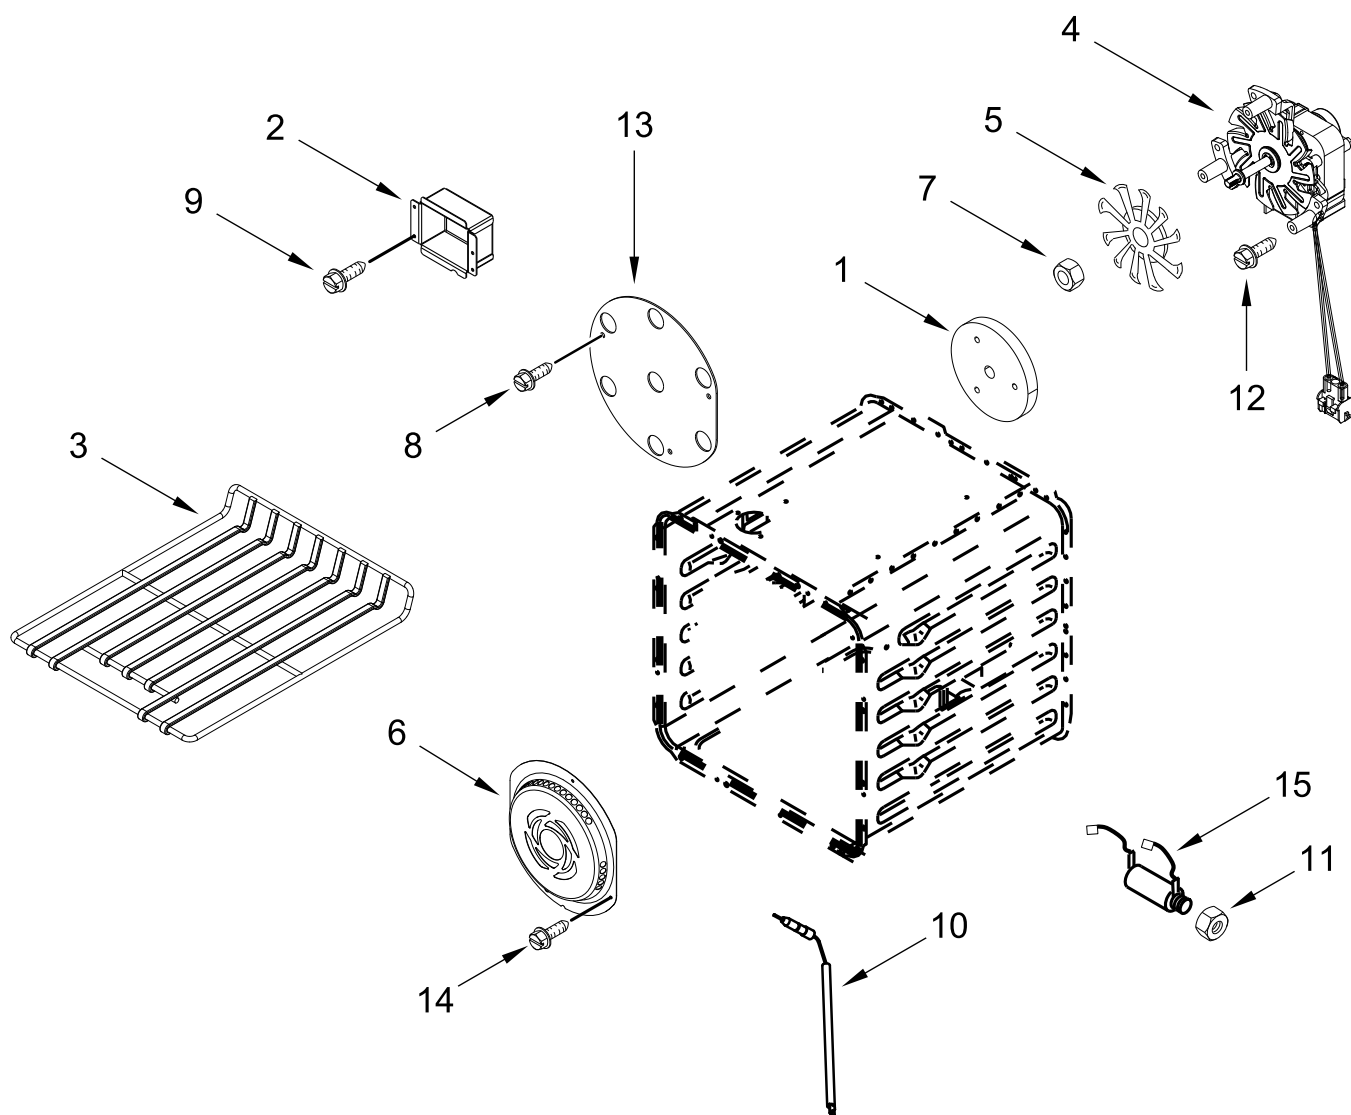

18-IN INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	6	W11368180	Cover, Fan	13	W10261523	Plate, Fan
2	W10308051	Box, Broil	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
3	W11111351	Rack, Oven (18 in)	8	4449154	Screw	15	9755543	Jack, Meat Probe
4	W10631506	Motor, Convection	9	7101P434-60	Screw			
5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake			
			11	W11033111	Nut, Locking			
			12	W10720084	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W11035424	Wok, Round Bottom
	W11239671	Lid, Stainless Steel Grill Cover
		Backsplash
	W10285449	48-in With Shelf Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11316873	Brass, Surface and Grill
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill