




GAS RANGE

MODELS:

JGRP648HM05 (Floating Glass Black)


BURNER BOX, GRATE, AND GRILL PARTS

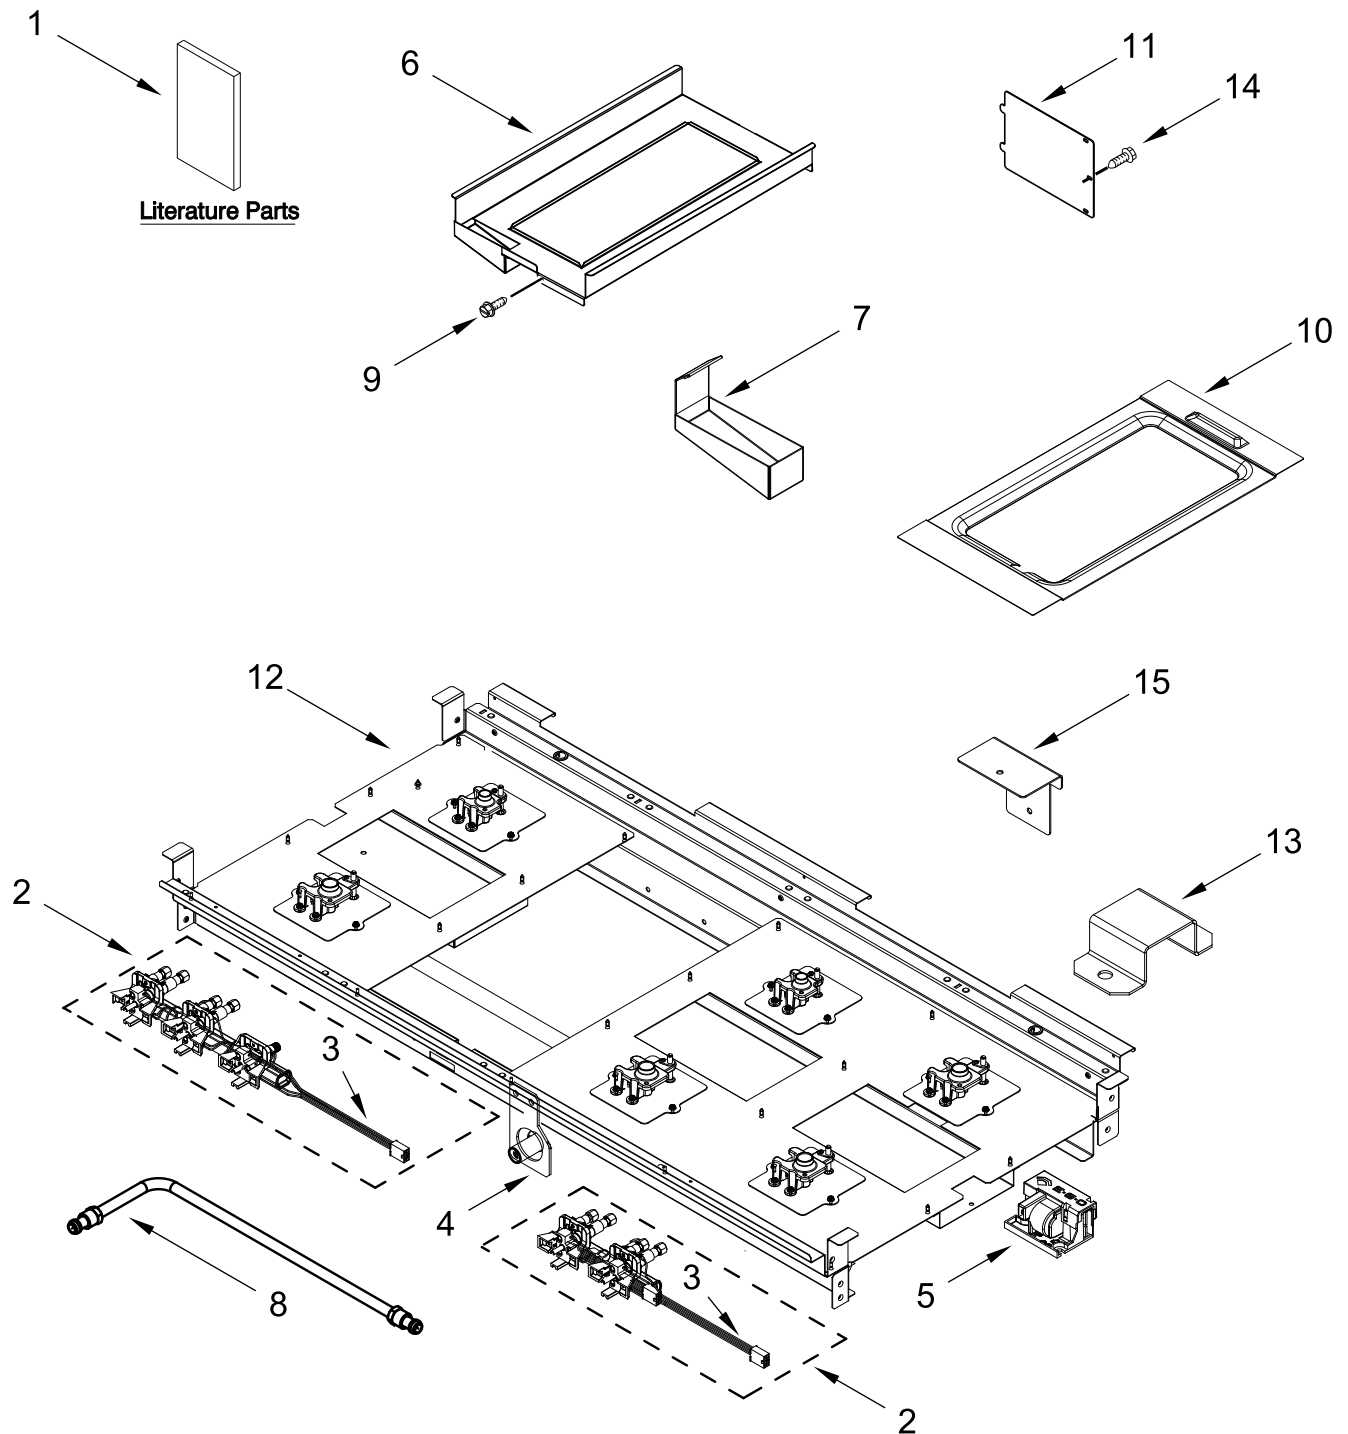

BURNER BOX, GRATE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	13	W11174418	Bracket, Grill Orifice Holder
	W11508896	Use and Care Guide				14	7101P426-60	Screw
	W11508888	Installation Instructions		W11106300	Switch, Harness (Right Center Front, Right Center Rear, Right Front, Right Rear)	15	W11285353	Bracket, Grill Grease Capture
	W11184746	Guide, Internet Connectivity						FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start						
	W11565477	Wiring Diagram (Oven)	4	W11121194	Bracket, Manifold		W11448012	Harness, Main (48 in)
	W11575704	Wiring Diagram (Cooktop)	5	W11121317	Module, Spark		W11200330	Harness, Cooktop
	W11202275	Sheet, Tech	6	W11120957	Capture, Grill Grease		W10780278	Harness, Door Lock
2	W10893054	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	7	W11174414	Tray, Grill Drip		W11200318	Harness, Communication
	W10893058	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	8	W10892803	Tube, Manifold Supply (Left) W10892801 Tube, Manifold Supply (Right Center) W10892802 Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
			9	3196537	Screw		313438	Clip, Harness
			10	W11120965	Deflector, Grill Heat		W10624584	Cord, Power
	W11183722	Assembly, Valve Manifold (Right Front and Right Rear)	11	W10115843	Cover, Ignition		4450800	Screw, Grounding
			12		Box, Burner (Not Serviced)		W11311196	Ignitor Wire, Wire-Electrode Bake
							W11311197	Ignitor Wire, Wire-Electrode Broil
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11422176	Kit, LP Conversion


COOKTOP, BURNER, AND GRILL PARTS

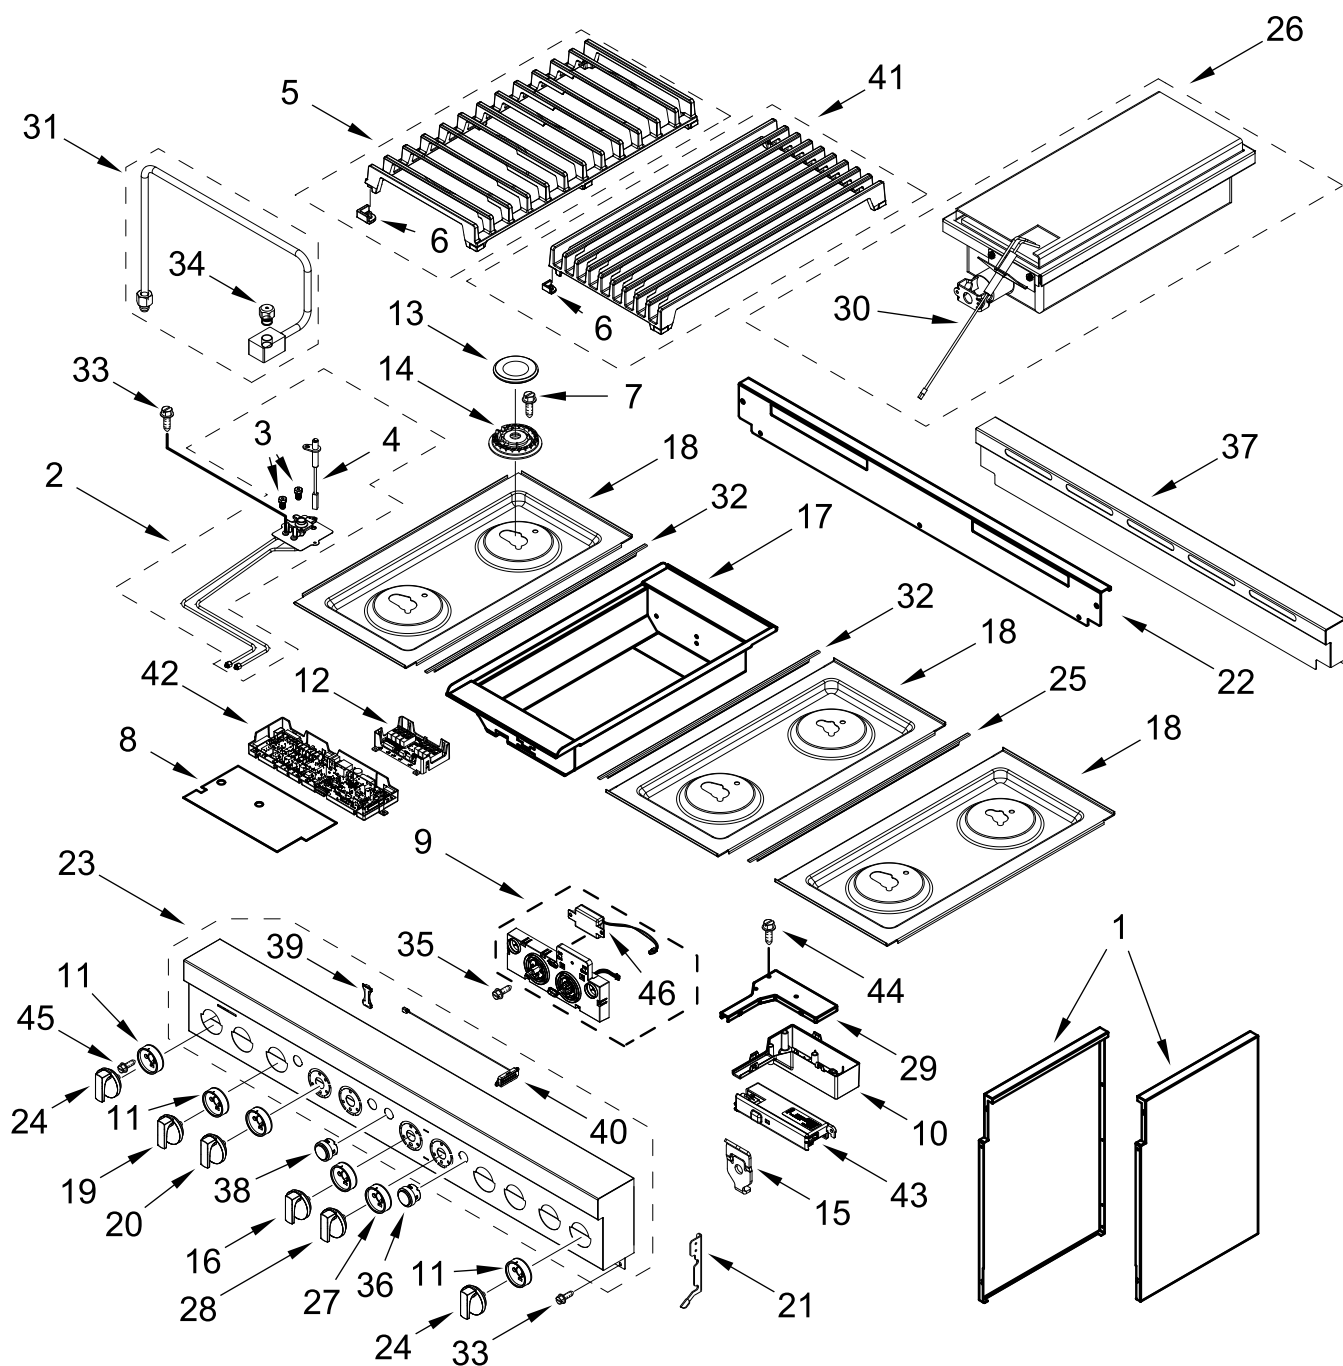

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	5		Assembly, Grate	22	W10323252	Trim, Island Insert
	W11111428	Panel, Cabinet Side (Right)		W11291180	Black	23	W10878258	Panel, Console
				W11291184	Black	24		Knob, Burner
2	W10892807	Assembly, Orifice Holder			(Right Center)			(For 6 Cooktop Burners)
		(Left Front)		W11291182	Black		W10887596	Stainless
	W10892495	Assembly, Orifice Holder	6	W11042504	Bumper, Grate	25		Trim, T-Strip
		(Left Rear)	7	W11323260	Screw		W10271524	Black
	W10892471	Assembly, Orifice Holder	8	W11281269	Barrier, Appliance Manager	26	W11120976	Assembly, Grill Burner
		(Right Center Front)	9	W11436326	Interface, User	27		Bezel, Oven
	W10892724	Assembly, Orifice Holder	10	W11205795	Cover, WIFI Outer			(For 4 Oven Knobs)
		(Right Center Rear)	11	W11090284	Bezel, Cooktop		W11042375	Stainless
					(For 6 Cooktop Burners and Grill)	28		Knob, Oven Temperature
	W10892726	Assembly, Orifice Holder	12	W10871065	Manager, Appliance (Expansion)		W11325047	Stainless
		(Right Front)	13		Cap, Burner			(For 18 in Oven)
	W10892474	Assembly, Orifice Holder		W11121392	Black (Set of 6)		W10891868	Stainless
		(Right Rear)	14	W10891987	Spreader, Flame (High)	29		(For 30 in Oven)
3	W10892422	Orifice, Main (17.4K)			(All But Right Center Rear)	30	W11205794	Cover, WIFI Inner
		(Left Front and Right Front)		W10892022	Spreader, Flame (Low)	31	W11174598	Electrode, Grill
					(Right Center Rear)		W11419278	Grill Orifice Holder Assembly
	W10892418	Orifice, Main (15.4K)						(Left Center)
		(Left Rear, Right Center Front, Right Rear)	15	W11036559	Spring Clip, Range	32	W10291193	Trim, L-Strip
			16		Knob, Oven (30 in) Mode	33	7101P426-60	Screw
	W10892440	Orifice, Main (7.2K)		W11317854	Stainless	34	W11419282	Orifice, Grill (18K)
		(Right Center Rear)	17	W11174429	Assembly, Grill Box			(Left Center)
	W10892435	Orifice, Simmer (2.6K)	18		Panel, Cooktop	35	3400814	Screw
		(All But Right Center Rear)		W11038237	Black	36	W11090650	Button Assembly, Oven Start
					(Left)	37	W11476244	Island Trim
	W10892429	Orifice, Simmer (2.0K)		W11038241	Black	38	W11090651	Button Assembly, Oven Light
		(Right Center Rear)			(Right Center)	39	W10896369	Assembly, Light Pipe
4	W11238757	Igniter		W11038254	Black	40	W11130078	Antenna, WIFI
		(All But Right Center Rear)	19		(Right)	41	W11172682	Assembly, Grill Grate
				W10894926	Knob, Grill	42	W11543349	Manager, Powermax Appliance
	W11238756	Igniter	20		Stainless	43	W11110768	Assembly, WIFI Module
		(Right Center Rear)			Knob, Oven (18 in) Mode	44	7101P624-60	Screw
				W11325046	Stainless	45	W11328357	Screw
			21	W10130760	Bracket, Moving Console (Left)	46	W10568405	Assembly, Speaker
				W10130759	Bracket, Moving Console (Right)			


CHASSIS PARTS

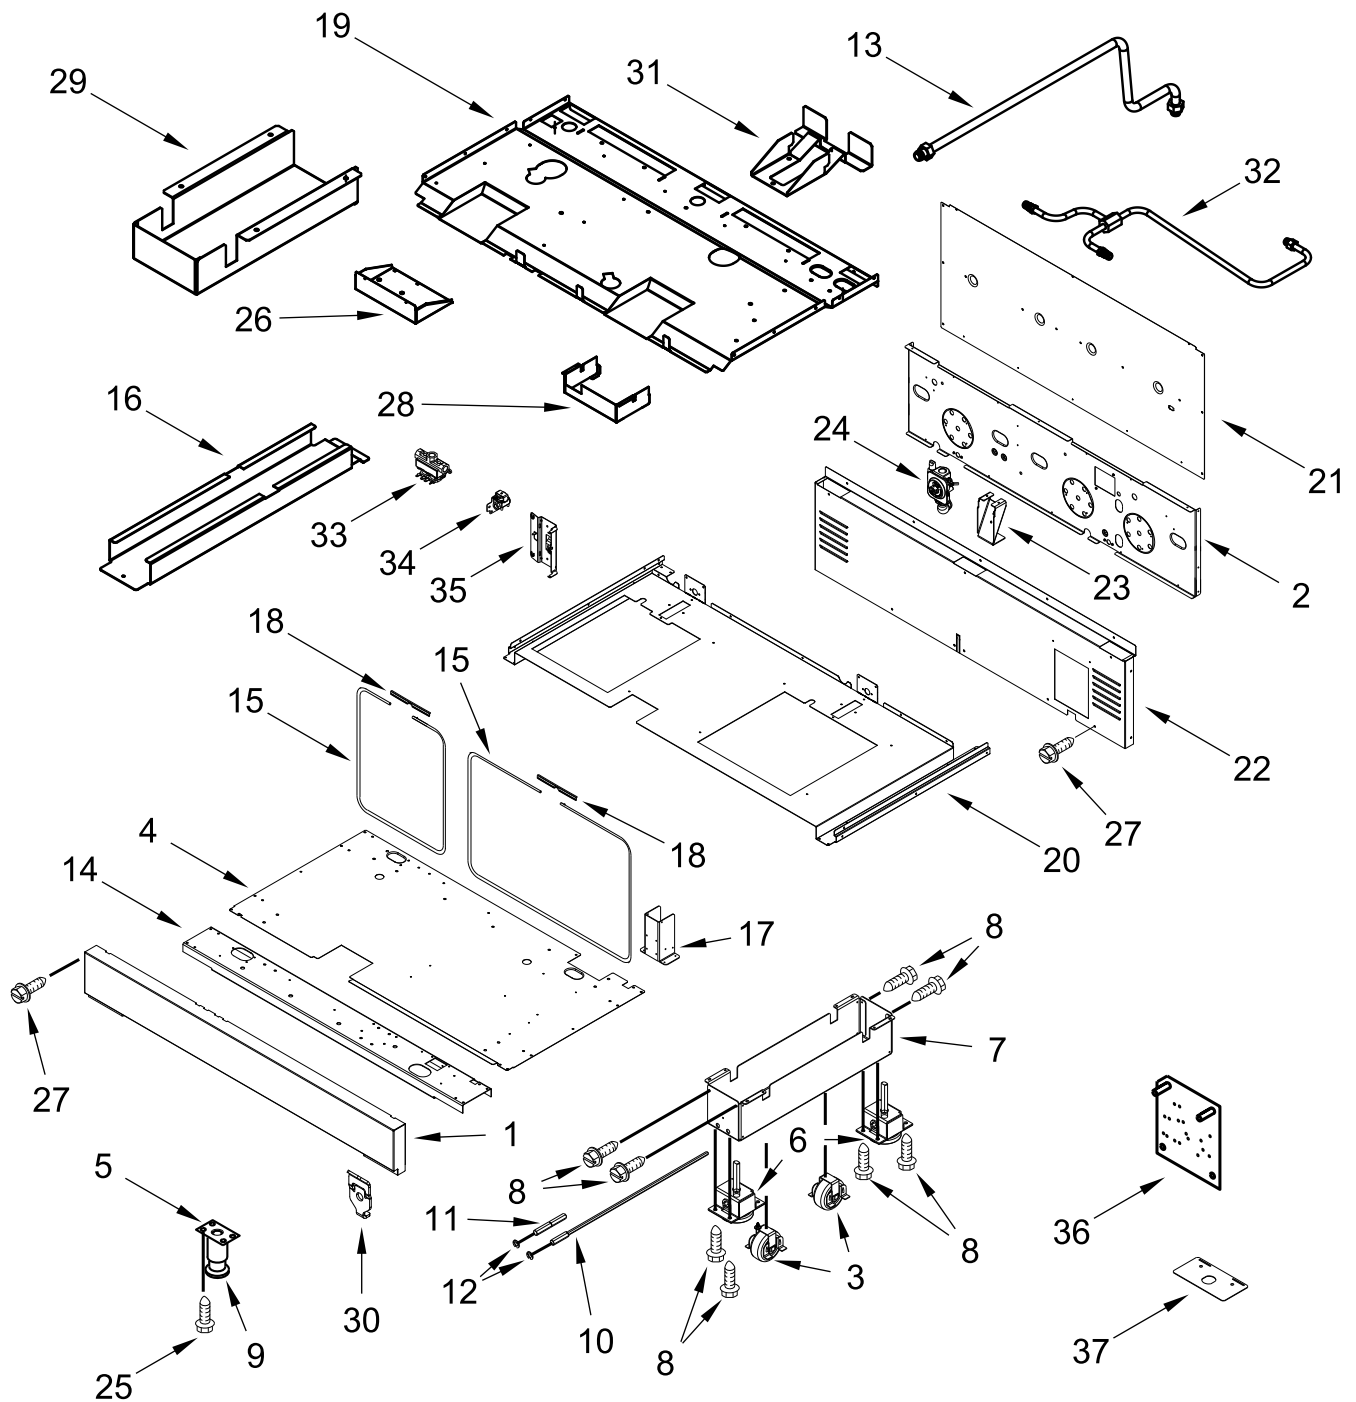

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11368831	Channel, Wire
2	W11324987	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9 in Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48 in)	19	W11324984	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11369237	Cabinet, Appliance Manager			
14	W11369238	Support, Channel						
15	W11115328	Gasket, Oven (30 in)						
	W11115326	Gasket, Oven (18 in)						


OVEN PARTS (30 in)

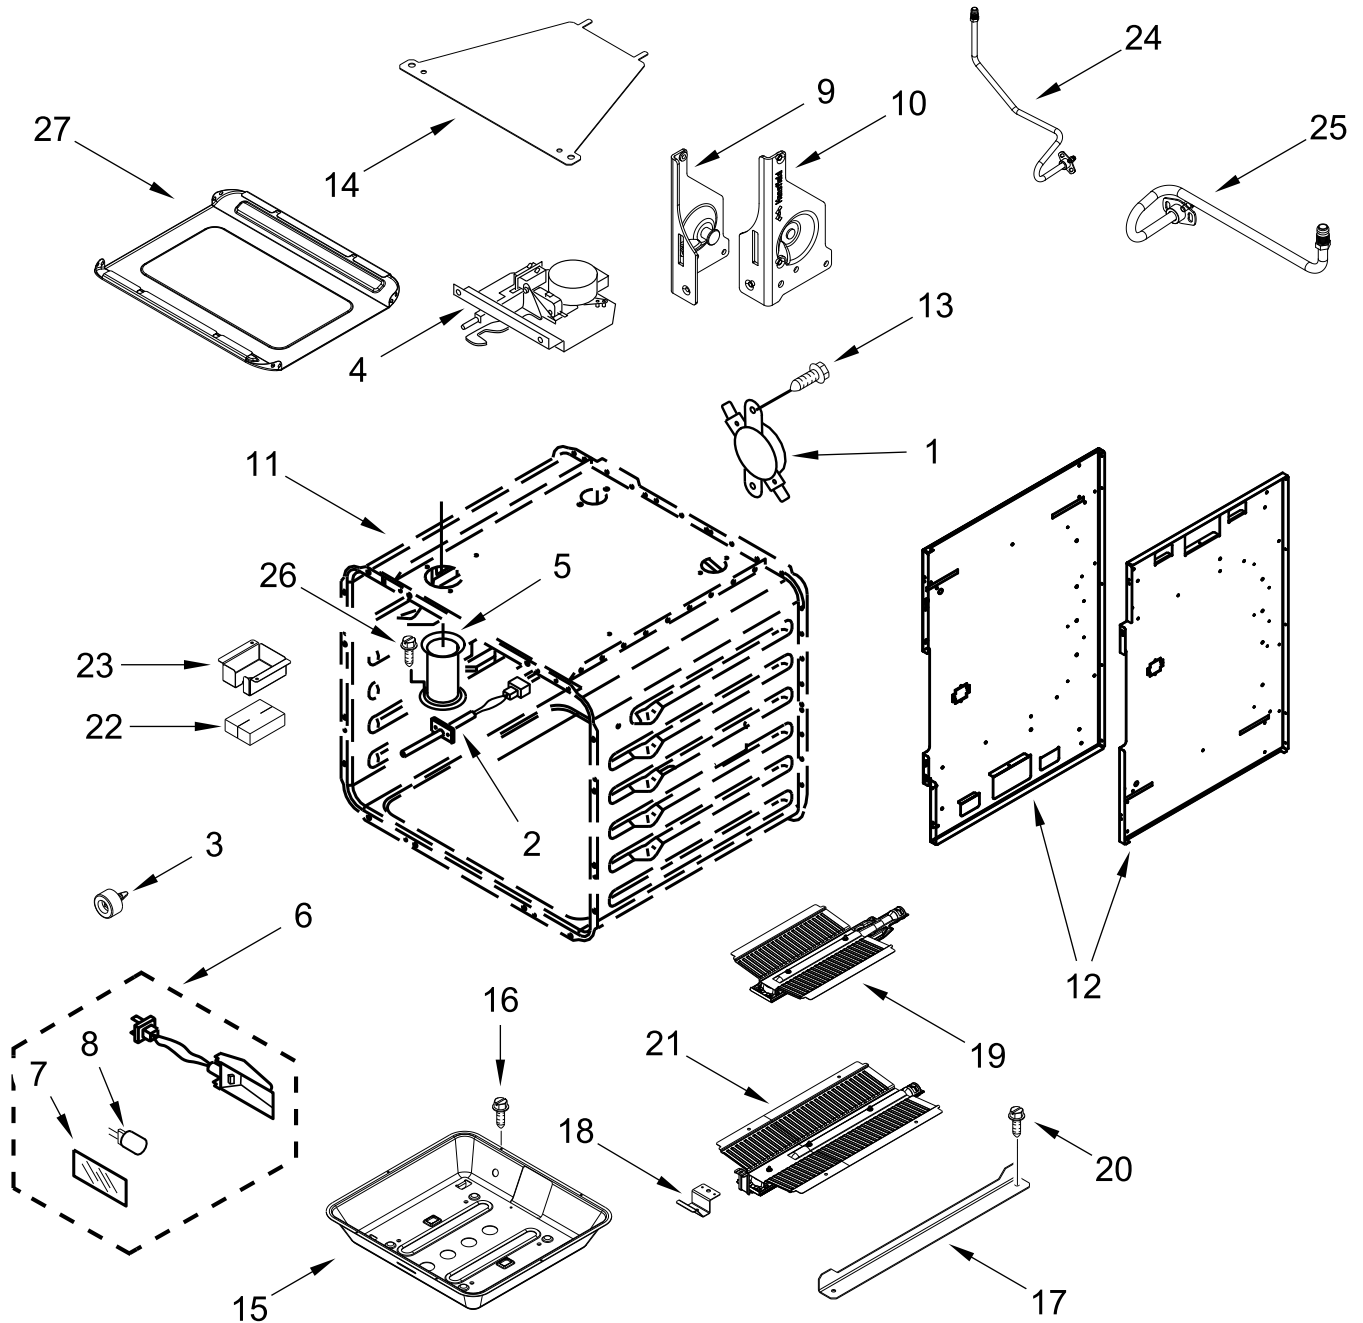

OVEN PARTS (30 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	13	7101P426-60	Screw	27	W10496809	Pan, Oven Bottom
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	15	W10145744	Support, Bake Pan			
4	W10830016	Latch, Motorized	16	12992902	Screw	W10282810		Insulation, Wrap, (30 in)
5	W10145743	Tube, Vent	17	W10317437	Bracket, Broil Standoff	W10299350		Insulation, Back, (30 in)
6	W11223932	Assembly, Oven Light	18	W10308040	Bracket, Bake Burner	W10299354		Insulation, Bottom
7	W10169756	Lens, Light	19	W10878504	Burner, Bake		3400968	Nut
8	W10169757	Bulb, Light	20	7101P434-60	Screw			
9	W11096294	Receiver, Hinge (Left)	21	W10311335	Burner, Broil			
10	W11096293	Receiver, Hinge (Right)	22	W10311009	Insulation, Broil Cover			
11		Liner, Oven (Not Serviced)	23	W10310985	Cover, Broil			
12	W11102297	Chassis, Side (Left)	24	W11109238	Tube, Broil			
	W11102296	Chassis, Side (Right)	25	W11106980	Tube, Bake			
			26	3196176	Screw			


OVEN PARTS (18 in)

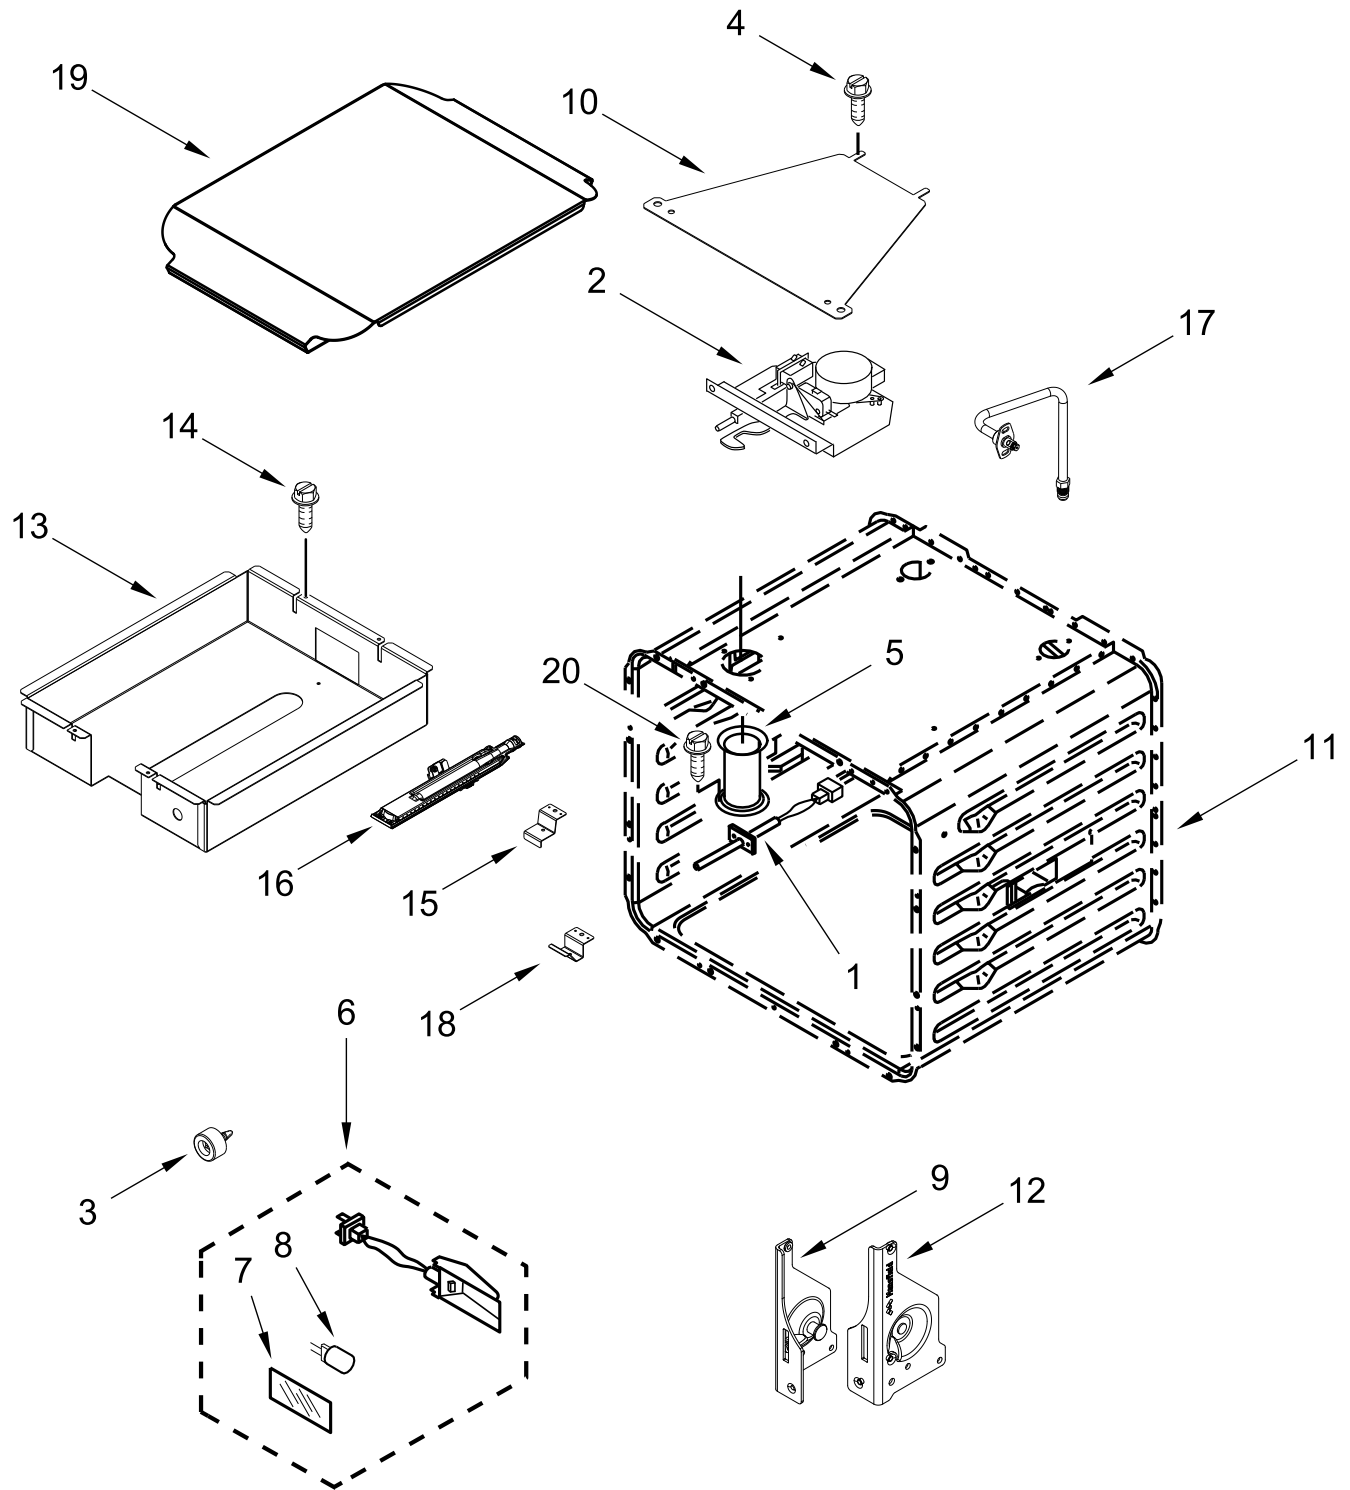

OVEN PARTS (18 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	20	3196176	Screw
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	13	W10145651	Support, Bake Pan			
4	7101P426-60	Screw	14	12992902	Screw	W10282820		Insulation, Wrap, 18 in
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner (18 in Cavity)	W10299353		Insulation, Back, 18 in
6	W11223932	Assembly, Oven Light				W10299355		Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader	3400968		Nut
8	W10169757	Bulb, Light	17	W10145706	Tube, Bake			
9	W11096294	Receiver, Hinge (Left)	18	W10308040	Bracket, Bake Burner			
10	W10160858	Cover, Latch	19	W11211936	Cover, Bake			
11		Liner, Oven (Not Serviced)						


VENTING PARTS

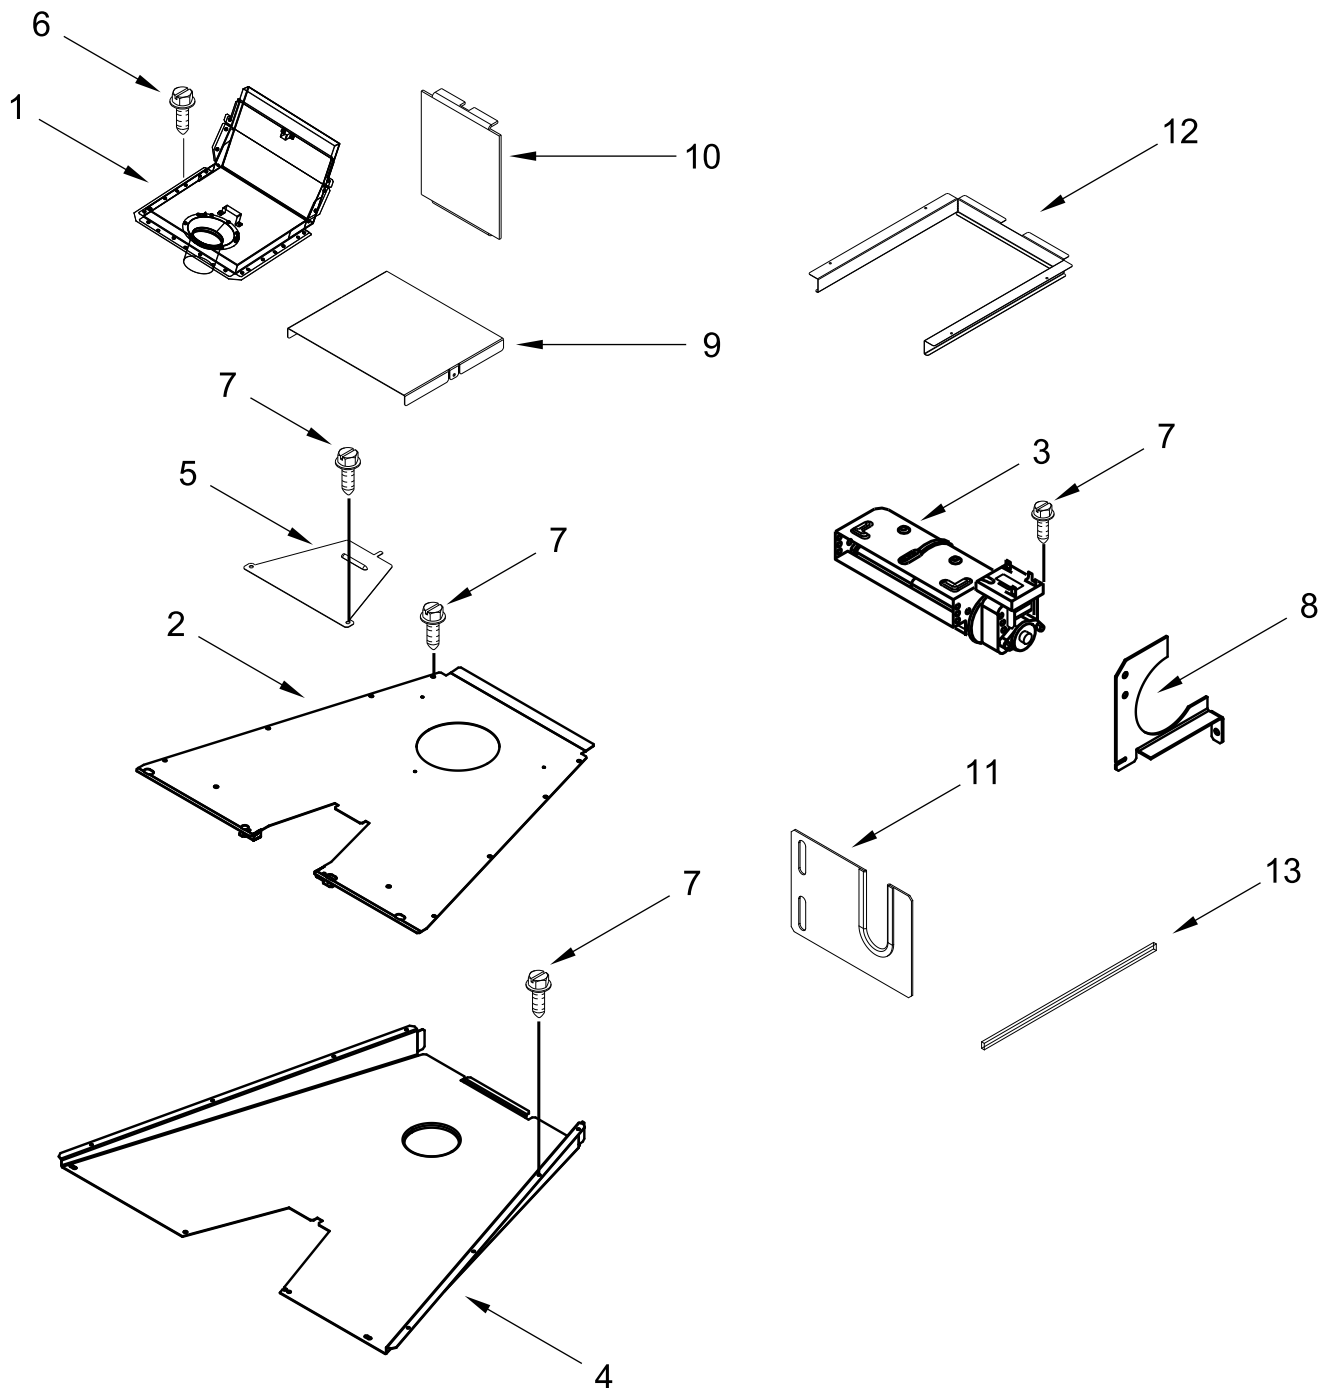

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	4	W11091676	Vent, Cooling Bottom (30 in)	9	W10246086	Retainer, Insulation
	W11476247	Vent, Chimney Box (18 in)		W11113377	Vent, Cooling Bottom (18 in)	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30 in)	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18 in)	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30 in)
			7	7101P426-60	Screw		W10145364	Duct, Primary Air (18 in)
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W10919715	Gasket


OVEN DOOR PARTS (30 in)

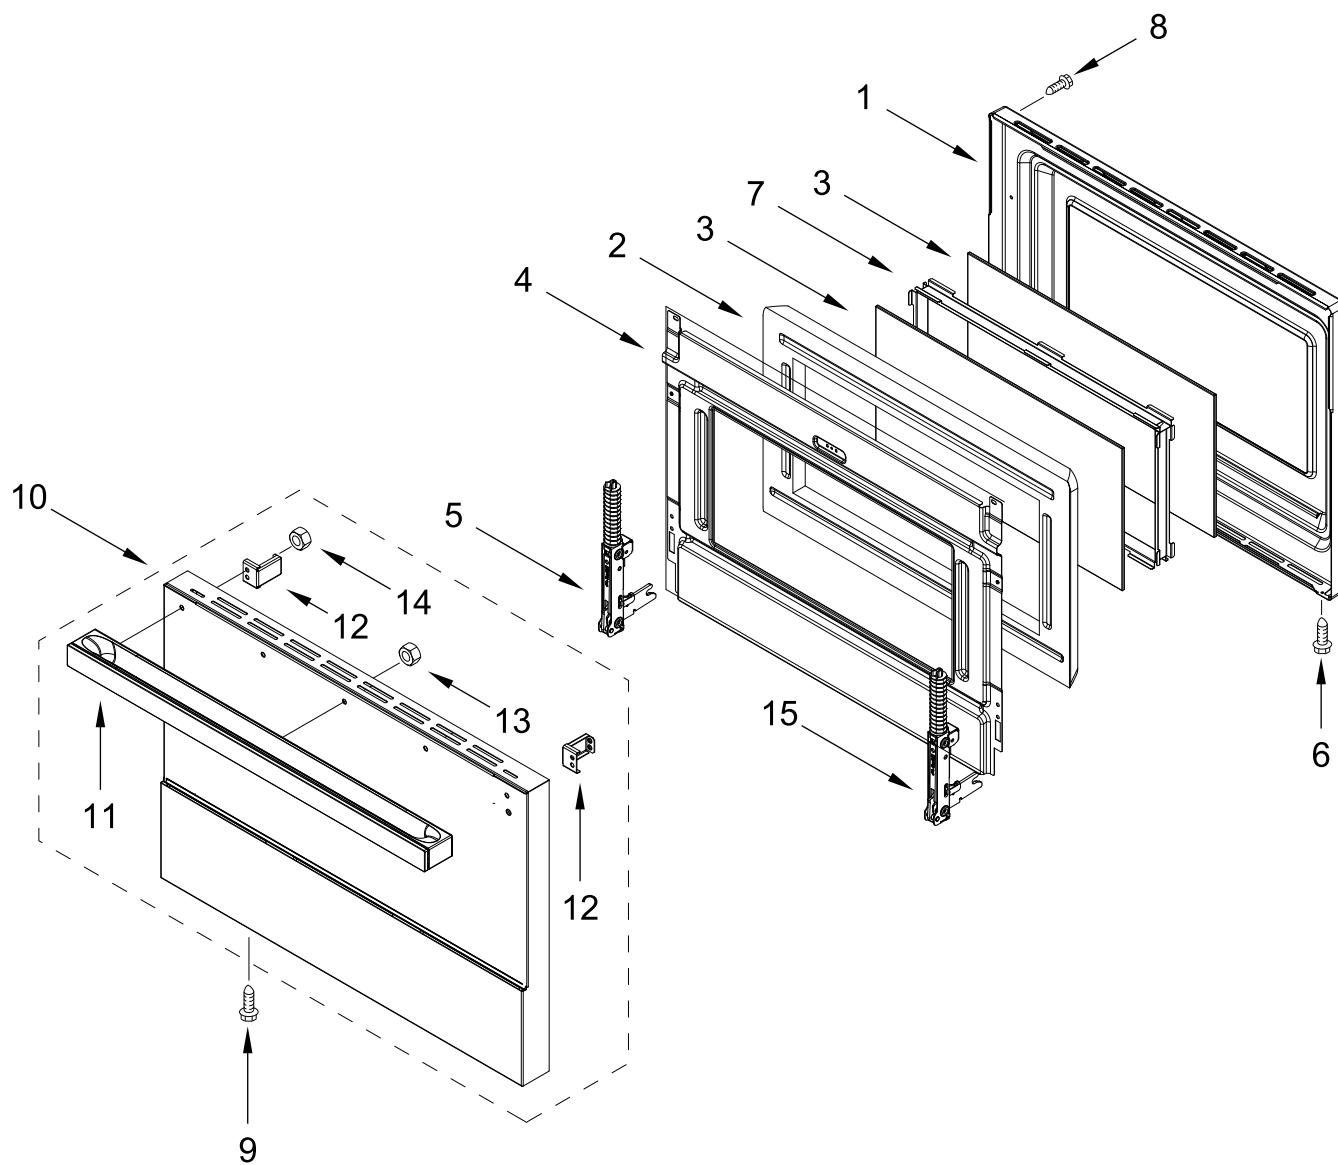

OVEN DOOR PARTS (30 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11194816	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13	W11198435	Nut
3	W11184409	Glass, Inner	9	W10162096	Screw	14	999299	Nut
4	W11194821	Retainer, Glass	10	W10870221	Assembly, Outer Door Glass (Includes Handle)	15	W11096977	Hinge, Door (Right)
5	W11096978	Hinge, Door (Left)						
6	W10607120	Screw	11	W11411876	Handle, Door			


OVEN DOOR PARTS (18 in)

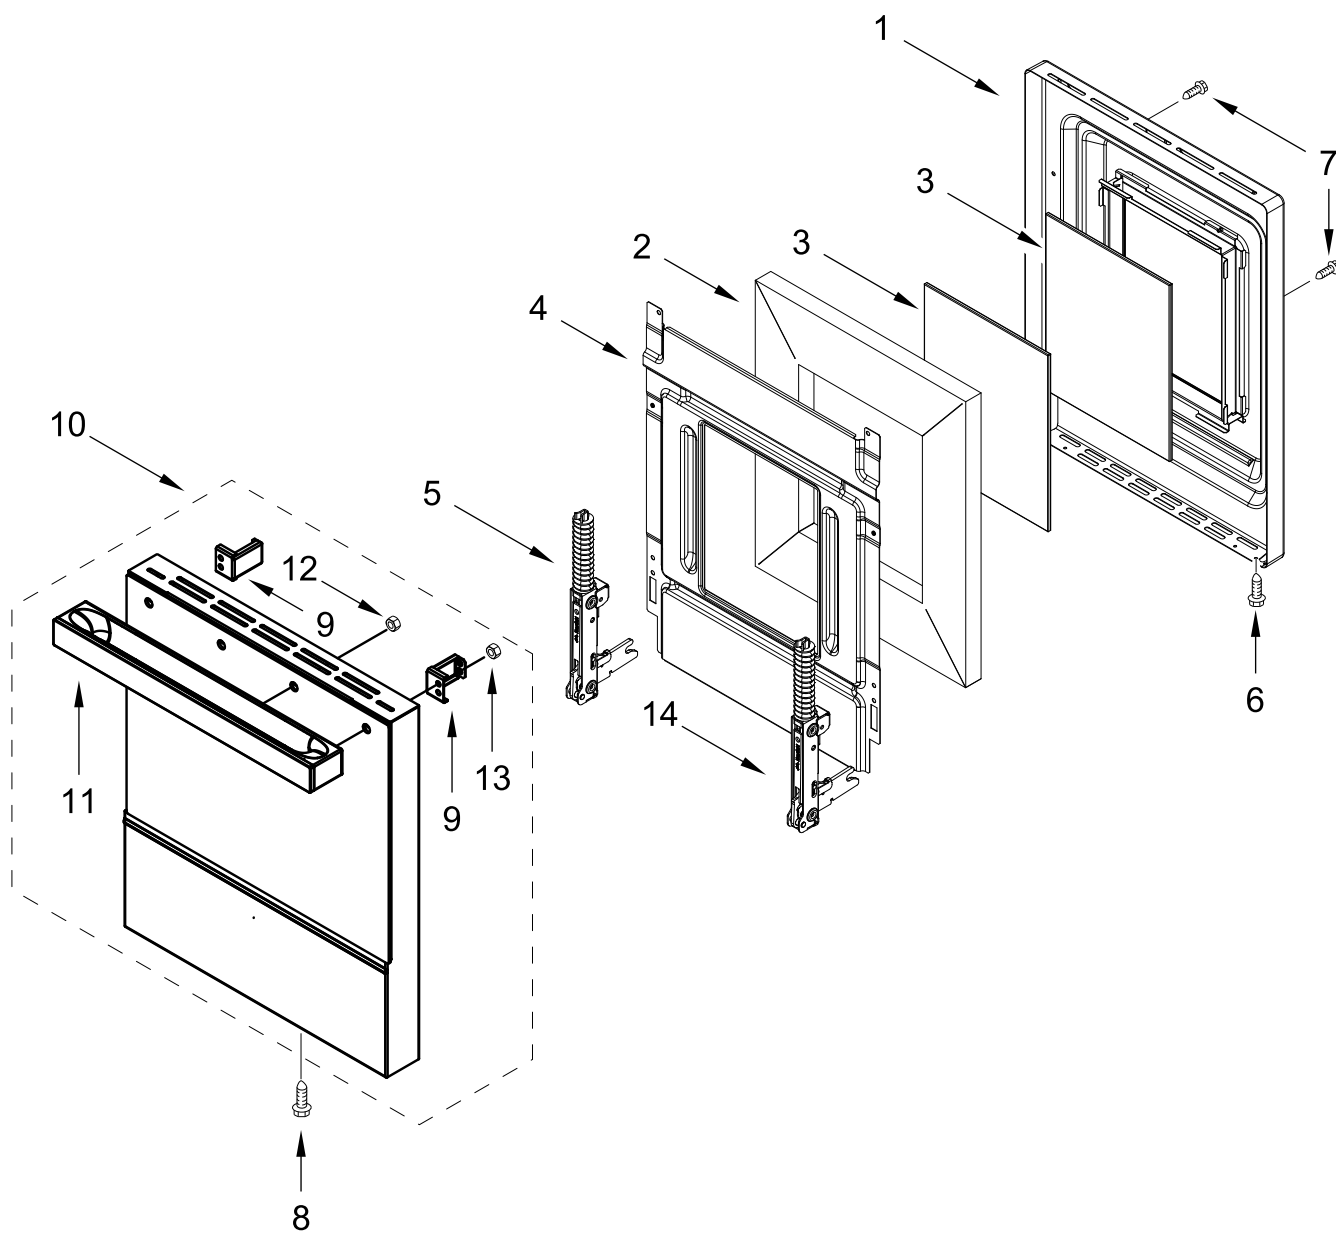

OVEN DOOR PARTS (18 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W11198435	Nut
2	W10884821	Insulation, Door	8	W10162096	Screw	13	999299	Nut
3	W11036789	Glass, Inner	9	W11194816	Bracket, Handle	14	W11096981	Hinge, Door (Right)
4	W11194818	Retainer, Glass	10	W10870212	Assembly, Outer Door Glass (Includes Handle)			
5	W11096982	Hinge, Door (Left)	11	W11411883	Handle, Door			
6	W10607120	Screw						


INTERNAL OVEN PARTS (30 in)

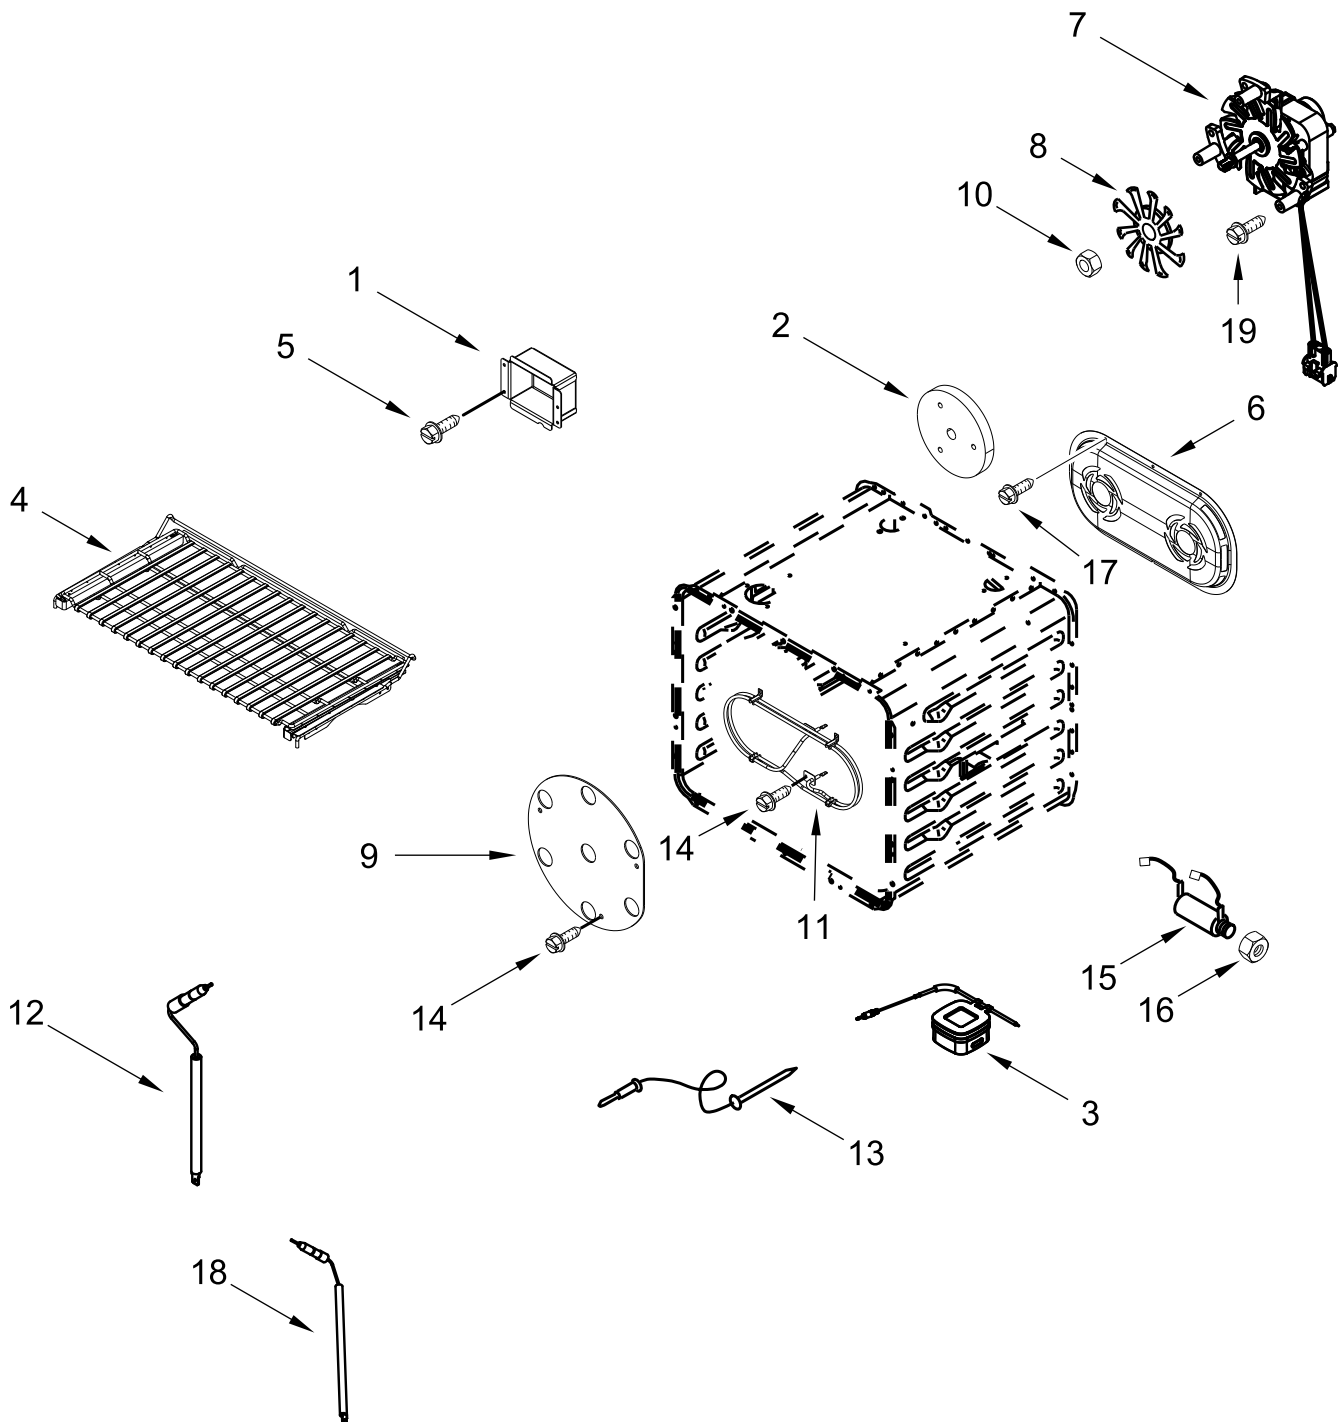

INTERNAL OVEN PARTS (30 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491351	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	W10720084	Screw
			13	9755542	Probe, Temperature			

INTERNAL OVEN PARTS (18 in)

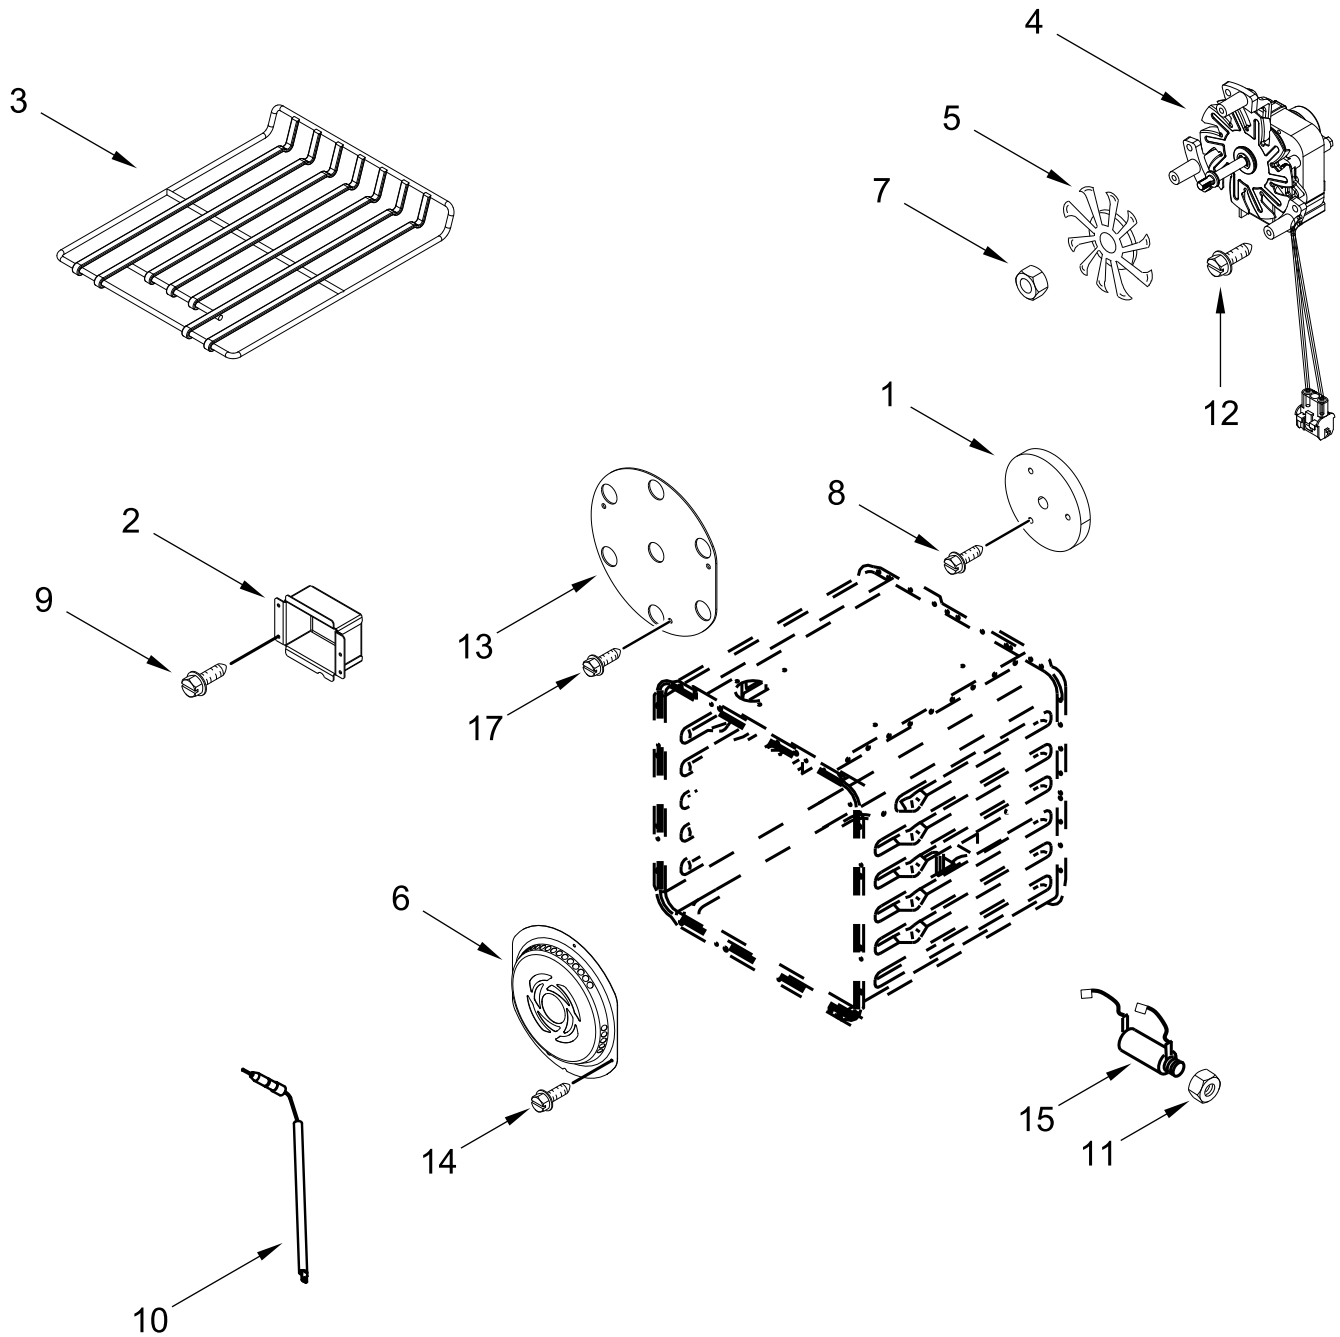

INTERNAL OVEN PARTS (18 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	6	W11368180	Cover, Fan	13	W10261523	Plate, Fan
2	W10308051	Box, Broil	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
3	W11111351	Rack, Oven (18 in)	8	4449154	Screw	15	9755543	Jack, Meat Probe
4	W10631506	Motor, Convection	9	7101P434-60	Screw			
5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake			
			11	W11033111	Nut, Locking			
			12	W10720084	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	W11035424	Wok, Round Bottom
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W11239671	Lid, Stainless Steel Grill Cover
		Backsplash
	W10285449	48" With Shelf
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large