




GAS RANGE

Includes Griddle and Infrared Grill

MODELS:

JGRP748HL05 (Stainless)


BURNER BOX, GRIDDLE, AND GRILL PARTS

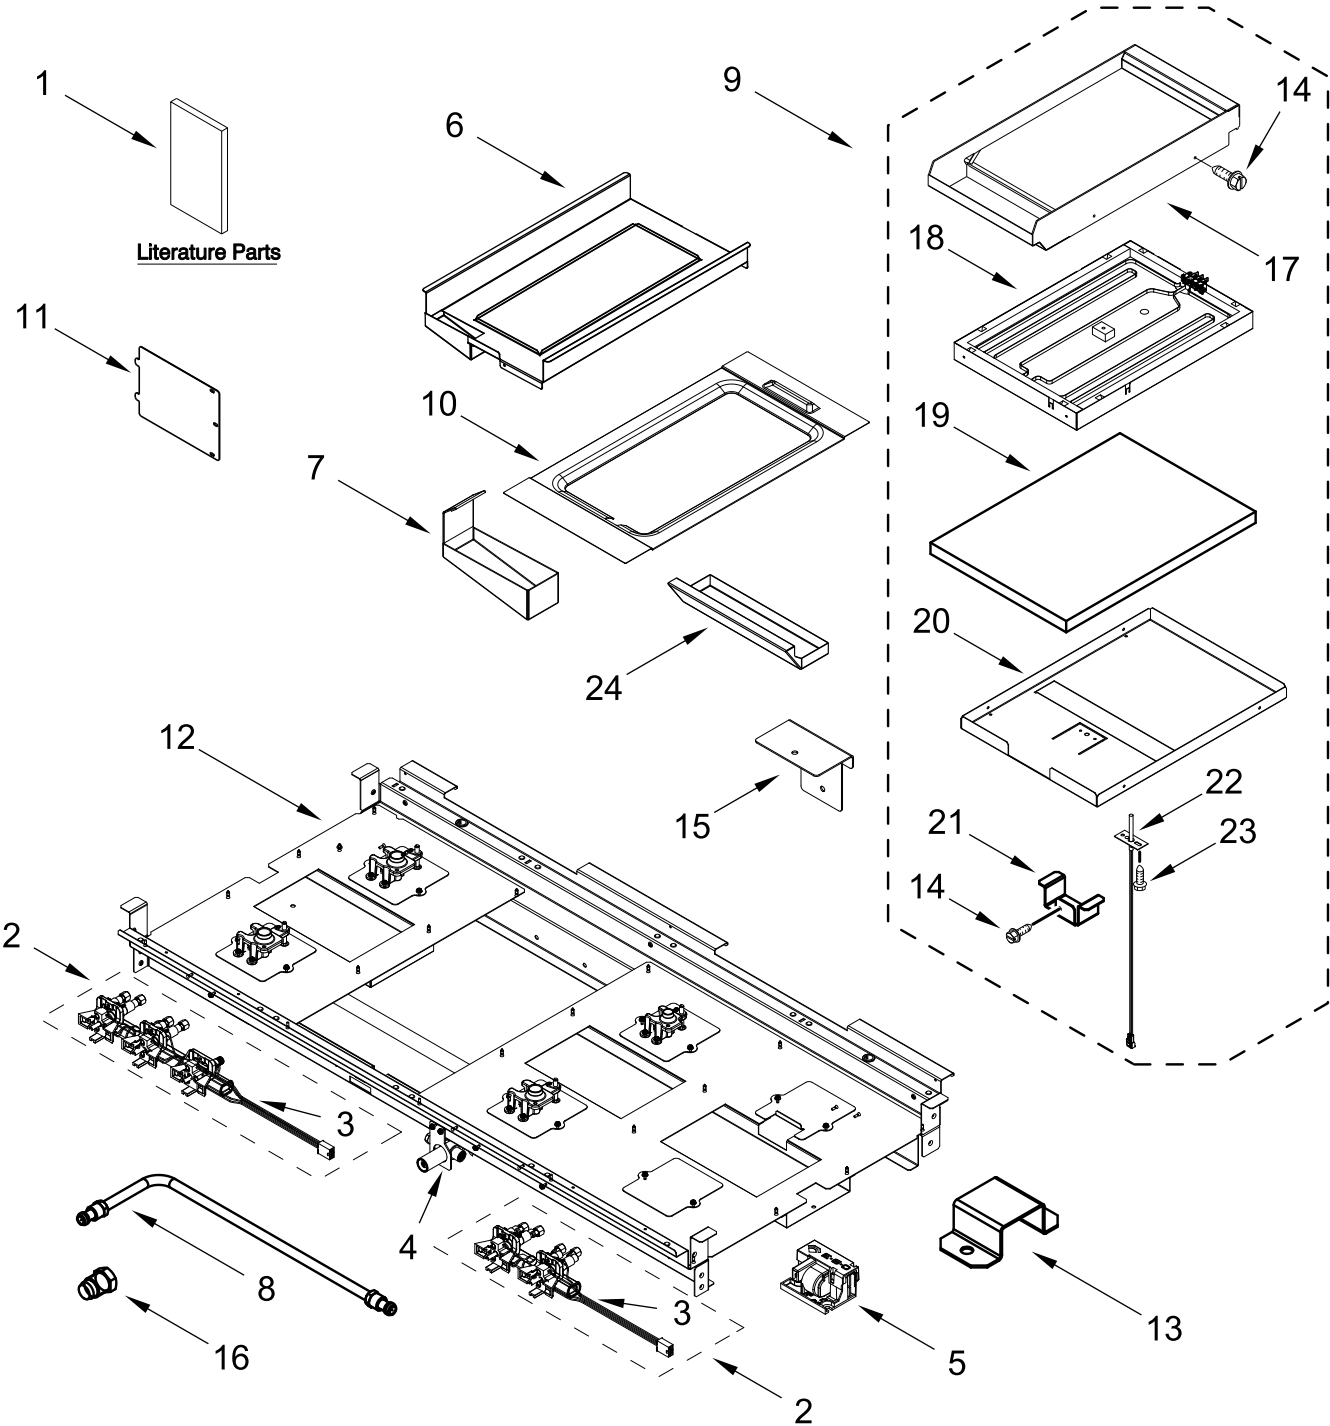

BURNER BOX, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121194	Bracket, Manifold	21	W11121384	Bracket, Griddle-RTD
	W11508896	Use and Care Guide	5	W11121317	Module, Spark	22	W10891584	Sensor, Griddle
	W11508888	Installation Instructions	6	W11120957	Capture, Grill Grease	23	3196160	Screw
	W11177312	Guide, Quick Start	7	W11174414	Tray, Grill Drip	24	W10276497	Tray, Griddle Drip
	W11184746	Guide, Internet Connectivity	8	W10892796	Tube, Manifold Supply			FOLLOWING PARTS NOT ILLUSTRATED
	W11575704	Wiring Diagram (Cooktop)		W10892789	Tube, Manifold Supply	W11447992		Harness, Main (48 in)
	W11565477	Wiring Diagram (Oven)			(Left)	W10903727		Harness, Griddle
	W11202275	Sheet, Tech			(Right Center)	W11200333		Harness, Cooktop
2	W10893054	Assembly, Valve Manifold	9	W11505236	Griddle Module Assembly	W10780278		Harness, Door Lock
		(Left Front, Left Rear, And Grill)	10	W11120965	Deflector, Grill Heat	W11200318		Harness, Communication
	W10893058	Assembly, Valve Manifold	11	W10115843	Cover, Ignition	W11242785		Harness, WIFI
		(Right Center Front And Right Center Rear)	12		Box, Burner (Not Serviced)	313438		Clip, Harness
			13	W11174418	Bracket, Grill Orifice Holder	W10624584		Cord, Power
			14	W10162096	Screw	4450800		Screw, Grounding
			15	W11285353	Bracket, Grill Grease Capture	W11311196		Ignitor Wire, Wire-Electrode Bake
3	W11106302	Switch, Harness	16	W10892063	Plug, Supply Outlet	W11311197		Ignitor Wire, Wire-Electrode Broil
		(Left Front, Left Rear, And Grill)	17	W11360151	Module, Griddle	W10253333		Bracket, Anti-Tip
	W11106300	Switch, Harness	18	W10891698	Element, Griddle	7101P485-60		Screw, Anti-Tip Kit
		(Right Center Front And Right Center Rear)	19	W11121383	Insulation, Griddle	W11422176		Kit, LP Conversion
			20	W11330430	Tray, Griddle Insulation			


COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

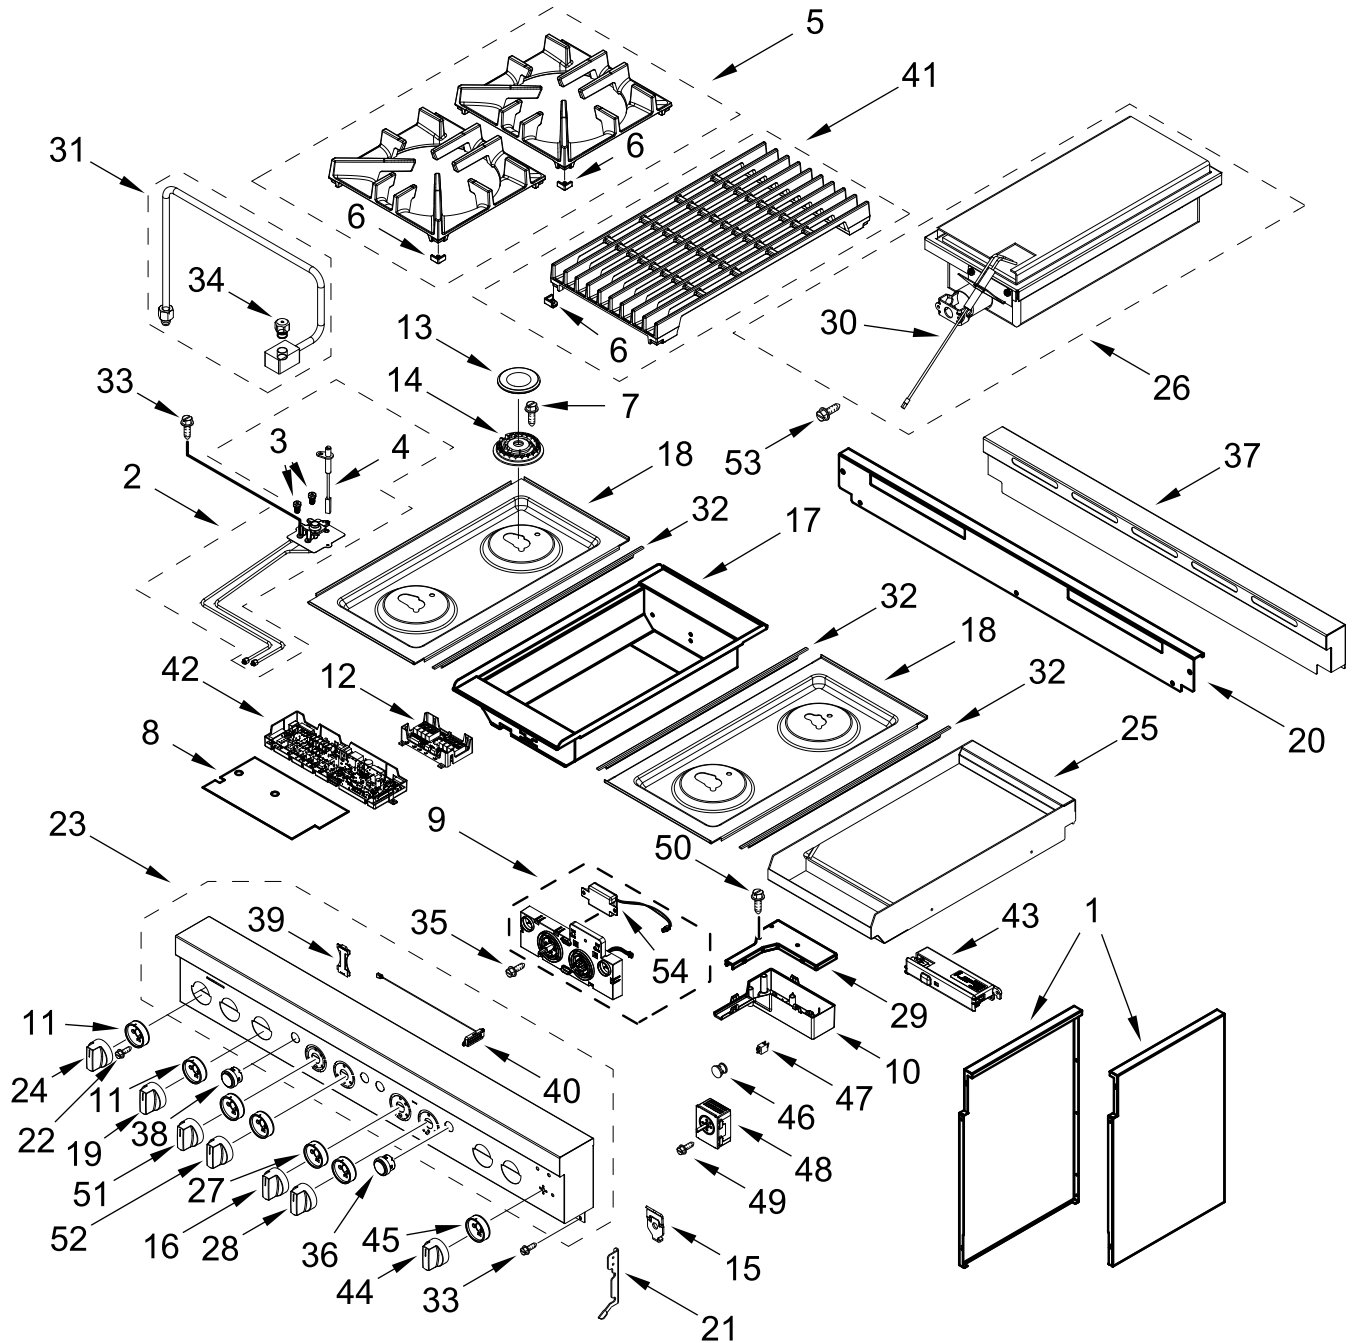

COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	13		Cap, Burner	31	W11419278	Grill Orifice Holder Assembly
	W11111428	Panel, Cabinet Side (Right)		W11121391	Black (Set of 4)			(Left Center)
2	W10892807	Assembly, Orifice Holder	14	W10891987	Spreader, Flame (High)	32	W10291193	Trim, L-Strip
		(Left Front)			(All But Right Center Rear)	33	7101P426-60	Screw
	W10892495	Assembly, Orifice Holder		W10892022	Spreader, Flame (Low)	34	W11419282	Orifice, Grill (18K)
		(Left Rear)			(Right Center Rear)	35	3400814	Screw
	W10892505	Assembly, Orifice Holder	15	W11036559	Spring Clip, Range	36	W11090650	Button Assembly, Oven Start
		(Right Center Front)	16		Knob, Oven Mode	37	W11476244	Island Trim
	W10892721	Assembly, Orifice Holder		W11496094	Stainless	38	W11090651	Button Assembly, Oven Light
		(Right Center Rear)	17	W11174429	Assembly, Grill Box	39	W10896369	Assembly, Light Pipe
3	W10892422	Orifice, Main (17.4K)	18		Panel, Cooktop	40	W11130078	Antenna, WIFI
		(Left Front And Right Center Front)		W10803515	Black	41	W11291177	Grill Grate Assembly
	W10892418	Orifice, Main (15.4K)		W10803519	Black	42	W11543349	Manager, Powermax Appliance
		(Left Rear)	19		Knob, Grill	43	W11110768	Assembly, WIFI Module
	W10892440	Orifice, Main (7.2K)		W11496090	Stainless	44		Knob, Griddle
		(Right Center Rear)	20	W10323252	Trim, Island Insert		W11496089	Stainless
	W10892435	Orifice, Simmer (2.6K)	21	W10130760	Bracket, Moving Console (Left)	45	W11104966	Bezel, Griddle
		(All But Right Center Rear)		W10130759	Bracket, Moving Console (Right)	46	W10294500	Lens, Indicator Light
	W10892429	Orifice, Simmer (2.0K)	22	W11328357	Screw	47	W10116114	Light, Indicator Housing
		(Right Center Rear)	23		Console Assembly	48	W11033497	Control, Griddle
4	W11238757	Igniter		W10878259	Stainless	49	7101P309-60	Screw
		(All But Right Center Rear)	24		Knob, Burner	50	7101P624-60	Screw
	W11238756	Igniter			(For 4 Cooktop Burners)	51		Knob, Oven Mode
		(Right Center Rear)		W11496088	Stainless		W11496095	Stainless
5		Assembly, Grate	25		Assembly, Griddle Module	52		(For 18 in Oven)
	W11291176	Black (Set of 2)			(Part Number Included on Burner Box Page)		W11496096	Stainless
6	W11042504	Bumper, Grate	26	W11120976	Assembly, Grill Burner			(For 18 in Oven)
7	W11323260	Screw	27		Bezel, Oven	53	3196537	Screw
8	W11281269	Barrier, Appliance Manager			(For 4 Oven Knobs)	54	W10568405	Assembly, Speaker
9	W11436326	Interface, User		W10914998	Stainless			
10	W11205795	Cover, WIFI Outer	28		Knob, Oven Temperature			
11	W11090283	Brass		W11496091	Stainless			
		(For 4 Cooktop Burners and Grill)			(For 30 in Oven)			
12	W10871065	Manager, Appliance (Expansion)	29	W11205794	Cover, WIFI Inner			
			30	W11174598	Electrode, Grill			


CHASSIS PARTS

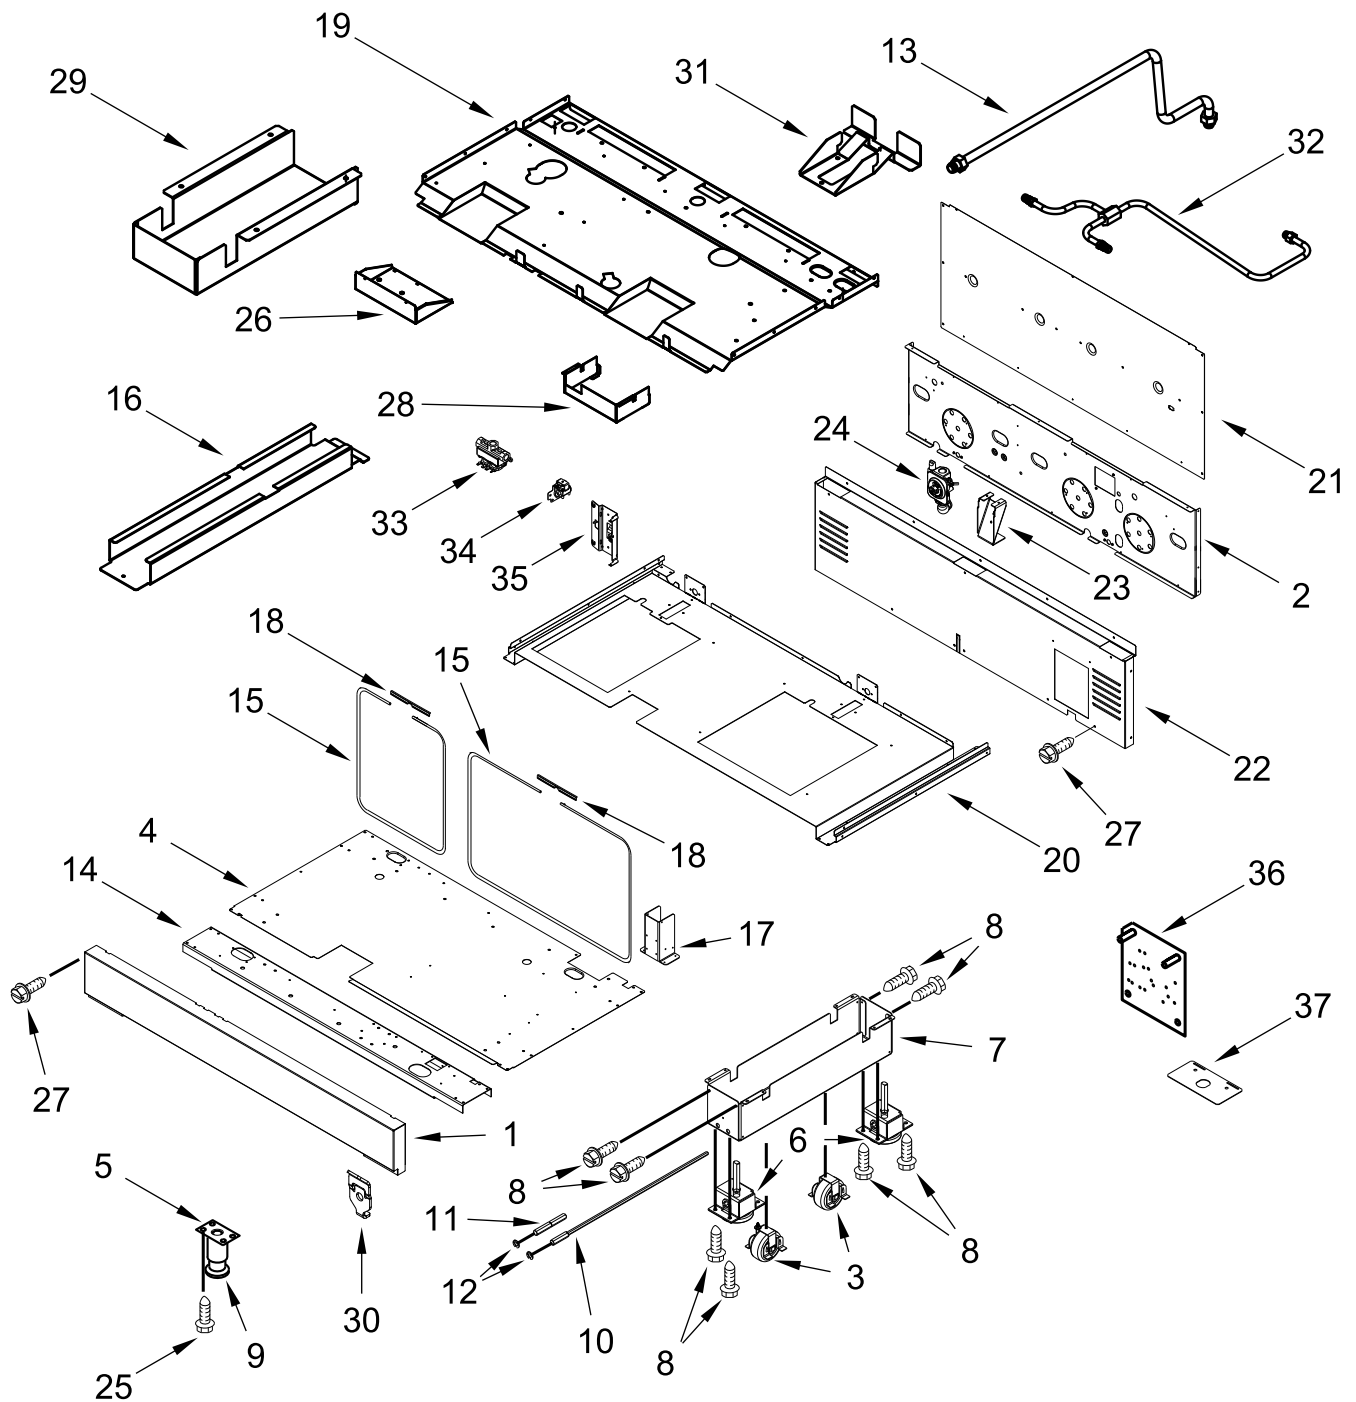

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11368831	Channel, Wire
2	W11324987	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9 in Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48 in)	19	W11324984	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11369237	Cabinet, Appliance Manager			
14	W11369238	Support, Channel						
15	W11115328	Gasket, Oven (30 in)						
	W11115326	Gasket, Oven (18 in)						


30-IN OVEN PARTS

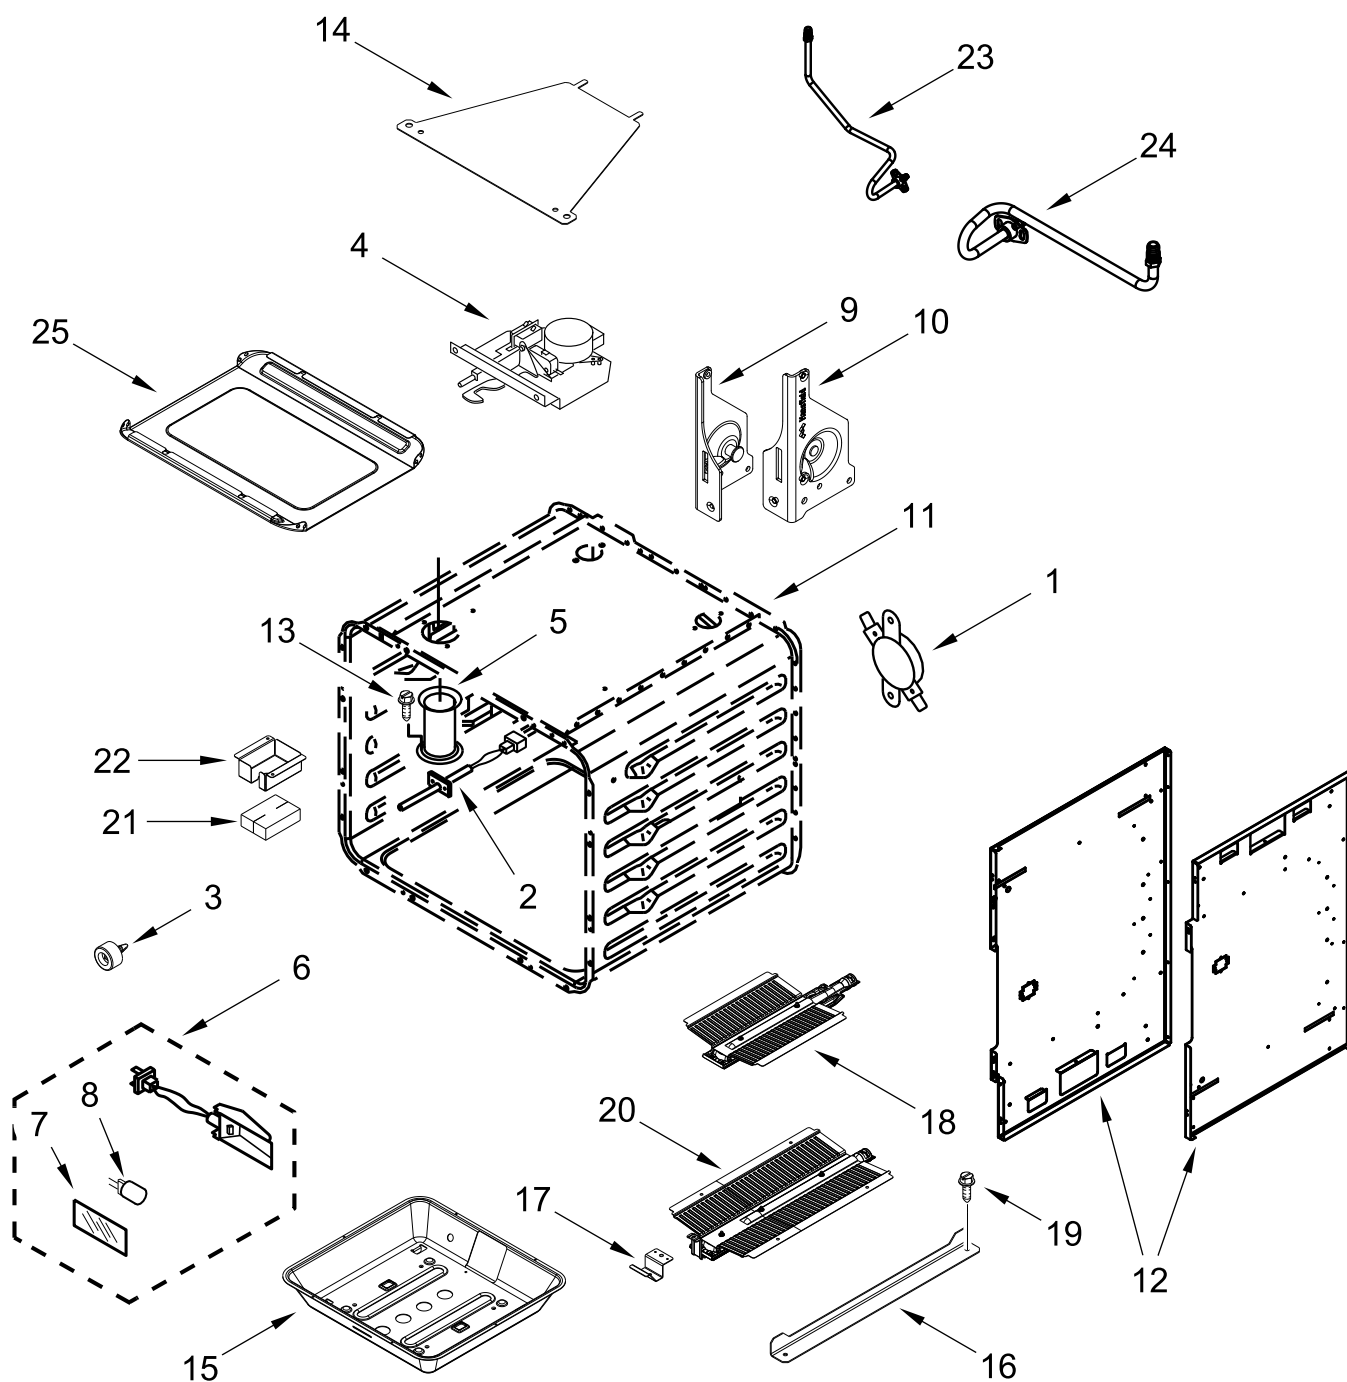

30-IN OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	13	3196176	Screw	25	W10496809	Pan, Oven Bottom
2	W10622170	Probe, Sensor	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	15	W10145744	Support, Bake Pan			
4	W10830016	Latch, Motorized	16	W10317437	Bracket, Broil Standoff	W10282810		Insulation, Wrap (30 in)
5	W10145743	Tube, Vent	17	W10308040	Bracket, Bake Burner	W10299350		Insulation, Back, (30 in)
6	W11223932	Assembly, Oven Light	18	W10878504	Burner, Bake	W10299354		Insulation, Bottom
7	W10169756	Lens, Light	19	7101P434-60	Screw			
8	W10169757	Bulb, Light	20	W10311335	Burner, Broil			
9	W11096294	Receiver, Hinge (Left)	21	W10311009	Insulation, Broil Cover		3400968	Nut
10	W11096293	Receiver, Hinge (Right)	22	W10310985	Cover, Broil			
11		Liner, Oven (Not Serviced)	23	W11109238	Tube, Broil			
12	W11102297	Chassis, Side (Left)	24	W11106980	Tube, Bake			
	W11102296	Chassis, Side (Right)						


18-IN OVEN PARTS

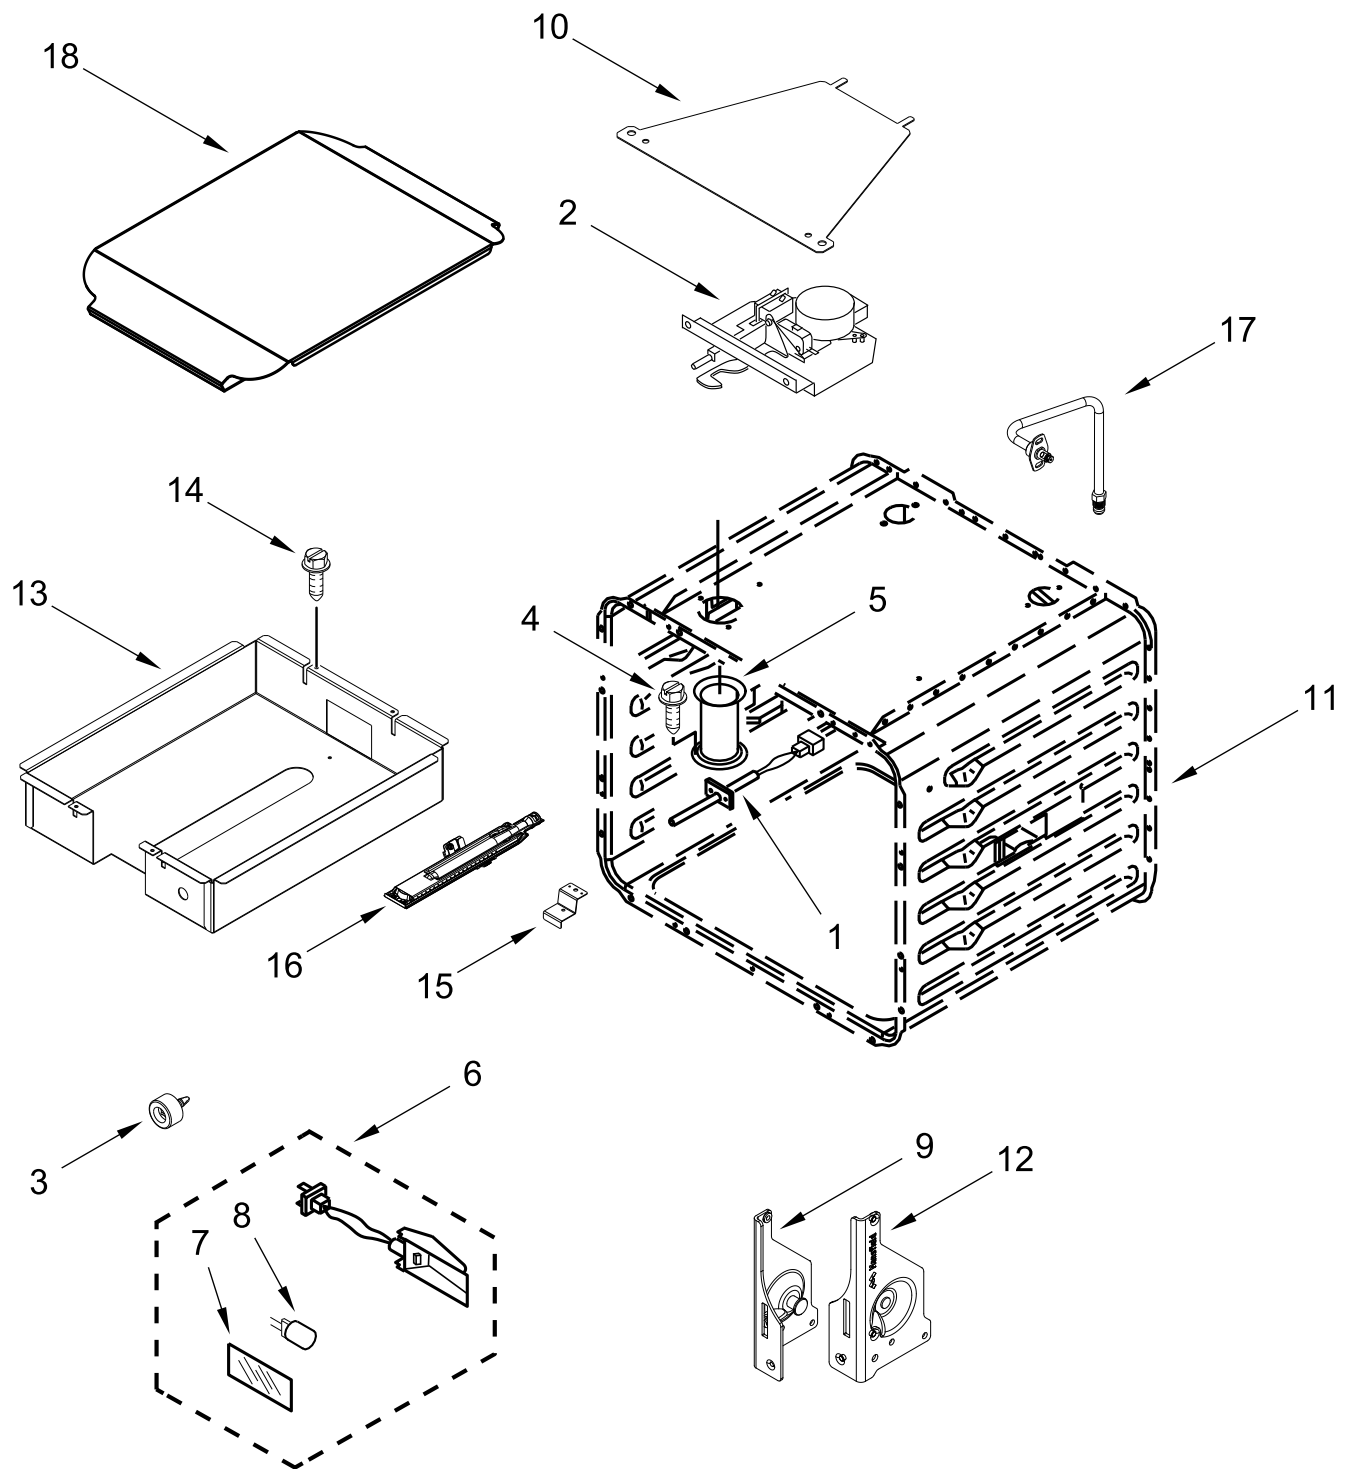

18-IN OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	18	W11211936	Cover, Bake
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	13	W10145651	Support, Bake Pan			
4	3196176	Screw	14	12992902	Screw		W10282820	Insulation, Wrap, 18 in
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner (18 in Cavity)		W10299353	Insulation, Back, 18 in
6	W11223932	Assembly, Oven Light					W10299355	Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader		3400968	Nut
8	W10169757	Bulb, Light	17	W10145706	Tube, Bake			
9	W11096294	Receiver, Hinge (Left)						
10	W10160858	Cover, Latch						
11		Liner, Oven (Not Serviced)						


VENTING PARTS

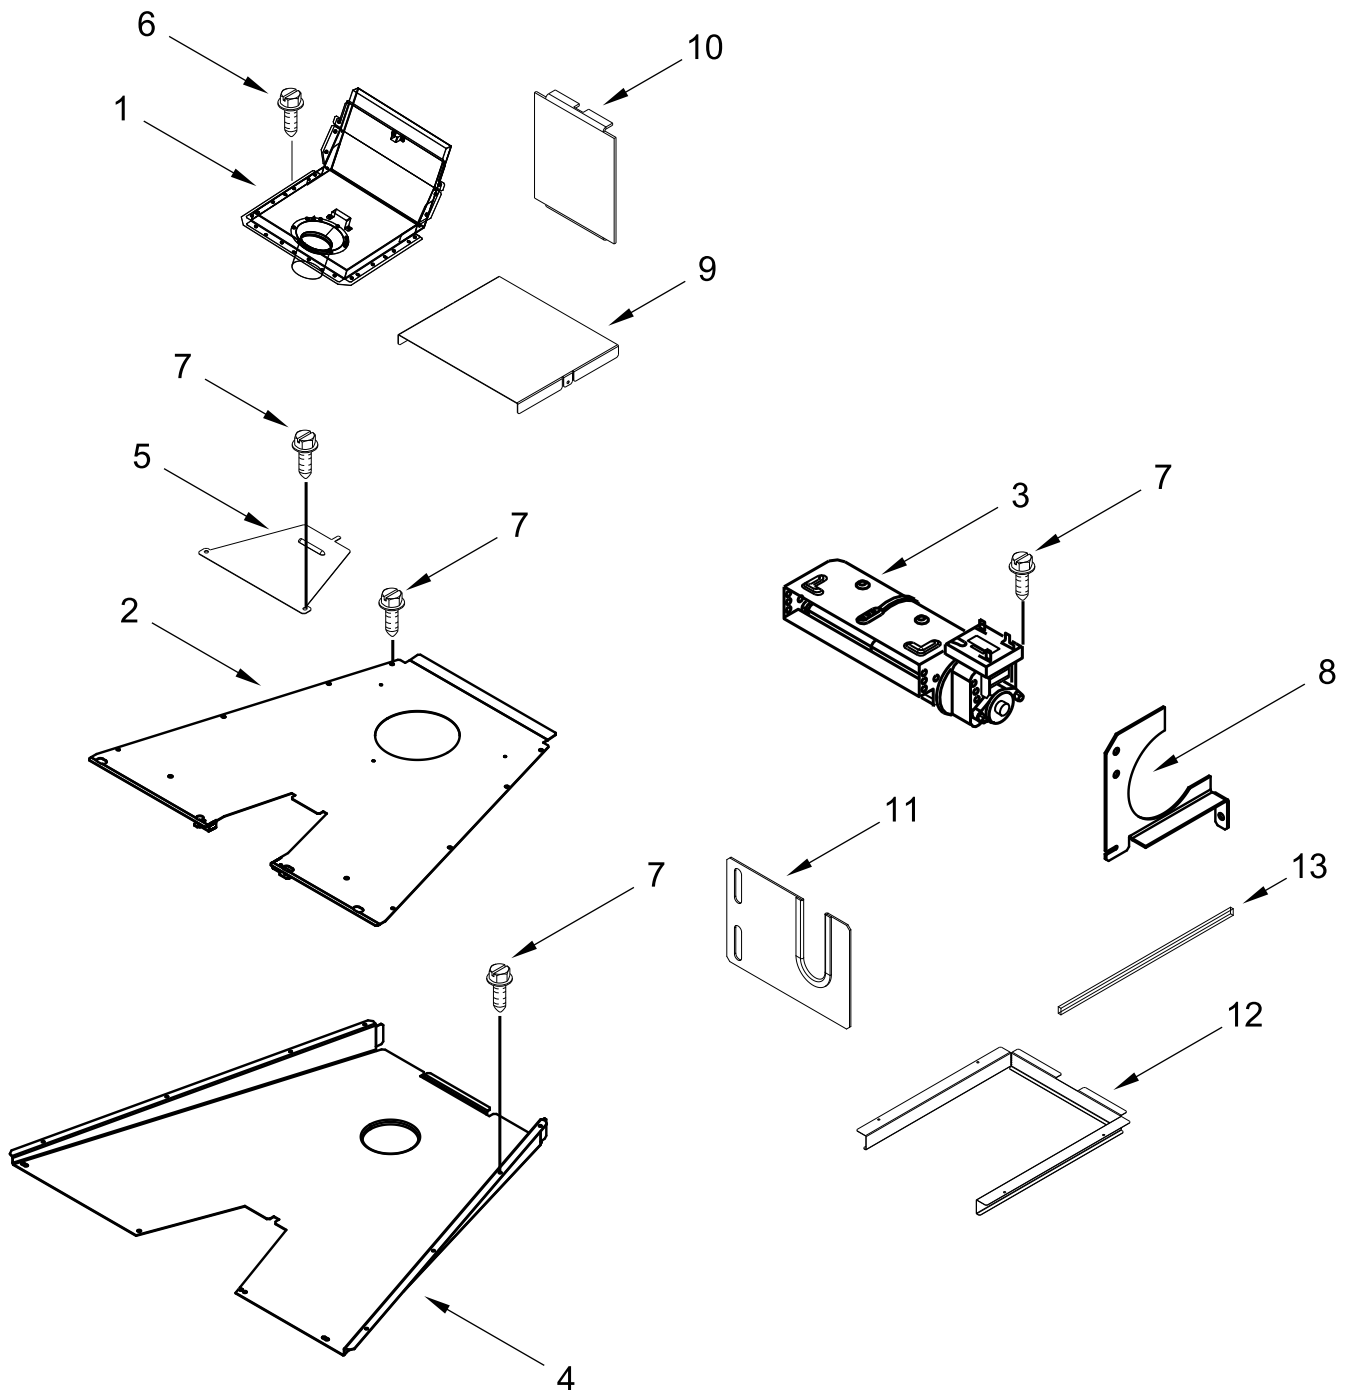

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	4	W11091676	Vent, Cooling Bottom (30 in)	9	W10246086	Retainer, Insulation
	W11476247	Vent, Chimney Box (18 in)		W11113377	Vent, Cooling Bottom (18 in)	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30 in)	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18 in)	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30 in)
			7	7101P426-60	Screw		W10145364	Duct, Primary Air (18 in)
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W10919715	Gasket


30-IN OVEN DOOR PARTS

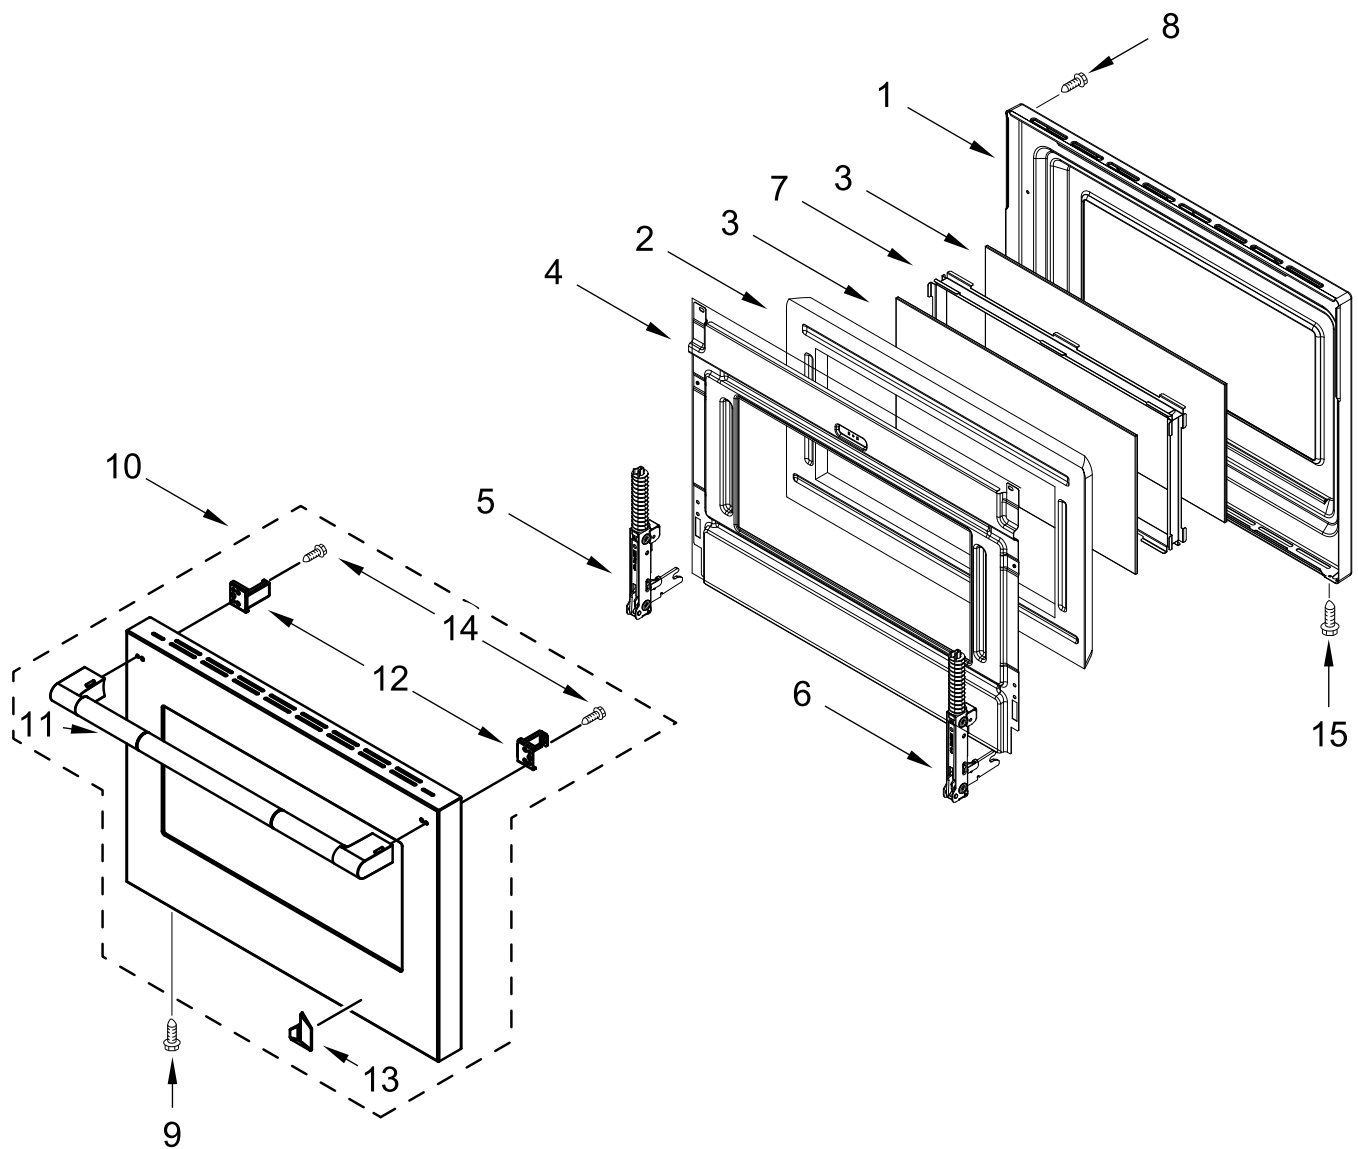

30-IN OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11238656	Stainless
4	W11194821	Retainer, Glass	10	W11199071	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11102826	Handle, Door			


18-IN OVEN DOOR PARTS

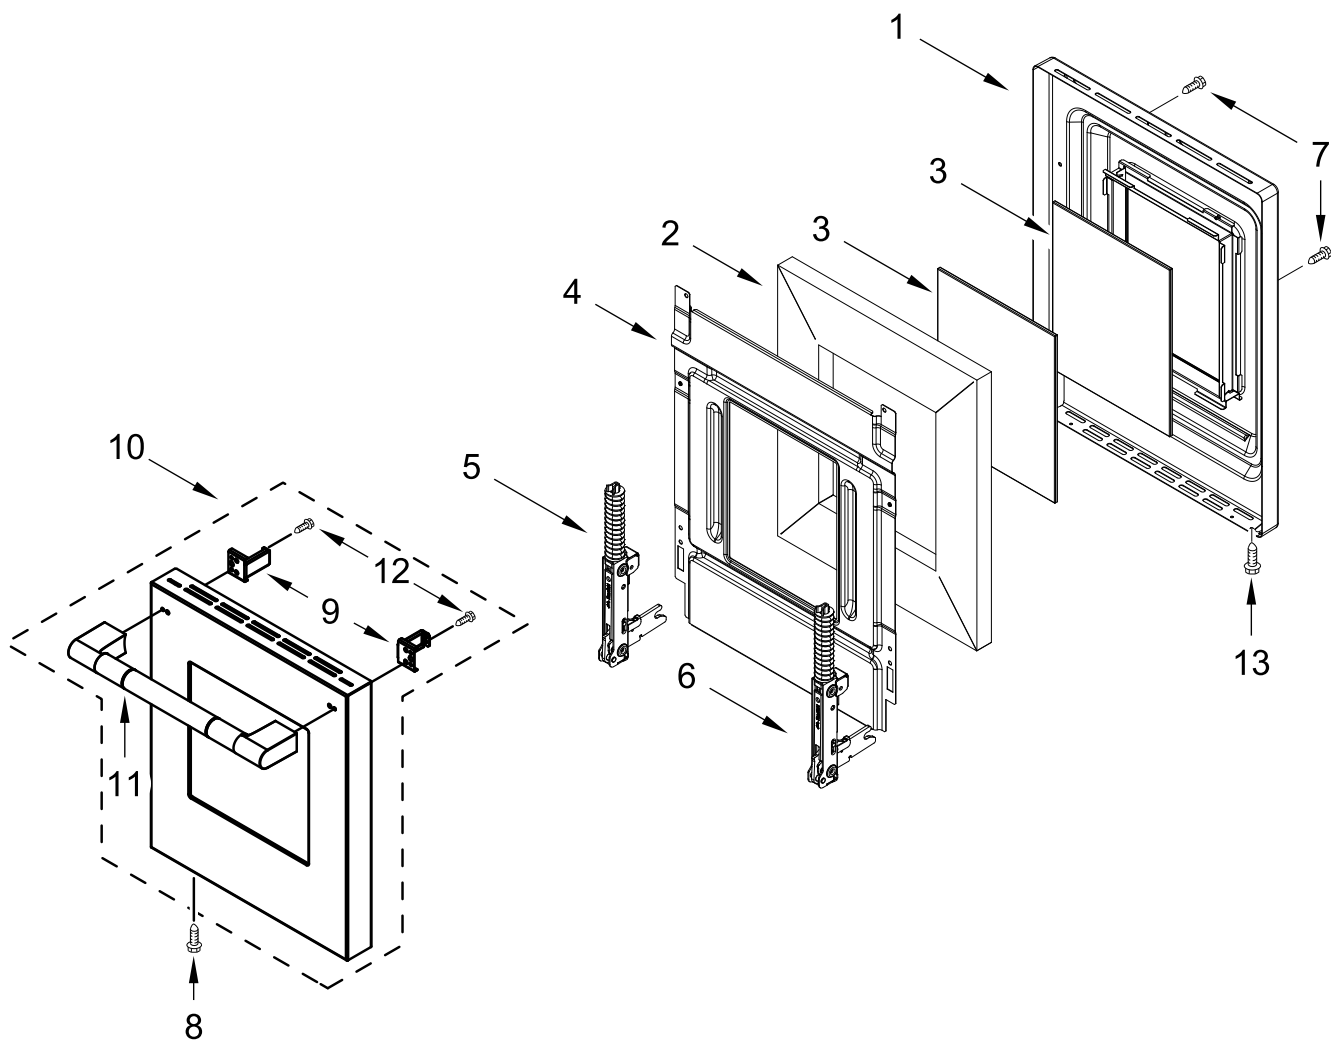

18-IN OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	11	W11102824	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W10276043	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	13	W10607120	Screw
4	W11194818	Retainer, Glass	10	W10799306	Assembly, Outer Door Glass (Includes Handle)			
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)						


30-IN INTERNAL OVEN PARTS

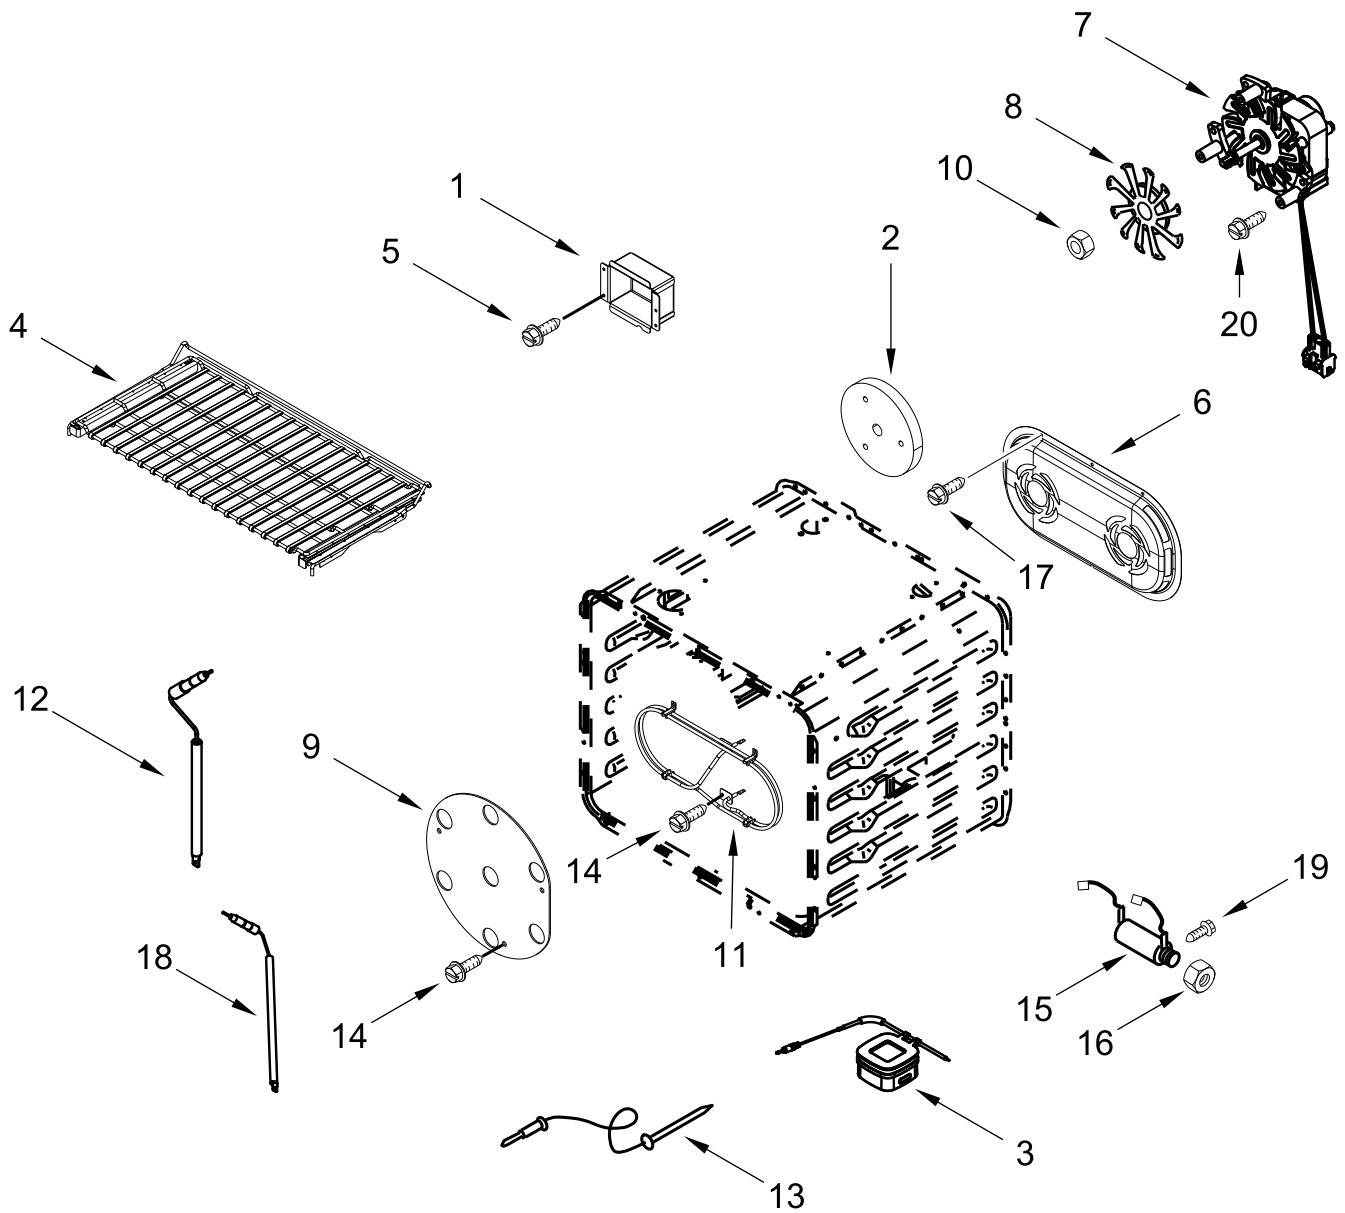

30-IN INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491351	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

18-IN INTERNAL OVEN PARTS

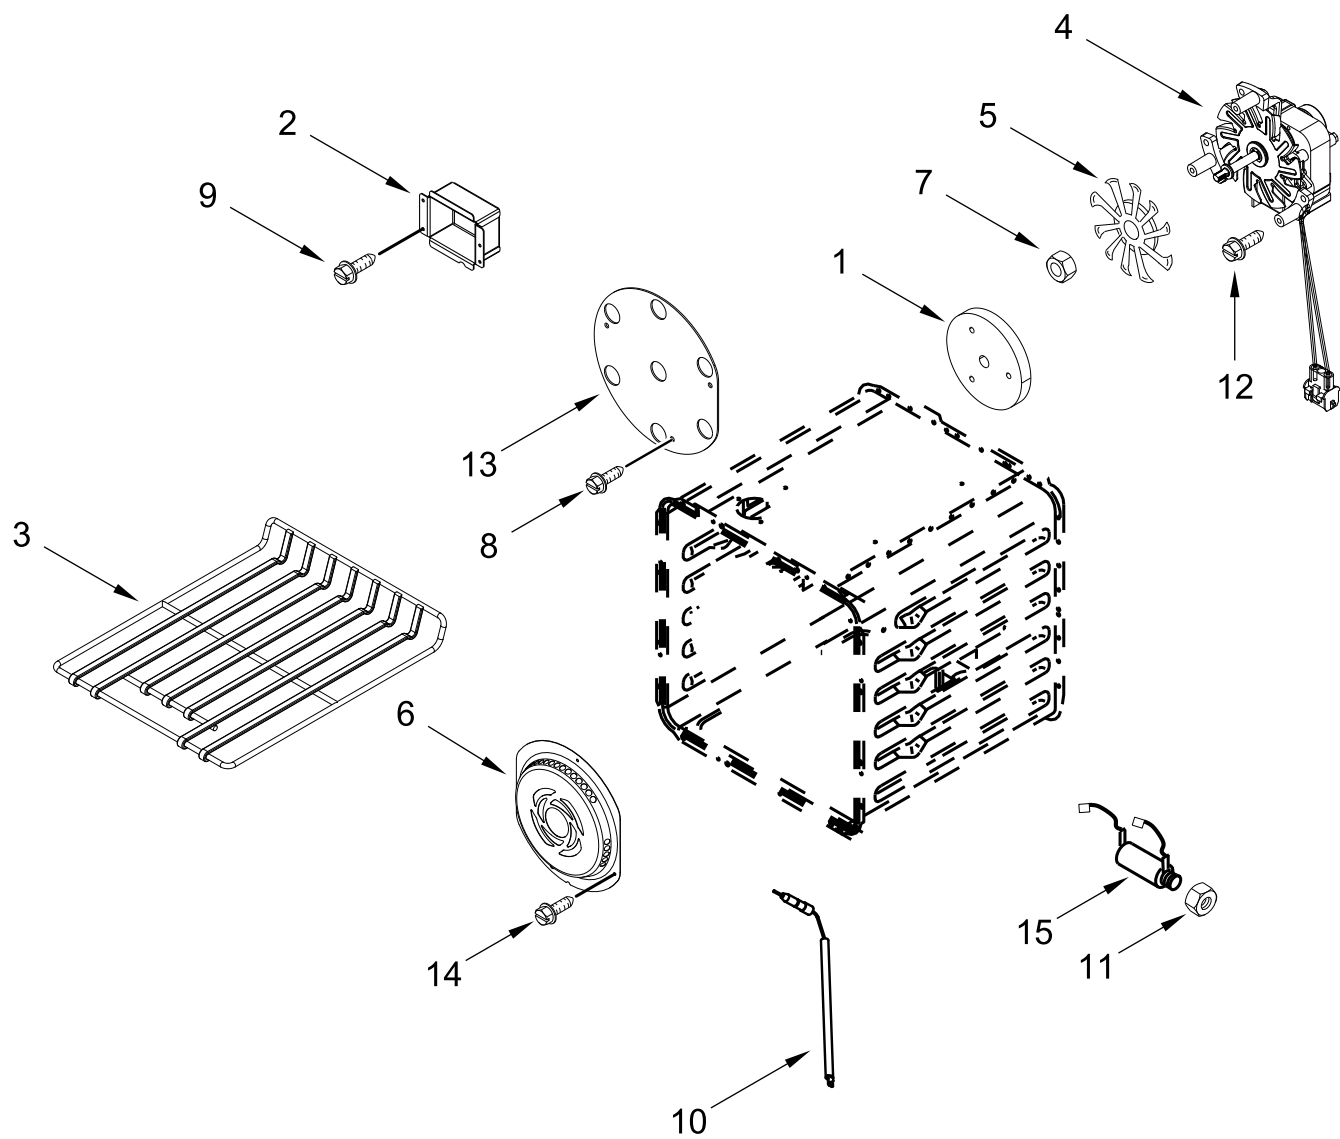

18-IN INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	6	W11368180	Cover, Fan	13	W10261523	Plate, Fan
2	W10308051	Box, Broil	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
3	W11111351	Rack, Oven (18 in)	8	4449154	Screw	15	9755543	Jack, Meat Probe
4	W10631506	Motor, Convection	9	7101P434-60	Screw			
5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake			
			11	W11033111	Nut, Locking			
			12	W10720084	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	30-48KITRC	Gas Range Connector Kit
	W11035424	Wok, Round Bottom
		Backsplash
	W10285449	48-in With Shelf
	W11239671	Lid, Stainless Steel Grill Cover
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
		Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large
		Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill