




GAS RANGE

MODELS:

JGRP748HM05 (Floating Glass Black)


BURNER BOX, GRIDDLE, AND GRILL PARTS

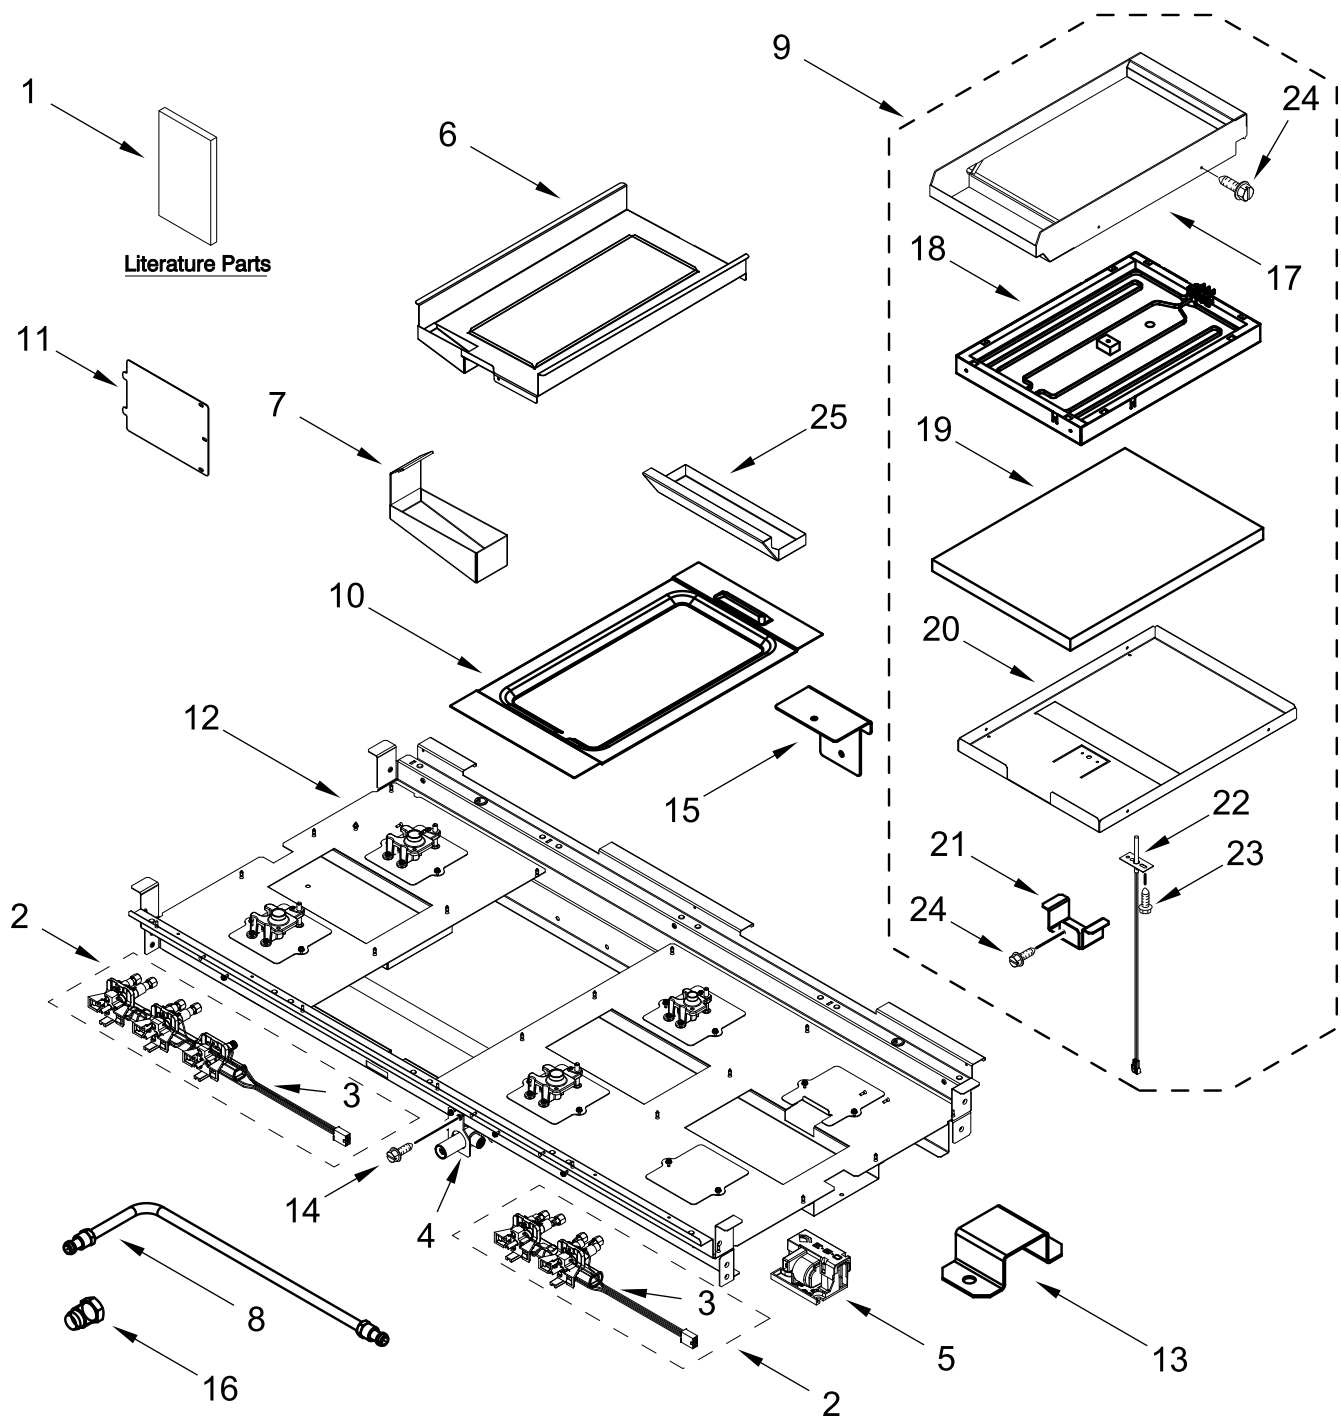

BURNER BOX, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11121194	Bracket, Manifold	21	W11121384	Bracket, Griddle-RTD
	W11508896	Use and Care Guide	5	W11121317	Module, Spark	22	W10891584	Sensor, Griddle
	W11508888	Installation Instructions	6	W11120957	Capture, Grill Grease	23	3196160	Screw
	W11184746	Guide, Internet Connectivity	7	W11174414	Tray, Grill Drip	24	W10162096	Screw
	W11177312	Guide, Quick Start	8	W10892796	Tube, Manifold Supply	25	W10276497	Tray, Griddle Drip
	W11575704	Wiring Diagram (Cooktop)			(Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W11565477	Wiring Diagram (Oven)		W10892789	Tube, Manifold Supply		W11447992	Harness, Main (48 in)
	W11202275	Sheet, Tech			(Right Center)		W10903727	Harness, Griddle
2	W10893054	Assembly, Valve Manifold	9	W11505236	Griddle Module Assembly		W11200333	Harness, Cooktop
		(Left Front, Left Rear, And Grill)	10	W11120965	Deflector, Grill Heat		W10780278	Harness, Door Lock
	W10893058	Assembly, Valve Manifold	11	W10115843	Cover, Ignition		W11200318	Harness, Communication
		(Right Center Front And Right Center Rear)	12		Box, Burner (Not Serviced)		W11242785	Harness, WIFI
3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	13	W11174418	Bracket, Grill Orifice Holder		313438	Clip, Harness
	W11106300	Switch, Harness (Right Center Front And Right Center Rear)	14	7101P426-60	Screw		W10624584	Cord, Power
			15	W11285353	Bracket, Grill Grease Capture		4450800	Screw, Grounding
			16	W10892063	Plug, Supply Outlet		W11311196	Ignitor Wire, Wire-Electrode Bake
			17	W11360151	Module, Griddle		W11311197	Ignitor Wire, Wire-Electrode Broil
			18	W10891698	Element, Griddle		W10253333	Bracket, Anti-Tip
			19	W11121383	Insulation, Griddle		7101P485-60	Screw, Anti-Tip Kit
			20	W11330430	Tray, Griddle Insulation		W11422176	Kit, LP Conversion


COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

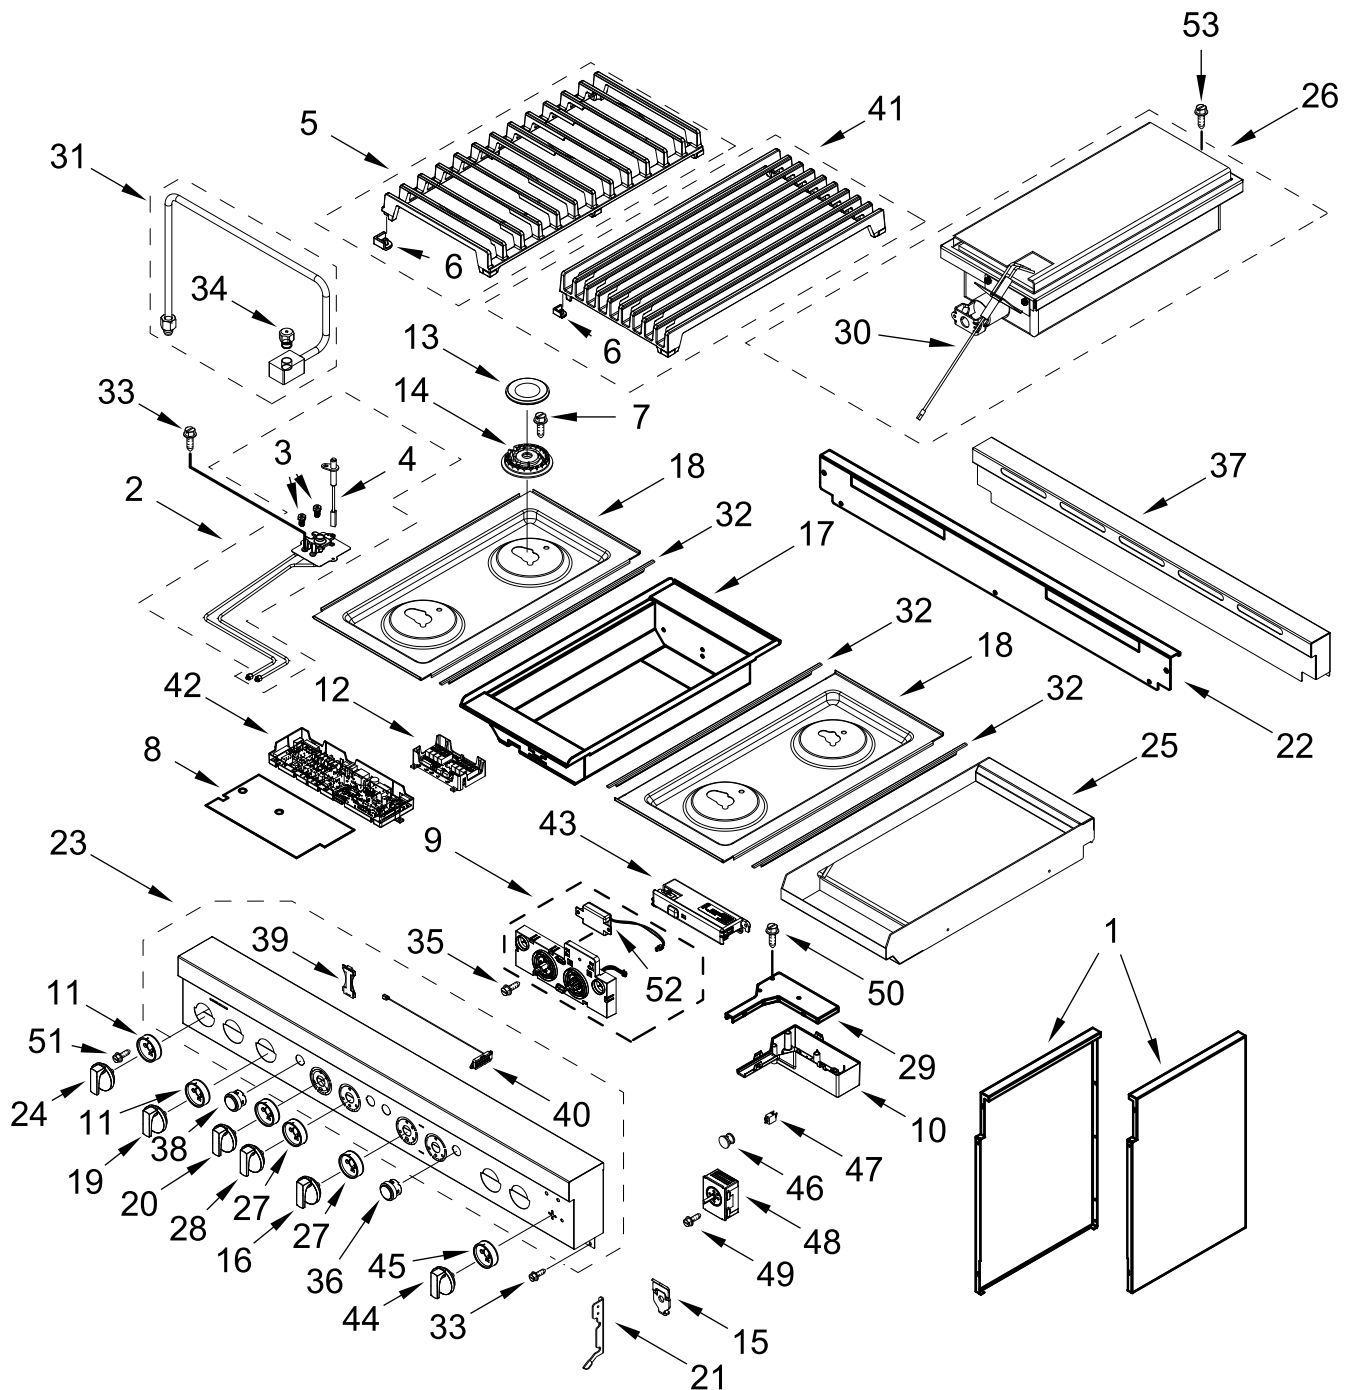

COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	11	W11090284	Bezel, Cooktop (For 4 Cooktop Burners and Grill)	27		Bezel, Oven
	W11111428	Panel, Cabinet Side (Right)					W11042375	Stainless (For 4 Oven Knobs)
2	W10892807	Assembly, Orifice Holder (Left Front)	12	W10871065	Manager, Appliance (Expansion)	28		Knob, Oven Temperature
	W10892495	Assembly, Orifice Holder (Left Rear)	13		Cap, Burner		W11325047	Stainless (For 18 in Oven)
	W10892505	Assembly, Orifice Holder (Right Center Front)	14	W10891987	Spreader, Flame (High) (All But Right Center Rear)		W10891868	Stainless (For 30 in Oven)
	W10892721	Assembly, Orifice Holder (Right Center Rear)		W10892022	Spreader, Flame (Low) (Right Center Rear)	29	W11205794	Cover, WIFI Inner
3	W10892422	Orifice, Main (17.4K) (Left Front And Right Center Front)	15	W11036559	Spring Clip, Range	30	W11174598	Electrode, Grill
	W10892418	Orifice, Main (15.4K) (Left Rear)	16		Knob, Oven (30 in) Mode	31	W11419278	Grill Orifice Holder Assembly (Left Center)
	W10892440	Orifice, Main (7.2K) (Right Center Rear)		W11317854	Stainless	32	W10291193	Trim, L-Strip
	W10892435	Orifice, Simmer (2.6K) (All But Right Center Rear)	17	W11174429	Assembly, Grill Box	33	7101P426-60	Screw
	W10892429	Orifice, Simmer (2.0K) (Right Center Rear)	18		Panel, Cooktop	34	W11419282	Orifice, Grill (18K) (Left Center)
4	W11238757	Igniter (All But Right Center Rear)		W11038237	Black (Left)	35	3400814	Screw
	W11238756	Igniter (Right Center Rear)		W11038241	Black (Right Center)	36	W11090650	Button Assembly, Oven Start
5		Assembly, Grate	19		Knob, Grill	37	W11476244	Island Trim
	W11291180	Black (Left)		W10894926	Stainless	38	W11090651	Button Assembly, Oven Light
	W11291182	Black (Right Center)	20		Knob, Oven (18 in) Mode	39	W10896369	Assembly, Light Pipe
6	W11042504	Bumper, Grate	21	W11325046	Stainless	40	W11130078	Antenna, WIFI
7	W11323260	Screw		W10130760	Bracket, Moving Console (Left)	41	W11172682	Assembly, Grill Grate
8	W11281269	Barrier, Appliance Manager		W10130759	Bracket, Moving Console (Right)	42	W11543349	Manager, Powermax Appliance
9	W11436326	Interface, User	22	W10323252	Trim, Island Insert	43	W11110768	Assembly, WIFI Module
10	W11205795	Cover, WIFI Outer	23		Console	44		Knob, Griddle
				W10878259	Stainless		W10891923	Stainless
			24		Knob, Burner	45	W11104967	Bezel, Griddle
				W10887596	Stainless (For 4 Cooktop Burners)	46	W10294500	Lens, Indicator Light
			25		Assembly, Griddle Module	47	W10116114	Light, Indicator Housing
					(Part Number Included on Burner Box Page)	48	W11033497	Control, Griddle
			26	W11120976	Assembly, Grill Burner	49	W10674068	Screw
						50	7101P624-60	Screw
						51	W11328357	Screw
						52	W10568405	Assembly, Speaker
						53	3196537	Screw


48-IN CHASSIS PARTS

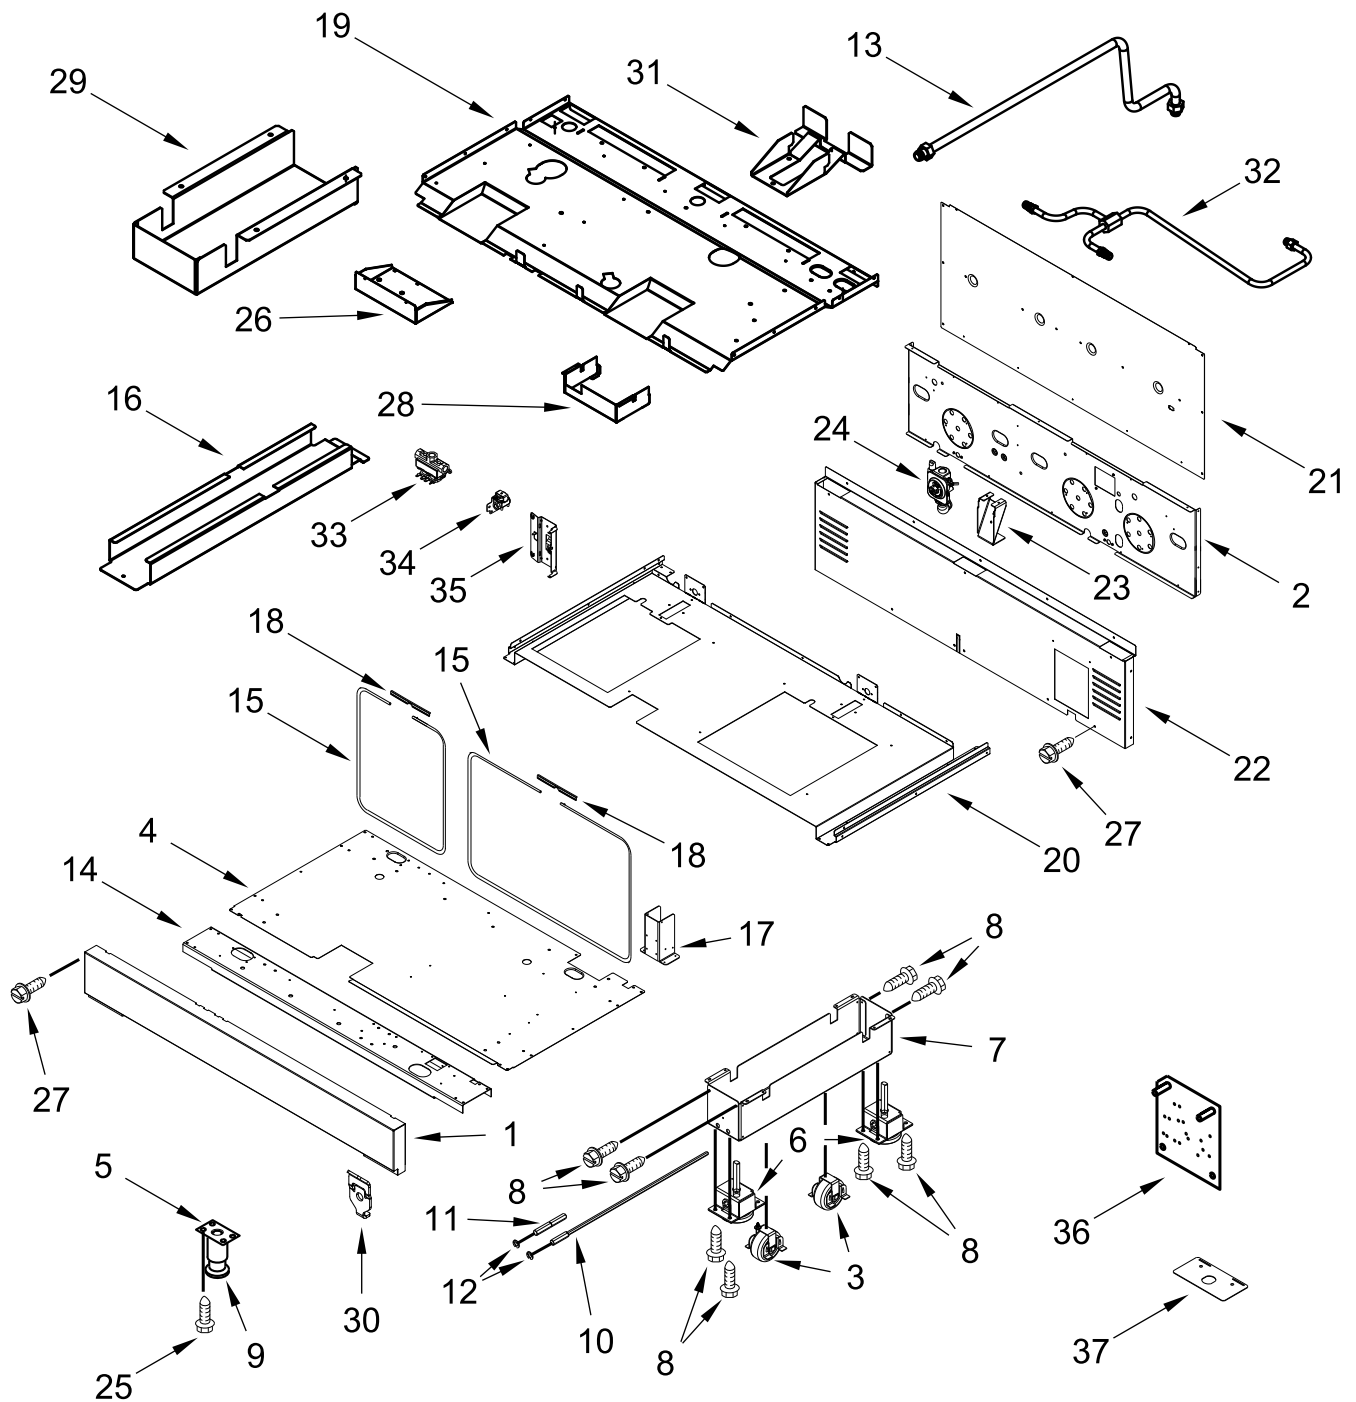

48-IN CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11368831	Channel, Wire
2	W11324987	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9 in Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48 in)	19	W11324984	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11369237	Cabinet, Appliance Manager			
14	W11369238	Support, Channel						
15	W11115328	Gasket, Oven (30 in)						
	W11115326	Gasket, Oven (18 in)						


30-IN OVEN PARTS

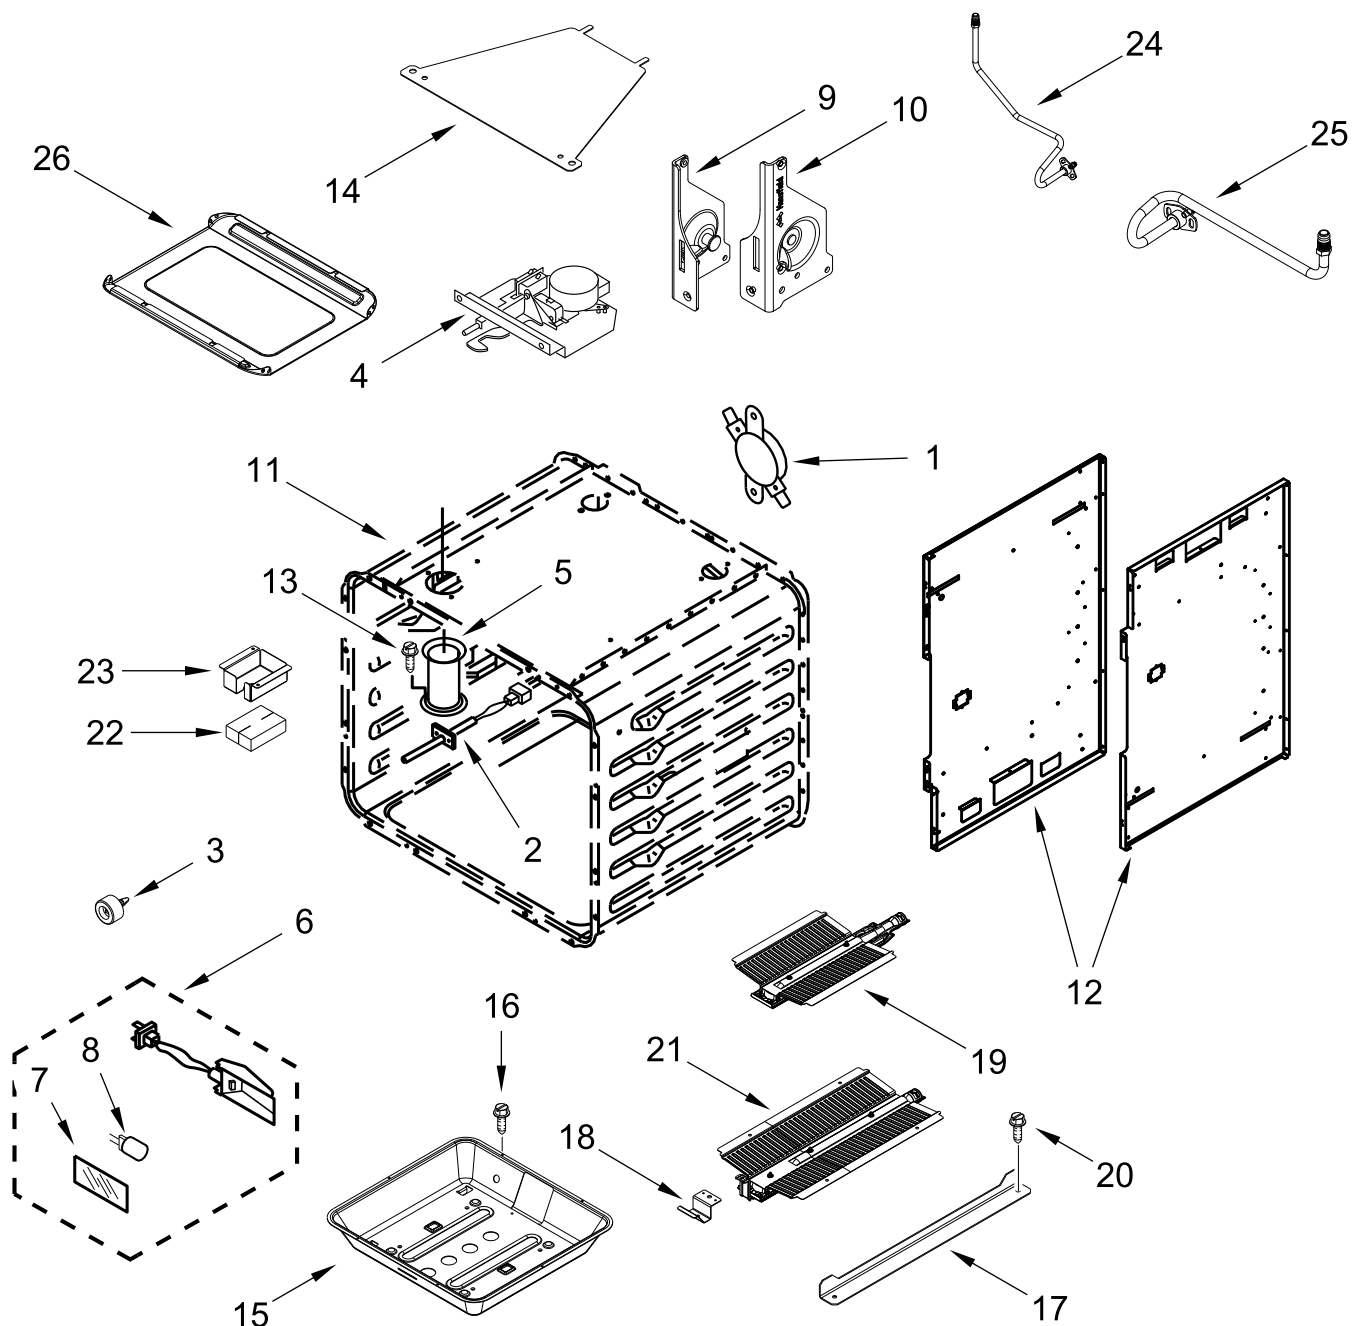

30-IN OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10311009	Insulation, Broil Cover
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W10310985	Cover, Broil
3	W10351278	Bumper and Screw				24	W11109238	Tube, Broil
4	W10830016	Latch, Motorized	13	3196176	Screw	25	W11106980	Tube, Bake
5	W10145743	Tube, Vent	14	W10160858	Cover, Latch	26	W10496809	Pan, Oven Bottom
6	W11223932	Assembly, Oven Light	15	W10145744	Support, Bake Pan			FOLLOWING PARTS NOT ILLUSTRATED
7	W10169756	Lens, Light	16	12992902	Screw			
8	W10169757	Bulb, Light	17	W10317437	Bracket, Broil Standoff	W10282810		Insulation, Wrap (30 in)
9	W11096294	Receiver, Hinge (Left)	18	W10308040	Bracket, Bake Burner	W10299350		Insulation, Back, (30 in)
10	W11096293	Receiver, Hinge (Right)	19	W10878504	Burner, Bake	W10299354		Insulation, Bottom
11		Liner, Oven (Not Serviced)	20	7101P434-60	Screw	3400968		Nut
			21	W10311335	Burner, Broil			


18-IN OVEN PARTS

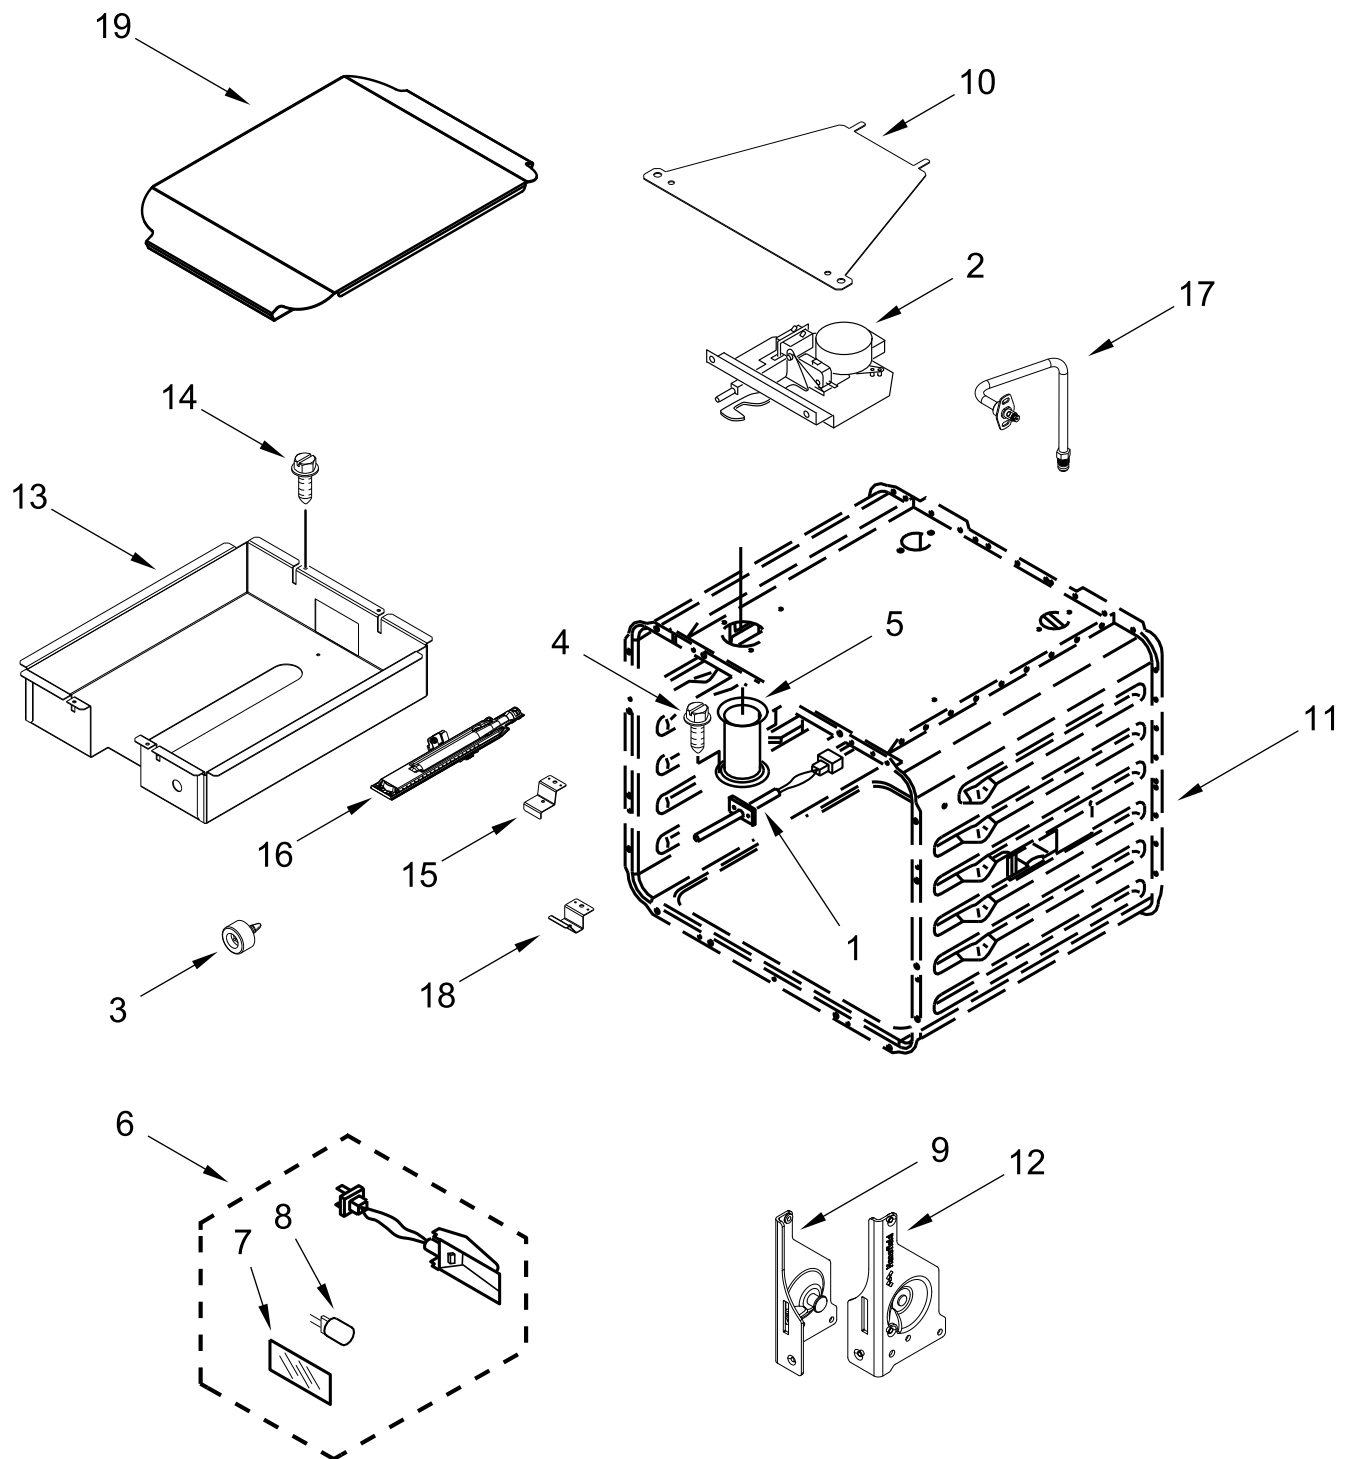

18-IN OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	19	W11211936	Cover, Bake
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	13	W10145651	Support, Bake Pan			
4	3196176	Screw	14	12992902	Screw		W10282820	Insulation, Wrap, 18 in
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner (18 in Cavity)		W10299353	Insulation, Back, 18 in
6	W11223932	Assembly, Oven Light					W10299355	Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader		3400968	Nut
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)	17	W10145706	Tube, Bake			
10	W10160858	Cover, Latch	18	W10308040	Bracket, Bake Burner			
11		Liner, Oven (Not Serviced)						


VENTING PARTS

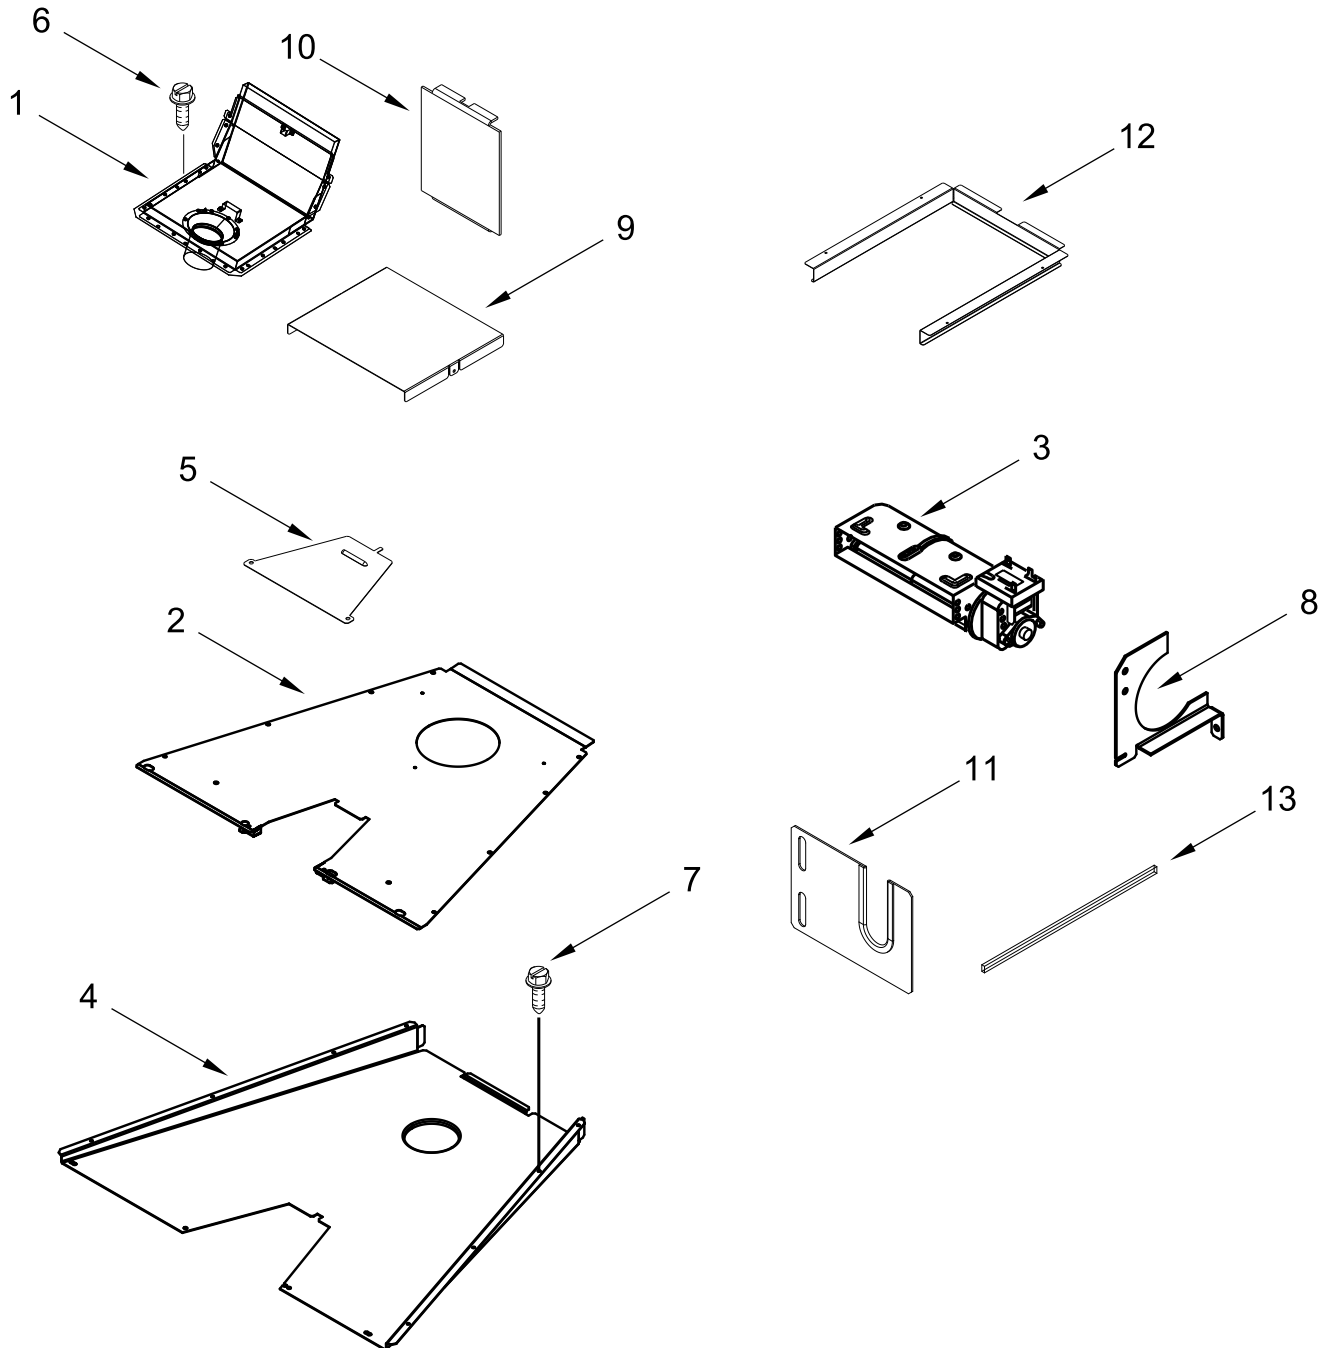

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	4	W11091676	Vent, Cooling Bottom (30 in)	9	W10246086	Retainer, Insulation
	W11476247	Vent, Chimney Box (18 in)		W11113377	Vent, Cooling Bottom (18 in)	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30 in)	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18 in)	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30 in)
			7	7101P426-60	Screw		W10145364	Duct, Primary Air (18 in)
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W10919715	Gasket


30-IN OVEN DOOR PARTS

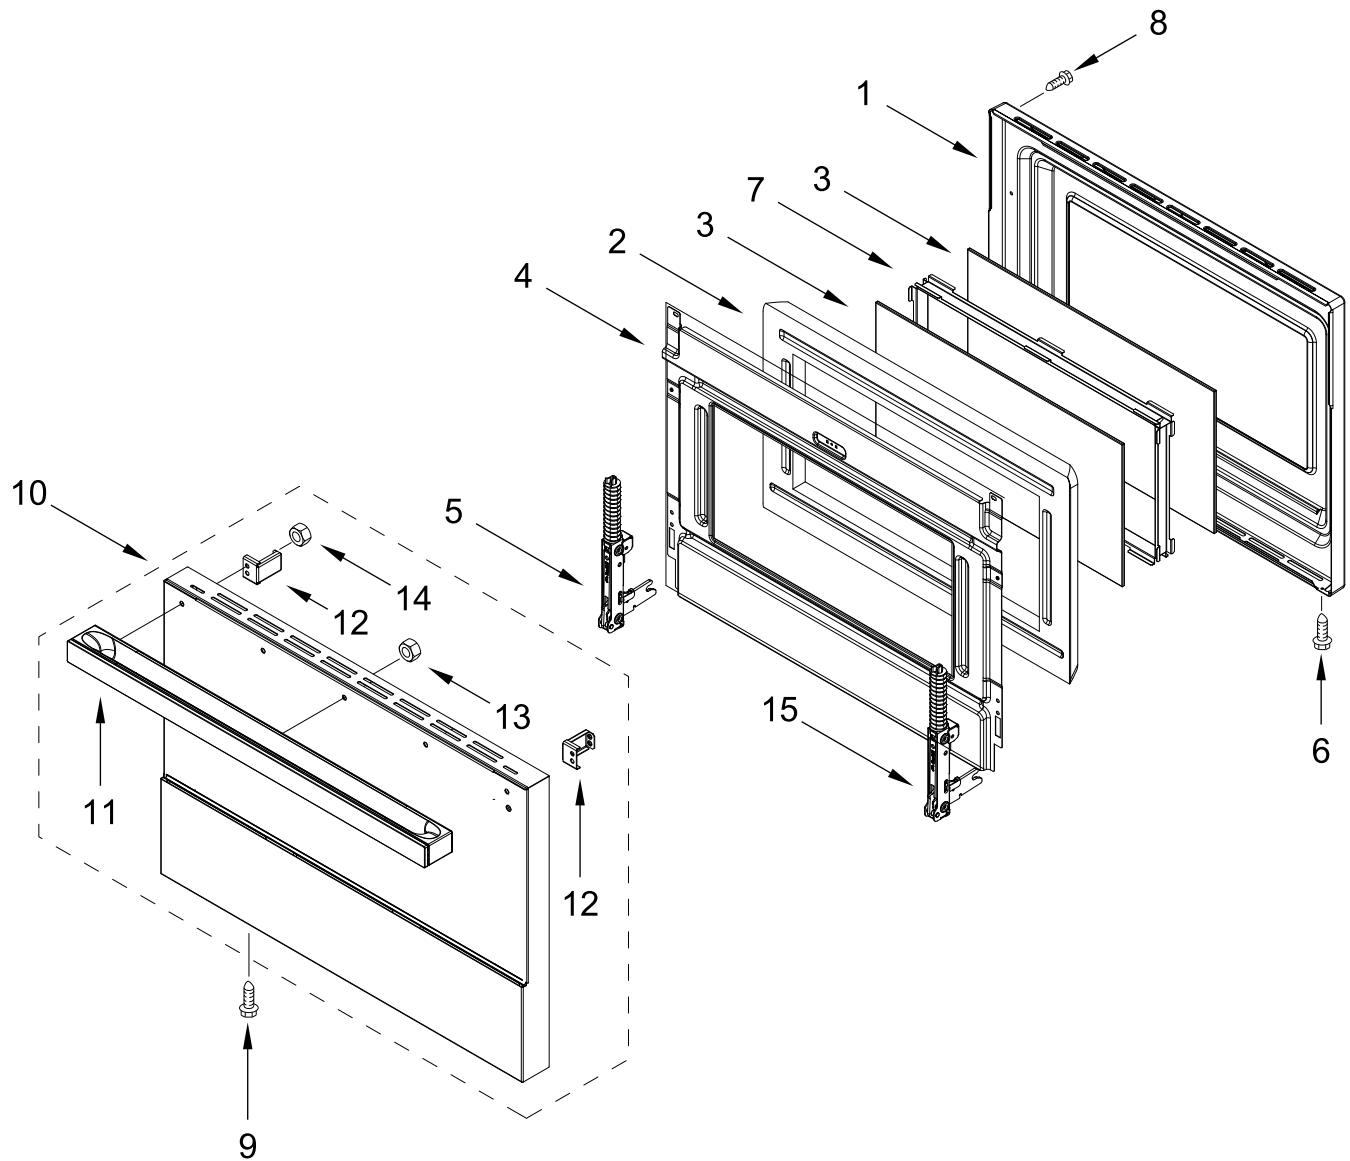

30-IN OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11194816	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13	W11198435	Nut
3	W11184409	Glass, Inner	9	W10162096	Screw	14	999299	Nut
4	W11194821	Retainer, Glass	10	W10870221	Assembly, Outer Door Glass (Includes Handle)	15	W11096977	Hinge, Door (Right)
5	W11096978	Hinge, Door (Left)						
6	W10607120	Screw	11	W11411876	Handle, Door			


18-IN OVEN DOOR PARTS

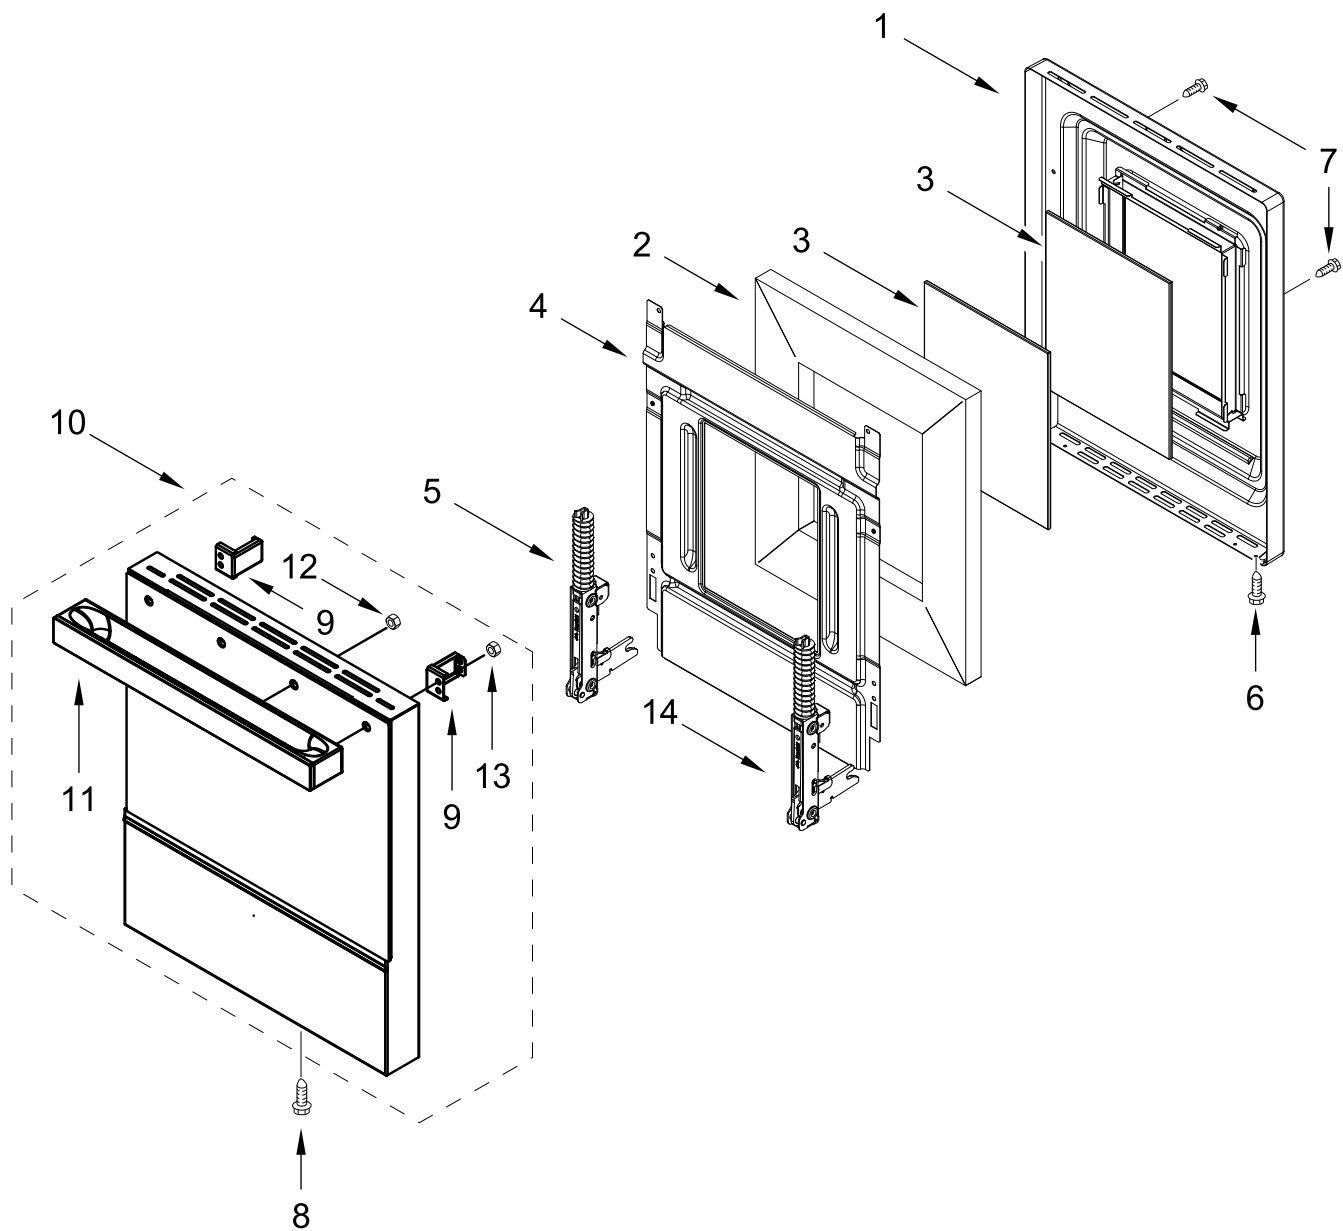

18-IN OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W11198435	Nut
2	W10884821	Insulation, Door	8	W10162096	Screw	13	999299	Nut
3	W11036789	Glass, Inner	9	W11194816	Bracket, Handle	14	W11096981	Hinge, Door (Right)
4	W11194818	Retainer, Glass	10	W10870212	Assembly, Outer Door Glass (Includes Handle)			
5	W11096982	Hinge, Door (Left)	11	W11411883	Handle, Door			
6	W10607120	Screw						


30-IN INTERNAL OVEN PARTS

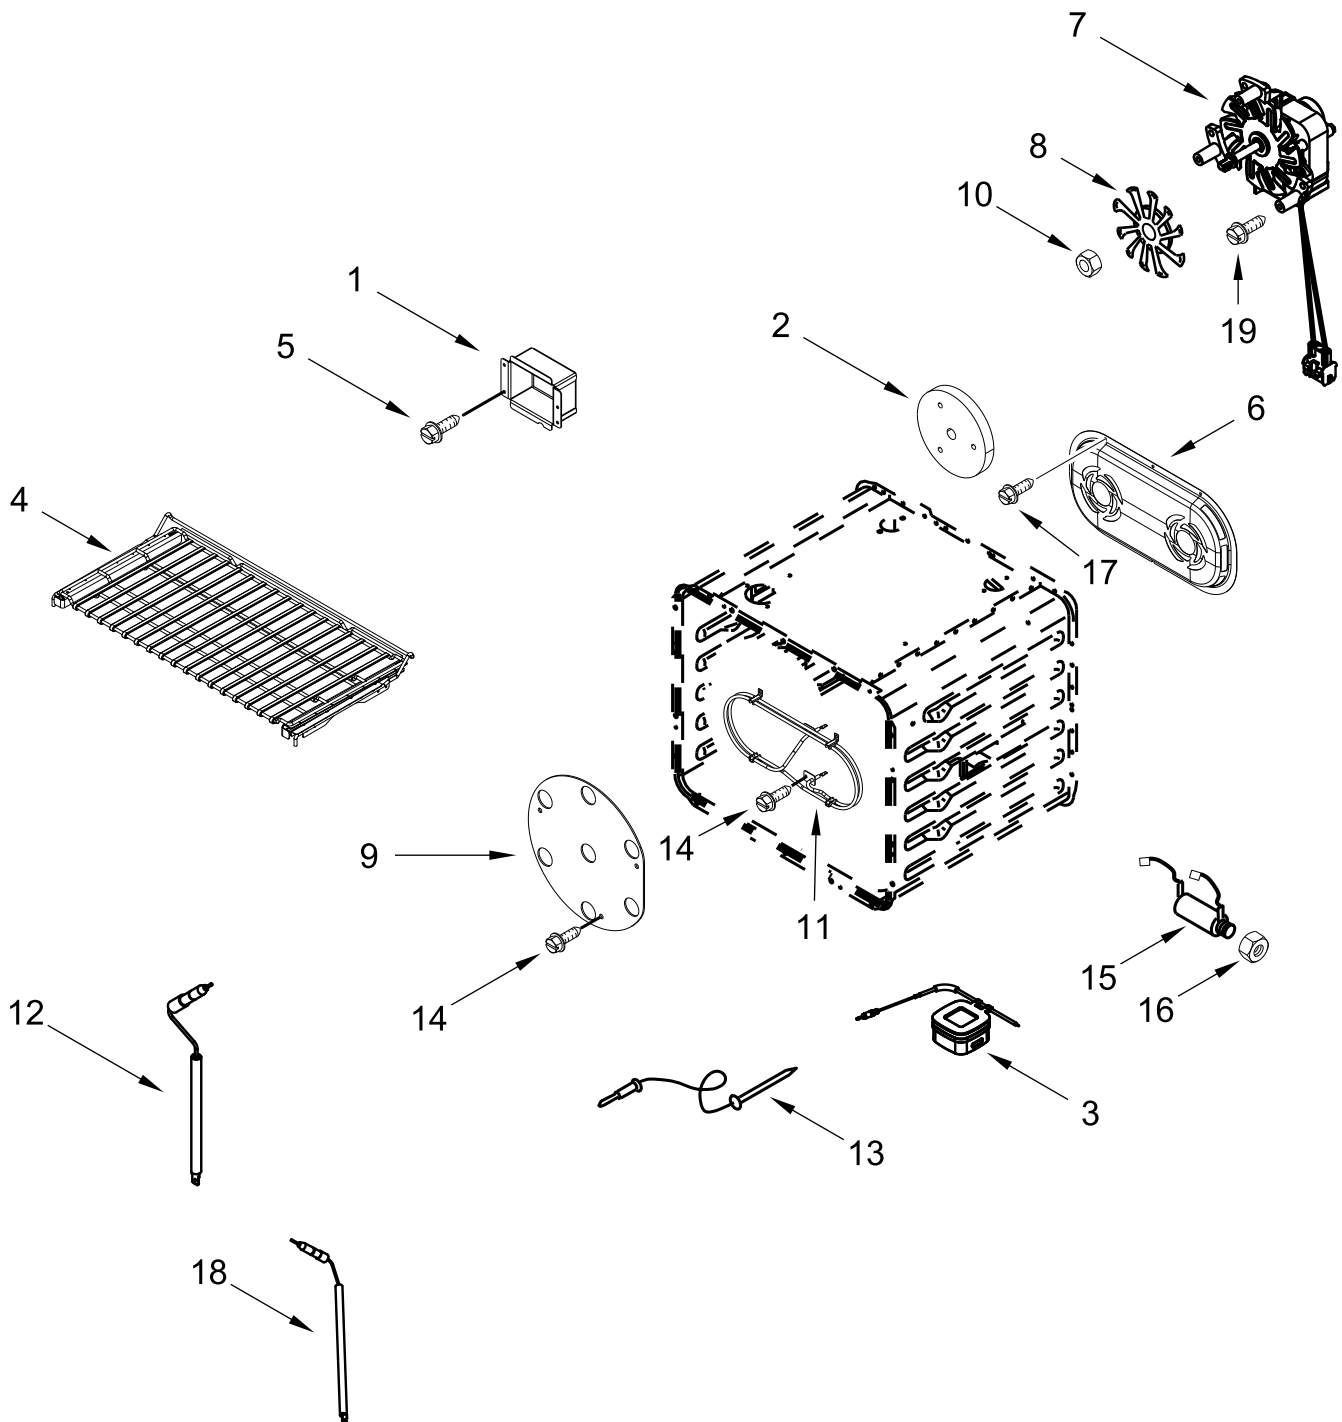

30-IN INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11491351	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	W10720084	Screw
			13	9755542	Probe, Temperature			

18-IN INTERNAL OVEN PARTS

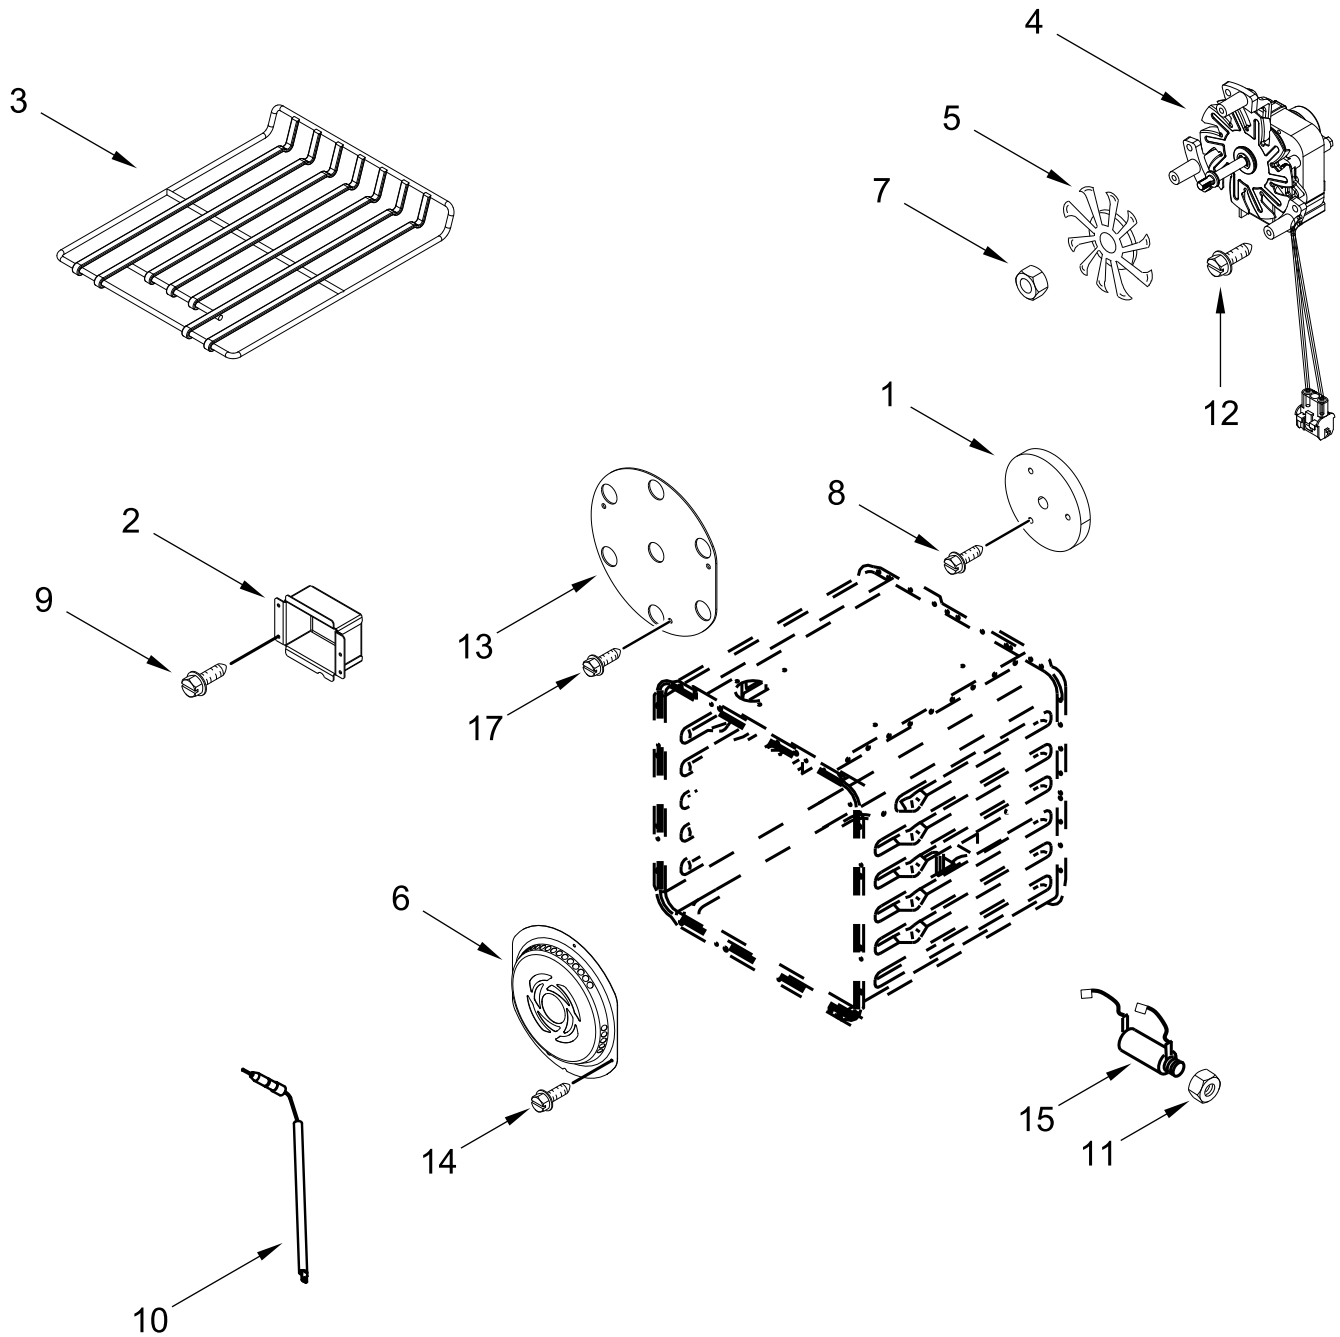

18-IN INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	6	W11368180	Cover, Fan	13	W10261523	Plate, Fan
2	W10308051	Box, Broil	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
3	W11111351	Rack, Oven (18 in)	8	4449154	Screw	15	9755543	Jack, Meat Probe
4	W10631506	Motor, Convection	9	7101P434-60	Screw			
5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake			
			11	W11033111	Nut, Locking			
			12	W10720084	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	W11035424	Wok, Round Bottom
		Backsplash
	W10285449	48-in With Shelf
	30-48KITRC	Gas Range Connector Kit
	W11239671	Lid, Stainless Steel Grill Cover
	4396923	Broiler Pan and Grid
	4396096RB	Griddle Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large