




24" INDUCTION COOKTOP

MODELS:

JIC4724HS0 (Stainless)

JIC4724HB0 (Floating Glass Black)

COOKTOP PARTS

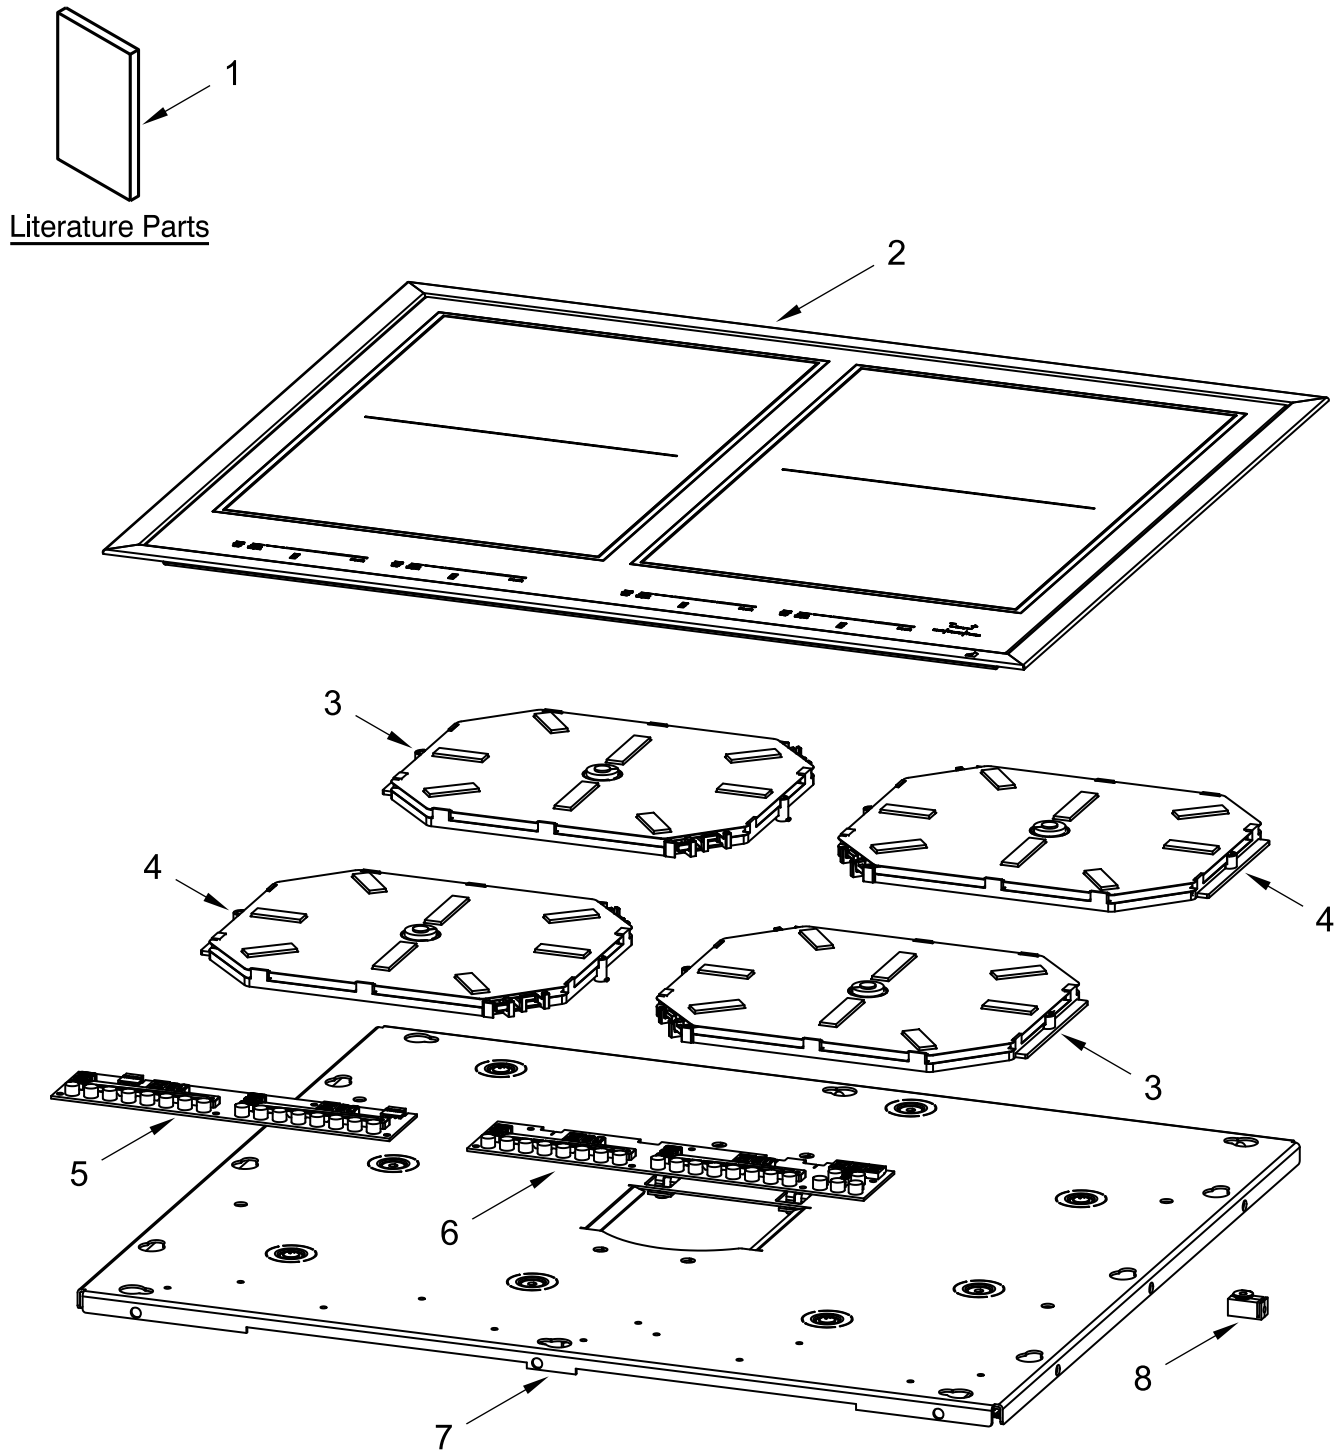


Literature Parts

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11195131	Element, Induction	7	W11332720	Plate, Generator
	W11251690	Installation Instructions			(Left Front, Right Rear)	8	W11195464	Isolator
	W11251689	Use and Care Guide	5	W11332719	Control, Electronic (Left)			
	W11251692	Tech Sheet	6	W11332714	Control, Electronic (Right)			
2		Cooktop, Glass						
	W11332690	Stainless (Includes Frame)						
	W11332727	Floating Glass Black						
3	W11195135	Element, Induction						
		(Left Rear, Right Front)						

BURNER BOX AND ELECTRICAL PARTS

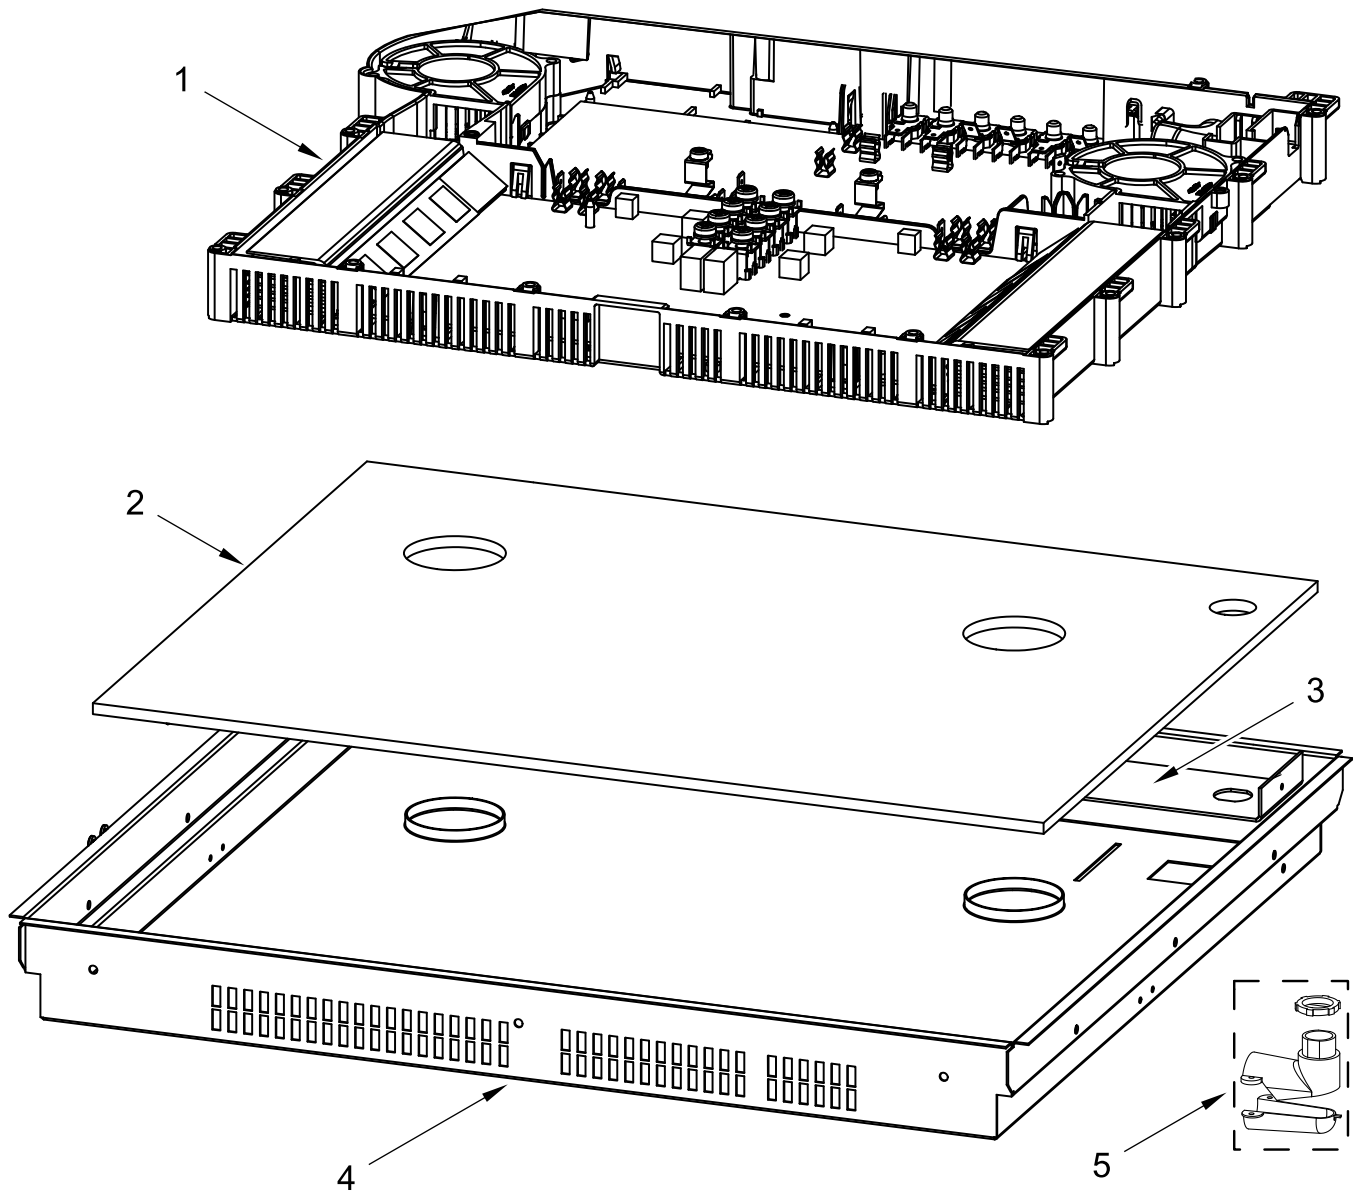

BURNER BOX AND ELECTRICAL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11332721	Board, Induction Power	5	W11093301	Connector, Conduit
2	W11332694	Insulation, Induction			MISCELLANEOUS PARTS
3	W11093293	Bracket, Conduit		W11332770	Harness, Main
4	W11332713	Box, Burner (Stainless)		W10355051	Cleaner, Cooktop
	W11332728	Box, Burner (Black)		W10391473	Pad, Cooktop Cleaning
				WA906B	Scraper, Cooktop
				W11035422	Griddle
				W11035423	Wok, Flat Bottom