




24" BUILT-IN ELECTRIC SINGLE OVEN WITH CONVECTION (NOIR)

MODELS:

JJW2424HM0 (Floating Glass Black)


OVEN PARTS

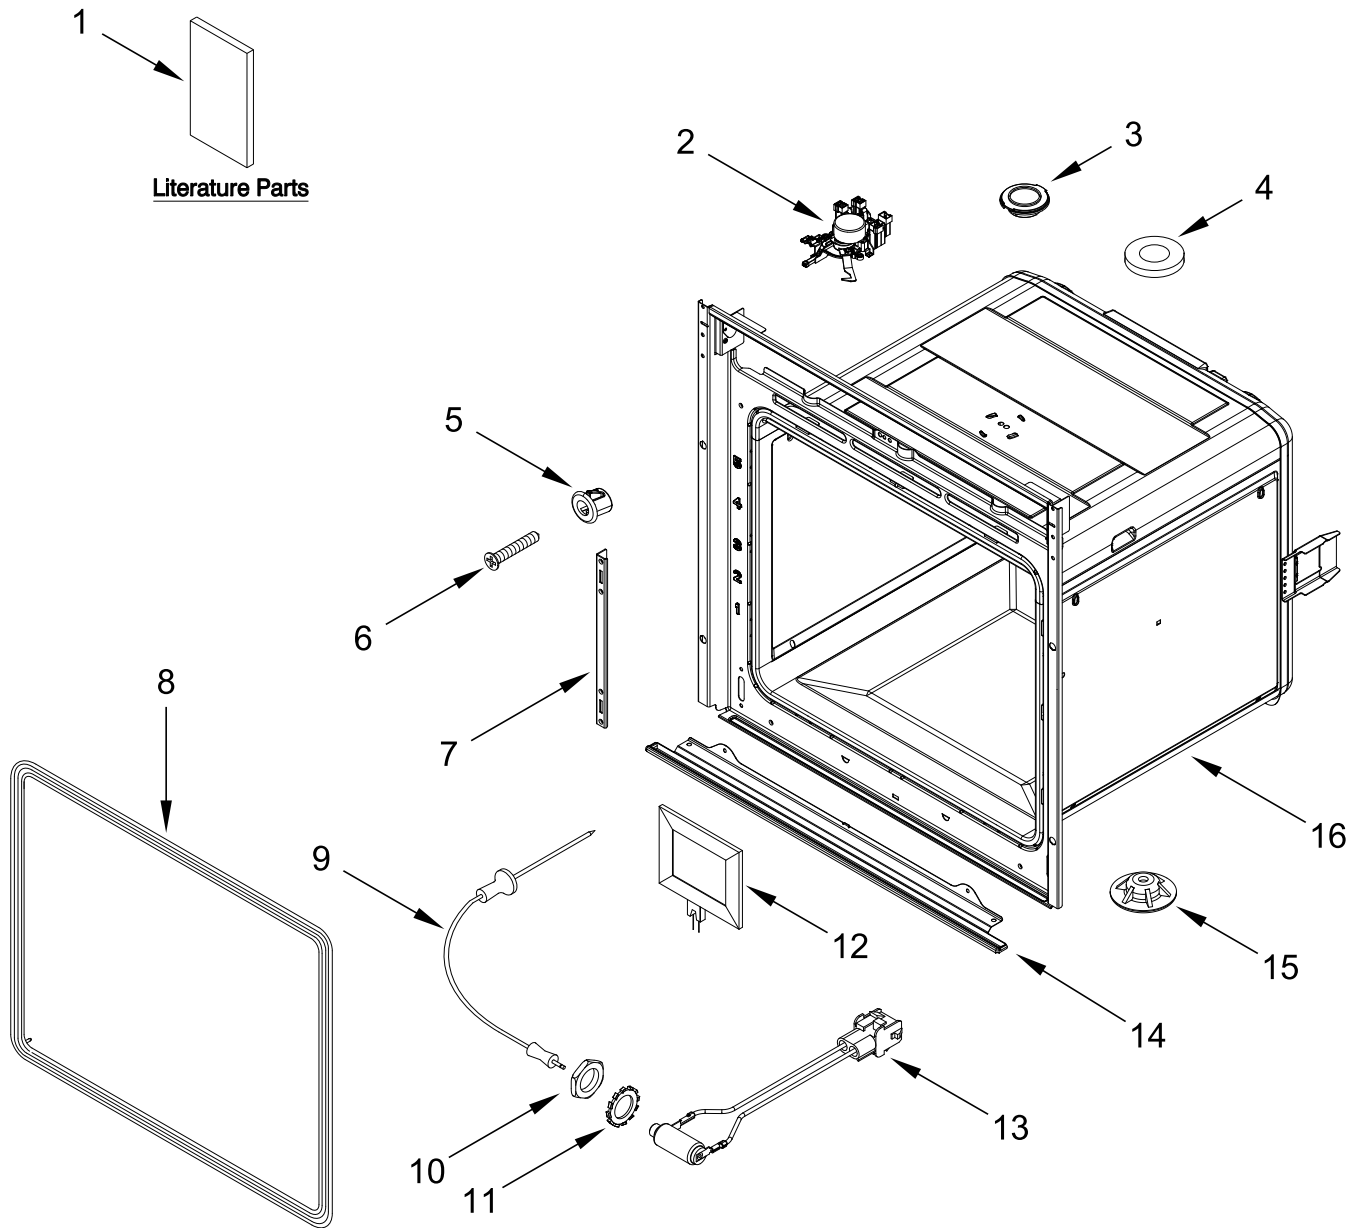

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W11509869	Receiver, Hinge	15	W10545973	Foot, Level Oven
	W11260094	Installation Instructions	8	W10518387	Gasket, Door	16		Liner, Oven (Not Serviceable)
	W11260125	Use and Care Guide	9	W11348089	Probe, Meat			FOLLOWING PARTS NOT ILLUSTRATED
	W11260148	Tech Sheet	10	W11348125	Nut, Meat Probe			
2	W11347847	Latch, Door	11	W11348127	Washer, Meat Probe			
3	W11509867	Cap	12	W11348087	Lamp, Halogen 25 Watt (with Gasket)	W11348047		Kit, Power Cord (No Plug)
4	8186903	Gasket, Top Panel	13	W11348099	Socket, Meat Probe with Harness			
5	W10578780	Bumper	14	W10517979	Trim, Lower			
6	W10646201	Kit, Adjustment Screw						


CONTROL PANEL PARTS

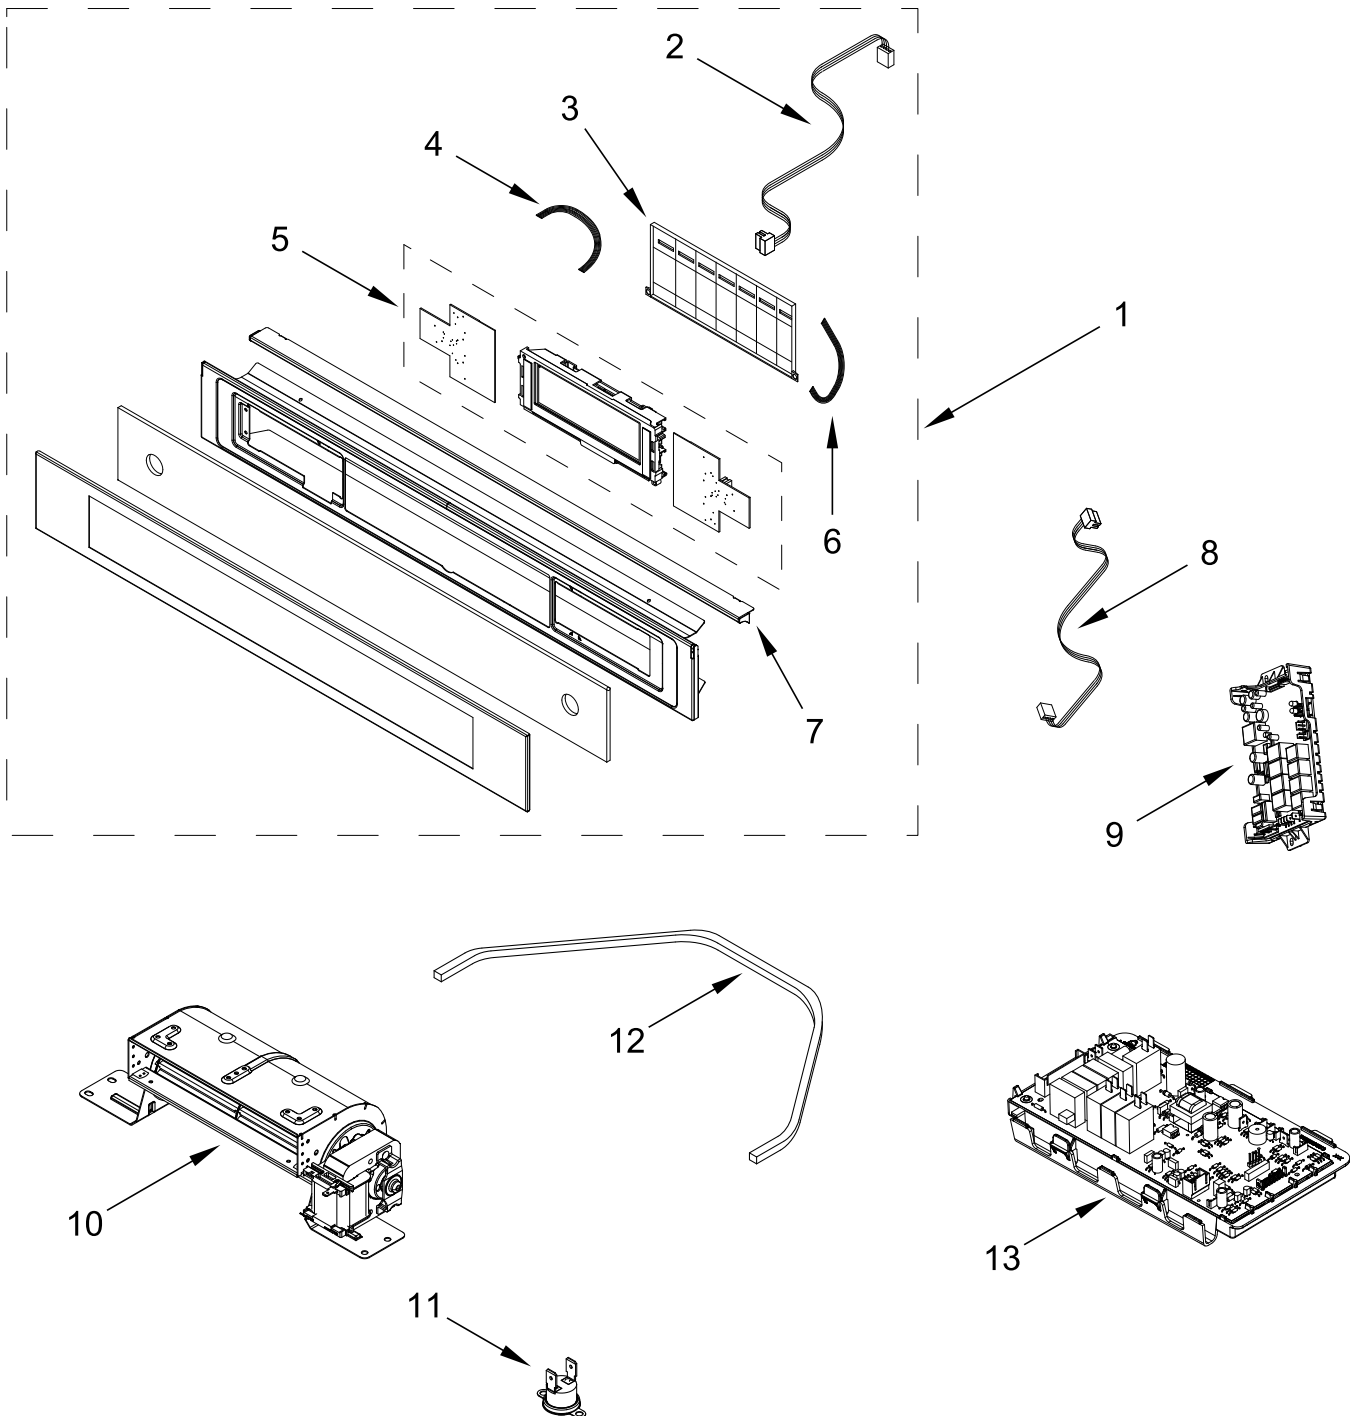

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11509872	Assembly, Control Panel	7	W11354842	Vent, Trim Control Panel	12	W10519009	Gasket, Blower Motor
2	W11348035	Harness, Touch Display	8	W11348046	Harness, Display to Power Unit	13	W11509873	Manager, Appliance
3	W11348132	Cover, Control	9	W11348128	Control, Electronic			
4	W11348036	Wiring, Right Control	10	W11347859	Blower, Cooling Fan			
5	W11509865	PCBA, User Interface	11	481228228314	Thermostat, 165 Celcius			
6	W11348033	Wiring, Left Control						


OVEN DOOR PARTS

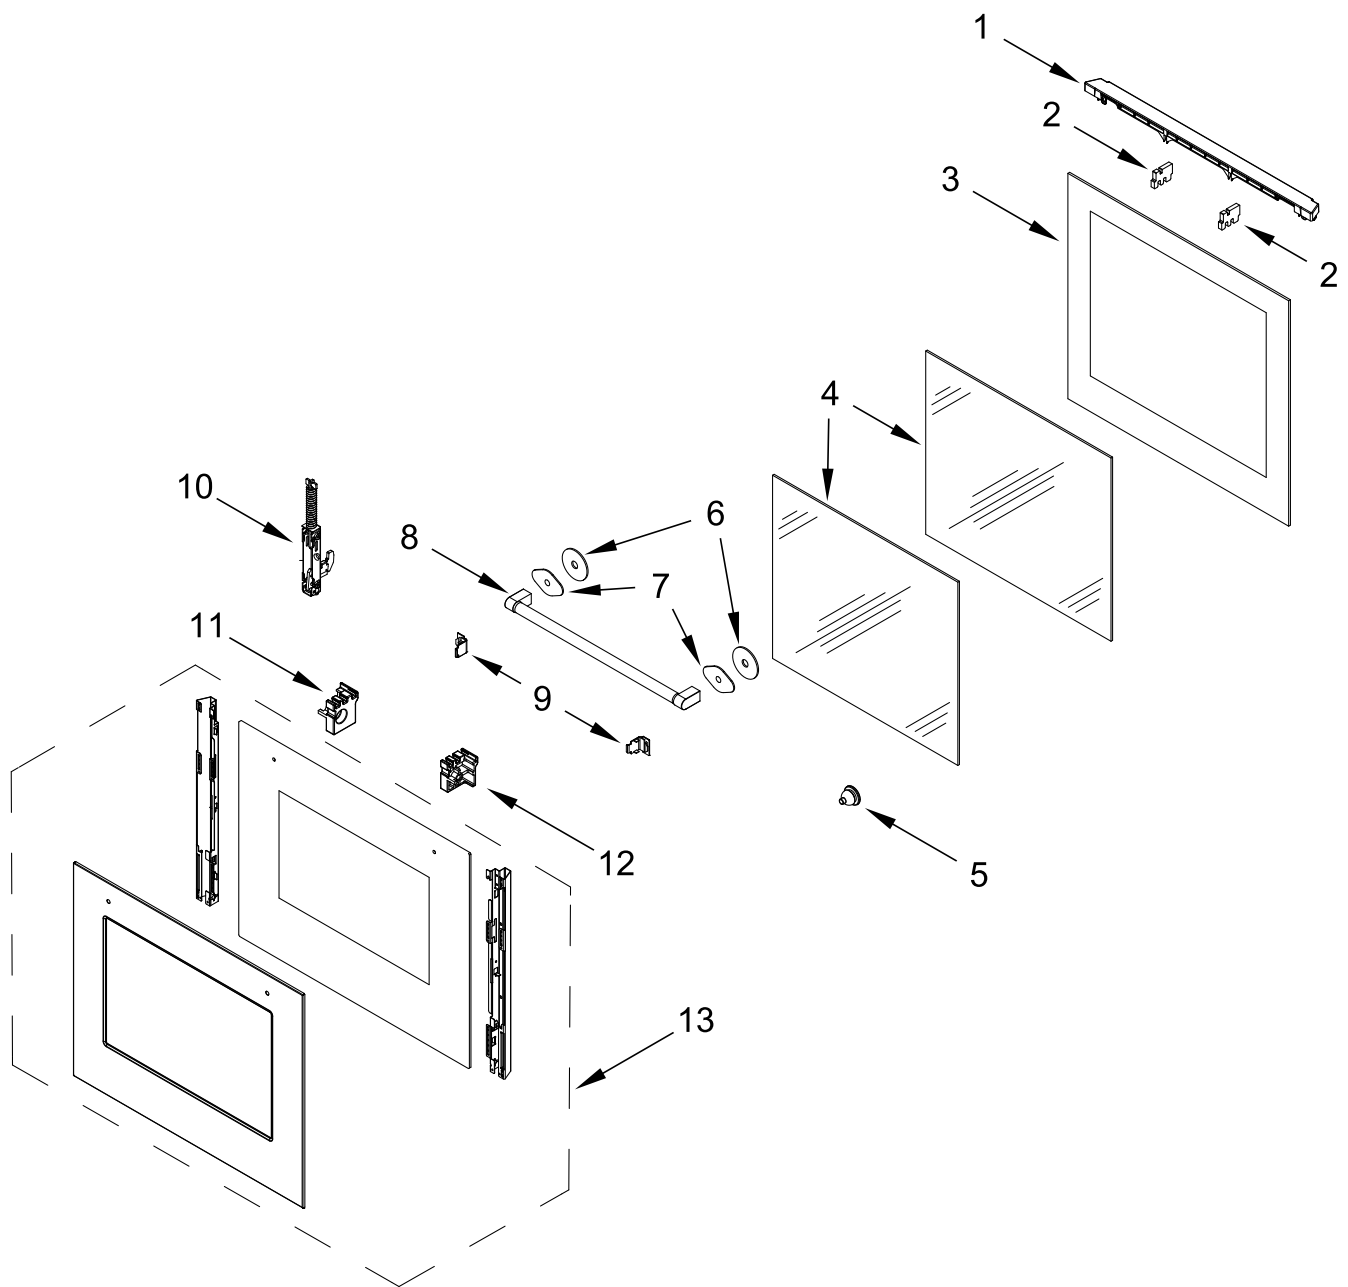

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10518369	Vent, Door Trim Top	6	W10410709	Spacer, Door Handle	12	W10518384	Support, Oven Door Glass
2	W10518307	Spacer, Door Trim Top	7	W10260705	Spacer, Rubber	13	W11509871	Door, Oven Outer Assembly
3	480121101609	Glass, Door Inner Assembly	8	W11509870	Handle, Door			
4	W10518376	Glass, Door Inner	9	481010387617	Support, Oven Door Glass			
5	W10519004	Spacer, Oven Door Glass	10	W11509868	Hinges, Door			
			11	W11509863	Support, Oven Glass			

INTERNAL OVEN PARTS

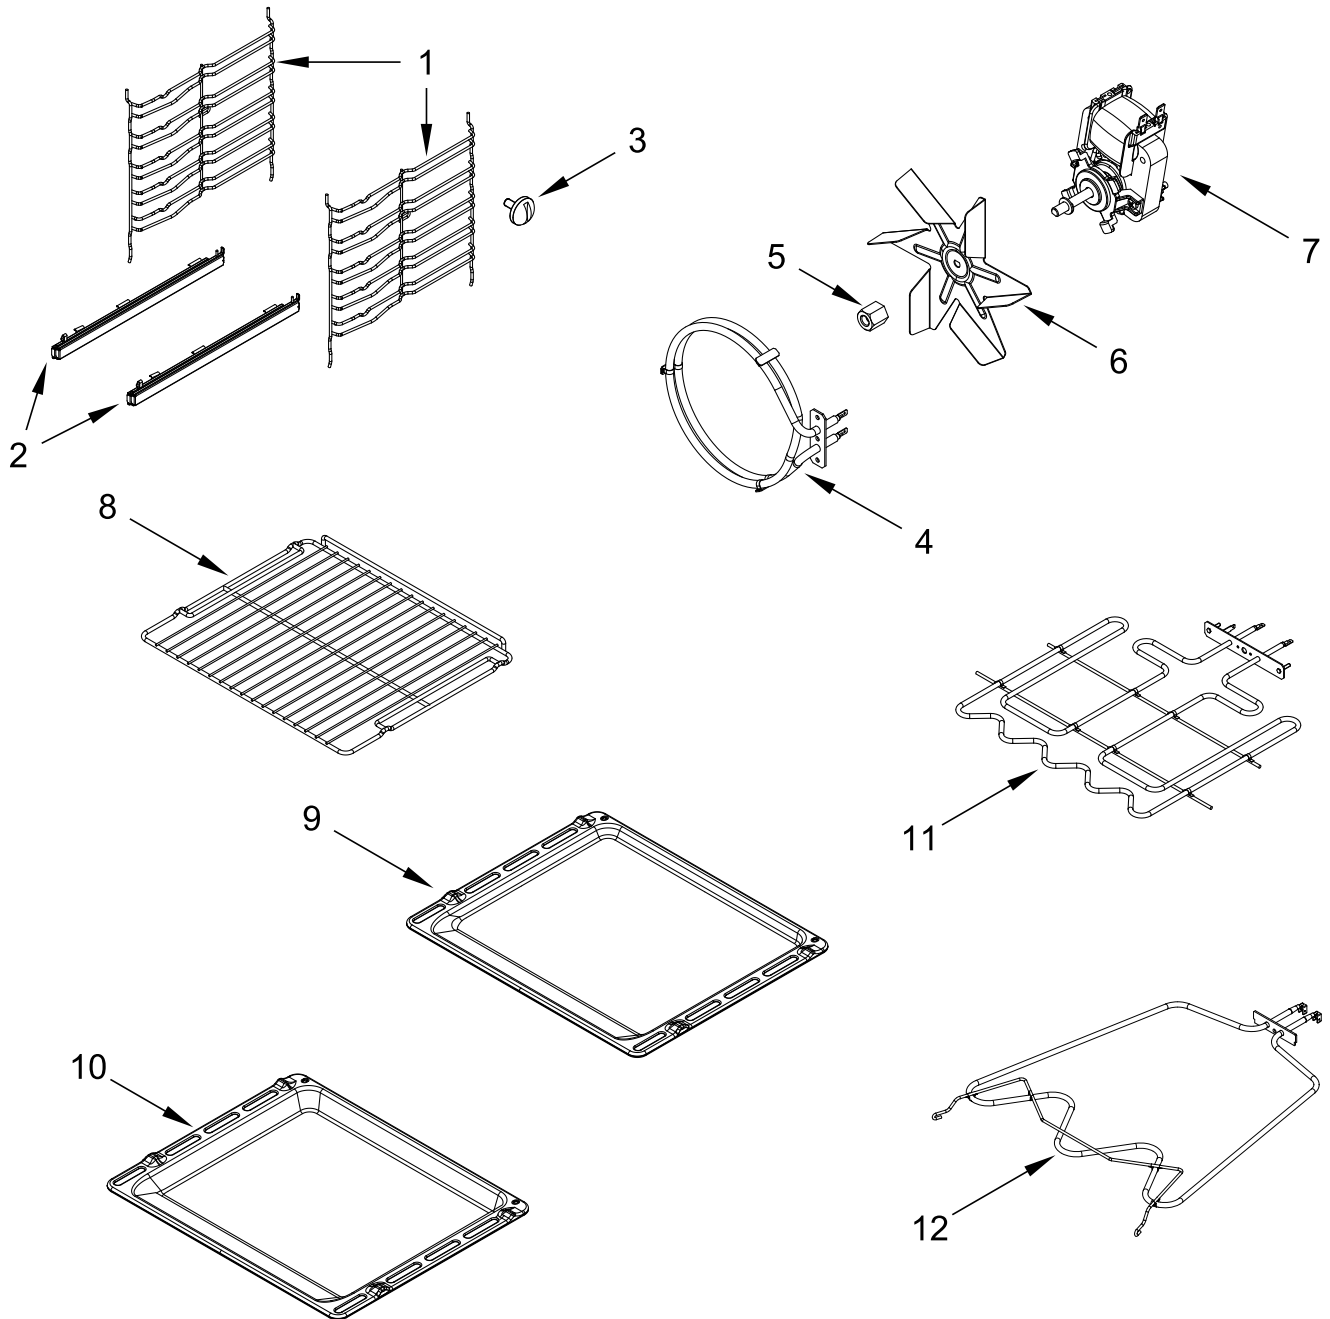

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10762741	Grid, Oven Rack	3	W10519022	Screw, Grid	8	W10635612	Rack, Oven
2	W11347856	Kit, Sliding Rail (Partial Extension)	4	W11347860	Element, Convection	9	W11347854	Tray, Baking
	W10640995	Kit, Sliding Rail (Full Extension)	5	W10901439	Nut, Fan	10	W11347855	Tray, Deep
			6	W10901438	Blade, Fan	11	W11347861	Element, Upper Grill
			7	W11347858	Motor, Convection Fan	12	W11348032	Element, Lower