




24" BUILT-IN CONVECTION MICROWAVE RISE

MODELS:

JMC6224HL0 (Stainless)


CONTROL PANEL PARTS

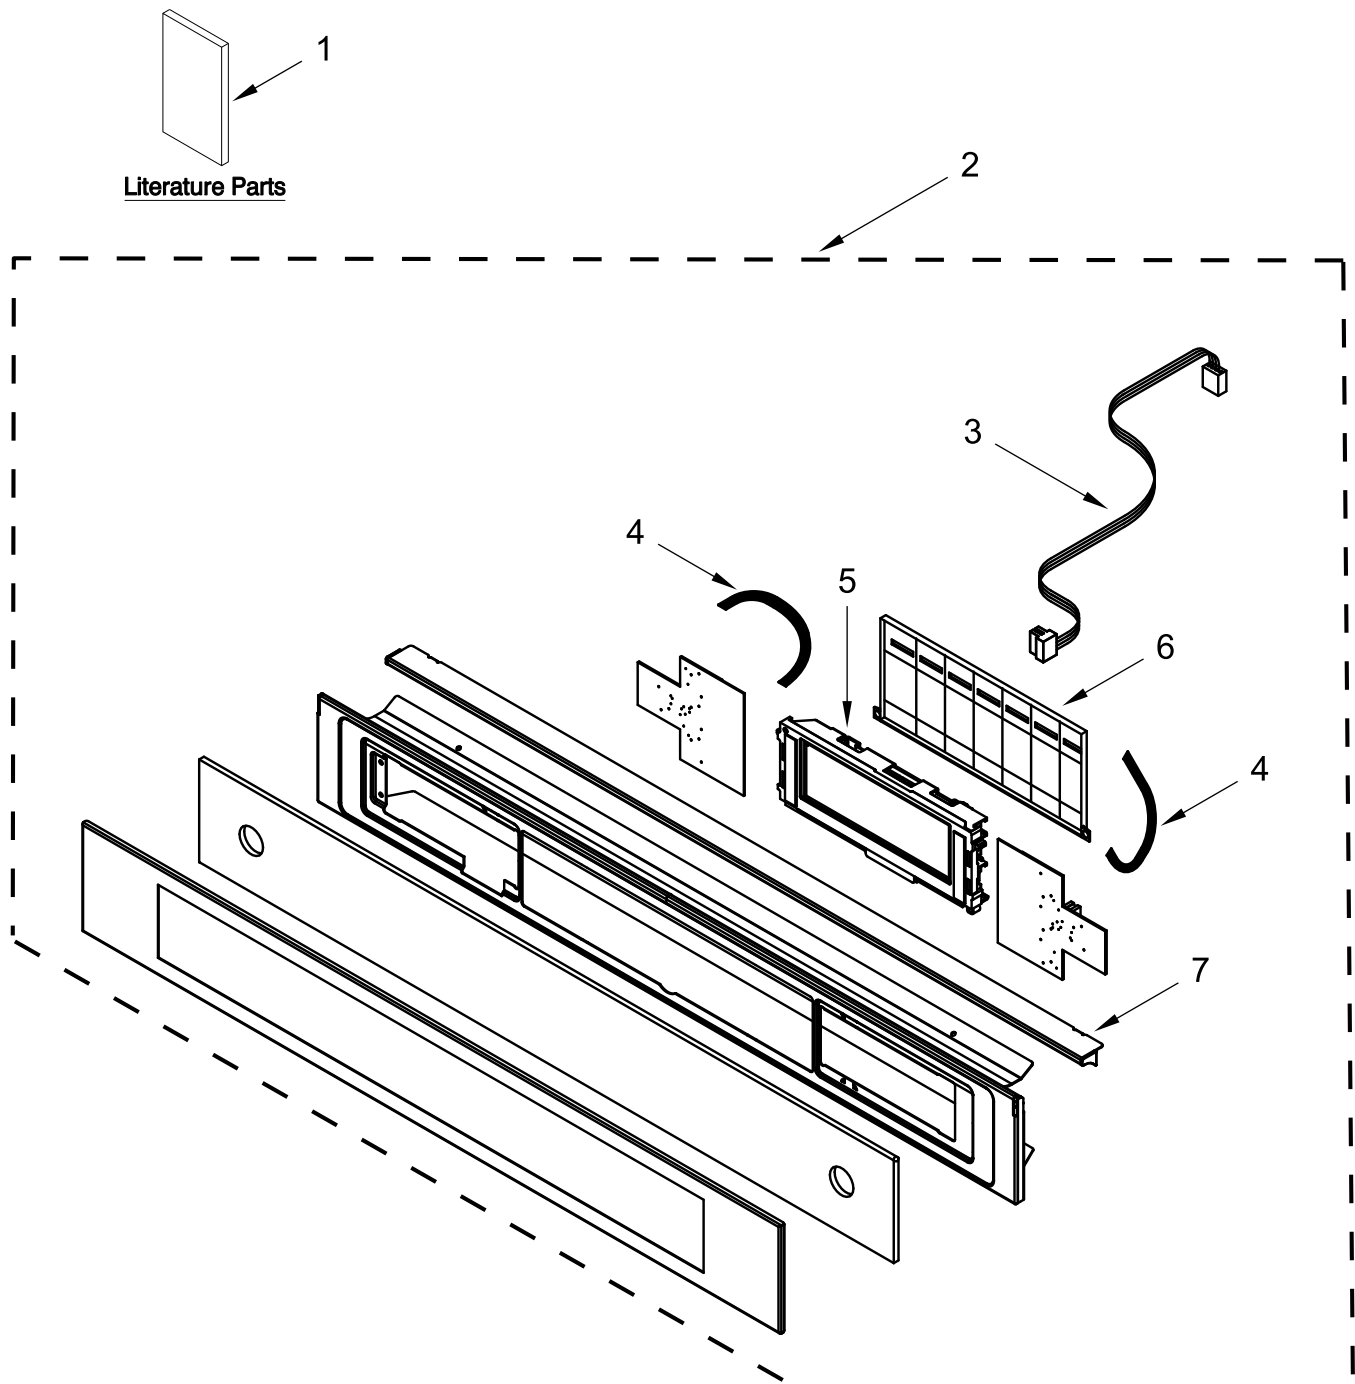

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11266455	Wiring, Display Board	6	W11348132	Cover, Control
	W11322487	Installation Instructions	4	W11348033	Wiring, Side Control	7	W11353026	Vent, Trim Control Panel
	W11320668	Owner's Manual	5	W11510710	Interface, User			
	W11330679	Tech Sheet						
2	W11257567	Assembly, Control Panel						


MICROWAVE DOOR PARTS

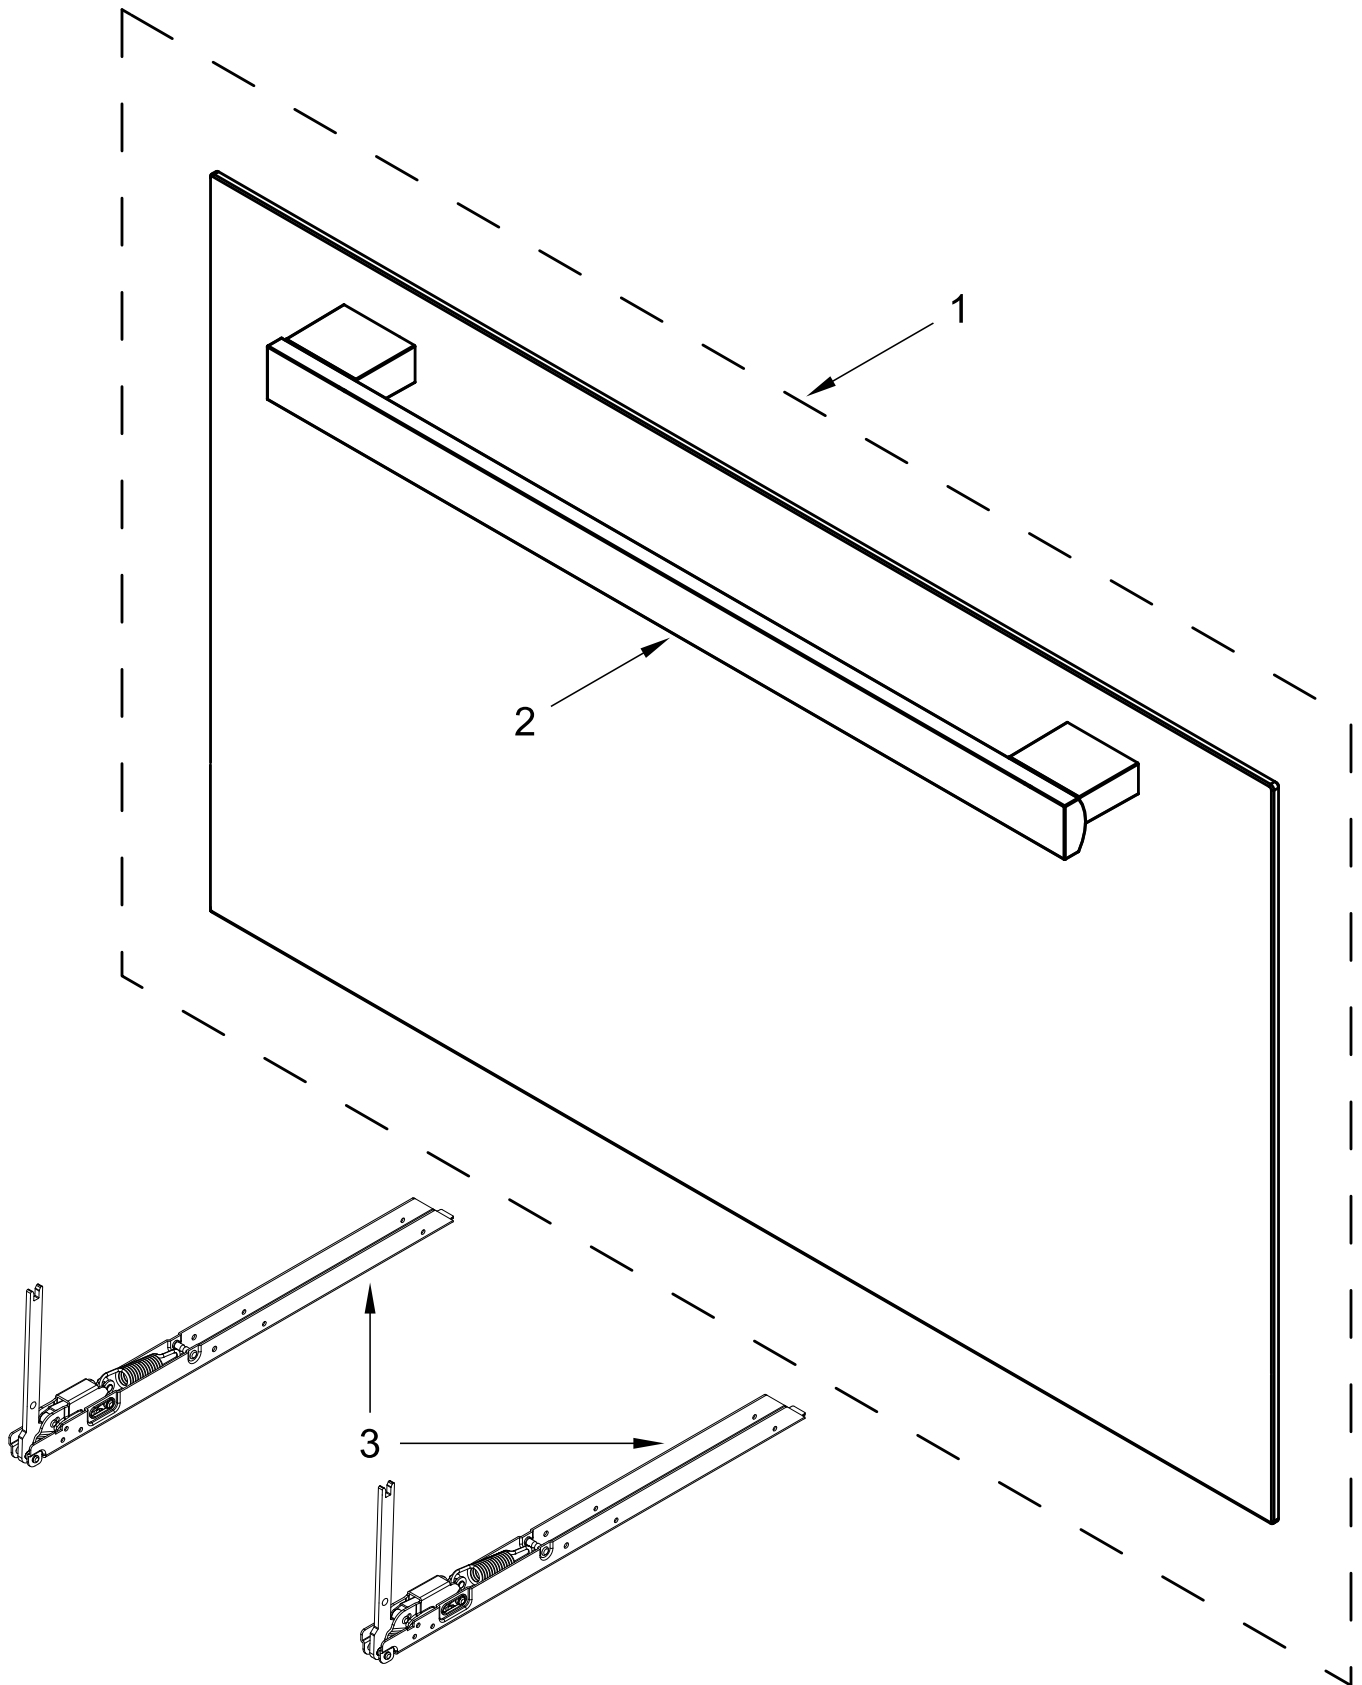

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11268964	Assembly, Complete Door
2	W11353331	Handle, Door
3	W11510570	Hinge, Door


CABINET AND STIRRER PARTS

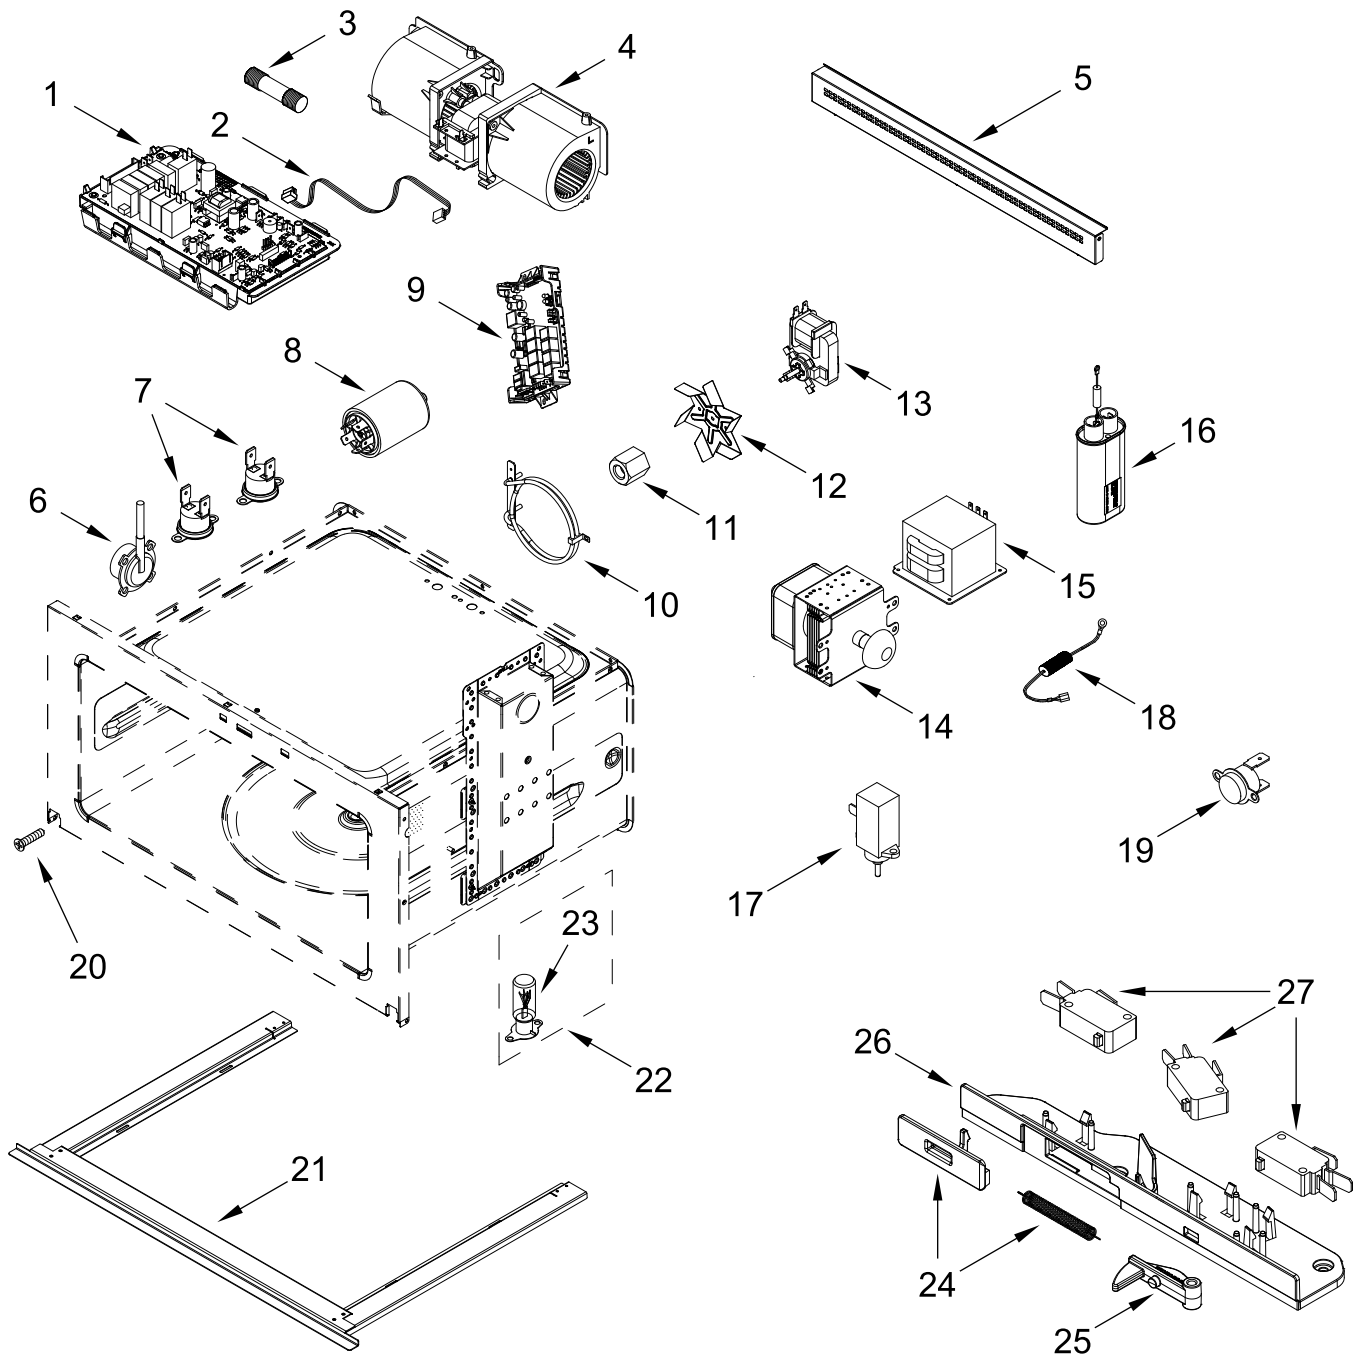

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11510569	Manager, Appliance	13	W11510587	Motor, Convection Fan	23	W11243743	Bulb, Halogen
2	W10904797	Harness, Control	14	W10567314	Magnetron	24	W11365766	Switch, Door Lock
3	W11510694	Fuse	15	W11190333	Transformer, High Voltage	25	W10506969	Lever, Door Lock
4	W11190310	Motor, Fan	16	W10561770	Capacitor, High Voltage	26	W11510575	Housing, Door Lock
5	W11180369	Trim, Front	17	W11510700	Thermoactuator	27	W11511177	Microswitch
6	W10460457	Sensor, Humidity	18	W11510577	Diode, High Voltage			FOLLOWING PARTS NOT ILLUSTRATED
7	W10666297	Thermostat	19	W11510588	Thermostat		W11374774	Cord, Power
8	W11510580	Filter, Noise	20	W11511182	Kit, Mounting		W11510566	Harness, Main
9	W11311677	Board, Relay	21	W10807426	Trim, Bottom		W11300447	Trim Kit, Rise
10	W11304778	Element, Convection	22	W11243744	Assembly, Halogen Lamp			
11	W11101380	Nut, Convection Fan						
12	W11453899	Blade, Fan						

INTERNAL MICROWAVE PARTS

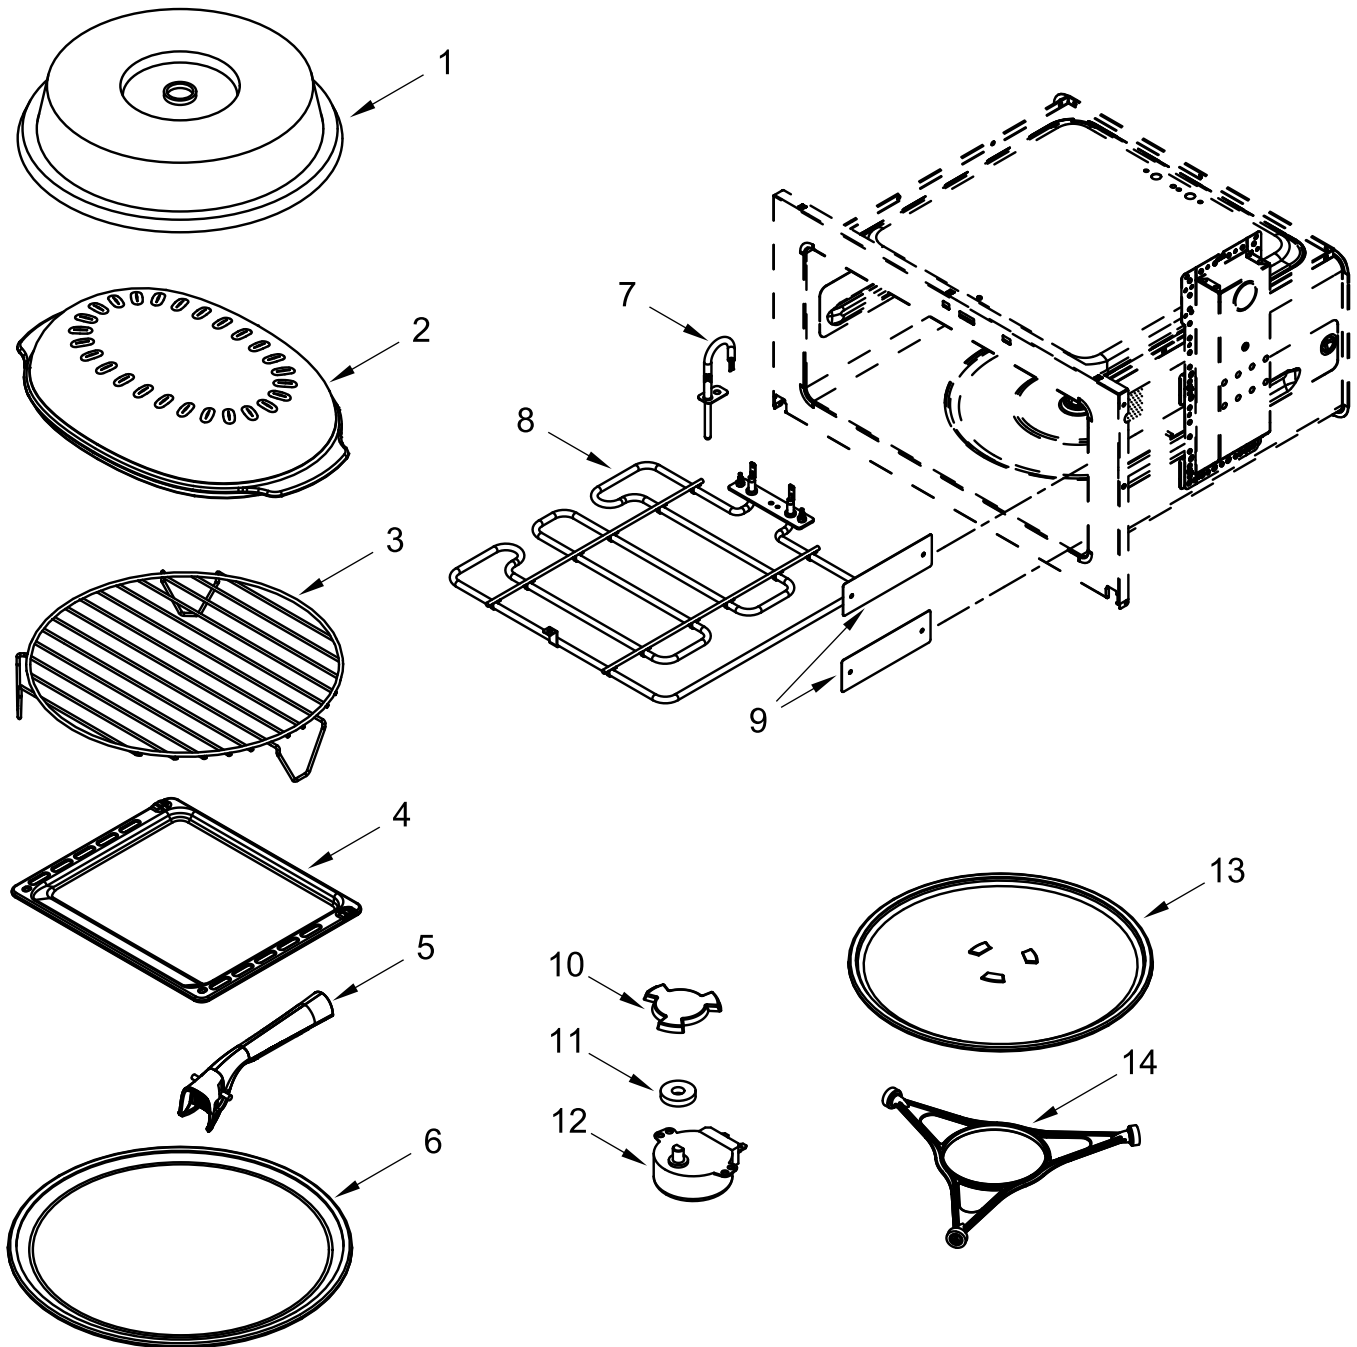

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11510584	Cover, Plate	7	W11511178	Sensor, Temperature	13	W11340343	Turntable
2	W11510586	Steamer	8	W11286815	Element, Grill	14	W10538481	Ring, Turntable
3	W11026447	Rack, Baking	9	W11511179	Cover, Waveguide			
4	W10769624	Tray, Baking	10	W11510706	Driver, Turntable			
5	W11510573	Handle, Crisp Plate	11	W10526670	Ring, Rubber			
6	W11510696	Plate, Crisp	12	W11510707	Motor, Turntable			