




1.2 CUBIC FOOT MICROWAVE DRAWER

MODELS:

JMDFS30HM02 (Floating Glass Black)


DRAWER PARTS

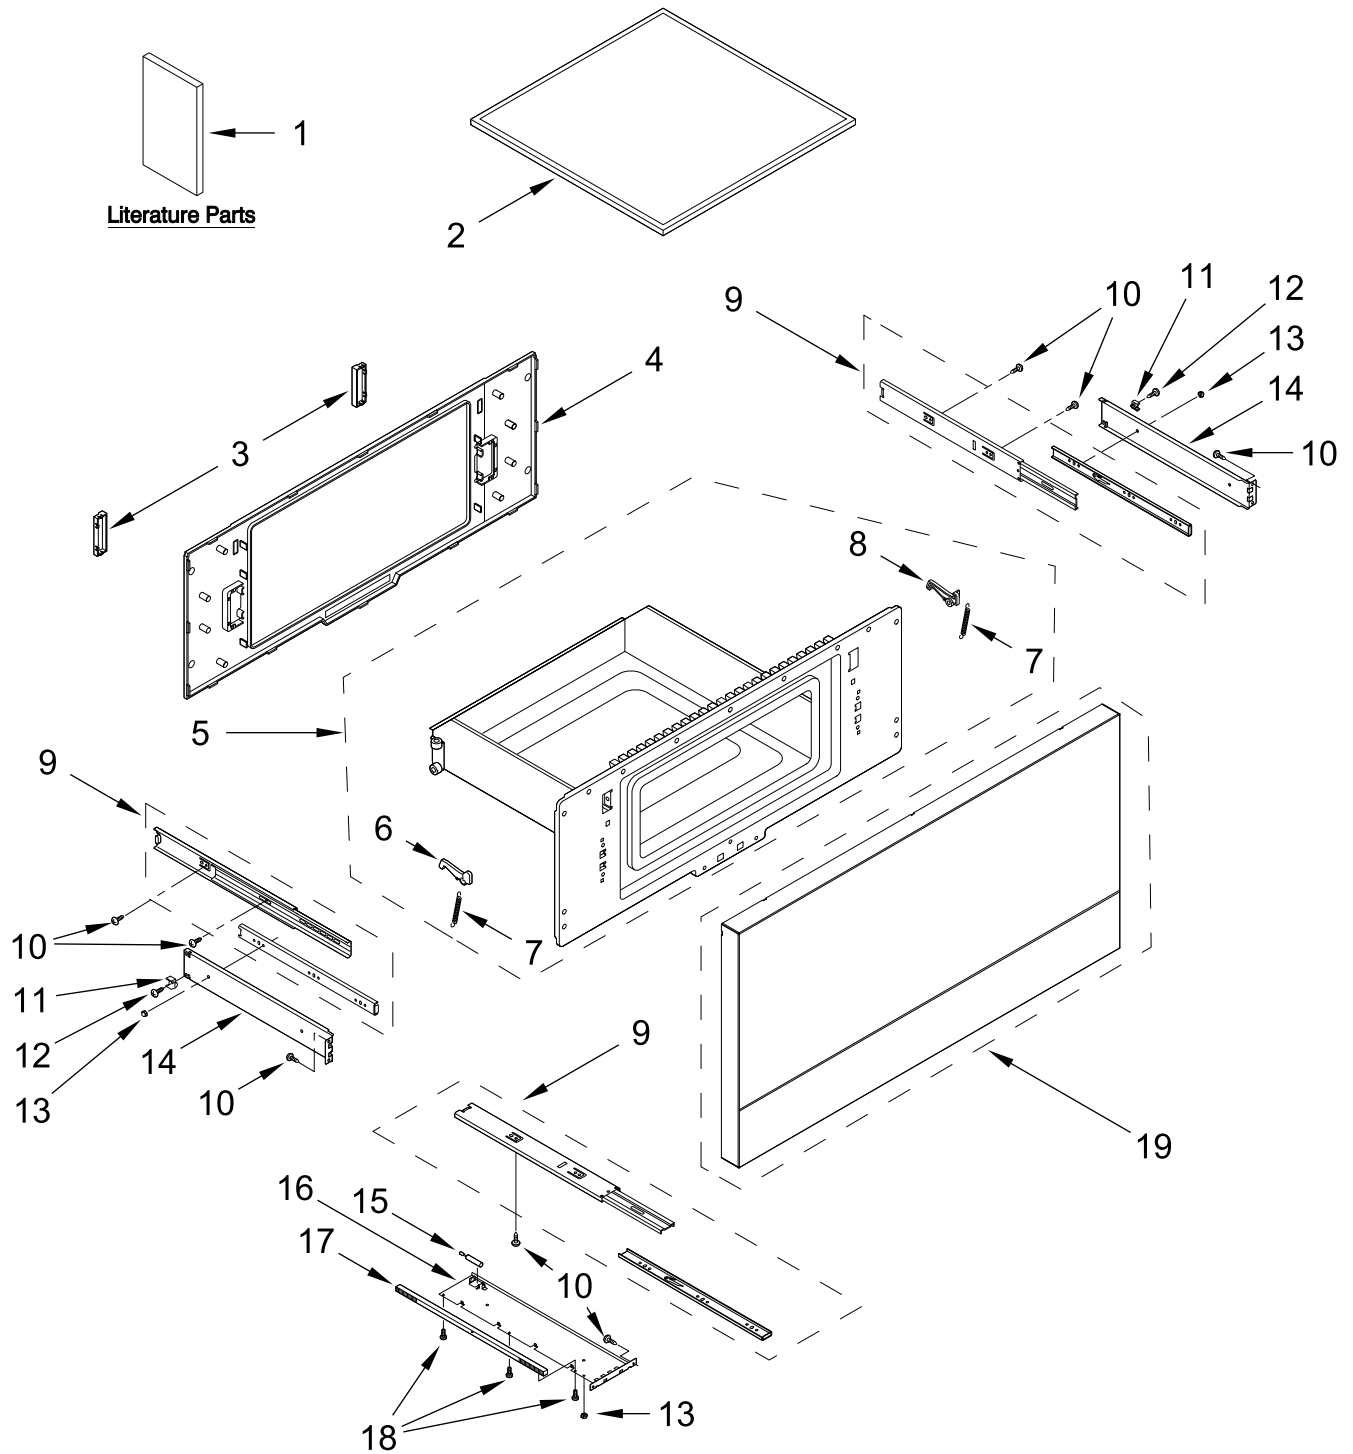

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W11646237	Spring, Latch	18	W10278647	Screw
	W11257634	Installation Instructions	8	W11646234	Hook, Right Latch	19	W11331004	Panel, Door
	W11257722	Use and Care Guide	9	W11201775	Slide, Drawer			FOLLOWING PARTS NOT ILLUSTRATED
	W11109162	Cooking Guide (English)	10	8205835	Screw		W11199540	Cord, Power
2	W11201328	Tray, Oven	11	W11199897	Stopper, Door		W11362536	Harness, Main
3	W11201390	Cover, Support	12	W10278632	Screw		W11315605	Fuse (20A)
4	W11315620	Cover, Choke	13	W10278889	Nut			
5	W11315618	Assembly, Drawer	14	W11315617	Support, Side			
6	W11646236	Hook, Left Latch	15	W11201804	Piston, Door Stop			
			16	W11201393	Support, Bottom			
			17	W11201777	Gear, Drawer			


CONTROL PANEL PARTS

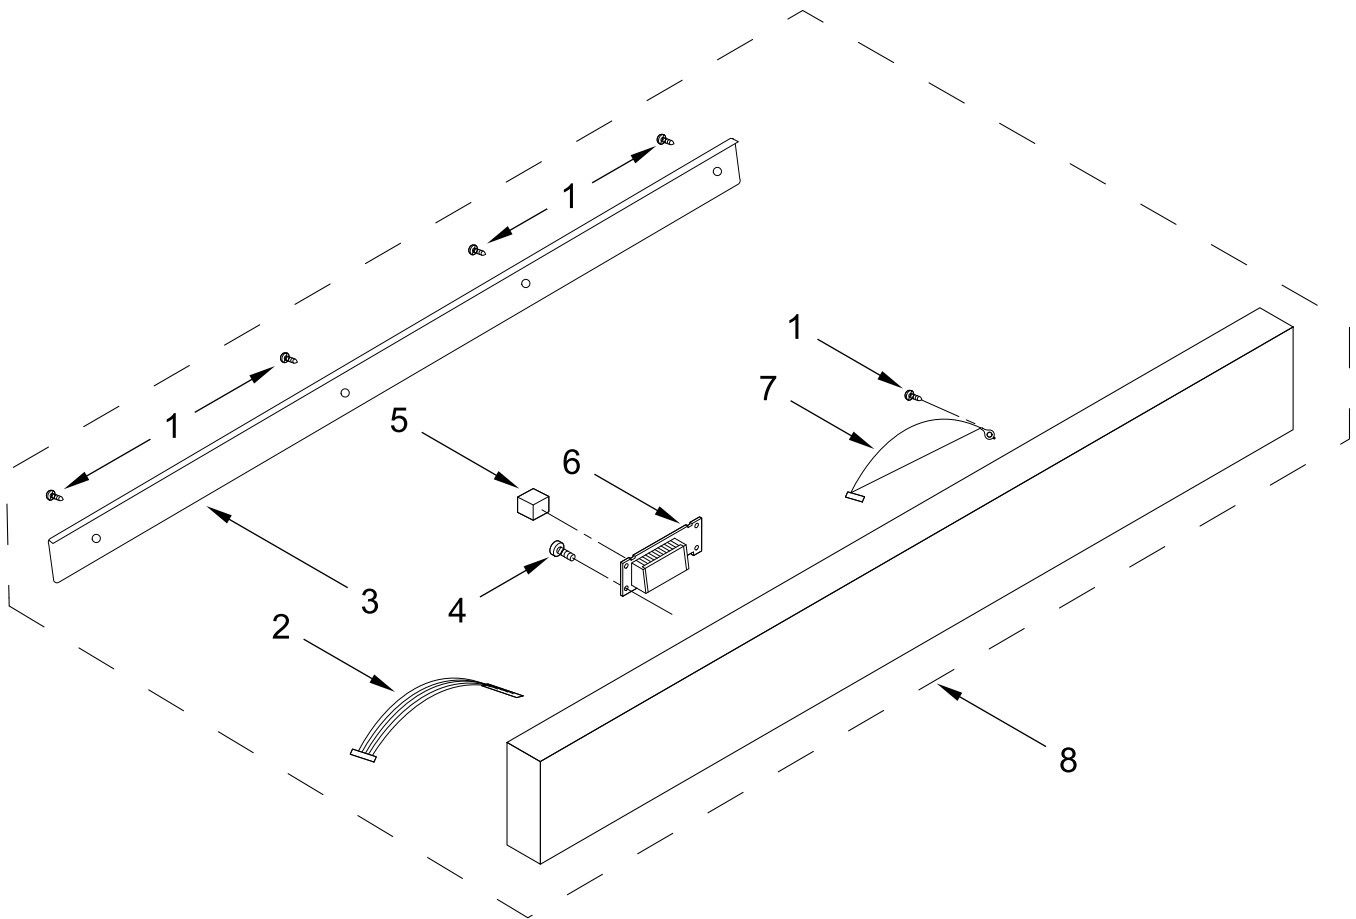

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8205835	Screw	3	W11199889	Bracket, Panel	6	W11330996	Control, Electronic
2	W11199895	Harness, Touch Control	4	8185369	Screw	7	W11199896	Wire, Ground
			5	W11199894	Cushion, Control	8	W11331000	Panel, Control


OVEN CAVITY PARTS

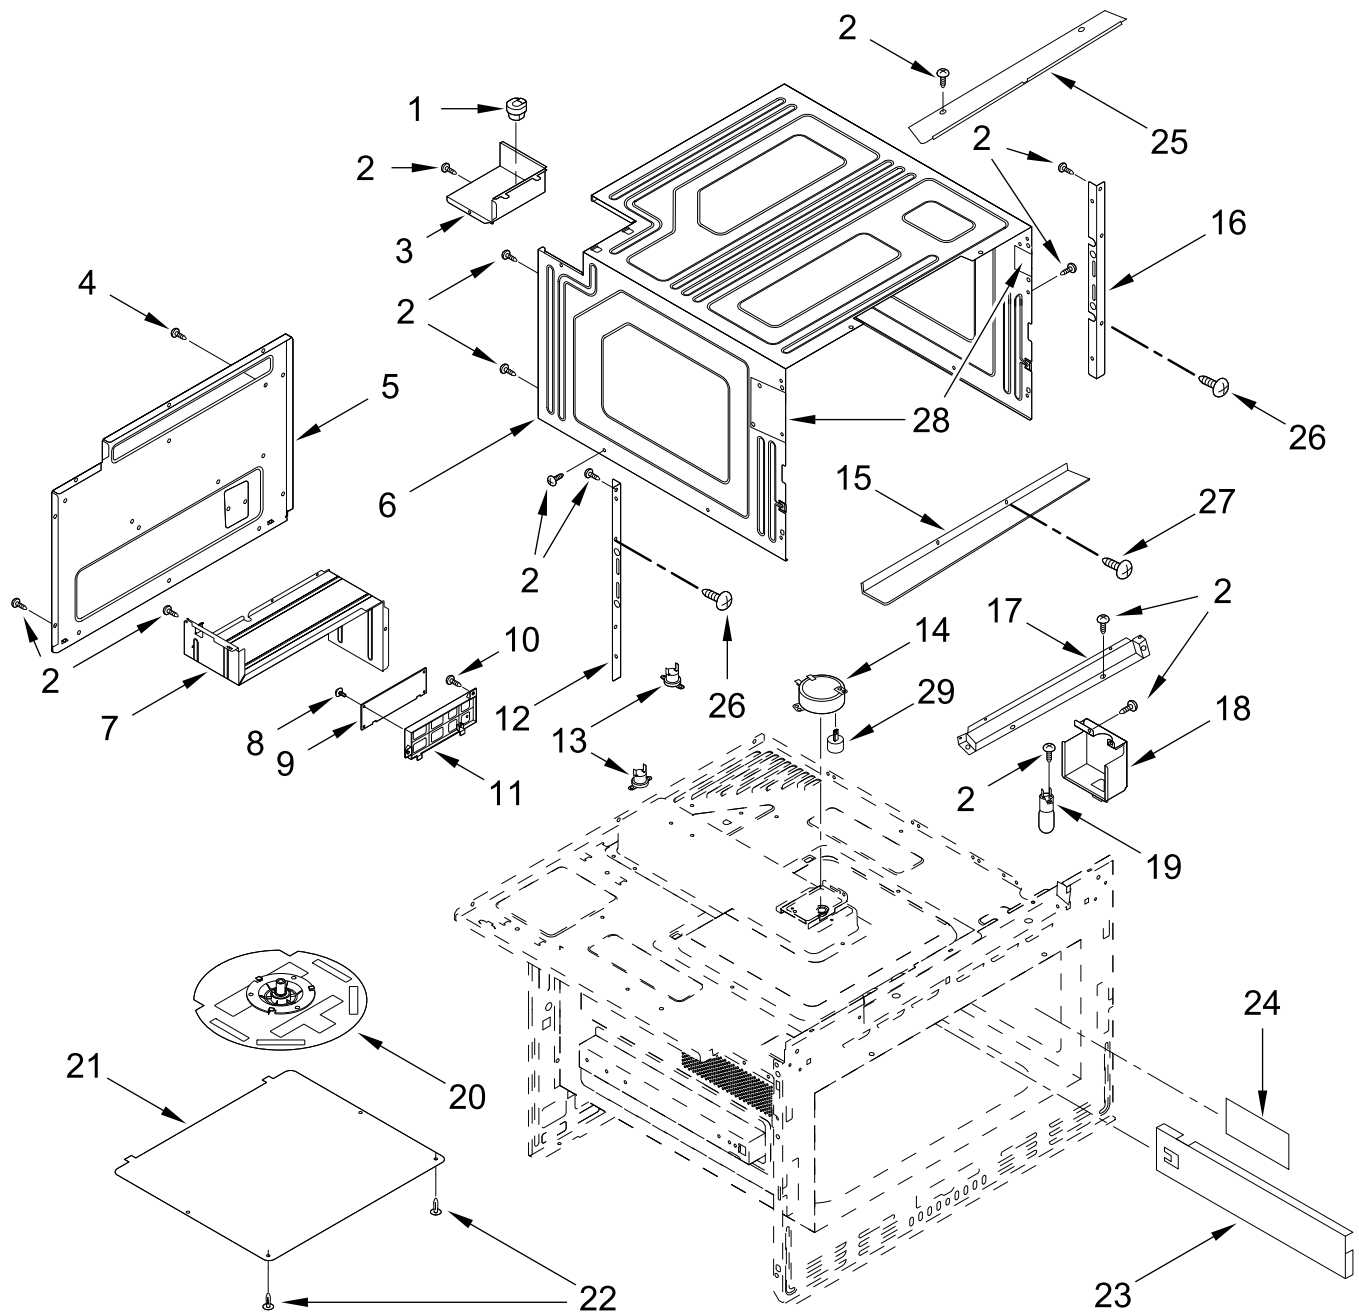

OVEN CAVITY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11199864	Bushing, Power Cord	12	W11199827	Bracket, Left	23	W11201857	Panel, Bottom Partition
2	W10278632	Screw	13	W11199547	Cut-Out, Thermal	24	W11201855	Glass, Lamp
3	W11199863	Bracket, Power Cord	14	W11362534	Motor, Stirrer	25	W11209962	Cover, Faceplate
4	W10278891	Screw	15	W11199859	Deflector	26	W11251704	Screw, Mounting (Wood)
5	W11201389	Cover, Rear	16	W11199828	Bracket, Right	27	W11251705	Screw, Deflector
6	W11199812	Case, Outer	17	W11201787	Bracket, Control Panel	28	W11199861	Cover, Latch
7	W11201800	Panel, Partition	18	W11201790	Cover, Lamp	29	W11362542	Shaft, Stirrer Motor
8	8185369	Screw	19	W10278184	Assembly, Lamp			
9	W11199539	Relay, Power	20	W11362539	Blade, Stirrer			
10	8205835	Screw	21	W11201789	Cover, Stirrer			
11	W11201748	Holder, Relay	22	W11362541	Clip, Cover			

SWITCH PARTS

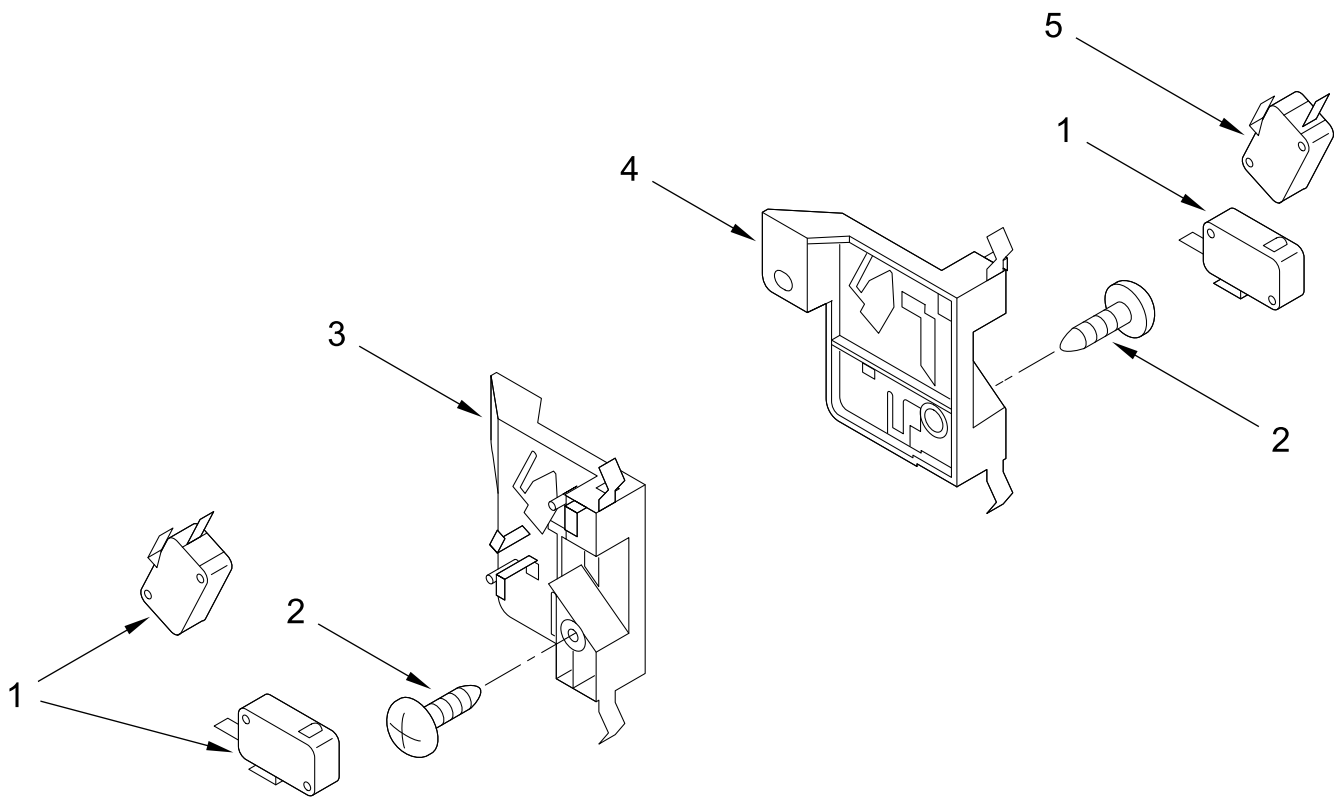


SWITCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11199805	Microswitch
2	4174784	Screw
3	W11201860	Latch, Door (Left)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W11201858	Latch, Door (Right)
5	W11305909	Switch, Monitor


INTERIOR PARTS

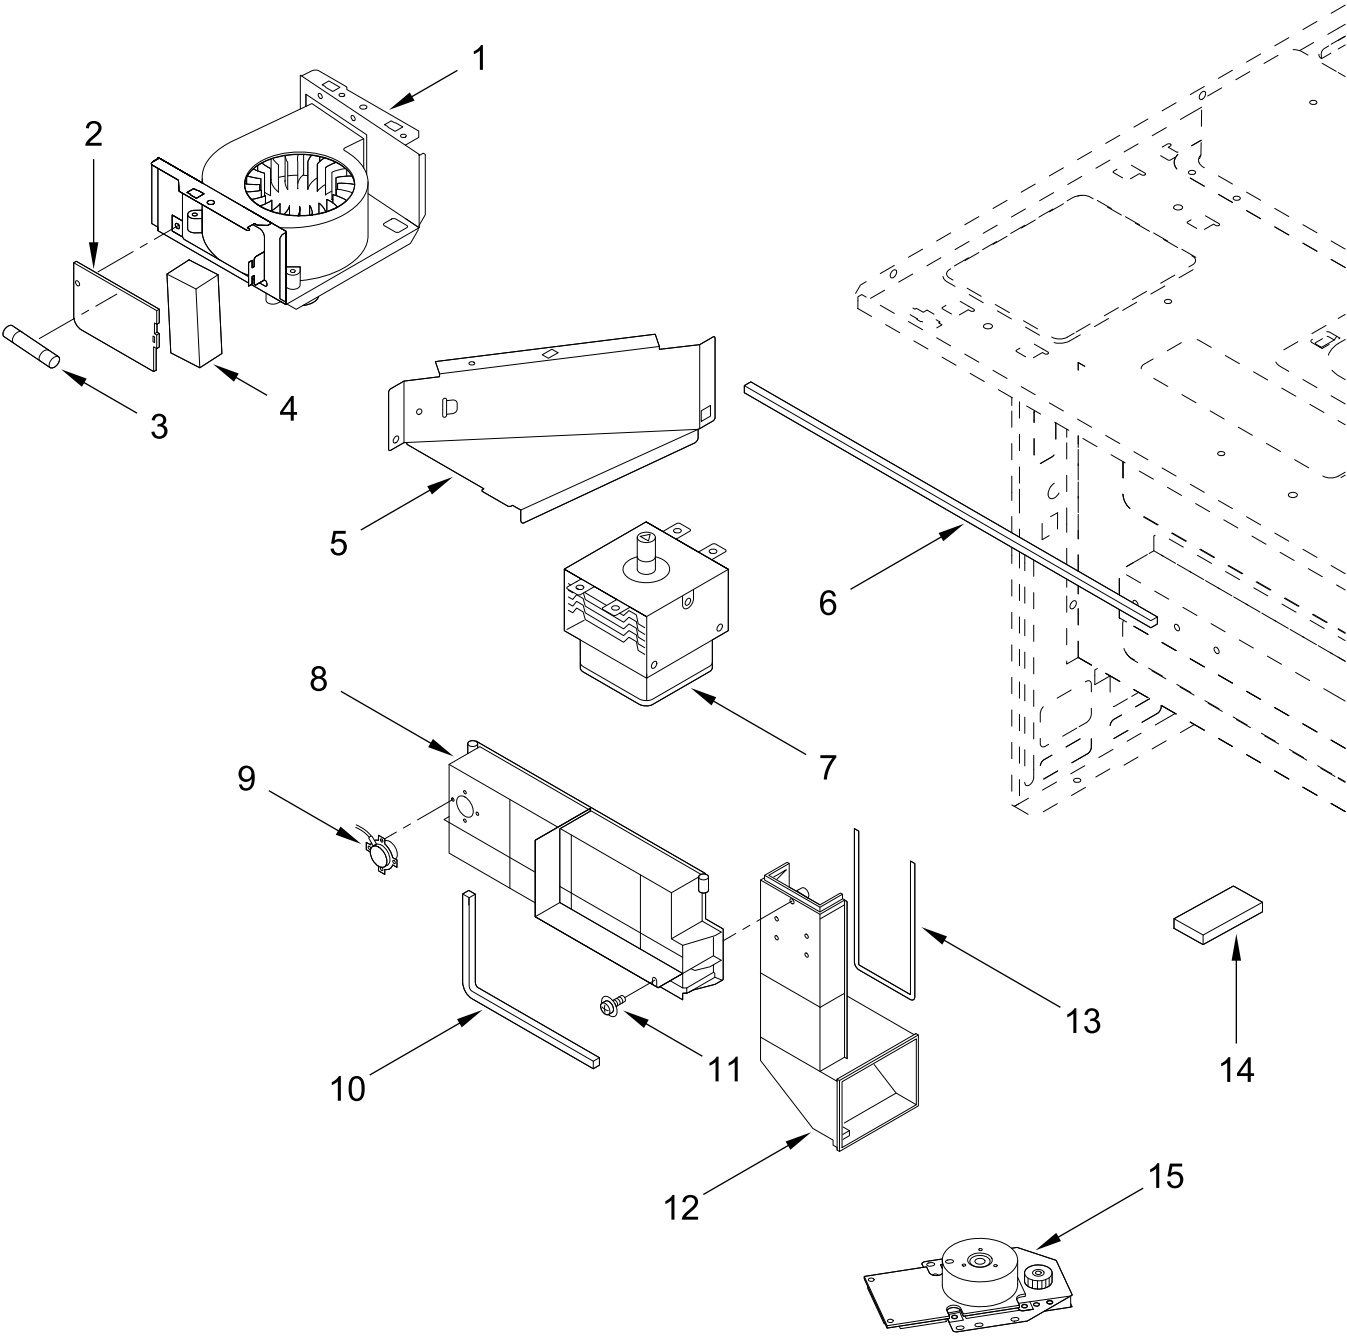

INTERIOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11362533	Motor, Fan	6	W11201793	Cushion, Inlet	12	W11201854	Duct, Exhaust
2	W11199545	Filter, Noise	7	W11209949	Magnetron	13	W11201796	Cushion, Exhaust Duct
3	W11305909	Switch, Monitor	8	W11201852	Duct, Sensor	14	W11201802	Cushion, Air Flow
4	W11201861	Cushion, Fan Motor Support	9	W10278023	Assembly, Sensor	15	W11199810	Assembly, Drawer Gear
5	W11331002	Duct, Magnetron	10	W11201803	Cushion, Duct			
			11	W10278632	Screw			

BASE PLATE PARTS

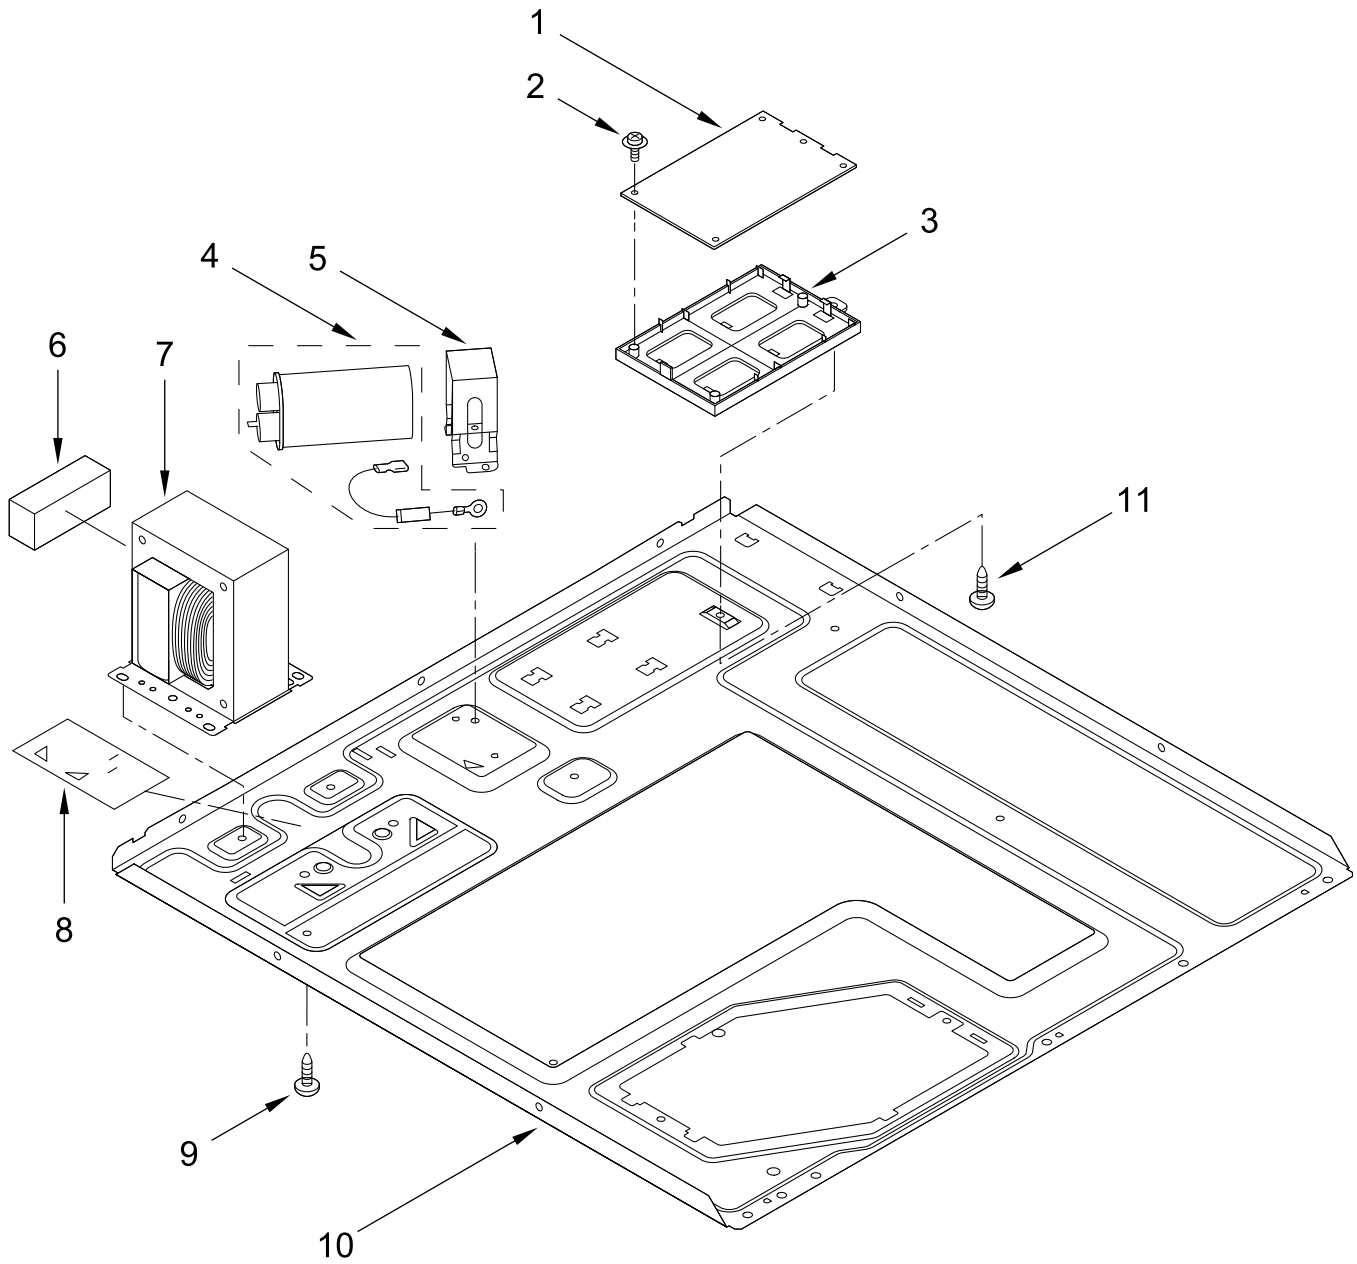

BASE PLATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11199538	Supply. Power	5	W11201396	Bracket, Capacitor	8	W11202128	Cover, Waveguide
2	8185369	Screw	6	W11201794	Cushion, Transformer	9	W10278632	Screw
3	W11201745	Holder, Control	7	W11199548	Transformer, High Voltage	10	W11201391	Plate, Base
4	W11362530	Capacitor, High Voltage				11	8205835	Screw