

KJ15041123/KJ15041523  
**KAMADOJOE®**  
**Konnected Joe™**  
**Lid Switch**




**CAUTION - SAFETY PRECAUTIONS - READ BEFORE USE**




- Make sure your grill has fully cooled before handling to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.
- Disconnect the power supply from the grill before handling.




Unplug the lid switch from the rear module.

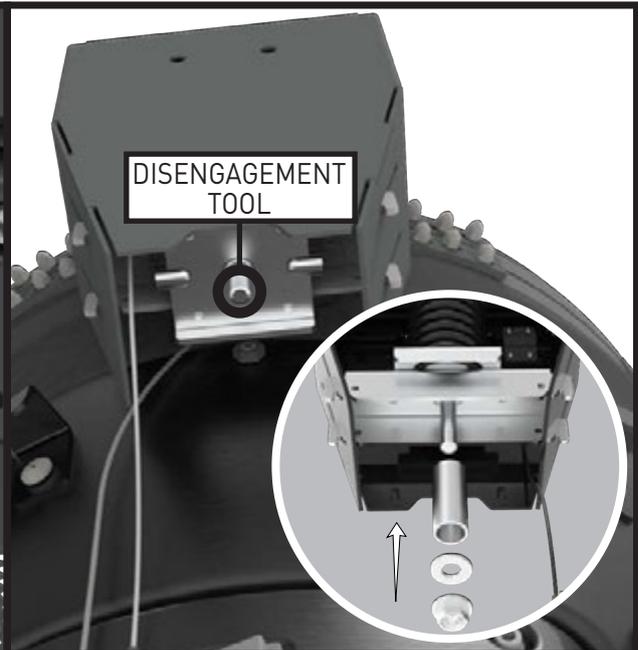


Install the disengagement tool.

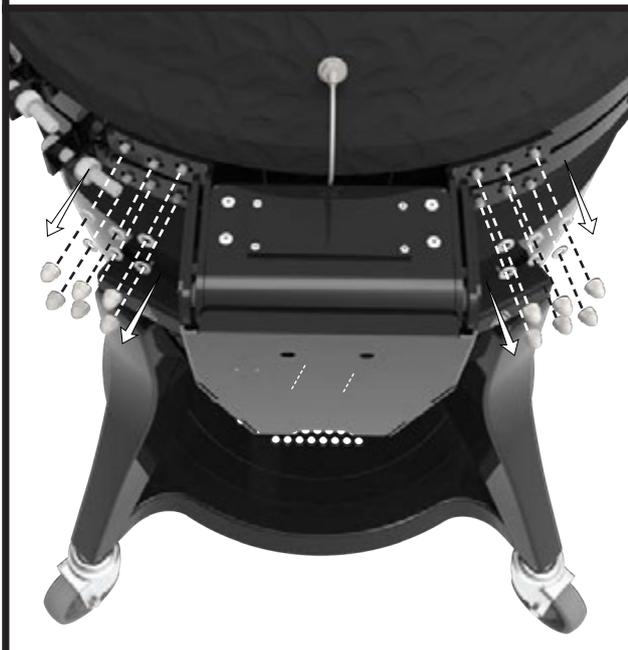

Remove 12 hinge acorn nuts and remove the hinge.

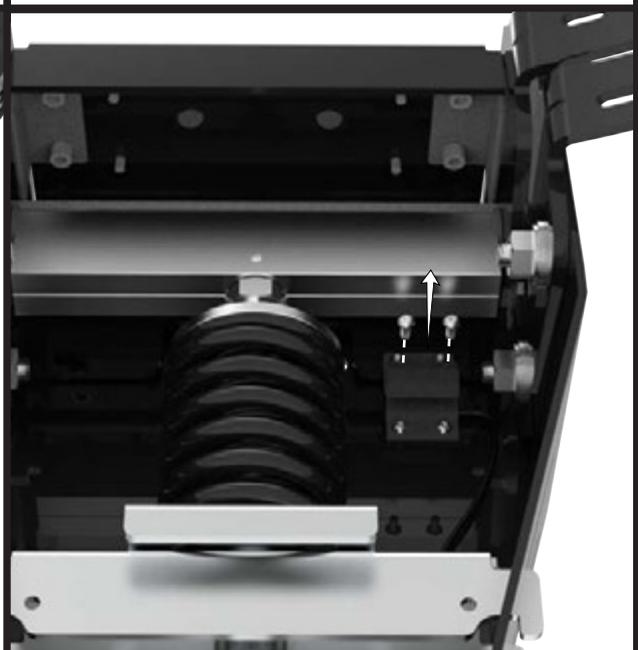

Remove the 2 screws from the upper half of the lid switch. (Note- DO NOT remove the top 2 screws from the mounting plate).

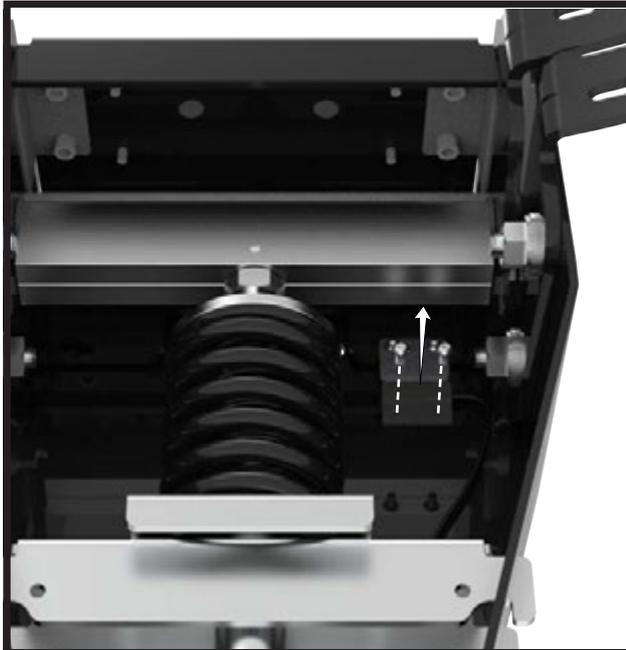

Remove the 2 screws from the lower half of the lid switch.



Repeat the steps in reverse order to install the new lid switch (Note - when reinstalling the lower half of the lid switch, make sure the wire goes towards the outside of the hinge).