

 **ILVE** Live, Cook, Love.

How to Replace Internal and Intermediate Glass Panels on ILVE Ranges



Replacing the Internal & Intermediate Glass:

If your ILVE oven's internal or intermediate glass panels are cracked, foggy, or damaged, it's important to replace them promptly for both performance and safety. This guide walks you through the correct steps for replacing the glass on your oven door, compatible with most ILVE models including Nostalgie, Panoramagic, and Majestic.

Tools Required:

- Screwdriver
- Replacement internal and intermediate glass panels
- Clean microfiber cloth

How to Replace Internal and Intermediate Glass Panels on ILVE Ranges



Step 1: Open the Oven Door

Open the door to a 45-degree angle for easier access to the retainer and interior components.

Step 2: Remove the Top Glass Retainer

Unscrew and carefully remove the top metal retainer that secures the glass panels in place.

Step 3: Take Out the Glass Panels

Gently remove the inner and intermediate glass panels from the oven door.



Step 4: Insert the New Intermediate Glass Panel


Slide the new intermediate panel into place first. **Note:** Ensure any printed text is facing upward and towards the inside of the oven.

Step 5: Align the Clips

Make sure the internal clips are properly aligned to hold the glass panels securely.

Step 6: Insert the Inner Glass Panel

Place the inner panel with the black gloss side facing up.

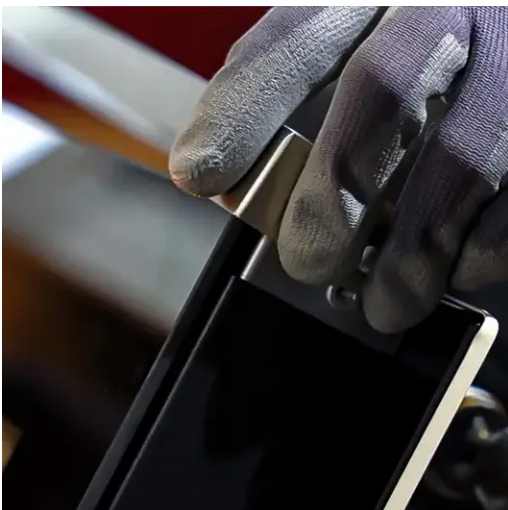

Step 7: Reinstall the Retainer

Secure the retainer in place by tightening the screws on each side.

ILVE Live, Cook, Love.

How to Replace Internal and Intermediate Glass Panels on ILVE Ranges



Final Recommendations

- Refer to the full ILVE Installation Manual for clearance requirements and connection guidelines.
- Always hire a licensed professional for gas and electrical installations.
- Register your ILVE Range online to activate your warranty and receive product support.

Need further assistance? Visit us.ilve.com or contact our support team.

