




Combo Wine Refrigerator



2 Drawers Refrigerator

Built-in / Freestanding

Model: WRD2-108

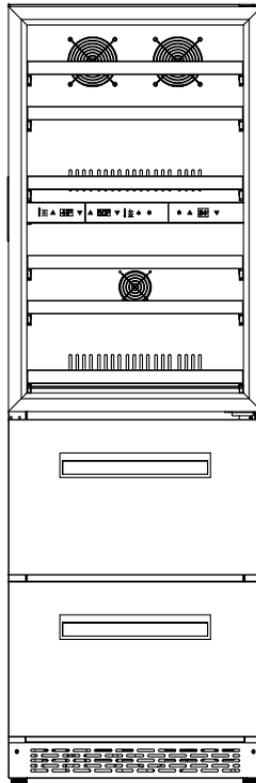

OWNER'S MANUAL

Please read the instructions carefully and keep for future reference. Information may be updated from time to time so please refer to the website for the latest version of the manual.

Warranty

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. For commercial use, the product is warranted for a period of 90 Days. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been Installed and operated in accordance with the written instructions with the appliance. Ready access to the appliance, for service, is the responsibility of the consumer-owner. Services would be provided from Monday to Friday between normal business hours.

Exclusions

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

Specifically, the following work is not covered under warranty and does not constitute warranty work:

Installation - e.g. Insufficient spacing around appliance

Maintenance - e.g. Cleaning the appliance using solvents

Mishandling - e.g. Breakage of glass

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the machine to malfunction (customer is responsible). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you.

WARRANTY SERVICE

This warranty is given by:

Equator Appliances

10222 Georgibelle Drive, Suite 200
Houston, Texas 77043-5249

For Service:

Call: 1-800-776-3538

Email: service@ApplianceDesk.com

Web: www.ApplianceDesk.com

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by either of the following methods:

1. Scan Chat-AI

- Open Smart Phone
- Open Camera
- Click the Link



2. Register online at ApplianceDesk.com/Warranty

3. Chat-AI is also used to obtain Product Information, Manuals and Updates

GENERAL

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Congratulations on your new Combo Wine Refrigerator + 2 Drawer Refrigerator!

In addition to its contemporary design, this is a highly sophisticated engineered product that will give you many years of satisfaction.

Here are some of the best reasons for buying your appliance:

- It's a Wine Refrigerator and you can separate your Red Wines and White Wines.
- In White Wines you have 3 Different Sub Temperatures: 41°F ~ 54°F.
- In Red Wines you have 3 Different Sub Temperatures: 54°F ~ 65°F.
- In your 2 Drawers you can put Foods: Olives, Cheese and certain other foods but not foods that are perishable

Safety

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Refrigerant and foaming material is flammable. Take precautions during handling, installation, and maintenance.

Ensure that the refrigerant circuit is not damaged.

Keep ventilation openings clear of obstructions.

When positioning the appliance, ensure the electrical cord is not trapped or damaged.

Do not place multiple portable socket-outlets at the rear of the appliance.

Never unplug the appliance by pulling on the power cord. Grip the plug firmly and pull straight out to remove from wall socket.

Do not use a damaged power cord.

Do not use an extension cord.

Children should be supervised to ensure that they do not climb on or play with the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Safe Disposal

Before discarding the appliance, remove the door and drawers in order to prevent risk of child entrapment. Leave shelves in place.

Please dispose of this appliance in accordance with local regulations.

California Proposition 65

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Installation

This appliance can be **Freestanding or Built-in**.

Do not tilt the appliance at an angle of more than 45° when moving it.

Do not move the appliance while it is loaded with bottles and food.

Place the appliance away from sources of heat and high humidity, and also away from areas of moisture and exposure to cold temperatures.

Place the appliance in a room where the temperature is between 32°F - 90°F (0°C to 32°C).

After moving the in place, let it stand upright for 10 minutes before turning it on.

Plug the appliance into a dedicated, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord.

Check the plug and cable before you connect the power and ensure the correct voltage is 110V / 60Hz.

Ensure that the plug is accessible.

Place the appliance on a flat level surface. Adjust the feet of the appliance as needed to make it level.

Built-in

Leave about 1/4inch (5 mm) on the sides and above the appliance. Leave about 1 inch (20 mm) between the back of the appliance and the wall.

Ensure the bottom vent in front of the appliance is not obstructed.

Before use, clean the outside and inside with a damp soft cloth.

Operation


This appliance is intended for storage of wine, beverages and food, and for household use only.

The combo appliance is a wine refrigerator on top with 6 shelves, that can keep up to 84 wine bottles / 212 cans cool at the optimum temperature.


- Store white wines on the top 3 shelves: 41°F ~ 54°F.
- Store red wines on the bottom 3 shelves: 54°F ~ 65°F.

See Table on the next page for further details.

Below the wine refrigerator, there are two refrigerator drawers, which can be used to store beverages and food that is not easily perishable.

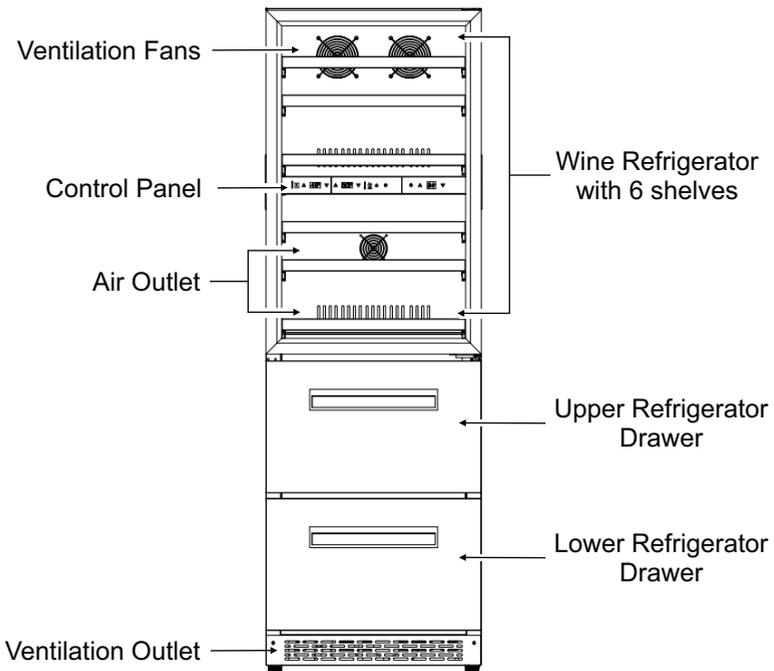

Control Panel

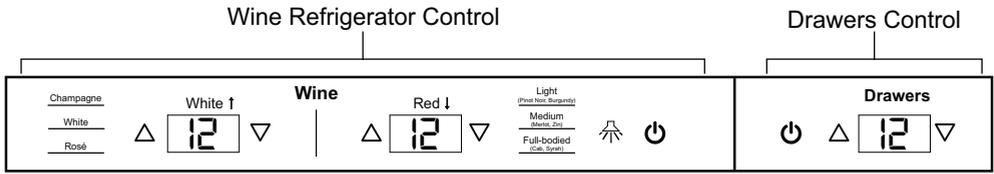

Press the Power ON/OFF ⏻ key to turn on the Wine Refrigerator and Refrigerator Drawers.

Press the Light ☀ key to turn on the LED light and continue to press to select one of 7 colors. The selected color will illuminate in the Wine Refrigerator cabinet.

Press the Up and Down Δ∇ keys to increase or decrease the temperature.

Pressing the temperature Up and Down keys simultaneously for 5 seconds will change the temperature display as °C or °F.

This appliance has two temperature zones in the Wine Refrigerator, and a separate range in the Refrigerator Drawers. The table below provides storage recommendations for different wine types for optimum results.

Recommended storage of Wines, Beverages and Foods				
		Wine Category	Type of Wine	Temperature Range
W i n e S h e l v e s	1	White	Champagne	41°F ~ 54°F (5°C~12°C)
	2		White - Chardonnay, Pinot Grigio	
	3		Rosé	
	4	Red	Light - Pinot Noir, Burgundy	54°F ~ 65°F (12°C~18°C)
	5		Medium - Merlot, Zinfandel	
	6		Full-bodied - Cabernet, Syrah	
Drawers		Beverages and preserved foods		34°F~ 50°F (1°C~10°C)

Ideal refrigerator temperature is: 35°F to 38°F (1.7°C to 3.3°C).

If the Drawer temperature is set above 38°F, please do not store any items that require refrigeration.

Do not store uncooked seafood, poultry and meats.

Door Reversal (Optional)

The Wine Refrigerator door can be reversed to open from the opposite side.

Follow these steps:

1. Use a screwdriver to remove the upper and lower hinges of the door and remove the door.
2. Remove hole cap and screws from the opposite side of the cabinet and attach them to the side where the door was removed.
3. Attach the door on the opposite side of the cabinet using the hinges and screws.
4. Ensure the hinges are aligned and tighten the screws to complete the door reversal process.

Specifications Table

Model	WRD2-108
Capacity	17 cu. ft.
Storage	84 Bottles / 212 Cans
Electrical	110V/60Hz
Refrigerant	R600a
Wine Temperature (Upper/Lower)	41° ~ -54°F / 54° ~ 65°F
Drawer Temperature	34° ~ 50°F
Net Weight	196.2
Product Dimensions (HxWxD)	71.7 x 23.4 x 27.1 inch

Maintenance

Make sure the power cord is unplugged before moving or cleaning the back of the appliance.

Clean the outside and inside of the appliance regularly, using water and mild detergent.

Troubleshooting

Problem	Possible Cause and Solution
Not Working	Check the fuse. Check if it is plugged in correctly to the power source.
Not Cooling	Temperature is not set correctly. Adjust the temperature. Move unit if near a heat source or in direct sunlight. Check for proper ventilation and that air inlet or outlet is not blocked. Door opened frequently or not shut properly. Door seal is damaged. Too many bottles stored on the same shelf.
Too much noise	Appliance not placed on flat surface or not level. Adjust the feet to level it. Some parts are loose causing rattling. The appliance is against a wall.
Door does not close properly	Check the seal. Shelves are not positioned properly. Adjust the shelves. Check that bottles are stored correctly and fit in the cabinet.

The following phenomenon is normal:

- Moisture on the glass door – wipe with dry cloth
- Sound of fluid is the compressor when it is starting or stopping
- Flowing sound of refrigerant in the refrigeration system
- Condensation forming inside the cabinet – wipe with dry cloth



Equator Advanced Appliances USA, founded in 1991, offers Efficient, High-Quality, and Innovative household appliances.

Our Mission is to simplify domestic chores and save Time, Space, and Energy.

Our Vision is to enhance our Customer's Quality of Life!

Equator Appliances USA

www.EquatorAppliances.com

