

# Dishwasher Quick Start Guide

## OPERATING INSTRUCTIONS

### WARNING



#### Tip Over Hazard

Do not use dishwasher until completely installed.

Do not push down on open door.

Doing so can result in serious injury or cuts.

**WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS**, located in your appliance's Owner's Manual, before operating this appliance.


#### Step 1. Prepare and Load the Dishwasher

See the Key Usage Tips for more information on loading the dishwasher.

#### Step 2. Add Detergent and Rinse Aid to the Dishwasher

See the Key Usage Tips for more information on adding detergent and rinse aid.

#### Step 3. Check that All Arms Spin Freely

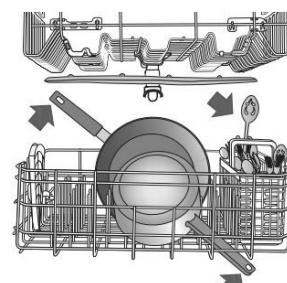

Items in the rack can block the spray arms.

#### Step 4. Select a Cycle and Options if Desired

Efficient dishwashers run longer to save water and energy, just as driving a car slower saves on gas. Typical cycle time is approximately 2½ hours, but can take less or more time to complete depending on selections.

You can customize your cycles by selecting the options desired. If you change your mind, select the option again to turn off the option. Not all options are available for every cycle. If an invalid option is selected for a given cycle, the lights will flash. Adding options may increase the cycle time.

**NOTE:** Cycles and Options vary by model; see online Cycle and Options Guide for more information.

#### Step 5. Start or Resume a Cycle

**IMPORTANT:** If anyone opens the door (such as for adding a dish, even during the Delay Hours option), the Start/Resume button must be selected each time.

- If the Start/Resume button is located on top of door, push the door firmly closed within 4 seconds of selecting Start/Resume. If door is not closed within 4 seconds, the Start/Resume button LED will flash, an audible tone will be heard, and cycle will not start.
- If the Start/Resume button is located on front of door, push door firmly closed. The door latches automatically. Select the wash cycle, options, and then Start/Resume.

**NOTE:** Run hot water at the sink nearest your dishwasher until the water is hot. Turn off water.

**NOTE:** Select Start/Resume every time you add a dish.

## Key Usage Tips


### PREPARE AND LOAD THE DISHWASHER

**IMPORTANT:** Remove leftover food, bones, toothpicks, and other hard items from dishes.

Remove labels from containers before washing.

**NOTE:** Upper and lower racks may vary by model.


- Make sure when the dishwasher door is closed that no items are blocking the detergent dispenser.
- Items should be loaded with soiled surfaces facing down and inward toward the spray, as shown in the graphics above. This will improve cleaning and drying results. Angle dirtiest dish surfaces downward, allowing space for water to flow up through rack and between dishes.
- Avoid overlapping items like bowls or plates that may trap food.
- Place plastics, small plates, and glasses in upper rack.
- Wash only items marked "dishwasher safe."
- To avoid thumping/clattering noises during operation, load dishes so they do not touch one another. Make sure lightweight load items are secured in racks.
- Use slots in the covers (if provided) and suggested loading patterns to keep your silverware separated for optimum wash.

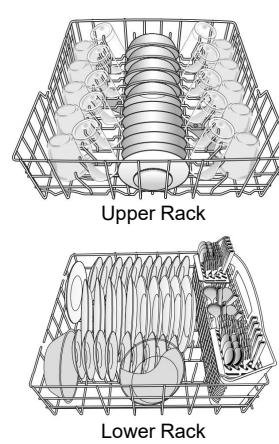

## Guide de démarrage rapide du lave-vaisselle

## INSTRUCTIONS D'UTILISATION

### AVERTISSEMENT

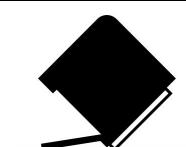

#### Risque de basculement

**Ne pas utiliser le lave-vaisselle jusqu'à ce qu'il soit complètement installé.**

**Ne pas appuyer sur la porte ouverte.**

**Le non-respect de ces instructions peut causer des blessures graves ou des coupures.**

**AVERTISSEMENT :** Pour réduire le risque d'incendie, de décharge électrique ou de blessures, lire les **INSTRUCTIONS IMPORTANTES DE SÉCURITÉ** du guide d'utilisation de votre appareil avant de faire fonctionner cet appareil.


#### Étape 1. Préparation et chargement du lave-vaisselle

Consulter les Conseils élémentaires d'utilisation pour plus d'informations sur le chargement du lave-vaisselle.

#### Étape 2. Ajouter du détergent et d'agent de rinçage au lave-vaisselle

Consulter les Conseils élémentaires d'utilisation pour plus d'informations sur l'ajout de détergent et d'agent de rinçage.

#### Étape 3. Vérifier que les bras d'aspersion tournent librement

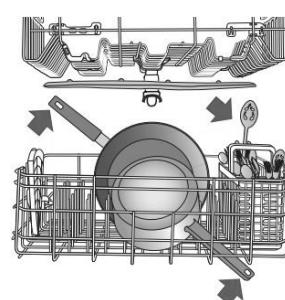

Les articles du panier peuvent entraver les bras d'aspersion.

#### Étape 4. Choisir un programme et des options, si désiré

Les lave-vaisselle éconergiques fonctionnent plus longtemps pour économiser de l'eau et de l'énergie, tout comme une vitesse de conduite réduite permet d'économiser du carburant. La durée normale d'un programme est d'environ 2 ½ heures, mais ce temps peut varier en fonction des sélections effectuées.

Il est possible de personnaliser les programmes en sélectionnant les options désirées. En cas de changement d'idée, sélectionner de nouveau l'option pour l'annuler. Toutes les options ne sont pas disponibles sur tous les programmes. Si l'on sélectionne une option invalide pour un programme donné, les témoins clignotent. Ajouter des options peut faire augmenter la durée d'un programme.

**REMARQUE :** Les programmes et les options varient selon les modèles; voir le Guide des Programmes et des Options en ligne pour plus d'informations.

#### Étape 5. Démarrer ou reprendre un programme

**IMPORTANT :** Si l'on ouvre la porte (par exemple pour ajouter un plat, même pendant le fonctionnement de l'option Delay Hours [mise en marche différée de plusieurs heures]), il faudra sélectionner le bouton Start/Resume (mise en marche/reprise) chaque fois.

- Si le bouton Start/Resume (mise en marche/reprise) se trouve au sommet de la porte, bien fermer la porte dans les 4 secondes qui suivent la sélection du bouton Start/Resume (mise en marche/reprise). Si l'on ne ferme pas la porte dans les 4 secondes qui suivent, la DEL du bouton Start/Resume (mise en marche/reprise) clignote, un signal sonore retentit et le programme ne démarre pas.
- Si le bouton Start/Resume (mise en marche/reprise) se trouve à l'avant de la porte, bien fermer la porte. Le verrou de la porte s'engage automatiquement. Sélectionner le programme de lavage et les options, puis appuyer sur Start/Resume (mise en marche/reprise).

**REMARQUE :** Laisser couler l'eau du robinet le plus proche du lave-vaisselle jusqu'à ce qu'elle soit chaude. Fermer le robinet.

**REMARQUE :** Sélectionner le bouton Start/Resume (mise en marche/reprise) chaque fois que l'on ajoute un plat.

**W11389327B**

## Cycle Guide

This information covers several different models. Your dishwasher may not have all of the cycles and options described.

**NOTE:** To repeat the same cycle and options used in the previous wash cycle, select Start twice.

Cycles:	Descriptions:
Heavy	Use for hard-to-clean, heavily soiled pots, pans, casseroles, and regular tableware. Includes a heated drying option.
Normal	This cycle is recommended for daily, regular, or typical use to completely wash and dry a full load of normally soiled dishes. This dishwasher's government energy certifications were based on the Normal cycle with only the Heat Dry option selected.**
1-Hr Wash	For fast results, this cycle will clean dishes using slightly more water and energy. For improved drying, select a heated drying option. <b>NOTE:</b> Some detergents are not recommended for short wash cycles; please refer to your detergent packaging for more information.

\*\*No other washing and drying temperature options were selected, and the dishwasher was not subjected to truncated testing. Rinse aid was not used, and there was no detergent used in the prewash.

## Online Ordering Information

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit <https://www.whirlpool.com/owners>, or in Canada <https://www.whirlpool.ca/owners>. This may save you the cost of a service call.



[Register Product](#)



[Schedule Service](#)



[How To's & FAQ](#)



[Manuals & Downloads](#)



[Add Service Plan](#)



[Parts](#)



[Filters](#)



[Accessories](#)

However, if you need to contact us, use the information listed below for the appropriate region.

United States:

1-866-698-2538

Whirlpool Brand Home Appliances

Customer eXperience Center

553 Benson Road

Benton Harbor, MI 49022-2692

Canada:

1-800-807-6777

Whirlpool Brand Home Appliances

Customer eXperience Centre


200-6750 Century Ave.

Mississauga, Ontario L5N 0B7

**IMPORTANT:** Retain this guide for future use.

- If your silverware does not fit into the designated slots, lift and slide covers off to remove them and mix silverware types to keep them separated.
- When loading silverware, always place sharp items pointing down and avoid "nesting," as shown.

**NOTE:** Silverware basket may vary by model.

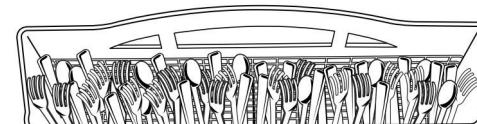

## FOLLOW THE PROGRESS OF YOUR DISHWASHER

The indicator light(s) will indicate the cycle progress such as Add Dish, Washing, Drying, Clean, and Sanitized. The cycle has completed when the Clean light is lit. Refer to the online Cycle and Options Guide for operation of the Sanitized indicator.

## Guide des programmes

Ces informations concernent plusieurs modèles. Ce lave-vaisselle peut ne pas comporter toutes les options et tous les programmes indiqués.

**REMARQUE :** Pour répéter le même programme et les mêmes options que lors du programme de lavage précédent, sélectionner deux fois le bouton Start (mise en marche).

Programme:	Description :
Heavy (intense)	Utiliser ce programme pour les casseroles, les poêles, les cocottes et la vaisselle ordinaire difficiles à nettoyer et très sales. Comprend une option de séchage avec chaleur.
Ordinaire	Ce programme est recommandé lors d'une utilisation quotidienne ou régulière pour laver et sécher une pleine charge de vaisselle normalement sale. La certification énergétique gouvernementale de ce lave-vaisselle est basée sur le programme Normal avec seulement l'option Heat Dry (séchage avec chaleur).**
1-Hr Wash (lavage en 1 heure)	Pour des résultats rapides, ce programme nettoie la vaisselle en utilisant légèrement plus d'eau et d'énergie. Pour un meilleur séchage, sélectionner une option de séchage avec chaleur. <b>REMARQUE :</b> Certains détergents ne sont pas recommandés pour les programmes de lavage courts, consulter l'emballage du détergent pour plus de renseignements.

\*\*Aucune autre option de température de lavage et de séchage n'a été sélectionnée, et les évaluations n'ont pas été tronquées. Aucun agent de rinçage ni détergent n'a été utilisé pendant le prélavage.

## Information de commande en ligne

Pour obtenir des instructions détaillées pour l'installation, l'entretien, l'hivernisation, ainsi que des conseils de transport, consulter le manuel de l'utilisateur inclus avec votre machine.

Pour obtenir des informations sur l'un des points suivants guide complet des programmes, garantie, dimensions détaillées du produit ou instructions complètes d'utilisation et d'installation, visiter le <https://www.whirlpool.com/owners> ou au Canada le <https://www.whirlpool.ca/owners>. Cette vérification peut aider à économiser le coût d'une intervention de dépannage.



[Register Product](#)



[Schedule Service](#)



[How To's & FAQ](#)



[Manuals & Downloads](#)



[Add Service Plan](#)



[Parts](#)



[Filters](#)



[Accessories](#)