



INSTALLATION OF WINDSCREEN

HESTAN GRILL MODELS: GxBRxx

ASPIRE GRILL MODELS: ExBRxx, ExBxx


IMPORTANT - READ ALL INSTRUCTIONS BEFORE YOU BEGIN

THE INSTRUCTIONS HEREIN SHOULD BE PERFORMED BY A QUALIFIED SERVICE TECHNICIAN. THE APPLIANCE MUST BE COMPLETELY COOL BEFORE ATTEMPTING SERVICE. UNIT MUST BE OFF OR UNPLUGGED FROM POWER SOURCE AND THE GAS SUPPLY SHUT OFF.

Some parts inside the grill have sharp edges. Care must be taken when handling the various components to avoid personal injury. Wear gloves when handling. It will be easier to install this item with 2 persons.

TOOLS REQUIRED:

- Work gloves
- Safety glasses
- Marker pen
- Phillips screwdriver
- Power drill with 11/64" drill bit
- #10-24 tap (if available)

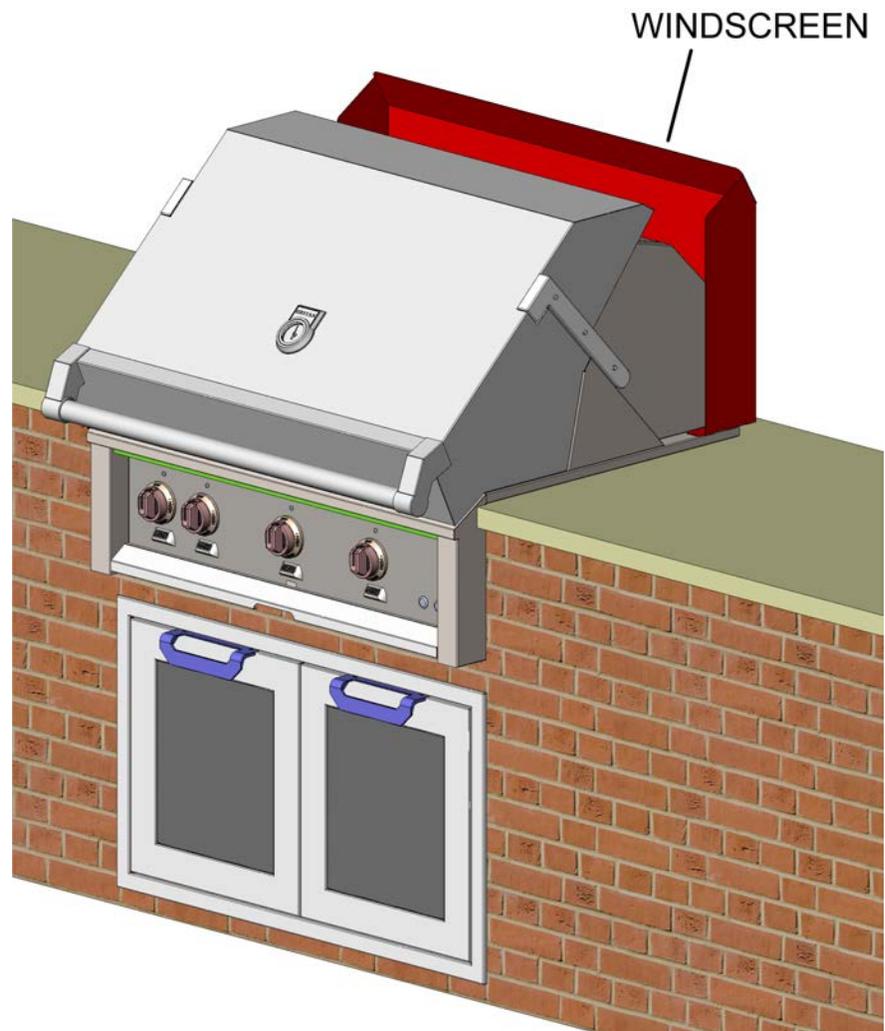




INSTRUCTIONS *(continued)*

STEP 1

Remove only 3 bottom screws from the rear cover of the grill. Install the windscreen with the inside flange up against the face of the rear cover. Ask a helper to hold the windscreen in place.

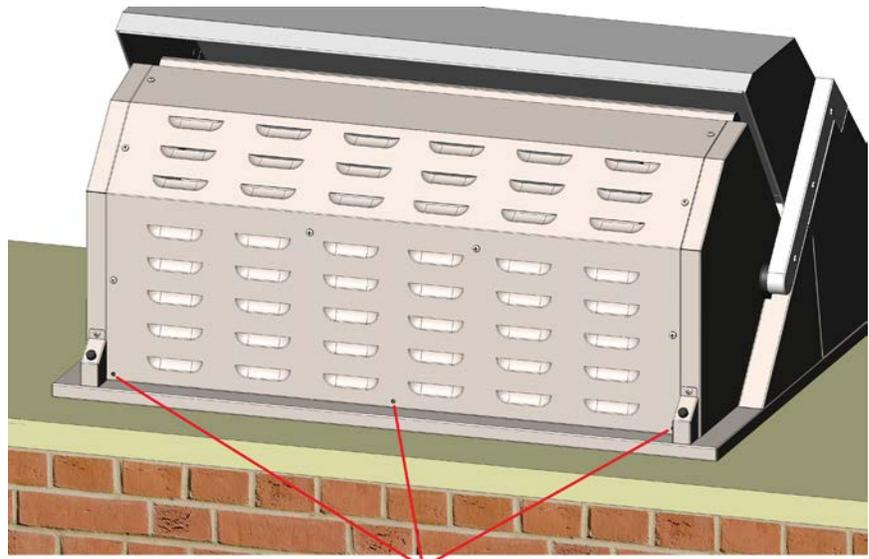

REMOVE 3 BOTTOM SCREWS

STEP 2


As seen in this view from above, use the windscreen to mark hole locations with a marker pin.

STEP 3

Remove the windscreen and proceed to drill pilot holes in the metal landing ledge with an $11/64$ " drill bit. You may also thread these new holes if you have a #10-24 tap.

Install the windscreen and re-install the 3 screws from the rear cover. Then install additional #10-24 x $1/2$ " screws provided with the windscreen. ALL SCREWS must be installed to prevent warpage of this part when the grill is used.

Installation is now complete. You may now restore the gas and electric power.

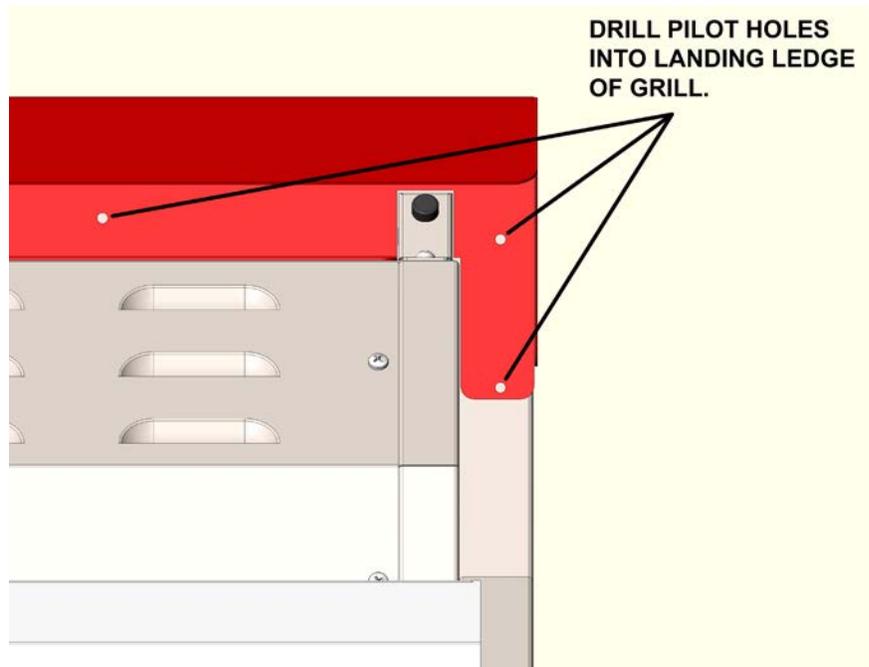

VIEW FROM ABOVE UNIT

Hestan Commercial Corporation

3375 E. La Palma Ave.

Anaheim, CA 92806

(888) 905-7463