



KJ15041123/KJ15041523  
**KAMADOJOE®**  
**Konnected Joe™**  
**Black Base**



**CAUTION - SAFETY PRECAUTIONS - READ BEFORE USE**




- Make sure your grill has fully cooled before handling to avoid burns.
- Some components may have sharp edges. Use caution to avoid injury.
- Disconnect the power supply from the grill before handling.

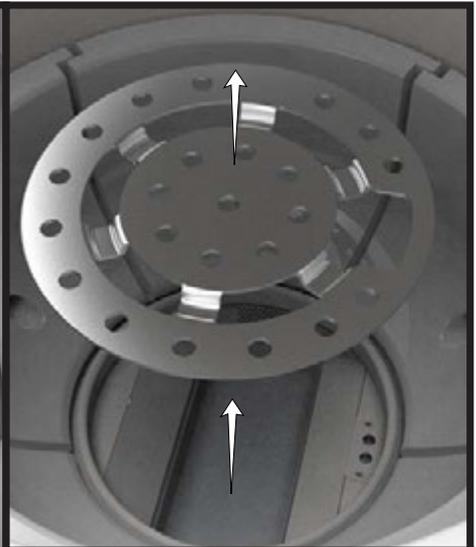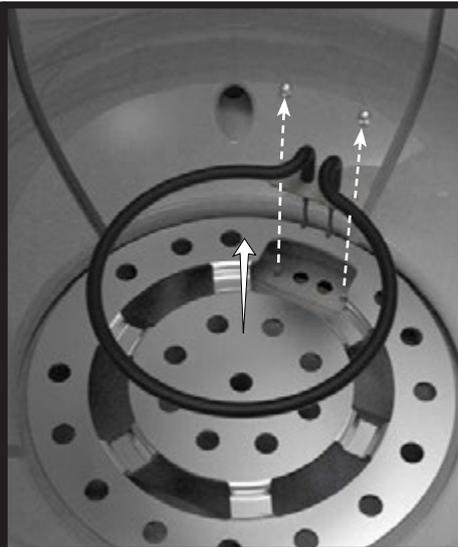

Remove all internal components of the grill. Cooking grates, x rack, heat deflectors, SS ring, ceramic firebowl panels, charcoal grate, element.

Remove the 2 acorn nuts from the element mounting plate. Then, with extreme caution, lift the element straight up and out of the grill. (NOTE - you may need to lightly hold down the element bracket to remove the element from the bracket).

Remove the charcoal grate from the grill

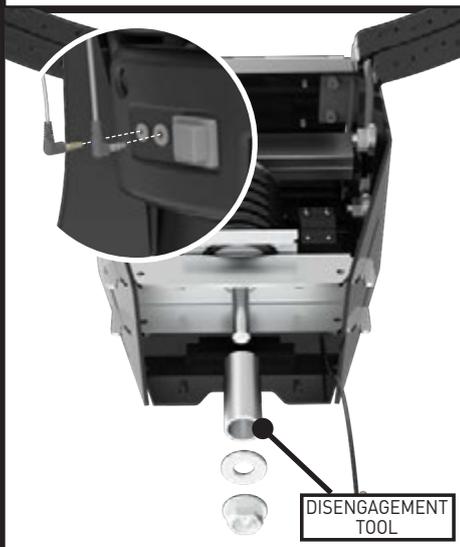

DISENGAGEMENT TOOL



Install the disengagement tool on the hinge. Unplug pit probe, lid switch, and power supply from rear of grill.

Remove 12 hinge acorn nuts.  
 Remove the hinge.  
 Remove the lid and set aside.

Remove the set screw from the inside of the grill (front).  
 Remove the set screw from the outside of the grill (rear).



Remove the ceramic ring from the grill.



Remove two screws from front module.



Remove front module.




Remove the three wire harness cover screws.



Remove the wire harness cover.



Unplug the element from the wire harness. The element wire can be identified with the yellow and white wire.

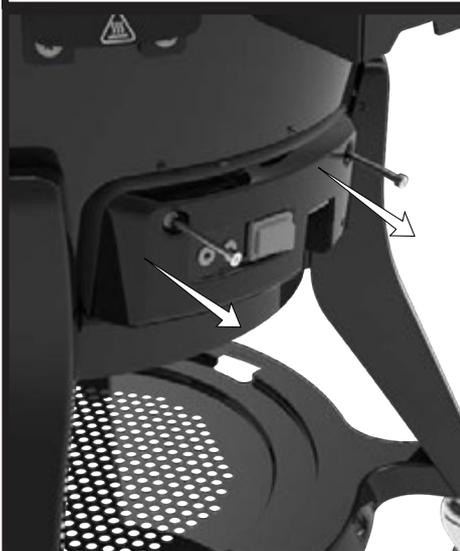

Loosen two screws from rear module. Please note, the screws do not have to be fully removed to disengage the rear module.



Disconnect the wire harness from the rear module. Use caution do not apply tension on the wire harness. Set the rear module aside, you will need to install this on the new black base kit.



Remove the black base from the cart – remember to remove the 4 screws that connect the grill base to the cart. Note - when installing the ceramic base, line up the hole in the ceramic with the front set screw location on the grill.

Repeat the steps in reverse order to install the new black base kit.