


Quick start guide











1. SH1 tutorial guide wallchart

To download the PDF version of this document, please click here: [PUDU SH1 Wallchart.pdf](#)

1.1 Preparations

PUDU SH1 Wallchart
Preparations



 <p>Fully charge the battery, before the first use.</p>	 <p>Press battery indicator button(A), check the battery state.</p>	 <p>Align the fully charged battery with the bottom groove, push forward till fixed.</p>	 <p>Hold the side splash guard, align with the two holes of the chassis, push forward till fixed.</p>	 <p>Hold the disc brush, align the brush center with the silver disc center, rotate the L brush rapidly clockwise and the R brush rapidly counterclockwise, until the brush is fixed on the silver disc.</p>
 <p>Check the vacuum hose tightly connected to the squeegee. Insert the vacuum hose to the suction port, rotate the vacuum hose 1/4 turn clockwise until securely fixed.</p>	 <p>Hold the chassis firmly with one hand, hold the squeegee with another hand, align with the pin on the chassis, push one side and another of the squeegee in place.</p>	 <p>water temperature <45°C Fill the solution tank and add low foaming detergent.</p>	 <p>Put the solution tank to the groove, push forward to the main body.</p>	 <p>Place the recovery tank downwards.</p>

1.2 Quick start guide

Quick start guide



Press and hold the power switch(A) for 3 seconds to power on the machine.



Swipe the screen with the finger, click to select the cleaning mode.



Press either side of the operation button(B) to start the operation.
*The button can be customized in settings.



Control the direction and push the machine forward to start clean.



Hold the lift handles on both sides of the squeegee, lift up once to raise the squeegee, lift up again to put down the squeegee.



The machine must be in parking position when maintain it, transport it by wheels, or lift it by hands.



The machine need to be folded and fixed when in storage.

1.3 Posture switch

Posture switch

Use posture switch ring and multi-functional shaft to switch the position

Working position

Parking position switch to working position: lift and pull the posture switch ring once, lift up the pin, unlock the shaft, switch to the working position.



Parking position

Working position switch to parking position: lift and pull the posture switch ring again, put down the pin, turn to the groove till the pin inserted, hear the click sound, lock the shaft, switch to the parking position.



Store position

Working position switch to storing position: lift and pull the posture switch ring once, lift up the pin, unlock the shaft, then put down the main body, pull the posture switch ring again, put down the pin, turn to the groove till the pin inserted, lift up the machine and switch to the storing position.



1.4 Maintenance

PUDU SH1 Wallchart Maintenance



Step the release pedal, hold the recovery tank handle, lift the recovery tank upwards.




Pull out the rubber cap of recovery tank, empty the tank.



Remove the recovery tank window cover and use fresh water to clean it. use the water gun to rinse the inside of the recovery tank, then pour out the dirty water.



Unlock the 4 buckles, open and clean the upper recovery tank.

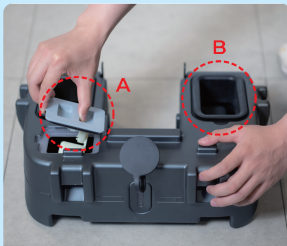

Remove floater A and rubber sealing ring B and use fresh water to clean it. (Clean once a week).



Align the silver metal hook C into the right position, put down the upper part, lock the 4 buckles.




Press the unlock button (D), pull out the solution tank from main body.




Use the fresh water clean the solution tank. shake several times to rinse off the detergent left in the tank.




Hold the disc brush, rotate the L brush rapidly counterclockwise and the R brush rapidly clockwise, until the brush get loosen.

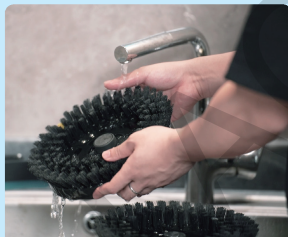

Use fresh water and detergent to clean the brushes.

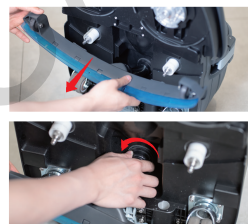

Hold the chassis firmly with one hand, hold the squeegee with another hand, pull out one side and another from the pins on the chassis. Rotate the vacuum hose 1/4 turn counterclockwise until loosen it.

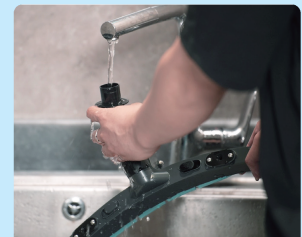

Use fresh water and detergent to clean the vacuum hose and squeegee.

1.5 Troubleshooting

PUDU SH1 Wallchart
Troubleshooting



Poor water recovery:		Insufficient/no water flow:		No power:	
Cause	Solution	Cause	Solution	Cause	Solution
Squeegee is raised	Lower the squeegee	Empty Solution tank	Fill the solution tank	No battery	Insert battery
Squeegee rubber blades is worn out	Replace rubber blades	Solution tank not in place	Reinstall	Battery incorrectly placed	Remove and reinstall battery
Squeegee blocked	Check and remove blockage, ensure that the squeegee fits the ground	Filter blocked	Clean the solution tank outlet	Empty battery	Charge battery
Squeegee is not connecting well with squeegee vacuum hose	Reinstall	Dirt in the solution tank	Clean solution tank		
Vacuum hose blocked	Check and remove blockage	The mode used is no water or low water flow	Use mode like heavy duty, normal, ECO, low residue, soak		
Recovery Tank is not installed properly	Reinstall				
Recovery Tank top not tightly covered	Close it tightly				
Recovery Tank Filter jammed	Clean the Recovery Tank Filter				



PUDU SH1
Operation Guide



PUDU SH1
Software User Manual